

# Pioneer

---

## Operation Manual

CD RDS RECEIVER

# DEH-7300BT



*English*

## Before You Start

### Thank you for purchasing this PIONEER product.

To ensure proper use, please read through this manual before using this product. It is especially important that you read and observe **WARNINGS** and **CAUTIONS** in this manual. Please keep the manual in a safe and accessible place for future reference. ▣



If you want to dispose this product, do not mix it with general household waste. There is a separate collection system for used electronic products in accordance with legislation that requires proper treatment, recovery and recycling.

Private households in the member states of the EU, in Switzerland and Norway may return their used electronic products free of charge to designated collection facilities or to a retailer (if you purchase a similar new one).

For countries not mentioned above, please contact your local authorities for the correct method of disposal.

By doing so you will ensure that your disposed product undergoes the necessary treatment, recovery and recycling and thus prevent potential negative effects on the environment and human health. ▣

### In case of trouble

Should this unit fail to operate properly, please contact your dealer or nearest authorized PIONEER Service Station. ▣

### About this unit

The tuner frequencies on this unit are allocated for use in Western Europe, Asia, the

Middle East, Africa and Oceania. Use in other areas may result in poor reception. The RDS (radio data system) function only operates in areas with broadcasting RDS signals for FM stations.

#### CAUTION

This product is a class 1 laser product classified under the Safety of laser products, IEC 60825-1:2007, and contains a class 1M laser module. To ensure continued safety, do not remove any covers or attempt to gain access to the inside of the product. Refer all servicing to qualified personnel.

**CLASS 1 LASER PRODUCT**

**CAUTION—CLASS 1M INVISIBLE LASER RADIATION WHEN OPEN. DO NOT VIEW DIRECTLY WITH OPTICAL INSTRUMENTS.**



#### CAUTION

- Do not allow this unit to come into contact with liquids. Electrical shock could result. Also, damage to this unit, smoke, and overheating could result from contact with liquids.
- The Pioneer CarStereo-Pass is for use only in Germany.
- Always keep the volume low enough to hear outside sounds.
- Avoid exposure to moisture.
- If the battery is disconnected or discharged, any preset memory will be erased.

#### Notes


- Function setting operations are completed even if the menu is cancelled before the operations are confirmed.
- In this manual, iPod and iPhone will be referred to as "iPod". ▣

## Before You Start


### Demo mode

#### Important

- Failure to connect the red lead (ACC) of this unit to a terminal coupled with ignition switch on/off operations may lead to battery drain.
- Remember that if the feature demo continues operating when the car engine is turned off, it may drain battery power.

The demo automatically starts when the ignition switch is set to ACC or ON while the unit is turned off. Turning off the unit does not cancel demo mode. To cancel the demo mode, operate the function in the initial setting menu. Operating the demo while the ignition switch is set to ACC may drain battery power. 

## Head unit

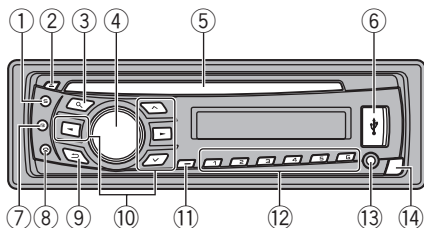

Part	Part
① <b>S (SRC/OFF)</b>	⑧  (phone/on hook)
②  (eject)	⑨  (Back/display/scroll)
③  (list)	⑩  ▲/▼/◀▶
④ <b>MULTI-CONTROL (M.C.)</b>	⑪ <b>TA/NEWS</b>
⑤ Disc loading slot	⑫ <b>1 to 6</b>
⑥ USB port	⑬ AUX input jack (3.5 mm stereo jack)
⑦ <b>B (BAND/ESC)</b>	⑭ Detach button


### ⚠ CAUTION

- Use an optional Pioneer USB cable (CD-U50E) to connect the USB audio player/USB memory as any device connected directly to the unit will protrude out from the unit and may be dangerous.
- Do not use unauthorized products.

## Optional remote control

The remote control CD-R320 is sold separately.


Operation is the same as when using the buttons on the head unit.

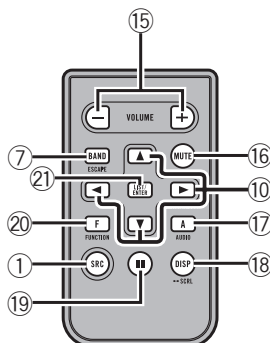

Part	Operation
⑮ <b>VOLUME</b>	Press to increase or decrease volume.
⑯ <b>MUTE</b>	Press to mute. Press again to unmute.
⑰ <b>AUDIO</b>	Press to select an audio function.
⑱ <b>DISP/SCRL</b>	Press to select different displays. Press and hold to scroll through the text information.
⑲ <b>II</b>	Press to pause or resume playback.
⑳ <b>FUNCTION</b>	Press to select functions. Press and hold to recall the initial setting menu when the sources are off.
㉑ <b>LIST/ENTER</b>	Press to display the disc title, track title, folder, or file list depending on the source. While in the operating menu, press to control functions.

# Operating this unit

## Display indication

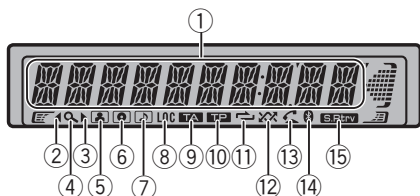

Indicator	State
①	<p>Main display section</p> <ul style="list-style-type: none"> <li>Tuner: band and frequency</li> <li>RDS: program service name, PTY information and other literal information</li> <li>Built-in CD, USB storage device and iPod: elapsed playback time and text information</li> </ul>
②	<p>◀ An upper tier of the folder or menu exists.</p>
③	<p>▶ A lower tier of the folder or menu exists. This flashes when a song/album related to the song currently playing is selected from the iPod.</p>
④	<p>🔍 (list) The list function is being operated.</p>
⑤	<p>👤 (artist) The disc (track) artist name is displayed. Artist search refinement of the iPod browsing function is in use.</p>
⑥	<p>📀 (disc) The disc (album) name is displayed. Album search refinement of the iPod browsing function is in use.</p>
⑦	<p>📄 (song) The track (song) name is displayed. A playable audio file has been selected during operation of the list. Song search refinement of the iPod browsing function is in use.</p>
⑧	<p><b>LOC</b> Local seek tuning is on.</p>
⑨	<p><b>TA</b> (TA) TA function is on.</p>
⑩	<p><b>TP</b> (TP) A TP station is tuned in.</p>
⑪	<p>↺ (repeat) Track or folder repeat is on.</p>

Indicator	State
⑫	<p>🔀 (random/shuffle) Random play is on. The iPod source is selected and the shuffle or shuffle all function is on.</p>
⑬	<p>📞 (auto answer) Shows when the automatic answering function is on.</p>
⑭	<p>📶 (Bluetooth indicator) Connected to a Bluetooth device.</p>
⑮	<p><b>S.Rtrv</b> (sound retriever) The sound retriever function is on.</p>

## Basic Operations


### 🔑 Important

- Handle gently when removing or attaching the front panel.
- Avoid subjecting the front panel to excessive shock.
- Keep the front panel out of direct sunlight and high temperatures.
- To avoid damaging the device or vehicle interior, remove any cables and devices attached to the front panel before detaching it.

## Operating this unit

Removing the front panel to protect your unit from theft


- 1 Press the detach button to release the front panel.
- 2 Push the front panel upward and pull it toward you.

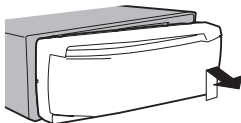

- 3 Always keep the detached front panel in a protection device such as a protection case.

Re-attaching the front panel

- 1 Slide the front panel to the left. Make sure to insert the tabs on the left side of the head unit into the slots on the front panel.

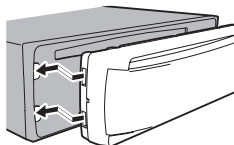

- 2 Press the right side of the front panel until it is firmly seated. If you cannot attach the front panel to the head unit successfully, make sure that you are placing the front panel onto the head unit correctly. Forcing the front panel into place may result in damage to the front panel or head unit.

Turning the unit on

- 1 Press **S (SRC/OFF)** to turn the unit on.

Turning the unit off

- 1 Press and hold **S (SRC/OFF)** until the unit turns off.

Selecting a source

- 1 Press **S (SRC/OFF)** to cycle between:  
**TUNER** (tuner)—**CD** (built-in CD player)—**USB** (USB)/**iPod** (iPod)—**AUX** (AUX)


Adjusting the volume

- 1 Turn **M.C.** to adjust the volume.

### CAUTION

For safety reasons, park your vehicle when removing the front panel.

### Note

When this unit's blue/white lead is connected to the vehicle's auto-antenna relay control terminal, the vehicle's antenna extends when this unit's source is turned on. To retract the antenna, turn the source off. 

## Using Bluetooth telephone

### Important

- Since this unit is on standby to connect with your cellular phone via Bluetooth wireless technology, using it without the engine running can drain the battery power.
- Operations may vary depending on the kind of cellular phone.
- Advanced operations that require attention such as dialing numbers on the monitor, using the phone book, etc., are prohibited while driving. Park your vehicle in a safe place when using these advanced operations.

## Setting up for hands-free phoning

Before you can use the hands-free phoning function you must set up the unit for use with your cellular phone.

- 1 Connection  
Operate the Bluetooth telephone connection menu. Refer to *Connection menu operation* on page 13.
- 2 Function settings  
Operate the Bluetooth telephone function menu. Refer to *Phone menu operation* on page 14.

## Basic Operations

Making a phone call

- 1 Refer to *Phone menu operation* on page 14.







Answering an incoming call

- 1 When a call is received, press **M.C.**


Ending a call

- 1 Press .


 
## Operating this unit

Rejecting an incoming call ① When a call is received, press  .
Answering a call waiting ① When a call is received, press <b>M.C.</b>
Switching between callers on hold ① Press <b>M.C.</b>
Canceling call waiting ① Press  .
Adjusting the other party's listening volume ① Press  or  while talking on the phone.
Turning private mode on or off. ① Press <b>B (BAND/ESC)</b> while talking on the phone.
Switching the information display ① Press  while talking on the phone. <ul style="list-style-type: none"> <li>• Press and hold  to scroll.</li> </ul>

### Notes

- If private mode is selected on the cellular phone, hands-free phoning may not be available.
- The estimated call time appears in the display (this may differ slightly from the actual call time). .

 

 
 





 
## Menu operations identical for function settings/audio adjustments/initial settings/lists

Returning to the previous display Returning to the previous list (the folder one level higher) ① Press  .
Returning to the main menu Returning to the top tier of list ① Press and hold  .
Returning to the ordinary display Canceling the initial setting menu ① Press <b>B (BAND/ESC)</b> .
Returning to the ordinary display from the list ① Press <b>B (BAND/ESC)</b> .



## Tuner

### Basic Operations

Selecting a band ① Press <b>B (BAND/ESC)</b> until the desired band ( <b>F1</b> , <b>F2</b> , <b>F3</b> for FM or <b>MW/LW</b> ) is displayed.
Manual tuning (step by step) ① Press  or  .
Seeking ① Press and hold  or  , and then release. You can cancel seek tuning by briefly pressing  or  . While pressing and holding  or  , you can skip stations. Seek tuning starts as soon as you release  or  .

### Note


 
This unit's AF (alternative frequencies search) function can be turned on and off. AF should be off for normal tuning operation (refer to page 9).

## Storing and recalling stations for each band

### Using preset tuning buttons

**1** When you find a station that you want to store in memory, press one of the preset tuning buttons (1 to 6) and hold until the preset number stops flashing.

**2** Press one of the preset tuning buttons (1 to 6) to select the desired station.

- You can also recall stored radio stations by pressing  or  during the frequency display.

## Switching the RDS display

RDS (radio data system) contains digital information that helps search for the radio stations.

- Press .

Program service name—PTY information—Frequency

- PTY information and the frequency appear on the display for eight seconds.

## Operating this unit

### PTY list

#### NEWS/INFO

**NEWS** (News), **AFFAIRS** (Current affairs), **INFO** (Information), **SPORT** (Sports), **WEATHER** (Weather), **FINANCE** (Finance)

#### POPULAR

**POP MUS** (Popular music), **ROCK MUS** (Rock music), **EASY MUS** (Easy listening), **OTH MUS** (Other music), **JAZZ** (Jazz), **COUNTRY** (Country music), **NAT MUS** (National music), **OLDIES** (Oldies music), **FOLK MUS** (Folk music)

#### CLASSICS

**L. CLASS** (Light classical), **CLASSIC** (Classical)

#### OTHERS

**EDUCATE** (Education), **DRAMA** (Drama), **CULTURE** (Culture), **SCIENCE** (Science), **VARIED** (Varied), **CHILDREN** (Children's), **SOCIAL** (Social affairs), **RELIGION** (Religion), **PHONE IN** (Phone in), **TOURING** (Travel), **LEISURE** (Leisure), **DOCUMENT** (Documentaries)

### Advanced operations using special buttons

#### Receiving traffic announcements

Regardless of the source you are listening to, you can receive traffic announcements automatically with TA (traffic announcement standby).

- 1 Tune in to a TP or enhanced other network's TP station.
- 2 Press **TA/NEWS** to turn traffic announcement standby on or off.
- 3 Use **M.C.** to adjust the TA volume when a traffic announcement begins.  
The newly set volume is stored in the memory and will be recalled for subsequent traffic announcements.
- 4 Press **TA/NEWS** while a traffic announcement is being received to cancel the announcement.  
The tuner returns to the original source but remains in the standby mode until **TA/NEWS** is pressed again.

#### Using news program interruption

When a news program is broadcast from a PTY code news station, the unit automatically switches to the news broadcast station. When the news program ends, reception of the previous program resumes.

- 1 Press and hold **TA/NEWS** to turn news program interruption on or off.  
A news program can be canceled by pressing **TA/NEWS**.

### Function settings

1 Press **M.C.** to display the main menu.

2 Turn **M.C.** to change the menu option and press to select **FUNCTION**.

3 Turn **M.C.** to select the function.

After selecting, perform the following procedures to set the function.

- If MW/LW band is selected, only **BSM** or **LOCAL** is available.

#### BSM (best stations memory)

BSM (best stations memory) automatically stores the six strongest stations in the order of their signal strength.

- 1 Press **M.C.** to turn BSM on.  
To cancel, press **M.C.** again.

#### REGION (regional)



## Operating this unit

When AF is used, the regional function limits the selection of stations to those broadcasting regional programs.

- 1 Press **M.C.** to turn the regional function on or off.

### LOCAL (local seek tuning)

Local seek tuning lets you tune in to only those radio stations with sufficiently strong signals for good reception.

- 1 Press **M.C.** to display the setting mode.
  - 2 Turn **M.C.** to select the desired setting.  
FM: **OFF—LEVEL 1—LEVEL 2—LEVEL 3—LEVEL 4**  
MW/LW: **OFF—LEVEL 1—LEVEL 2**
- The highest level setting allows reception of only the strongest stations, while lower levels allow the reception of weaker stations.
- 3 Press **M.C.** to confirm the selection.

### PTY SEARCH (program type selection)

You can tune in to a station using PTY (program type) information.

- 1 Press **M.C.** to display the setting mode.
  - 2 Turn **M.C.** to select the desired setting.  
**NEWS/INFO—POPULAR—CLASSICS—OTHERS**
  - 3 Press **M.C.** to begin the search.
- The unit searches for a station broadcasting that type of program. When a station is found, its program service name is displayed.
- For PTY (program type ID code) information, refer to the previous page.
- The program of some stations may differ from that indicated by the transmitted PTY.
- If no station is broadcasting the type of program you searched for, **NOT FOUND** is displayed for about two seconds and then the tuner returns to the original station.

### TA (traffic announcement standby)

- 1 Press **M.C.** to turn traffic announcement standby on or off.

### AF (alternative frequencies search)

- 1 Press **M.C.** to turn AF on or off.

### NEWS (news program interruption)

- 1 Press **M.C.** to turn the NEWS function on or off.



## CD/CD-R/CD-RW and USB storage devices

### Basic Operations

Playing a CD/CD-R/CD-RW

- 1 Insert the disc into the disc loading slot with the label side up.

Ejecting a CD/CD-R/CD-RW

- 1 Press **▲**.

Playing songs on a USB storage device

- 1 Open the USB connector cover and plug in the USB storage device using a USB cable.

Stopping playback of files on a USB storage device

- 1 You may disconnect the USB storage device at any time.

Selecting a folder

- 1 Press **▲** or **▼**.

Selecting a track

- 1 Press **◀** or **▶**.

Fast forwarding or reversing

- 1 Press and hold **◀** or **▶**.
  - When playing compressed audio, there is no sound during fast forward or reverse.

Returning to root folder

- 1 Press and hold **B (BAND/ESC)**.

Switching between compressed audio and CD-DA

- 1 Press **B (BAND/ESC)**.

### Note

Disconnect USB storage devices from the unit when not in use.

## Displaying text information

Selecting the desired text information

- 1 Press **➡**.

Scrolling the text information to the left

- 1 Press and hold **➡**.

### Notes

- Depending on the version of iTunes used to write MP3 files to a disc or media file types, incompatible text stored within an audio file may be displayed incorrectly.
- Text information items that can be changed depend on the media.

## Operating this unit

### Selecting and playing files/tracks from the name list

- 1 Press **Q** to switch to the file/track name list mode.
- 2 Use **M.C.** to select the desired file name (or folder name).

Changing the file or folder name
1 Turn <b>M.C.</b>
Playing
1 When a file or track is selected, press <b>M.C.</b>
Viewing a list of the files (or folders) in the selected folder
1 When a folder is selected, press <b>M.C.</b>
Playing a song in the selected folder
1 When a folder is selected, press and hold <b>M.C.</b>

### Advanced operations using special buttons

Selecting a repeat play range
1 Press <b>6/↔</b> to cycle between the following: <b>CD/CD-R/CD-RW</b>
<ul style="list-style-type: none"> <li>• <b>DISC</b> – Repeat all tracks</li> <li>• <b>TRACK</b> – Repeat the current track</li> <li>• <b>FOLDER</b> – Repeat the current folder</li> </ul>
<b>USB audio player/USB memory</b>
<ul style="list-style-type: none"> <li>• <b>ALL</b> – Repeat all files</li> <li>• <b>TRACK</b> – Repeat the current file</li> <li>• <b>FOLDER</b> – Repeat the current folder</li> </ul>
Playing tracks in random order
1 Press <b>5/⌘</b> to turn random play on or off. Tracks in a selected repeat range are played in random order.
Pausing playback
1 Press <b>2/PAUSE</b> to pause or resume.
Enhancing compressed audio and restoring rich sound (sound retriever)
1 Press <b>1/S.Rtrv</b> to cycle between: <b>OFF (off)—1—2</b> <b>1</b> is effective for low compression rates, and <b>2</b> is effective for high compression rates.

- 2 Turn **M.C.** to change the menu option and press to select **FUNCTION**.

### 3 Turn **M.C.** to select the function.

After selecting, perform the following procedures to set the function.

#### REPEAT (repeat play)

- 1 Press **M.C.** to display the setting mode.
- 2 Turn **M.C.** to select a repeat play range.  
For details, refer to *Selecting a repeat play range* on this page.
- 3 Press **M.C.** to confirm the selection.

#### RANDOM (random play)

- 1 Press **M.C.** to turn random play on or off.

#### PAUSE (pause)

- 1 Press **M.C.** to pause or resume.

#### S.RTRV (sound retriever)

Automatically enhances compressed audio and restores rich sound.

- 1 Press **M.C.** to display the setting mode.
- 2 Turn **M.C.** to select the desired setting.  
For details, refer to *Enhancing compressed audio and restoring rich sound (sound retriever)* on this page.
- 3 Press **M.C.** to confirm the selection.



### Function settings

- 1 Press **M.C.** to display the main menu.

# Operating this unit

## iPod

### Basic Operations

Playing songs on an iPod

- 1 Open the USB connector cover.
- 2 Connect an iPod to the USB cable using an iPod Dock Connector.

Selecting a track (chapter)

- 1 Press ◀ or ▶.

Fast forwarding or reversing

- 1 Press and hold ◀ or ▶.

#### Notes

- The iPod cannot be turned on or off when the control mode is set to **CTRL AUDIO**.
- Disconnect headphones from the iPod before connecting it to this unit.
- The iPod will turn off about two minutes after the ignition switch is set to OFF.

### Displaying text information

Selecting the desired text information

- 1 Press ↵.

Scrolling the text information to the left

- 1 Press and hold ⇐.

### Browsing for a song

1 Press 🔍 to switch to the top menu of list search.

2 Use **M.C.** to select a category/song.

Changing the name of the song or category

- 1 Turn **M.C.**.  
Playlists—artists—albums—songs—podcasts—  
genres—composers—audiobooks

Playing

- 1 When a song is selected, press **M.C.**

Viewing a list of songs in the selected category

- 1 When a category is selected, press **M.C.**

Playing a song in the selected category

- 1 When a category is selected, press and hold **M.C.**

Searching the list by alphabet

- 1 When a list for the selected category is displayed, press 🔍 to switch to alphabet search mode.
- 2 Turn **M.C.** to select a letter.
- 3 Press **M.C.** to display the alphabetical list.

### Advanced operations using special buttons

Selecting a repeat play range

- 1 Press 6/↺ to cycle between the following:
  - **ONE** – Repeat the current song
  - **ALL** – Repeat all songs in the selected list

Playing all songs in random order (shuffle all)

- 1 Press 5/🔀 to turn shuffle all on.
  - When the control mode is set to **CTRL iPod/CTRL APP**, shuffle play is on.

Pausing playback

- 1 Press 2/PAUSE to pause or resume.

Playing songs related to the currently playing song

You can play songs from the following lists.

- Album list of the currently playing artist
  - Song list of the currently playing album
  - Album list of the currently playing genre
- 1 Press and hold **M.C.** to switch to link play mode.
  - 2 Turn **M.C.** to change the mode; press to select.
    - **ARTIST** – Plays an album of the artist currently being played.
    - **ALBUM** – Plays a song from the album currently being played.
    - **GENRE** – Plays an album from the genre currently being played.

The selected song/album will be played after the currently playing song.

The selected song/album may be canceled if you operate functions other than link search (e.g. fast forward and reverse).

Depending on the song selected to play, the end of the currently playing song and the beginning of the selected song/album may be cut off.

## Operating this unit

Operating this unit's iPod function from your iPod. You can listen to the sound from your iPod applications using your car's speakers, when **CTRL APP** is selected.

This function is not compatible with the following iPod models.

- iPod nano 1st generation
  - iPod 5th generation
- APP mode is compatible with the following iPod models.
- iPhone 3GS (software version 4.0 or later)
  - iPhone 3G (software version 4.0 or later)
  - iPhone (software version 3.0 or later)
  - iPod touch 3rd generation (software version 4.0 or later)
  - iPod touch 2nd generation (software version 4.0 or later)
  - iPod touch 1st generation (software version 3.1.3 or later)

- 1 Press **4/iPod** to switch the control mode.
  - **CTRL iPod** – This unit's iPod function can be operated from the connected iPod.
  - **CTRL APP** – Play back the sound from your iPod applications.
  - **CTRL AUDIO** – This unit's iPod function can be operated from this unit.

Enhancing compressed audio and restoring rich sound (sound retriever)

- 1 Press **1/S.Rtrv** to cycle between:
  - OFF** (off)—**1—2**
  - 1** is effective for low compression rates, and **2** is effective for high compression rates.

## Function settings

**1 Press M.C. to display the main menu.**

**2 Turn M.C. to change the menu option and press to select FUNCTION.**

**3 Turn M.C. to select the function.**

After selecting, perform the following procedures to set the function.

### REPEAT (repeat play)

- 1 Press **M.C.** to display the setting mode.
- 2 Turn **M.C.** to select a repeat play range. For details, refer to *Selecting a repeat play range* on the previous page.
- 3 Press **M.C.** to confirm the selection.

### SHUFFLE (shuffle)

- 1 Press **M.C.** to display the setting mode.
- 2 Turn **M.C.** to select your favorite setting.
  - **SONGS** – Play back songs in the selected list in random order.
  - **ALBUMS** – Play back songs from a randomly selected album in order.
  - **OFF** – Cancel random play.
- 3 Press **M.C.** to confirm the selection.

### SHUFFLE ALL (shuffle all)

- 1 Press **M.C.** to turn shuffle all on. To turn off, set **SHUFFLE** in the **FUNCTION** menu to off.

### LINK PLAY (link play)

- 1 Press **M.C.** to display the setting mode.
- 2 Turn **M.C.** to change the mode; press to select. For details about the settings, refer to *Playing songs related to the currently playing song* on the previous page.

### PAUSE (pause)

- 1 Press **M.C.** to pause or resume.

### AUDIO BOOK (audiobook speed)

- 1 Press **M.C.** to display the setting mode.
- 2 Turn **M.C.** to select your favorite setting.
  - **FASTER** – Playback at a speed faster than normal
  - **NORMAL** – Playback at normal speed
  - **SLOWER** – Playback at a speed slower than normal
- 3 Press **M.C.** to confirm the selection.

### S.RTRV (sound retriever)

Automatically enhances compressed audio and restores rich sound.

- 1 Press **M.C.** to display the setting mode.
- 2 Turn **M.C.** to select the desired setting. For details, refer to *Enhancing compressed audio and restoring rich sound (sound retriever)* on this page.
- 3 Press **M.C.** to confirm the selection.

## Notes

- Switching the control mode to **CTRL iPod** pauses song playback. Operate the iPod to resume playback.

## Operating this unit

- The following functions are still accessible from the unit even if the control mode is set to **CTRL iPod/CTRL APP**.
  - Pausing
  - Fast forward/reverse
  - Track up/down
  - Repeat play (**ONE/ALL/OFF**)
  - Random play (shuffle)
  - (list) to use iPod menu
  - to turn the iPod click wheel to the left
  - to turn the iPod click wheel to the right
- When the control mode is set to **CTRL iPod**, operations are limited as follows:
  - The function settings are not available.
  - The browse function cannot be operated from this unit.

## Bluetooth Telephone Connection menu operation

### Important

Be sure to park your vehicle in a safe place and apply the parking brake when performing this operation.

#### 1 Press and hold to display the connection menu.

- You cannot operate this step during a call.

#### 2 Turn **M.C.** to select the function.

After selecting, perform the following procedures to set the function.

##### **DEVICELIST** (connecting or disconnecting a cellular phone from the device list)

- Press **M.C.** to display the setting mode.
- Turn **M.C.** to select the name of a device you want to connect/disconnect.
  - Press and hold **M.C.** to switch the BD address and device name.
- Press **M.C.** to connect/disconnect the selected cellular phone.  
If the connection is established, is indicated on the device name.

##### **DEL DEVICE** (deleting a cellular phone from the device list)

- Press **M.C.** to display the setting mode.
- Turn **M.C.** to select the name of a device you want to delete.
  - Press and hold **M.C.** to switch the BD address and device name.
- Press **M.C.** to display **DELETE YES**.
- Press **M.C.** to delete a cellular phone information from the device list.
  - While this function is in use, do not turn off the engine.

##### **ADD DEVICE** (connecting a new cellular phone)

- Press **M.C.** to start searching.
  - To cancel, press **M.C.** while searching.
- Turn **M.C.** to select a device from the device list.
  - If the desired device is not displayed, select **RE-SEARCH**.
- Press and hold **M.C.** to switch the BD address and device name.
- Press **M.C.** to connect the selected cellular phone.
  - To complete the connection, check the device name (**DEH-7300BT**) and enter the link code on your cellular phone.
  - PIN code is set to **0000** as the default. You can change this code. Refer to **PIN CODE** (*PIN code input*) on this page.
  - If five devices are already paired, **DEVICEFULL** is displayed and it is not possible to perform this operation. In this case, delete a paired device first.

##### **SPCL. DEV.** (setting a special device)

Bluetooth devices that are difficult to establish a connection with are called special devices. If your Bluetooth device is listed as a special device, select the appropriate one.

- Press **M.C.** to display the setting mode.
- Use **M.C.** to select a special device.  
Turn to change the menu option. Press to select.
  - If five devices are already paired, **DEVICEFULL** is displayed and it is not possible to perform this operation. In this case, delete a paired device first.
- Turn **M.C.** to display this unit's device name, BD address and pincode.
- Use a cellular phone to connect to this unit.
  - To complete the connection, check the device name (**DEH-7300BT**) and enter the link code on your cellular phone.
  - PIN code is set to **0000** as the default. You can change this code. Refer to **PIN CODE** (*PIN code input*) on this page.

## Operating this unit

**A. CONN** (connecting to a Bluetooth device automatically)

- 1 Press **M.C.** to turn automatic connection on or off.

**VISIBLE** (setting the visibility of this unit)

To check the availability of this unit from other devices, Bluetooth visibility of this unit can be turned on.

- 1 Press **M.C.** to turn the visibility of this unit on or off.
  - While setting **SPCL. DEV.**, Bluetooth visibility of this unit is turned on temporarily.

**PIN CODE** (PIN code input)

To connect your cellular phone to this unit via Bluetooth wireless technology, you need to enter a PIN code on your phone to verify the connection. The default code is **0000**, but you can change it with this function.

- 1 Press **M.C.** to display the setting mode.
- 2 Press **▲** or **▼** to select a number.
- 3 Press **▶** to move the cursor to the next position.
- 4 After inputting PIN code, press and hold **M.C.**. The PIN code can be stored in the memory.
  - After inputting 8 digits PIN code, press **▶** to store in memory.
  - After inputting, pressing **M.C.** returns you to the PIN code input display, and you can change the PIN code.

**DEV. INFO** (BD (Bluetooth device) address display)

- 1 Press **M.C.** to display the setting mode.
- 2 Turn **M.C.** left to switch to the BD address. Turning **M.C.** right returns to the device name.

## Phone menu operation

### Important

Be sure to park your vehicle in a safe place and apply the parking brake when performing this operation.

#### 1 Press to display the phone menu.

#### 2 Turn **M.C.** to select the function.

After selecting, perform the following procedures to set the function.

**MISSED** (missed call history)

**DIALED** (dialed call history)

**RECENT** (received call history)

- 1 Press **M.C.** to display the phone number list.
- 2 Turn **M.C.** to select a name or phone number.
- 3 Press **M.C.** to make a call.
- 4 When you find a phone number that you want to store in memory, press and hold one of the preset tuning buttons (**1** to **6**).
  - Press one of preset buttons **1** to **6** to recall the desired preset number.

**PHONE BOOK** (phone book)

- The phone book in your cellular phone will be transferred automatically when the phone is connected to this unit.
- Depending on the cellular phone, the phone book may not be transferred automatically. In this case, operate your cellular phone to transfer the phone book. The visibility of this unit should be on. Refer to **VISIBLE** (*setting the visibility of this unit*) on this page.

- 1 Press **M.C.** to display **SEARCH** (alphabetical list).
- 2 Turn **M.C.** to select the first letter of the name you are looking for.
  - Press and hold **M.C.** to select the desired character type.
- 3 Press **M.C.** to display a registered name list.
- 4 Turn **M.C.** to select the name you are looking for.
- 5 Press **M.C.** to display the phone number list.
- 6 Turn **M.C.** to select a phone number you want to call.
  - When you find a phone number that you want to store in memory, press and hold one of the preset tuning buttons (**1** to **6**).
  - Press one of preset buttons **1** to **6** to recall the desired preset number.
- 7 Press **M.C.** to make a call.

**PRESET** (preset phone numbers)

- 1 Press **M.C.** to display the setting mode.
- 2 Use **M.C.** to select the desired preset number. Turn to change the menu option. Press to select.
  - You can also press one of the preset number buttons **1** to **6** to select a number.
- 3 Press **M.C.** to make a call.

**PHONE FUNC** (phone function)

You can set **A. ANSR** and **R.TONE** from this menu. For details, refer to *Function and operation* on the next page.

# Operating this unit

## Function and operation

### 1 Display PHONE FUNC.

Refer to **PHONE FUNC** (*phone function*) on the previous page.

### 2 Press M.C. to display the function menu.

### 3 Turn M.C. to select the function.

After selecting, perform the following procedures to set the function.

#### A. ANSR (automatic answering)

- 1 Press **M.C.** to turn automatic answering on or off.

#### R.TONE (ring tone select)

- 1 Press **M.C.** to turn the ring tone on or off.



## Audio Adjustments

### 1 Press M.C. to display the main menu.

### 2 Turn M.C. to change the menu option and press to select AUDIO.

### 3 Turn M.C. to select the audio function.

After selecting, perform the following procedures to set the audio function.

#### FAD/BAL (fader/balance adjustment)

- 1 Press **M.C.** to display the setting mode.
- 2 Press **M.C.** to cycle between fader (front/rear) and balance (left/right).
- 3 Turn **M.C.** to adjust speaker balance.
  - When the rear output and RCA output setting are **SW**, you cannot adjust front/rear speaker balance. Refer to **SW CONTROL** (*rear output setting*) on the next page.

#### EQUALIZER (equalizer recall)

- 1 Press **M.C.** to display the setting mode.
- 2 Turn **M.C.** to select the equalizer.
 

**DYNAMIC—VOCAL—NATURAL—CUSTOM—FLAT—POWERFUL**
- 3 Press **M.C.** to confirm the selection.

#### TONE CTRL (equalizer adjustment)

- Adjusted equalizer curve settings are stored in **CUSTOM**.
  - 1 Press **M.C.** to display the setting mode.
  - 2 Press **M.C.** to select **BASS** (bass)/**MID** (mid)/**TREBLE** (treble).
  - 3 Turn **M.C.** to adjust the level.
 

Adjustment range: **+6** to **-6**

#### LOUDNESS (loudness)

Loudness compensates for deficiencies in the low- and high-frequency ranges at low volume.

- 1 Press **M.C.** to display the setting mode.
- 2 Turn **M.C.** to select the desired setting.
 

**OFF** (off)—**LOW** (low)—**HIGH** (high)
- 3 Press **M.C.** to confirm the selection.

#### SUBWOOFER1 (subwoofer on/off setting)

This unit is equipped with a subwoofer output which can be turned on or off.

- 1 Press **M.C.** to display the setting mode.
- 2 Turn **M.C.** to select the desired setting.
 

**NORMAL** (normal phase)—**REVERSE** (reverse phase)—**OFF** (subwoofer off)
- 3 Press **M.C.** to confirm the selection.

#### SUBWOOFER2 (subwoofer adjustment)

The cut-off frequency and output level can be adjusted when the subwoofer output is on. Only frequencies lower than those in the selected range are outputted from the subwoofer.

- 1 Press **M.C.** to display the setting mode.
- 2 Press **M.C.** to cycle between the cut-off frequency and output level of the subwoofer.
 

Cut-off frequency (Cut-off frequency display flashes.)—Output level (Output level display flashes.)
- 3 Turn **M.C.** to select the desired setting.
 

Cut-off frequency: **50HZ—63HZ—80HZ—100HZ—125HZ**

Output level: **-24** to **+6**

## Operating this unit

### SLA (source level adjustment)

**SLA** (Source Level Adjustment) lets you adjust the volume level of each source to prevent radical changes in volume when switching between sources.

- Settings are based on the FM volume level, which remains unchanged.
- The MW/LW volume level can also be adjusted with this function.
- When selecting FM as the source, you cannot switch to **SLA**.

- 1 Press **M.C.** to display the setting mode.
- 2 Turn **M.C.** to adjust the source volume. Adjustment range: **+4** to **-4**
- 3 Press **M.C.** to confirm the selection.



## Initial Settings

### Important

**PW SAVE** (power saving) is cancelled if the vehicle battery is disconnected and will need to be turned back on once the battery is reconnected. When **PW SAVE** (power saving) is off, depending on connection methods, the unit may continue to draw power from the battery if your vehicle's ignition doesn't have an ACC (accessory) position.

**1 Press and hold S (SRC/OFF) until the unit turns off.**

**2 Press S (SRC/OFF) and hold until function name appears in the display.**

**3 Turn M.C. to select the initial setting.**

After selecting, perform the following procedures to set the initial setting.

### FM STEP (FM tuning step)

Normally, the FM tuning step employed by seek tuning is 50 kHz. When AF or TA is on, the tuning step automatically changes to 100 kHz. It may be preferable to set the tuning step to 50 kHz when AF is on.

- The tuning step remains at 50 kHz during manual tuning.

- 1 Press **M.C.** to display the setting mode.
- 2 Turn **M.C.** to select the FM tuning step.  
**50 KHZ** (50 kHz)—**100 KHZ** (100 kHz)
- 3 Press **M.C.** to confirm the selection.

### AUTO-PI (auto PI seek)

The unit can automatically search for a different station with the same programming, even during preset recall.

- 1 Press **M.C.** to turn Auto PI seek on or off.

### AUX (auxiliary input)

Activate this setting when using an auxiliary device connected to this unit.

- 1 Press **M.C.** to turn **AUX** on or off.

### USB (plug and play)

This setting allows you to switch your source to **USB/iPod** automatically.

- 1 Press **M.C.** to turn the plug and play function on or off.

**ON** – When a USB storage device/iPod is connected, depending on the type of device, the source is automatically switched to **USB/iPod** when you turn on the engine. If you disconnect your USB storage device/iPod, this unit's source is turned off.

**OFF** – When a USB storage device/iPod is connected, the source is not switched to **USB/iPod** automatically. Please change the source to **USB/iPod** manually.

### SW CONTROL (rear output setting)

The rear speaker leads output can be used for full-range speaker or subwoofer connection.

If you switch to **REAR-SP:SW**, you can connect a rear speaker lead directly to a subwoofer without using an auxiliary amp.

Initially, **REAR-SP** is set for rear full-range speaker connection (**FUL**).

- 1 Press **M.C.** to display the setting mode.
- 2 Turn **M.C.** to change the setting.

#### REAR-SP: FUL—SW

- 3 Press **M.C.** to confirm the selection.

### DEMO (demo display setting)

- 1 Press **M.C.** to turn the demo display on or off.

### SCROLL (scroll mode setting)

When ever scroll is set to ON, recorded text information scrolls continuously in the display. Set to OFF if you prefer the information to scroll just once.

- 1 Press **M.C.** to turn the ever scroll on or off.

### TITLE (multi-language)



## Operating this unit

This unit can display the text information of a compressed audio file even if they are embedded in a Western European or Russian language.

- If the embedded language and the selected language setting are not the same, text information may not display properly.
  - Some characters may not be displayed properly.
- 1 Press **M.C.** to display the setting mode.
  - 2 Turn **M.C.** to select the desired setting.  
**EUROPEAN** (European)—**RUSSIAN** (Russian)
  - 3 Press **M.C.** to confirm the selection.

### PW SAVE (power saving)

Switching this function on enables you to reduce the consumption of battery power.

- Turning on the source is the only operation allowed when this function is on.
- 1 Press **M.C.** to turn the power save on or off.

### BT CLEAR (resetting the Bluetooth wireless technology module)

Bluetooth telephone data can be deleted. To protect personal information, we recommend deleting this data before transferring the unit to other persons. The following settings will be deleted.

- phone book entries on the Bluetooth telephone
- preset numbers on the Bluetooth telephone
- registration assignment of the Bluetooth telephone
- call history of the Bluetooth telephone
- information of the connected Bluetooth telephone

- 1 Press **M.C.** to show the confirmation display.  
**YES** is displayed. Clearing memory is now on standby.

If you do not want to reset phone memory, press **↵**. The display reverts.

- 2 Press **M.C.** to clear the memory.  
**CLEARED** is displayed and the settings are deleted.
  - While this function is in use, do not turn off the engine.

### VER INFO (Bluetooth version display)

You can display the system versions of this unit and of Bluetooth module.

- 1 Press **M.C.** to display the information.

### S/W UPDATE (updating the software)

This function is used to update this unit with the latest software. For information on the software and updating, refer to our website.


- Never turn the unit off while the software is being updated.
- 1 Press **M.C.** to display the data transfer mode.  
Follow the on-screen instructions to finish updating the software.

## Using an AUX source

**1 Insert the stereo mini plug into the AUX input jack.**

**2 Press S (SRC/OFF) to select AUX as the source.**

### Note

AUX cannot be selected unless the auxiliary setting is turned on. For more details, refer to **AUX (auxiliary input)** on the previous page. 

## Additional Information

### Troubleshooting

Symptom	Cause	Action
The display automatically returns to the ordinary display.	You did not perform any operation within about 30 seconds.	Perform operation again.
The repeat play range changes unexpectedly.	Depending on the repeat play range, the selected range may change when another folder or track is being selected or during fast forwarding/reversing.	Select the repeat play range again.
A subfolder is not played back.	Subfolders cannot be played when <b>FOLDER</b> (folder repeat) is selected.	Select another repeat play range.
<b>NO XXXX</b> appears when a display is changed ( <b>NO TITLE</b> , for example).	There is no embedded text information.	Switch the display or play another track/file.
The display is illuminated when the unit is turned off.	Demo mode is on.	<ul style="list-style-type: none"> <li>• Press <b>⏏</b> to cancel demo mode.</li> <li>• Turn off the demo display setting.</li> </ul>
The unit is malfunctioning. There is interference.	You are using a device, such as a cellular phone, that transmits electric waves near the unit.	Move electrical devices that may be causing the interference away from the unit.



### Error messages

When you contact your dealer or your nearest Pioneer Service Center, be sure to note the error message.

### Built-in CD Player

Message	Cause	Action
<b>ERROR-11, 12, 17, 30</b>	The disc is dirty. The disc is scratched.	Clean the disc. Replace the disc.
<b>ERROR-10, 11, 12, 15, 17, 30, A0</b>	There is an electrical or mechanical error.	Turn the ignition switch OFF and back ON, or switch to a different source, then back to the CD player.
<b>ERROR-15</b>	The inserted disc is blank	Replace the disc.
<b>ERROR-23</b>	Unsupported CD format	Replace the disc.
<b>FRMT READ</b>	Sometimes there is a delay between the start of playback and when you start to hear any sound.	Wait until the message disappears and you hear sound.
<b>NO AUDIO</b>	The inserted disc does not contain any playable files.	Replace the disc.
<b>SKIPPED</b>	The inserted disc contains DRM protected files.	Replace the disc.
<b>PROTECT</b>	All the files on the inserted disc are embedded with DRM.	Replace the disc.

### USB storage device/iPod

Message	Cause	Action
<b>NO DEVICE</b>	When plug and play is off, no USB storage device or iPod is connected.	<ul style="list-style-type: none"> <li>• Turn the plug and play on.</li> <li>• Connect a compatible USB storage device/iPod.</li> </ul>
<b>FRMT READ</b>	Sometimes there is a delay between the start of playback and when you start to hear any sound.	Wait until the message disappears and you hear sound.

## Additional Information

Message	Cause	Action
<b>NO AUDIO</b>	There are no songs.	Transfer the audio files to the USB storage device and connect.
	The connected USB storage device has security enabled	Follow the USB storage device instructions to disable the security.
<b>SKIPPED</b>	The connected USB storage device contains files embedded with Windows Media™ DRM 9/10	Play an audio file not embedded with Windows Media DRM 9/10.
<b>PROTECT</b>	All the files in the USB storage device are embedded with Windows Media DRM 9/10	Transfer audio files not embedded with Windows Media DRM 9/10 to the USB storage device and connect.
<b>N/A USB</b>	The connected USB storage device is not supported by this unit.	<ul style="list-style-type: none"> <li>• Connect a USB Mass Storage Class compliant device.</li> <li>• Disconnect your device and replace it with a compatible USB storage device.</li> </ul>

Message	Cause	Action
<b>CHECK USB</b>	The USB connector or USB cable has short-circuited.	Check that the USB connector or USB cable is not caught in something or damaged.
	The connected USB storage device consumes more than 500 mA (maximum allowable current).	Disconnect the USB storage device and do not use it. Turn the ignition switch to OFF, then to ACC or ON and then connect only compliant USB storage devices.
	The iPod operates correctly but does not charge	Make sure the connection cable for the iPod has not shorted out (e.g., not caught in metal objects). After checking, turn the ignition switch OFF and back ON, or disconnect the iPod and reconnect.
<b>ERROR-19</b>	Communication failed.	<ul style="list-style-type: none"> <li>• Perform one of the following operations. <ul style="list-style-type: none"> <li>–Turn the ignition switch OFF and back ON.</li> <li>–Disconnect the USB storage device.</li> <li>–Change to a different source. Then, return to the USB source.</li> </ul> </li> <li>• Disconnect the cable from the iPod. Once the iPod's main menu is displayed, reconnect the iPod and reset it.</li> </ul>
	iPod failure	Disconnect the cable from the iPod. Once the iPod's main menu is displayed, reconnect the iPod and reset it.

## Additional Information

Message	Cause	Action
<b>ERROR-23</b>	USB storage device was not formatted with FAT12, FAT16 or FAT32	USB storage device should be formatted with FAT12, FAT16 or FAT32.
<b>ERROR-16</b>	The iPod firmware version is old	Update the iPod version.
	iPod failure	Disconnect the cable from the iPod. Once the iPod's main menu is displayed, reconnect the iPod and reset it.
<b>STOP</b>	There are no songs in the current list.	Select a list that contains songs.
<b>NOT FOUND</b>	No related songs	Transfer songs to the iPod.

### Bluetooth Telephone

Message	Cause	Action
<b>ERROR-10</b>	The power failed for the Bluetooth module of this unit.	Turn the ignition switch OFF and then to ACC or ON. If the error message is still displayed after performing the above action, please contact your dealer or an authorized Pioneer Service Station.



## Handling guidelines

### Discs and player

Use only discs that feature either of the following two logos.



Use 12-cm discs. Do not use 8-cm discs or an adapter for 8-cm discs.

Use only conventional, fully circular discs. Do not use shaped discs.



Do not insert anything other than a CD into the CD loading slot.

Do not use cracked, chipped, warped, or otherwise damaged discs as they may damage the player.

Unfinalized CD-R/CD-RW discs cannot be played back.

Do not touch the recorded surface of the discs.

Store discs in their cases when not in use.

Do not attach labels, write on or apply chemicals to the surface of the discs.

To clean a CD, wipe the disc with a soft cloth outward from the center.

Condensation may temporarily impair the player's performance. Let it rest for about one hour to adjust to a warmer temperature. Also, wipe any damp discs off with a soft cloth.

Playback of discs may not be possible because of disc characteristics, disc format, recorded application, playback environment, storage conditions, and so on.

Road shocks may interrupt disc playback.

## Additional Information

### USB storage device

Connections via USB hub are not supported.

Do not connect anything other than a USB storage device.

Firmly secure the USB storage device when driving. Do not let the USB storage device fall onto the floor, where it may become jammed under the brake or accelerator pedal.

Depending on the USB storage device, the following problems may occur.

- Operations may vary.
- The storage device may not be recognized.
- Files may not be played back properly.
- The device may generate noise in the radio.

### iPod

Do not leave the iPod in places with high temperatures.

To ensure proper operation, connect the dock connector cable from the iPod directly to this unit.

Firmly secure the iPod when driving. Do not let the iPod fall onto the floor, where it may become jammed under the brake or accelerator pedal.

About iPod settings

- When an iPod is connected, this unit changes the EQ (equalizer) setting of the iPod to off in order to optimize the acoustics. When you disconnect the iPod, the EQ returns to the original setting.
- You cannot set Repeat to off on the iPod when using this unit. Repeat is automatically changed to All when the iPod is connected to this unit.

Incompatible text saved on the iPod will not be displayed by the unit.

### DualDiscs

DualDiscs are two-sided discs that have a recordable CD for audio on one side and a recordable DVD for video on the other.

Since the CD side of DualDiscs is not physically compatible with the general CD standard, it may not be possible to play the CD side with this unit.

Frequent loading and ejecting of a DualDisc may result in scratches on the disc. Serious scratches can lead to playback problems on this unit. In some cases, a DualDisc may become stuck in the disc loading slot and will not eject. To prevent this, we recommend you refrain from using DualDisc with this unit. Please refer to the information from the disc manufacturer for more detailed information about DualDiscs.



## Compressed audio compatibility (disc, USB)

### WMA

File extension: .wma

Bit rate: 48 kbps to 320 kbps (CBR), 48 kbps to 384 kbps (VBR)

Sampling frequency: 32 kHz, 44.1 kHz, 48 kHz

Windows Media Audio Professional, Lossless, Voice/DRM Stream/Stream with video: Not compatible

### MP3

File extension: .mp3

Bit rate: 8 kbps to 320 kbps (CBR), VBR

Sampling frequency: 8 kHz to 48 kHz (32 kHz, 44.1 kHz, 48 kHz for emphasis)

Compatible ID3 tag version: 1.0, 1.1, 2.2, 2.3, 2.4 (ID3 tag Version 2.x is given priority over Version 1.x.)

M3u playlist: Not compatible

MP3i (MP3 interactive), mp3 PRO: Not compatible

### WAV

File extension: .wav

Quantization bits: 8 and 16 (LPCM), 4 (MS ADPCM)

Sampling frequency: 16 kHz to 48 kHz (LPCM), 22.05 kHz and 44.1 kHz (MS ADPCM)

## Additional Information

### Supplemental information

Only the first 32 characters can be displayed as a file name (including the file extension) or a folder name.

Russian text to be displayed on this unit should be encoded in one of the following character sets:

- Unicode (UTF-8, UTF-16)
- A character set other than Unicode that is used in a Windows environment and is set to Russian in the multi-language setting

This unit may not operate correctly depending on the application used to encode WMA files.

There may be a slight delay at the start of playback of audio files embedded with image data or audio files stored on a USB storage device that has numerous folder hierarchies.

### Disc

Playable folder hierarchy: up to eight tiers (A practical hierarchy is less than two tiers.)

Playable folders: up to 99

Playable files: up to 999

File system: ISO 9660 Level 1 and 2, Romeo, Joliet

Multi-session playback: Compatible

Packet write data transfer: Not compatible

Regardless of the length of blank sections between the songs from the original recording, compressed audio discs play with a short pause between songs.

### USB storage device

Playable folder hierarchy: up to eight tiers (A practical hierarchy is less than two tiers.)

Playable folders: up to 500


Playable files: up to 15 000

Playback of copyright-protected files: Not compatible

Partitioned USB storage device: Only the first partition can be played.

There may be a slight delay when starting playback of audio files on a USB storage device with numerous folder hierarchies.

### CAUTION

Do not leave discs or a USB storage device in any place that is subject to high temperatures. 

## iPod compatibility

This unit supports only the following iPod models. Supported iPod software versions are shown below. Older versions may not be supported.

- iPhone 3GS (software version 4.0)
- iPhone 3G (software version 4.0)
- iPhone (software version 3.1.3)
- iPod nano 5th generation (software version 1.0.2)
- iPod nano 4th generation (software version 1.0.4)
- iPod nano 3rd generation (software version 1.1.3)
- iPod nano 2nd generation (software version 1.1.3)
- iPod nano 1st generation (software version 1.3.1)
- iPod touch 3rd generation (software version 4.0)
- iPod touch 2nd generation (software version 4.0)
- iPod touch 1st generation (software version 3.1.3)
- iPod classic 160GB (software version 2.0.4)
- iPod classic 120GB (software version 2.0.1)
- iPod classic (software version 1.1.2)
- iPod 5th generation (software version 1.3)

Depending on the generation or version of the iPod, some functions may not be available.

Operations may vary depending on the software version of iPod.


When using an iPod, an iPod Dock Connector to USB Cable is required.

A Pioneer CD-IU50 interface cable is also available. For details, consult your dealer.

About the file/format compatibility, refer to the iPod manuals.

Audio Book, Podcast: Compatible

### CAUTION


Pioneer accepts no responsibility for data lost on the iPod, even if that data is lost while this unit is used. 

## Sequence of audio files

The user cannot assign folder numbers and specify playback sequences with this unit.

## Additional Information

### Example of a hierarchy

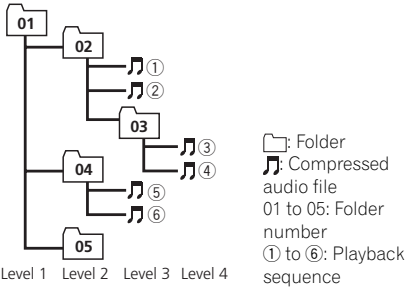

### Disc

Folder selection sequence or other operation may differ depending on the encoding or writing software.

### USB storage device

Playback sequence is the same as recorded sequence in the USB storage device. To specify the playback sequence, the following method is recommended.

- 1 Create a file name that includes numbers that specify the playback sequence (e.g., 001xxx.mp3 and 099yyy.mp3).
- 2 Put those files into a folder.
- 3 Save the folder containing files on the USB storage device.

However, depending on the system environment, you may not be able to specify the playback sequence.

For USB portable audio players, the sequence is different and depends on the player.

## Russian character chart

D: C	D: C	D: C	D: C	D: C
А: А	Б: Б	В: В	Г: Г	Д: Д
Е: Е, Ё	Ж: Ж	З: З	И: И, Й	К: К
Л: Л	М: М	Н: Н	О: О	П: П
Р: Р	С: С	Т: Т	У: У	Ф: Ф

D: C	D: C	D: C	D: C	D: C
Х: X	Ц: Ц	Ч: Ч	Ш: Ш, Щ	Ъ: Ъ
Ы: Ы	Ь: Ь	Э: Э	Ю: Ю	Я: Я

D: Display C: Character

## Bluetooth profiles

- In order to use Bluetooth wireless technology, devices must be able to interpret certain profiles. This unit is compatible with the following profiles.
  - GAP (Generic Access Profile)
  - SDP (Service Discovery Protocol)
  - OPP (Object Push Profile)
  - HFP (Hands Free Profile)

## Copyright and trademark

### Bluetooth

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Pioneer Corporation is under license. Other trademarks and trade names are those of their respective owners.

### iTunes

Apple and iTunes are trademarks of Apple Inc., registered in the U.S. and other countries.

## Additional Information

### MP3

Supply of this product only conveys a license for private, non-commercial use and does not convey a license nor imply any right to use this product in any commercial (i.e. revenue-generating) real time broadcasting (terrestrial, satellite, cable and/or any other media), broadcasting/streaming via internet, intranets and/or other networks or in other electronic content distribution systems, such as pay-audio or audio-on-demand applications. An independent license for such use is required. For details, please visit <http://www.mp3licensing.com>.

### WMA


Windows Media and the Windows logo are trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries.

This product includes technology owned by Microsoft Corporation and cannot be used or distributed without a license from Microsoft Licensing, Inc.

### iPod & iPhone

iPhone, iPod, iPod classic, iPod nano, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries.

"Made for iPod" and "Made for iPhone" mean that an electronic accessory has been designed to connect specifically to iPod or iPhone, respectively, and has been certified by the developer to meet Apple performance standards.

Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. 

## Specifications

### General

Power source .....	14.4 V DC (10.8 V to 15.1 V allowable)
Grounding system .....	Negative type
Maximum current consumption .....	10.0 A
Dimensions (W × H × D):	
DIN	
Chassis .....	178 mm × 50 mm × 165 mm
Nose .....	188 mm × 58 mm × 17 mm
D	
Chassis .....	178 mm × 50 mm × 165 mm
Nose .....	170 mm × 46 mm × 17 mm
Weight .....	1.2 kg

### Audio

Maximum power output .....	50 W × 4
Continuous power output ...	22 W × 4 (50 Hz to 15 000 Hz, 5 % THD, 4 Ω load, both channels driven)
Load impedance .....	4 Ω (4 Ω to 8 Ω allowable)
Preout maximum output level .....	2.0 V
Tone controls:	
Bass	
Frequency .....	100 Hz
Gain .....	±12 dB
Mid	
Frequency .....	1 kHz
Gain .....	±12 dB
Treble	
Frequency .....	10 kHz
Gain .....	±12 dB
Subwoofer (mono):	
Frequency .....	50/63/80/100/125 Hz
Slope .....	-18 dB/oct
Gain .....	+6 dB to -24 dB
Phase .....	Normal/Reverse

### CD player

System .....	Compact disc audio system
Usable discs .....	Compact disc
Signal-to-noise ratio .....	94 dB (1 kHz) (IEC-A network)
Number of channels .....	2 (stereo)
WMA decoding format .....	Ver. 7, 7.1, 8, 9, 10, 11, 12 (2ch audio) (Windows Media Player)
MP3 decoding format .....	MPEG-1 & 2 Audio Layer 3



## Additional Information

WAV signal format ..... Linear PCM & MS ADPCM  
(Non-compressed)

### USB

USB standard specification

..... USB 2.0 full speed  
Maximum current supply ... 500 mA  
USB Class ..... MSC (Mass Storage Class)  
File system ..... FAT12, FAT16, FAT32  
WMA decoding format ..... Ver. 7, 7.1, 8, 9, 10, 11, 12  
(2ch audio)  
(Windows Media Player)  
MP3 decoding format ..... MPEG-1 & 2 Audio Layer 3  
WAV signal format ..... Linear PCM & MS ADPCM  
(Non-compressed)

### FM tuner

Frequency range ..... 87.5 MHz to 108.0 MHz  
Usable sensitivity ..... 9 dBf (0.8  $\mu$ V/75  $\Omega$  mono,  
S/N: 30 dB)  
Signal-to-noise ratio ..... 72 dB (IEC-A network)

### MW tuner

Frequency range ..... 531 kHz to 1 602 kHz  
Usable sensitivity ..... 25  $\mu$ V (S/N: 20 dB)  
Signal-to-noise ratio ..... 62 dB (IEC-A network)

### LW tuner

 
Frequency range ..... 153 kHz to 281 kHz  
Usable sensitivity ..... 28  $\mu$ V (S/N: 20 dB)  
Signal-to-noise ratio ..... 62 dB (IEC-A network)

 
### Bluetooth

Version ..... Bluetooth 2.0 certified  
Output power ..... +4 dBm Max.  
(Power class 2)

### Note

Specifications and the design are subject to modifications without notice.





**<http://www.pioneer.eu>**

Visit **[www.pioneer.co.uk](http://www.pioneer.co.uk)** (or **[www.pioneer.eu](http://www.pioneer.eu)**) to register your product.  
Visitez **[www.pioneer.fr](http://www.pioneer.fr)** (ou **[www.pioneer.eu](http://www.pioneer.eu)**) pour enregistrer votre appareil.  
Si prega di visitare il sito **[www.pioneer.it](http://www.pioneer.it)** (o **[www.pioneer.eu](http://www.pioneer.eu)**) per registrare il prodotto.  
Visite **[www.pioneer.es](http://www.pioneer.es)** (o **[www.pioneer.eu](http://www.pioneer.eu)**) para registrar su producto.  
Zum Registrieren Ihres Produktes besuchen Sie bitte **[www.pioneer.de](http://www.pioneer.de)** (oder **[www.pioneer.eu](http://www.pioneer.eu)**) .  
Bezoek **[www.pioneer.nl](http://www.pioneer.nl)** (of **[www.pioneer.eu](http://www.pioneer.eu)**) om uw product te registreren.  
Посетите **[www.pioneer-rus.ru](http://www.pioneer-rus.ru)** (или **[www.pioneer.eu](http://www.pioneer.eu)**) для регистрации приобретенного Вами изделия.

#### **PIONEER CORPORATION**

1-1, Shin-ogura, Saiwai-ku, Kawasaki-shi,  
Kanagawa 212-0031, JAPAN

#### **PIONEER ELECTRONICS (USA) INC.**

P.O. Box 1540, Long Beach, California 90801-1540, U.S.A.  
TEL: (800) 421-1404

#### **PIONEER EUROPE NV**

Haven 1087, Keetberglaan 1, B-9120 Melsele, Belgium/Belgique  
TEL: (0) 3/570.05.11

#### **PIONEER ELECTRONICS ASIACENTRE PTE. LTD.**

253 Alexandra Road, #04-01, Singapore 159936  
TEL: 65-6472-7555

#### **PIONEER ELECTRONICS AUSTRALIA PTY. LTD.**

178-184 Boundary Road, Braeside, Victoria 3195, Australia  
TEL: (03) 9586-6300

#### **PIONEER ELECTRONICS OF CANADA, INC.**

300 Allstate Parkway, Markham, Ontario L3R 0P2, Canada  
TEL: 1-877-283-5901  
TEL: 905-479-4411

#### **PIONEER ELECTRONICS DE MEXICO, S.A. de C.V.**

Bldv.Manuel Avila Camacho 138 10 piso  
Col.Lomas de Chapultepec, Mexico, D.F. 11000  
TEL: 55-9178-4270

#### **先鋒股份有限公司**

台北市內湖區瑞光路407號8樓  
電話：(02) 2657-3588

#### **先鋒電子（香港）有限公司**

香港九龍尖沙咀海港城世界商業中心  
9樓901-6室  
電話：(0852) 2848-6488

Published by Pioneer Corporation.  
Copyright © 2010 by Pioneer Corporation.  
All rights reserved.