

Notice

Read this manual carefully and make sure you understand the instructions provided. For your safety, check what the result of each action will be.



To reduce the risk of electric shock, do not remove cover (or back). No user serviceable parts inside. Refer servicing to qualified service personnel. Indicates a situation which, if not avoided, could damage the equipment or other apparatus.



This symbol indicates dangerous voltage inside the TV that presents a risk of electric shock or personal injury. Indicates a hazardous situation which, if not avoided, could result in serious injury.



This symbol indicates important instructions accompanying the TV.



Instruction about the 'WEEE' Symbol

This product should not be disposed with other household wastes at the end of its working life. Please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources. This will prevent possible harm to the environment or human health from uncontrolled waste disposal.

Domestic users: Please contact either the retailer where you purchased this product or their local government office for details of where and how they can take this item for environmentally safe recycling.

Business users: Contact your supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

Copyright © 2007 HUMAX Corporation)

Not to be copied, used or translated in part or whole without HUMAX's prior consent in writing except approval of ownership of copyright and copyright law.

Warranty

The information in this document is subject to change without notice. HUMAX does not have any responsibility for direct, indirect, accidental and other damage caused by the use of the information contained in this manual.

Trademarks

VIACCESS™ is a trademark of France Telecom.

CryptoWorks™ is a trademark of Philips Electronics N.V.

Irdeto is a trademark of Mindport BV.

Nagravision is a registered trademark of KUDELSKI S.A.

Conax is a trademark of Telenor Conax AS.

is a trademark of SRS Labs, Inc.

TruSurround XT technology is incorporated under license from SRS Labs, Inc.

Thank you for purchasing a HUMAX TV. Please read this user manual carefully in order to safely install, use and maintain the TV at maximum performance. Keep this user manual next to your TV to ensure the best performance possible.

This user manual covers the 32 inch, 22 inch and 19 inch models.

The illustrations and on-screen displays in this user manual are for explanation purpose and may vary slightly from the actual operations.

General Safety Precautions

Power

- Plug the power cord into the correct power outlet. An unstable connection may cause fire.
- Do not use damaged power cords or plugs, or use a loose wall outlet. This may cause electrical shock or fire.
- Do never touch the power cord with wet hands. This may cause electrical shock.
- Do not use multiple devices with one outlet. Overheating the outlet may cause fire.
- Do not bend or pull out the power cord using force, nor place heavy objects over it. This may cause electrical shock or fire.
- Make sure you pull out the power cord holding the plug itself. An internal disconnection may cause fire.
- When removing the product, turn off the power and pull out the plug from the power outlet. Also make sure other devices including the antenna or the connectors are removed from the outlets before relocating the product. Otherwise you may suffer electrical shock or fire due to a damaged power cord.
- The mains plug shall remain readily operable.
- Plug as disconnection device shall remain to be readily approached by user.

Installation

- Keep the product away from any heating devices. Placing it close to a heating device may cause fire.
- Keep the power cord away from any heating devices. A melted coating may cause fire or electrical shock.
- Place the antenna as far away as possible from any high-voltage cables. Touching the high voltage wiring may cause fire or electrical shock.
- Do not install the product in oily, smoky or humid (or exposed to rain/water) places or automobiles. This may cause fire.
- The connection between the external antenna and the internal wiring should be turned inside to avoid any inflow of rain. Exposing the LCD to water (rain) will cause electrical shock or fire.
- Do not use the product in humid places. Humidity will shorten the life of the product and may cause an electrical shortage or fire.
- Do not use the product in places with low temperatures (below 5°C).
- Avoid installing the product in poorly ventilated places. Internal overheating may cause an electrical shortage and fire.
- Be sure not to cover the ventilator (with a table-cloth or curtain, etc.). Internal overheating may cause an electrical shortage and fire.
- Do not install the product in an unstable place or on a small stand. The product may cause serious
 injury, if it falls on somebody (especially children). Install it on an even, stable place as it is front-heavy.
- Do not install the product on the floor. Someone (especially children) may trip over it.

Usage

- Unplug the product from the wall outlet and do not touch the antenna during a thunderstorm. This will prevent damage to the unit due to lightning and power-surges.
- Keep dust or water away from the pins or touching points of the power plug. This will prevent electrical shock or fire.
- Keep children from climbing over the product. The device may cause serious injury or death if it falls on them.
- Do not place anything over the product that children may try to reach. The device may cause serious injury or death if it falls on them.
- When removing the battery from the product, keep it out of children's reach. If a child swallows a battery, consult a doctor immediately.
- Use only specified batteries and do not use an old battery along with a new one. Align the batteries according to the correct polarity (+ or -). Aligning them incorrectly may cause an internal explosion or a leakage of the internal liquid, leading to electrical shock, physical damage or pollution of the surroundings.
- Do not insert any metal or a flammable object or an alien substance into the ventilator, the AV input terminal or the slots for the modules or Smartcards. This may cause damage to the product and reduce its life span.
- Do not disassemble, repair or reconstruct the product at your discretion. This may cause electrical shock or fire. Contact your local customer support.
- Keep the product away from inflammable sprayers or ignitable objects. Exposure to these may cause explosion or fire.
- Do not place water-pots, flower vases, beverage cans, small metals or heavy objects over the product. Contact of these contents with the product may cause electrical shock or fire, while any falling of the product may cause injury.
- If the product breaks down, turn off the power and unplug it from the outlet before contacting Customer Support. This will protect you from electrical shock or fire.
- When you notice something strange like an odd noise, smell something burning or see smoke, unplug the power cord and contact your local Customer Support. Do this to avoid electrical shock or fire.
- Do not use sharp tools such as a pin or a pencil near the TV, as they may scratch the LCD surface.
- Do not use a solvent, such as benzene, to clean the TV, as it will damage the LCD surface.

Cleaning

- Unplug the power cord before cleaning the product. This may cause electrical shock or fire.
- Do not sprinkle water on the product. This may cause electrical shock or fire.
- Use only a soft dry cloth as the surface is weak on scratch. Do not use chemicals like wax, benzene, alcohol, thinners, aroma, lubricator or cleanser.

Table of Contents

| Chapter 1 >> Getting Started | 8 |
|--|----|
| Package Contents | 8 |
| Front & Top Panel | 9 |
| Rear & Side Panel | 10 |
| Remote Control Buttons | 12 |
| Installing on the Wall | 17 |
| Chapter 2 >> Connecting Your TV | 18 |
| Connecting to the Antenna | 18 |
| Connecting to the VCR | 19 |
| Connecting to the DVD Player | 21 |
| Connecting to the Set-Top Box | 23 |
| Connecting to the Digital Audio System | 24 |
| Connecting to the PC | 25 |
| Connecting Headphones | 25 |
| Conditonal Access System | 26 |
| Chapter 3 >> Installation Wizard | 27 |
| Wizard for Analog Channels | 27 |
| Wizard for Digital Channels | 27 |
| Chapter 4 >> Basic Operation | 31 |
| Turning on Your TV | 31 |
| Selecting the Menu Language | 31 |
| Selecting the Main Input Source | 32 |
| Switching Channel | 32 |
| Volume Control | 32 |
| Viewing Analog Channel List | 33 |
| Displaying Information | |
| Chapter 5 >> Setting Analog Channels | 34 |
| Scanning Analog Channels Automatically | 34 |
| Scanning Analog Channels Manually | 35 |
| Editing Analog Channels | 36 |
| Chapter 6 >> Setting the Picture | 37 |
| Selecting a Picture Mode | 37 |
| Customizing the Picture Settings | 37 |
| Fleshtone | 38 |
| Colour Temperature | 38 |
| Noise Reduction | 39 |
| Adjusting Backlight Brightness | 39 |
| Chapter 7 >> Setting the Sound | 40 |
| Setting the Sound Effect | 40 |

Table of Contents

| Adjusting the Sound Balance | 40 |
|---|----|
| Adjusting the Volume Automatically | 41 |
| Setting the TruSurround XT | 41 |
| Chapter 8 >> Setting the System | 42 |
| Setting the Time Information | 42 |
| Picture-in-Picture (PIP) Settings | 43 |
| Adjusting OSD Transparency | 44 |
| Adjusting Blue Back | 44 |
| Panel Off | 45 |
| Default Settings | 45 |
| Chapter 9 >> Using the Digital TV Features | 46 |
| Basic Operation | 46 |
| Digital Channel List | 50 |
| Programme Guide | |
| Viewing the Electronic Programme Guide(EPG) | |
| Finding a Programme | 54 |
| Chapter 10 >> Setting the DTV Setup Menu | 55 |
| Preferences | 55 |
| Edit Channels | 60 |
| Installation | 63 |
| System | |
| Chapter 11 >> Setting the Aspect Ratio | 76 |
| Chapter 12 >> Using the Teletext | 78 |
| Displaying Teletext information | 78 |
| Chapter 13 >> Setting the PC | 79 |
| Auto Configure | 79 |
| Position | 79 |
| Clock | 80 |
| Phase | 80 |
| Menu Map | 81 |
| Troubleshooting | 83 |
| Specification | 86 |
| Glossary | 87 |
| Service & Support | 88 |
| | |

Package Contents

Please check that the following contents are included with your TV.







Remote control




AAA batteries (X2)



Power cord (for 32 inch)

Front & Top Panel

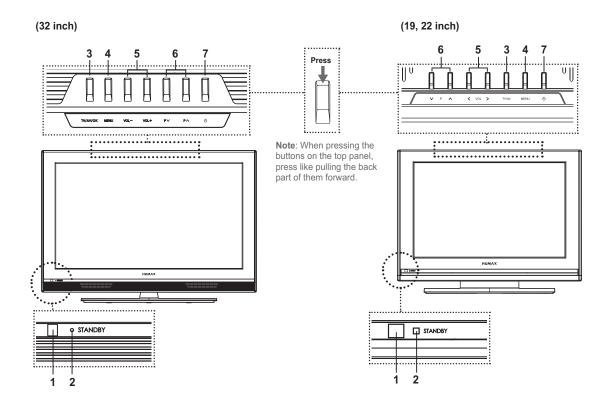

1 Remote control sensor

Receives commands directly from your remote control and passes them on.

2 Standby indicator

Turns on blue during the standby mode.

Turns on red during the standby mode and turns on green during the operation mode. (LIT32-Combo only)

3 TV/AV/OK button

Displays input source or confirms the selection.

4 MENU button

Displays the on-screen menu.

5 VOLUME buttons

Adjusts the volume.

6 P V / P ∧ buttons

Selects channels.


7 Standby button

Switches between operation and standby modes.

Note: If the standby indicator lamp is unlit, press the main power switch on the rear of the TV. (32 inch)

Rear & Side Panel

32 inch

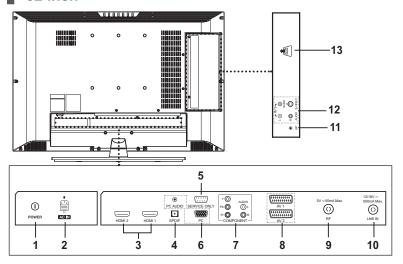

1 MAIN POWER switch

Turns the power on/off.

2 AC INPUT

Connects the power cord.

3 HDMI INPUT (HDMI1/HDMI2)

Receives uncompressed digital audio and video signals from the device that supports High Definition Multi-media Interface (HDMI).

4 SPDIF OUTPUT

Connects to a digital audio component (Digital TV audio output only).

5 SERVICE ONLY (RS232C)

Connects to the PC to update the software of the TV.

6 PC/PC AUDIO INPUT

Connect to the video and audio output jacks on your PC.

7 COMPONENT INPUT

Connects to video (Y/Pb/Pr) and audio (L/R) components.

8 SCART INPUT/OUTPUT (AV1/AV2)

Inputs or Outputs for external devices, such as VCR, DVD, video game console or video disc players.

9 RF INPUT

Connects to an antenna or a cable system.

10 LNB INPUT

Connects to a satellite antenna cable.

11 H/P Connects to headphones.


12 COMPOSITE/S-VIDEO INPUT (AV3)

Connects to the audio and video (or S-Video) output jacks of a camcorder, video game console and similar devices.

13 CI (Common Interface) SLOT

A slot for a CI Module.

19, 22 inch

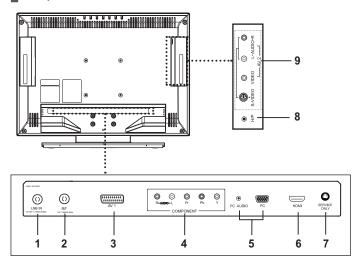

1 LNB INPUT

Connects to a satellite antenna cable.

2 RF INPUT

Connects to an antenna or a cable system.

3 SCART INPUT/OUTPUT (AV1)

Inputs or Outputs for external devices, such as VCR, DVD, video game console or video disc players.

4 COMPONENT INPUT

Connects to video (Y/Pb/Pr) and audio (L/R) components.

5 PC/PC AUDIO INPUT

Connect to the video and audio output jacks on your PC.

6 HDMI INPUT

Receives uncompressed digital audio and video signals from the device that supports High Definition Multi-media Interface (HDMI).

7 SERVICE ONLY (RS232C)

Connects to the PC to update the software of the TV.

8 H/P Connects to headphones.

9 COMPOSITE/S-VIDEO INPUT (AV2)

Connects to the audio and video (or S-Video) output jacks of a camcorder, video game console and similar devices.

10 CI (Common Interface) SLOT

A slot for a CI Module.

Remote Control Buttons

■ NR-242 (for LDE-32SST, LDE-32DST, LDE-22DST, LDE-19DST)

This remote control (NR-242) is for LDE-32SST, LDE-32DST, LDE-22DST and LDE-19DST models

TV/AV

Displays all available input sources. Press the ▲/▼ button to select a required input source.

MUTE

Mutes the sound. To cancel, press the MUTE, VOL+, or VOL- button.

SLEEP

Selects a preset time interval for switching the TV to standby mode automatically.

PIC MODE

Selects the picture mode (Standard, Bright, Soft or Manual).

SND EFFECT

Selects the sound effect (Flat, Speech, Movie, Music, or User).

WIDE

Select the aspect ratio.

Coloured Buttons

Used for interactive applications in the EPG, Edit Channels and Teletext mode.

EPG

Displays the Electronic Programme Guide (EPG) in Digital TV input.

BACK

Returns to the previous display.

MENL

Displays the On Screen Display (OSD) menu.

EXIT


Exits from the currently displayed menu.

Arrow (▲/▼/◄/▶) buttons

Controls the selection in the On Screen Display (OSD) menu.

ΩK

Confirms (save or enter) your choice in the On Screen Display (OSD) menu.

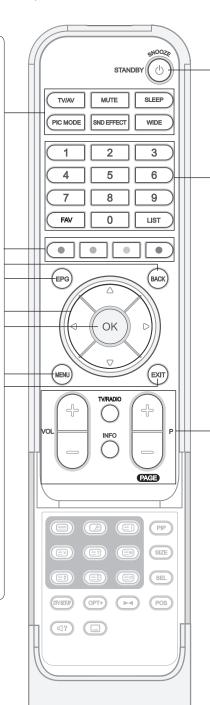

STANDBY

Switches between operation and standby modes.

SNOOZE

Switches into the standby mode momentarily.

Number (0~9) buttons

Enters the channel number for direct display. Used to enter digit numbers.

FAV

In Analog TV input mode, switches to a favourite channel. Circulates through favourite channels in sequent order while watching TV. In Digital TV input mode, display the favourite channel list.

LIST

Displays the channel list.

VOL+/-

Adjusts the volume.

P+/- (Page)

Switches channels or pages.

TV/RADIO

Switches between digital TV and radio modes.

INFO

Displays information on the current channel or input.

Chapter 1 >> Getting Started

TELETEXT Function Buttons

(Teletext On/Off)

Activates or deactivates the teletext service.

(Mix)

Overlaps the teletext with the broadcasting screen.
Adjusts the opacity to the background in Teletext mode.

(Index)

Displays the teletext index page.

(Cancel)

Displays the TV programme when searching for the new teletext page.

(Reveal)

Shows the hidden information.

Selects the teletext mode (LIST/FLOF)

(Size) (≡


Displays the double-size letters.

🔢 (Hold)

Holds the current teletext page not updating it.

(Subpage)

Displays the available sub-page.

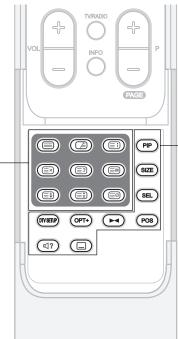

PIP (32" only)

Turns on and off the PIP mode.

SIZE (32" only)

Changes the size of the sub screen. (Small or Large)

SEL (32" only)

Selects the main or sub screen.

POS (32" only)

Changes the position of the sub screen.

DTV SETUP

Displays the menu for Digital TV setup.

OPT +

Displays the channel options while watching a programme in Digital TV input.

► (FREEZE)

Freezes the TV screen you are watching in Digital TV input. Play the audio continuously.

Selects the sound mode (Stereo, Mono, etc.) in Analog TV input or the soundtrack list in Digital TV input.

(Subtitle)

Displays the subtitle language list in Digital TV input.

HUMAX

NR-243 (for LIT32-Combo, LIT22-Combo, LIT19-Combo)

This remote control (NR-243) is only for LIT32-Combo, LIT22-Combo and LIT19-Combo models and the Universal Remote Control allows you to control both your TV and STB simultaneously. It can control the following HUMAX STB(set-top-box) models; DTT-3500, DTT-4500, and HDCI-2000. For detailed information about buttons for STB, refer to each STB user's manual.

DTV

Changes the remote into TV operating mode.

STR

Changes the remote into STB operating mode.

TV/AV (TV mode only)

Displays all available input sources. Press the ▲/▼ button to select a required input source.

PIC MODE (TV mode only)

Selects the picture mode (Standard, Bright, Soft, or Manual).

SND EFFECT (TV mode only)

Selects the sound effect (Flat, Speech, Movie, Music, or User).

MUTE (TV mode only)

Mutes the sound. To cancel, press the MUTE, VOL+, or VOL- button.

Coloured buttons

Used for interactive applications in the EPG, Edit Programmes, and Teletext mode.

EPG

Displays the Electronic Programme Guide (EPG) in DTV or STB mode.

BACK

Returns to the previous display.

MENU

Displays the TV main menu in TV mode and displays STB main menu in STB mode.

EXIT

Exits from the currently displayed menu in TV, DTT-3500 and DTT-4500


In HDCI-2000, also returns to the previous menu.

Arrow (▲/▼/◄/▶) buttons

Controls the selection in the On Screen Display (OSD) menu.

oĸ

Confirms (save or enter) your choice.

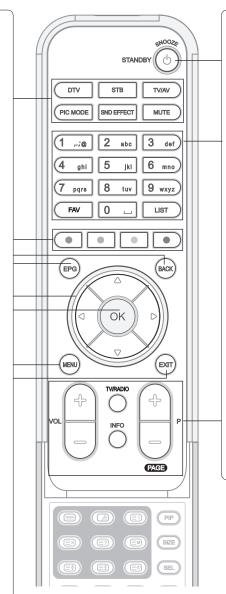

STANDBY

Switches your TV or STB into operation or standby modes.

SNOOZE

Switches into the standby mode momentarily.

Number (0~9) buttons

Enters the channel number for direct display. Used to enter digit numbers. Supports SMS function in DTT-3500 and DTT-4500.

FAV (TV mode only)

In Analog TV input mode, switches to a favourite channel. Circulates through favourite channels in sequent order while watching TV. In Digital TV input mode, display the favourite channel list.

LIST

Displays the channel list.

VOL+/- (TV mode only) Adjusts the volume.

P+/- (Page)

Switches channels or teletext pages. In HDCI-2000, not switches the pages.

TV/RADIO

Switches between digital TV channels and digital radio channels. Not used in DTT-4500.

INFO

Displays information on digital channels and programmes.

TELETEXT Function Buttons (TV mode only)

(Teletext On/Mix/Off)

Activates the teletext service and overlaps the teletext with the broadcasting screen.

(Index)

Displays the teletext index page.

Displays the TV programme when searching for the new teletext page.

(Reveal)

Shows the hidden information.

(Mode) (■

Selects the teletext mode (LIST/FLOF)

(Size) (≡


Displays the double-size letters.

🔢 (Hold)

Holds the current teletext page not updating it.

(Subpage)

Displays the available sub-page.

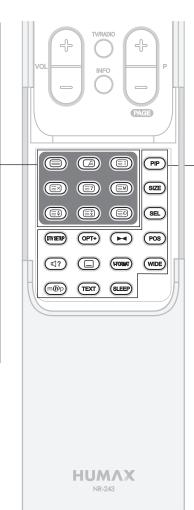

PIP (32", TV Mode only)

Turns on and off the PIP mode.

SIZE (32", TV Mode only)

Changes the size of the sub screen. (Small or Large)

SEL (32", TV Mode only)

Selects the main or sub screen.

POS (32", TV Mode only)

Changes the portion of the sub

DTV SETUP (TV mode only)

Displays the menu for Digital TV setup.

OPT + (except DTT-3500)

Displays the channel options while watching a programme in Digital TV input.

► (FREEZE) (TV Mode only)

Freezes the TV screen you are watching in Digital TV input. Play the audio continuously.

Selects the sound mode (Stereo, Mono, etc.) in ATV mode and the audio language in DTV or STB mode.

(Subtitle)

Displays the subtitle language list on the screen.

V-FORMAT (HDCI-2000 only)

Change the resolution of video.

WIDE

Sets the display format.

m@p (MHP Application) (DTT-3500, DTT-4500 only)

Displays MHP application information. (Number of MHP application and MHP application status.)

TEXT (DTT-3500, DTT-4500, HDCI-2000 only)

Shows MHEG (digital teletext information)

SLEEP (TV mode only)

Selects a preset time interval for switching the TV to standby mode automatically.

(h

TV/AV

MUTE

6 mno

9 wxyz

LIST

STANDBY

STB

SND EFFECT

2 abc 3 def

5

8

0

jkl

tuv

PIC MODE

,.;@


ghi

pqrs

FAV



The HUMAX Universal Remote Control (NR-243) is designed to control the following HUMAX STB(set-top box) models: DTT-3500, DTT-4500 and HDCl-2000. To control these HUMAX set-top boxes, you will need to program the remote control by performing the following steps.

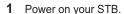


- 2 Press the STB button once to switch your remote control into STB operating mode.
- **3** Press again and hold the **STB** button for 3 seconds.
- 4 While holding the **STB** button down, enter the 3-digit code for your STB.
- 5 Release the STB button.
- 6 Aim the remote control at your STB and press the STANDBY button. The STB should turn on.

Note: If it does not, confirm the correct code for your STB model and repeat steps 2 through 6.




| DTT-3500 | 001 |
|-----------|-----|
| DTT-4500 | 002 |
| HDCI-2000 | 003 |

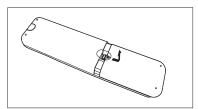


Inserting Batteries into the Remote Control

You must insert or replace the batteries in the remote control when:

- + You just purchased TV
- + Remote control does not work

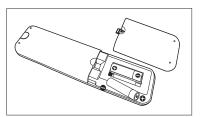

- 1 Remove the cover on the rear of the remote control by pressing the symbol (▼) downwards and then pulling firmly to remove it.
- 2 Insert two AAA size 1.5V batteries ensuring that the plus(+) and minus(-) signs of the batteries are correctly aligned.
- 3 Close the cover.

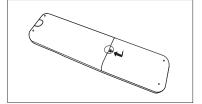

Note: Do not mix different battery types such as alkaline with manganese.

Installing on the Wall

You can install the TV on the wall using a mounting bracket (sold separately).

TIP: This Television is compliant with the VESA wall mounting standard. A variety of Mounts are available through your local retailer. Each may have its unique installation instructions.



Here the shown illustration are for explanation purpose and may be somewhat different depending on the type of mounts.


- **1** Before you install, separate the TV and stand-base by removing the screws.
- 2 Attach your main body bracket on the TV and fix using screws firmly.
- 3 Stick the TV with main body bracket into the wall bracket attached on the wall.
- 4 Tighten up a safety-screw.

Notes:

- 1. Please ask the installers to install the wall mount bracket.
- 2. Do not install the set on a weak surface such as plaster or foam board.
- **3.** Please tightly secure the wall mount bracket to the wall to avoid injury from a falling TV.

Connecting to the Antenna

To view the television channels correctly, a signal must be received by the broadcasting provider.

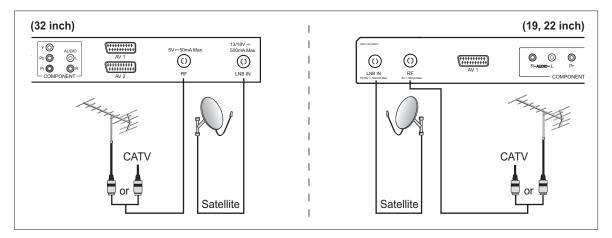

- 1 Connect the RF coaxial cable from an aerial or a cable TV to the RF jack on the rear of the TV.
- **2** Connect the satellite antenna cable to the **LNB IN** jack on the rear of the TV.


Notes:

- For proper reception of signals, an external antenna is required. For best reception, an outdoor antenna is recommended.
- 2. To improve the picture quality in a poor signal area, please purchase a signal amplifier and install properly.

Connecting to the VCR

Using the SCART Cable

Connect the SCART cable between the **SCART** jack on TV and the SCART jack on your VCR.

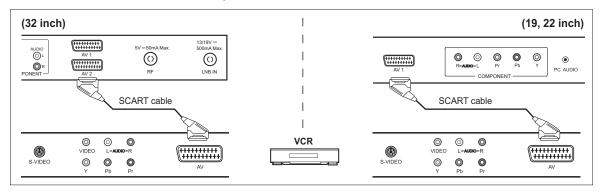

- If you want to make a copy from a secondary VCR (or DVD player) --(32inch only)
- 1 Connect your secondary VCR (or DVD player) to the SCART (AV1) jack and the target VCR (or DVD player) to the SCART (AV2) jack so that the signal transfers from AV1 to AV2.
- 2 To record a programme, connect the receiver to the SCART (AV1) jack and the VCR (or DVD player) to the SCART (AV2) jack so that the signal transfers from AV1 to AV2.

Note: For more details about how to record, refer to your required Equipment's instructions.

| Main Input | | AV1 (SCART1) Output | AV2 (SCART2) Output |
|-----------------|------|------------------------|---------------------|
| Digital TV | | Digital TV | Digital TV |
| Analog TV | | Analog TV | Analog TV |
| AV1 | CVBS | | AV1 (CVBS) |
| (SCART) | RGB | | AV1 (CVBS) |
| AV2 | CVBS | | AV2 (CVBS) |
| (SCART) | RGB | | AV2 (CVBS) |
| Component | | Previous RF | A/V MUTE |
| AV3 (CVBS Side) | | (Digital TV/Analog TV) | AV3 (CVBS Side) |
| S-VIDEO (Side) | | | S-VIDEO (Side/Y+C) |
| HDMI1 | | | A/V MUTE |
| HDMI2 | | | A/V MUTE |
| PC | | | A/V MUTE |

Note: When changing the main input from Analog TV to HDMI1 or HDMI2, AV1 outputs nothing (A/V are muted).


(32 inch) (19, 22 inch) • 0 Audio cable 0 Video cable © ² Video cable Audio cable © ⊕ **VCR** Ö Ŏ Ŏ 0 S-VIDEO 0 0 0 S-VIDEO 0 0 0 0

Using the Audio/Video (Composite) Cable

- 1 Connect the video cable between the Video input jack on the side of the TV and the video output jack on your VCR.
- 2 Connect the audio cable between the Audio-L/R input jacks on the side of the TV and the audio output jacks on your VCR.

Using the Audio/S-Video Cable

S-Video carries the video data as two separate signals (brightness and colour), unlike composite video which carries the entire set of signals in one package. S-Video does not carry audio. Hence, a separate audio connection is required.

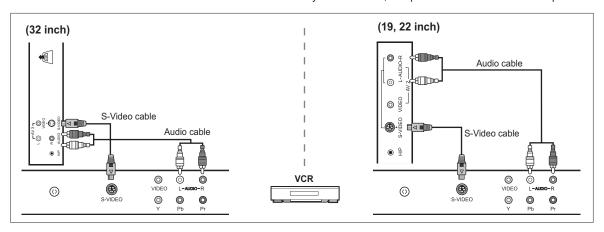


- 1 Connect the S-Video cable between the S-Video input jack on the side of the TV and the S-Video output jack on your VCR.
- 2 Connect the audio cable between the Audio-L/R input jacks on the side of the TV and the audio output jacks on your VCR.


Connecting to the DVD Player

Using the SCART Cable

Connect the SCART cable between the **SCART** jack on TV and the SCART jack on your DVD player.

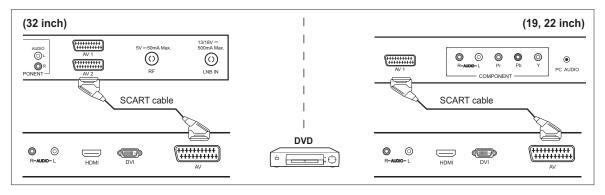

Using the Audio/Component Video Cable

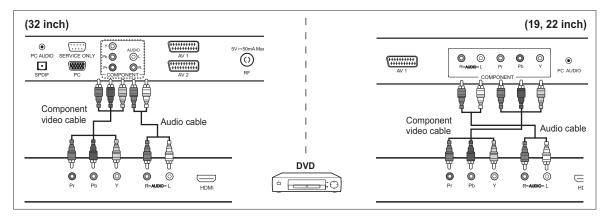


- 1 Connect the component video cables between the Y/Pb/Pr (COMPONENT) input jacks on TV and the component video output jacks on your DVD player.
- 2 Connect the audio cable between the **Audio-L/R (COMPONENT)** input jacks on TV and the audio output jacks on your DVD player.

Note: Depending on the manufacturer, the Y/Pb/Pr jacks may be identified as Y/P_B/P_R, Y/B-Y/R-Y or Y/C_B/C_R.

Using the HDMI Cable

High-Definition Multimedia Interface (HDMI) is the leading new standard for Digital video and audio interconnection.

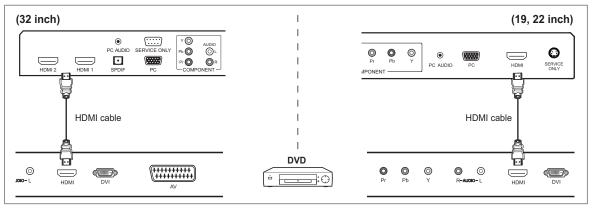


Connect the HDMI cable between the **HDMI** input jack on TV and the HDMI output jack on your DVD player.


Connecting to the Set-Top Box

Using the SCART cable

Connect the SCART cable between the ${\bf SCART}$ jack on TV and the SCART jack on your STB.

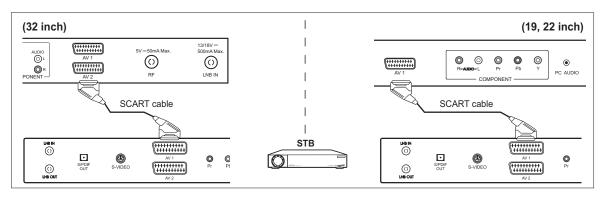

Using the Audio/Component Video Cable

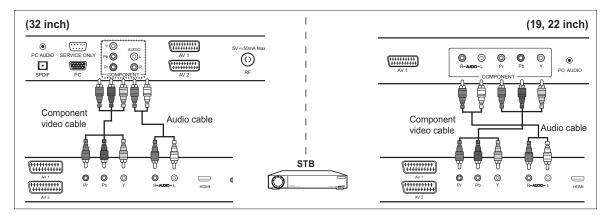


- 1 Connect the component video cables between the Y/Pb/Pr (COMPONENT) input jacks on TV and the component video output jacks on your STB.
- 2 Connect the audio cable between the Audio-L/R (COMPONENT) input jacks on TV and the audio output jacks on your STB.

Note: Depending on the manufacturer, the Y/Pb/Pr jacks may be identified as $Y/P_B/P_R$, Y/B-Y/R-Y or $Y/C_B/C_R$.

Using the HDMI Cable

High-Definition Multimedia Interface (HDMI) is the leading new standard for Digital video and audio interconnection.

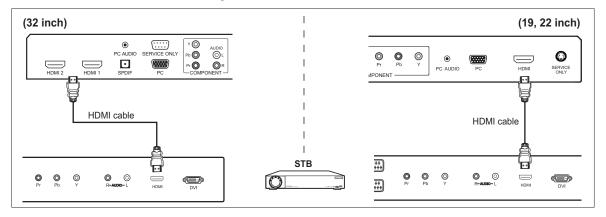


Connect the HDMI cable between the **HDMI** input jack on TV and the HDMI output jack on your STB.

Connecting to the Digital Audio System


(32 inch, Digital TV input mode only)

Connect the optical cable between the **SPDIF** output jack on TV and the optical input jack on your digital audio system.

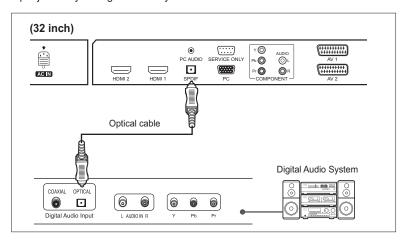

Note: In order to enjoy the sound from the Digital Audio System, press the **VOL+/-** button or **MUTE** button to minimise the volume or to cut off the sound from the TV.

Connecting to the PC

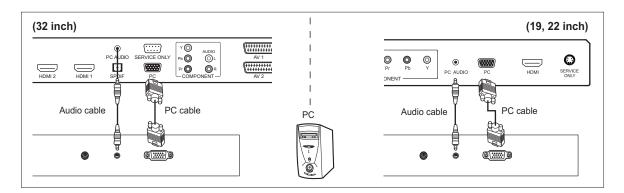


- 1 Connect the PC cable between the PC jack on TV and the PC output jack on your PC.
- 2 Connect the audio cable between the PC Audio jack on TV and the audio output jack on your PC.

Supported Display Resolution (PC)

| No | Resolution PC (Analog) | H-freq (kHz) | V-freq (Hz) |
|----|---------------------------|--------------|-------------|
| 1 | 640 x 480 | 31.5 | 60 |
| 2 | 800 x 600 | 37.9 | 60 |
| 3 | 1024 x 768 | 48.4 | 60 |
| 4 | 1280 x 768 | 47.8 | 60 |
| 5 | 1360 x 768 | 47.7 | 60 |

Connecting Headphones

Connect a set of headphones to **H/P** jack on TV if you want to watch a television programme without disturbing other people close to you.

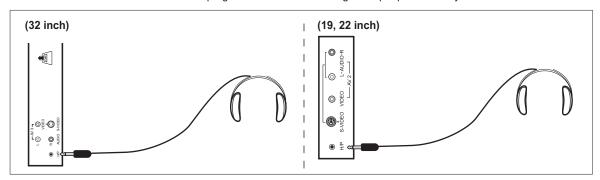

Note: Prolonged use of headphones at a high volume may cause health damage on your ears.


Conditional Access System

(for the digital channels only)

Conditional Access System (CAS) is a technology used to control access to digital television (DTV) services to authorised users by encrypting the transmitted programming.

Inserting a CI Module (with Smartcard)

CI Module looks like a PC Card (called PCMCIA) for laptops. There are different kinds of CI Modules, suitable for different coding systems.

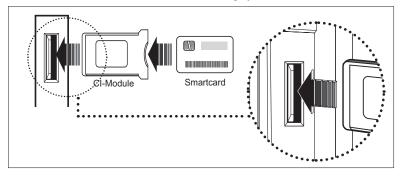


- 1 Follow the instructions of the module and insert the Smartcard into the Common Interface (CI) module.
- 2 Keep the CI module(with the Smartcard) vertically.
- 3 Insert the CI module completely into the CI slot on the side of the TV.

Note: Ensure the Smartcard or CI module is inserted in the right direction. Inserting in the wrong direction may cause damage to the Smartcard or CI module.

Wizard for Analog Channels



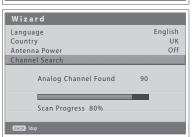

When you turn on your TV for the first time after purchase or perform the default setting **in MENU-System**, the installation wizard for analog channels will appear automatically. You can easily setup the available analog channels using the wizard.

- 1 Select the language of your choice using the ◀/▶ button. The On Screen Display (OSD) menu will be shown in the selected language.
- 2 Select Country using the ▲/▼ button.
- 3 Select the country where you are now located using the </▶ button.
- 4 Select Channel Search using the ▲/▼ button and press the OK button. It starts to scan channels. The scanned channels are automatically saved in order. To stop scanning channels, press the BACK button.
- 5 After the channel scanning completes, the Edit Channels menu is displayed automatically. The first scanned channel, if only, will be automatically displayed.

Notes:

- If you do not want to setup the channels at this time, you can setup it later using the Channel menu.
- 2. If you connect an active antenna to the TV, you have to set the Antenna Power to On to supply the 5V power into antenna. The default value is Off. Active antenna is a portable or indoor antenna which needs power supply from the product because it does not have power cord for itself.

Wizard for Digital Channels



When you switch the main input into Digital TV for the first time after purchase or perform the Default Setting in **DTV SETUP-Installation**, the installation wizard for digital channels will appear automatically.

Note: This wizard is available in the Digital TV input mode only.

You can easily setup the available digital channels using the wizard. You can select items using the **NUMBER(0-9)** buttons.

Notes:

- If you press the BACK button or select Back and press the OK button while running the installation wizard, you can return to the previous screen.
- 2. The options given of the installation wizard may vary according to area.
- **3.** The default password is 0000. If you have forgotten your password, please contact your local TV distributor.
- 4. If you exit the install wizard without fully completing the channel searching procedure, you may not have all of the channels available. In this case, you can use the installation menu to search for more channels.

Chapter 3 >> Installation Wizard



Language

You can select the main language.

Select the appropriate language from the list using the ▲/▼ button and press the **OK** or ▶ button to save the selected language as a default language.



Country

You can select the country.

Select your country from the list using the ▲/▼ button and press the **OK** or ▶ button.



Terrestrial Channel Search

You can search the terrestrial channels.

- 1 Select Automatic Channel Numbering using the ▲/▼ button and press the OK or ▶ button to select Enable/Disable.
 Select Next and press the OK button to search the terrestrial channels
- 2 During the channel search, the cursor is located at Stop. Therefore, if you press the OK button during the search, the search will stop and the channels found until then will be displayed.
- 3 If the search does not find any channels, then press the OK button to access the installation menu to search for the channels again. Please make sure that you have connected your aerial correctly.
- 4 You can delete unwanted channels from the found channels. Select the channels to delete and press the OK button. Then select Delete and press the OK button. To delete all channels, select Select All to select all channels, select Delete and press the OK button.
- 5 After completing the channel search and deleting unwanted channels, select Save and press the OK button to save the changes.

Chapter 3 >> Installation Wizard



Number of Satellite

You can select the number of satellite.

1 Select the number of satellite using the ▲/▼ button and press the OK or ▶ button.

Select **Skip** using **▲**/**▼** button and press the **OK** or **▶** button to skip to the next.



Antenna Setting

You can set the antenna and LNB information for channel search.

- 1 Select Satellite using the ▲/▼ button and press the OK or ▶ button to select an option.
- 2 Select LNB Frequency using the ▲/▼ button and press the OK or ▶ button to select an option. If the required value does not exist, select User Define and enter the LNB frequency directly using the NUMBER(0-9) buttons.

Note: If you select Universal, the 22kHz Tone value is set to Disabled.

3 Select 22kHz Tone/DiSEqC Input using the ▲/▼ button and press the OK or ▶ button to select an option.



Search Type

You can select the search type.

Select Scrambled Type/Channel Type using the ▲/▼ button and press the OK or ▶ button to select an option.



Satellite Channel Search

You can search the satellite channels.

Please wait until the channel search is complete.

Satellite channel search is similar to that of the terrestrial channel search.

Please refer to Terrestrial Channel Search.

Chapter 3 >> Installation Wizard



Time Setting

You can set the GMT offset for current time and the daylight saving time.

Select GMT Offset using the ▲/▼ button and press the OK or ▶ button.
Select your GMT offset using the ▲/▼ button and press the OK or ▶ button.

Note: The current time is set automatically whenever GMT offset changes.


2 Select Daylight Saving Time using the ▲/▼ button and press the OK or ▶ button to select Enable/Disable.



Result

After all setting is complete, you can view the result screen. Select **Finish** and press the **OK** button to complete the installation wizard.

Turning on Your TV

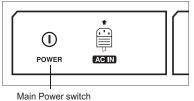

on Rear Panel





To turn on your TV, do as follows:

- 1 Connect the power cord on TV to the wall outlet.
- 2 Press the MAIN POWER switch on the rear of your TV. The standby indicator lights up.
- 3 Press the STANDBY button on your remote control (or on the top of your TV) to turn on the TV.


Note: To set your TV in standby mode, press the **STANDBY** button again on the remote control or (**b**) on the top of your TV. It saves the electric usage when you want to stop watching TV temporarily (during a meal, for example).

4 To turn off the TV, press the MAIN POWER switch on the rear of your TV.

Note: Do not leave your TV in standby mode for too long (on holiday, for example). Turn off the TV by pressing the **MAIN POWER** switch on the rear of your TV. It is recommended for you to turn off the power by disconnecting the power cord.

Note: 19 inch and 22 inch models do not have the MAIN POWER switch.

Selecting the Menu Language

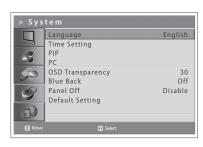

You can select the language for displaying menus and indications.

- 1 Press the MENU button.
- 2 Select System using the ▲/▼ button and press the OK or ▶ button.
- 3 Select the language of your choice using the ◄/► button. The On Screen Display (OSD) menu will be shown in the selected language.
- 4 Press EXIT button to return to Live TV or press the BACK button to return to the previous menu.

Selecting the Main Input Source


(32 inch) (19, 22 inch) Digital TV Digital TV Analog TV Analog TV AV1 AV1 **AU**2 AV2 AV3 S-Video S-Video Component Component PC HDMI HDMI1 HDMI2

Once you have connected your various audio and video systems, you can view different sources by selecting input sources.

- 1 Press the TV/AV button.
- 2 Select the main input among the sources using the ▲ or ▼ button.
- 3 Press the **OK** button.
- 4 In addition, press the TV/RADIO button to switch to digital TV from different sources.



Switching Channel

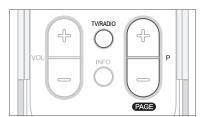


You can switch the current channel using one of the following methods.

- 1 Press the P+/- button.
- 2 Enter the channel number using the NUMBER(0-9) buttons to move to the channel directly.
- 3 Press the TV/RADIO button to switch between digital TV channels and radio channels.

Note: You can switch channels using the channel list or EPG.

Volume Control

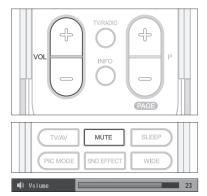

You can adjust the volume.

- 1 Press the **VOL+/-** button to adjust the audio volume.
- 2 Press the MUTE button to stop the audio temporarily.

Note: The mute function remains set while you switch channels.

Viewing Analog Channel List






You can view the list of all analog channels using the **LIST** button and switch to other channels on the channel list.

- 1 Press the **LIST** button while watching the analog channels.
- To change the channel in analog channel list, select your desired channel using the ▲/▼ button and press OK button. The selected channel is displayed.

Displaying Information

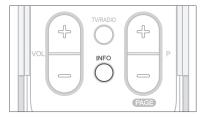

You can display the channel information on the screen.

Press the **INFO** button. Information menu appears.



▲ Analog TV Input



▲ Digital TV Input



▲ External Input (AV1/2/3, S-Video)




▲ External Input (Component, PC, HDMI1/2)

Press the **INFO** button again to view the current time at the top right hand corner of the screen. (except Digital TV input)


Note: Whenever you switch channels, this information is displayed for 5 seconds.

Scanning Analog Channels Automatically

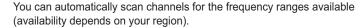

Analog channels can be scanned only in **Analog TV** input mode. Please make sure the main Input is set to **Analog TV** using the **TV/AV** button.



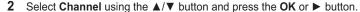


- 3 Select Country using the ▲/▼ button.
- **4** Select the country where you are now located using the **◄/▶** button.
- 5 Select Auto Search using the ▲/▼ button and press the OK or ▶ button. Search is highlighted.

6 Press the **OK** button to start to scan channels.It starts to scan channels.

- The scanned channels are automatically saved in order. To stop scanning channels, press the **BACK** button.
- 7 After the channel scanning completes, the Edit Channels menu is displayed automatically. The first scanned channel, if only, will be automatically displayed.

Note: If you connect an active antenna to the TV, you have to set the **Antenna Power** to **On** to supply the 5V power into antenna. The default value is **Off**. Active antenna is a portable or indoor antenna which needs power supply from the product because it does not have power cord for itself.



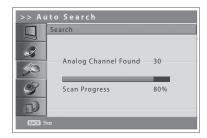

Scanning Analog Channels Manually





You can save each channel as you identify.

Analog channels can be scanned only in **Analog TV** input mode. Please make sure the main Input is set to **Analog TV** using **TV/AV** button.

- 1 Press the MENU button.
- 2 Select Channel using the ▲/▼ button and press the OK or ▶ button.
- 3 Select Manual Search using the ▲/▼ button and press the OK or ▶ button. Colour System is highlighted.
- 5 Select Audio System using the ▲/▼ button.
- 6 Select the required audio system (BG, I, DK or L) using the ◀/▶ button.
- 7 Select Band using the ▲/▼ button.
- 8 Select the required signal source (VHF/UHF or Cable) using the ◄/► button.
- 9 Select Channel using the ▲/▼ button and choose the channel number pressing the ◄/▶ or NUMBER(0~9) button.
- 10 Select Programme No using the ▲/▼ button and select the programme number you would like to assign by pressing the ◄/► or NUMBER(0~9) button. To change channel names, select Name using the ▲/▼ button.
- 11 Enter the new channel name using the ▲/▼/◄/➤ buttons and press the OK button.
- **12** Select **Search** using the ▲/▼ button and press the ◄/► button to start searching channels.
- 13 Select Fine Tune using the ▲/▼ button and press the ◄/► button to obtain a good quality of the picture and sound until you reach the optimal setting.
- 14 Select Save and press the OK button to save.

Channel mode display

- C (Air channel mode): You can select channels by entering the assigned number for broadcasting stations on air in this mode.
- S (Cable channel mode): You can select a channel by entering the assigned number for cable channels in this mode.

Editing Analog Channels

After channel scanning completes, you can delete, skip, move or add into favorite channel group the saved analog channels.



Analog channels are editable only in **Analog TV** input mode. Please make sure the main Input is set to **Analog TV** using **TV/AV** button.

- 1 Press the MENU button.
- 2 Select Channel using the **△**/**▼** button and press the **OK** or **▶** button.
- 3 Select Edit Channels using the ▲/▼ button and press the OK or ► button. The Edit Channels menu will appear.




Deleting Channels

You can delete channels from the list.

1 Select a channel you want to delete using the ▲/▼ button and press the RED button. The selected channel is deleted.

Skipping Channels

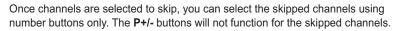

Select a channel to skip using the ▲/▼ button and press the GREEN button. (✔) mark appears next to the channel name. To clear the skipped channels, select the channel you don't want to skip and press the GREEN button.



Adding Favourite Channels

You can add favourite channels into the favourite channel group.



Select a channel to add into the favourite channel group using the ▲/▼ button and press the **YELLOW** button. (♠) mark appears next to the channel name. To delete the favourite channels from the group, select a favourite channel you want to delete and press the **YELLOW** button.

If you press the **FAV** button, each favourite channel can be selected in sequent order.

Moving Channels


You can change the location of channels.

- 1 Select a channel to move the location using the ▲/▼ button and press the BLUE button. (ⓐ) mark appears next to the channel name.
- 2 Move the selection to a new location using the ▲/▼ button and press the BLUE button. The selected channel is moved to its new location and all other channels are shifted accordingly.

Selecting a Picture Mode

You can select the picture mode which best fits your viewing requirements.



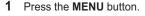

- 2 Select Picture using the **△**/**▼** button and press the **OK** or **▶** button.
- 3 Select the required picture mode using the ◄/► button. The following options are available:

Bright > Soft > Manual > Standard

Note: You can select a picture mode by simply pressing the **PIC MODE** button on the remote control. Press again to switch.

4 Press the EXIT button to return to Live TV or press the BACK button to return to the previous menu.



Customizing the Picture Settings

You can adjust the picture appearance to suit your preference and viewing situations.




- 1 Press the MENU button.
- 2 Select Picture using the ▲/▼ button and press the OK or ▶ button.
- 3 Select the picture mode to Manual using the
- 4 Select the required option using the ▲/▼ button and press the ◄/► button. The following options are available:
 Print the select the required option using the ▲/▼ button and press the ◄/► button.

Brightness > Contrast > Sharpness > Colour

- Fress the ◄/▶ button until you reach the optimal setting. Press the BLUE button to reset to the default value.
 To select other options, repeat the steps from 4 to 5.
- 6 Press the EXIT button to return to Live TV or press the BACK button to return to the previous menu.

Note: You can adjust the Hue when watching the NTSC signal in AV1, AV2, AV3 or S-Video input mode.

Fleshtone

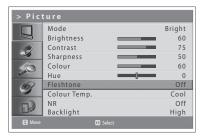


Use Fleshtone function to improve the picture quality by adjusting colour balance.

- 1 Press the MENU button.
- 2 Select Picture using the ▲/▼ button and press the **OK** or ▶ button.
- 3 Select Fleshtone using the ▲/▼ button.
- 4 Select the required fleshtone using the ◄/▶ button. The following options are available. Off > Low > Medium > High
- 5 Press the EXIT button to return to Live TV or press the BACK button to return to the previous menu.

Colour Temperature

You can change the colour of the entire screen to fit your needs. Set to **Warm** for intensifing hot colours such as red, or set to **Cool** for displaying less intense colours with more blue.



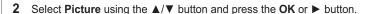

- 3 Select Colour Temp. using the ▲/▼ button.
- 4 Select the required colour temperature using the ◄/► button. The following options are available:


Cool > Normal > Warm

5 Press the EXIT button to return to Live TV or press the BACK button to return to the previous menu.



Noise Reduction (32 inch only)

If the signal received by your television is weak, you can activate this feature to help reduce noise that may appear on the screen.

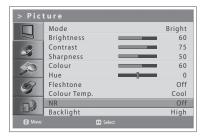

- 1 Press the MENU button.
- 2 Select Picture using the ▲/▼ button and press the OK or ▶ button.
- 3 Select NR using the ▲/▼ button.
- 4 Select the required option by pressing the ◄/▶ button. The following options are available.

Off > Low > Medium > High

5 Press the EXIT button to return to Live TV or press the BACK button to return to the previous menu.

Adjusting Backlight Brightness


You can adjust the brightness of Liquid Crystal Display (LCD).



- 2 Select Picture using the ▲/▼ button and press the OK or ▶ button.
- 3 Select Backlight using the ▲/▼ button.
- 4 Select the required option using the ◄/▶ button. The following options are available:

High > Auto > Low > Medium

5 Press the **EXIT** button to return to Live TV or press the **BACK** button to return to the previous menu.

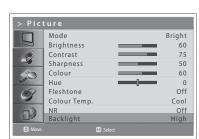

Setting the Sound Effect


You can select the type of special sound effect when watching a broadcast.

Sound Effect lets you enjoy the best sound without any special adjustment because the TV sets the appropriate sound options based on the programme content.

- 1 Press the MENU button.
- 2 Select Sound using the ▲/▼ button and press the OK or ▶ button.
- 3 Select Effect using the ▲/▼ button and press the **OK** button.
- 4 Select the required sound effect using the ▲/▼ button. The following options are available:
 - User
 - Customise your own sound effect.
 - Fla
 - Flat and pure sound.
 - Speech
 - Emphasises clear dialogue.
 - Movie
 - Emphasises bass tones.
 - Music
 - Enhances music quility.
- 5 Press the EXIT button to return to Live TV or press the BACK button to return to the previous menu.

Note: You can select sound effect by simply pressing the **SND EFFECT** button on the remote control. Press again to switch.



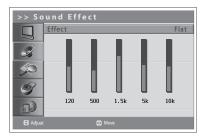



Adjusting the Sound Balance

You can adjust the output of the right and left speakers to obtain the best stereo reproduction for your listening position.


- 1 Press the **MENU** button.
- 2 Select Sound using the ▲/▼ button and press the OK or ▶ button.
- 3 Select Balance using the ▲/▼ button.
- 4 Press the
 ✓/▶ button to make changes.
- 5 Press the **EXIT** button to return to Live TV or press the **BACK** button to return to the previous menu.



Adjusting the Volume Automatically

Each broadcasting station has its own signal conditions, volume may not be adjusted each time you switch channels. This feature lets you automatically adjust the volume of the selected channel by adjusting the sound output depending on the signal modulation.



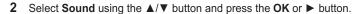

- 3 Select AVL(Auto Volume Level) using the ▲/▼ button.
- 4 Select On/Off using the **◄/▶** button.
- 5 Press the EXIT button to return to Live TV or press the BACK button to return to the previous menu.




Setting the TruSurround XT

TruSurround XT is a patented SRS technology that solves the problem of playing 5.1multi-channel content over two speakers. TruSurround delivers a compelling, virtual surround sound effect through two-speaker playback system, including built-in television speakers. It is fully compatible with all multi-channel audio formats.





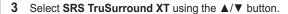

- 4 Select On/Off using the
 ✓/ button.
- 5 Press the **EXIT** button to return to Live TV or press the **BACK** button to return to the previous menu.


Note: (SRS()) is a trademark of SRS Labs, Inc. TruSurround XT technology is incorporated under license from SRS Labs, Inc.



Setting the Time Information





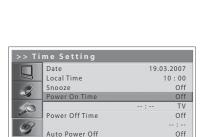

You can set the current time. If you want to set time for automatically turning on/off the power, you must set the local time first.

Setting the Current Time

- 1 Press the MENU button.
- 2 Select System using the ▲/▼ button and press the OK or ▶ button.
- 3 Select Time Setting using the ▲/▼ button and press the OK or ▶ button.
- 4 Select Date using the ▲/▼ button and enter day/month/year using the NUMBER(0~9) buttons.
- 5 Select Local Time using the ▲/▼ button and enter hour/minute using the NUMBER(0~9) buttons.

Using the TV Timer Function

You can schedule time for automatically turning on/off the power so that your TV will automatically be turned on and off at specific time you have scheduled.

- 6 To set time for turning on the power, select Power On Time using the ▲/▼ button and press the ◄/► button to select On.
- 8 To switch into the standby mode momentarily when the TV is turned on automatically at the preset time, select Snooze using the ▲/▼ button and press the ◄/► button to select On. Then, within 10 minutes hour after the TV is turned on automatically at the preset time, if you press the STANDBY button, the TV is switched to the standby mode and will be worked again after 5 minutes.
- 9 To set time for turning off the power, select Power Off Time using the ▲/▼ button and press the ◄/► button to select On.
- 10 Power Off Time is enabled, enter hour/minute using the NUMBER(0~9) buttons.

Setting the Auto Power Off

In case there is no signal, it is possible have your TV automatically turned off to reduce power consumption.

11 Select Auto Power Off using the ▲/▼ button and press the ◄/▶ button to select On. The TV will automatically be turned off if there is no signal.





Picture-in-Picture (PIP) Settings (32 inch only)

The PIP function allows you to watch two pictures with main and sub screens at the same time using your TV or other external devices.

This function is available in the PC input mode only.



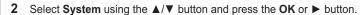

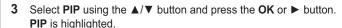

Select **On/Off** using the **◄/▶** button.

Notes:

- 1. You can turn on/off the PIP modes by simply pressing the PIP button on the




remote control.

2. You can not change the aspect ratio when PIP mode.



5 Select **Sub Input** using the **△**/**▼** button.

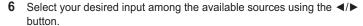

| Main Picture Source | | Available Sub Picture Source | |
|---------------------|----|---|--|
| | PC | Digital TV,Analog TV, AV1, AV2, AV3, S-Video | |

- Select **Size** using the **▲**/▼ button.
- Select **Small** or **Large** using the **◄/▶** button.

Note: You can select the size of the sub-screen by simply pressing the SIZE button on the remote control.

- Select **SEL** using the **▲**/**▼** button.
- **10** Select **Main** or **Sub** using the **◄/▶** button.


Note: You can select your desired screen by simply pressing the SEL button on the remote control.


- 11 Select **POS** using the **▲**/▼ button.
- **12** Select the required position by pressing the **◄/▶** button. Right-Bottom > Left-Bottom > Left-Top > Right-Top

Note: You can select the position by simply pressing the POS button on the

remote control.




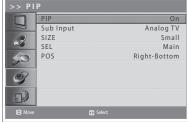

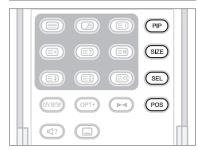

Adjusting OSD Transparency

You can set the transparency of On Screen Display.

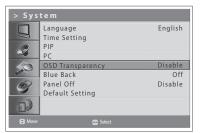

- 1 Press the MENU button.
- 2 Select System using the ▲/▼ button and press the OK or ▶ button.
- 3 Select OSD Transparency using the ▲/▼ button.
- **4** Select the required option using the **◄**/**▶** button. The following options are available:


30 > 50 > 70 > 100 > Disable

5 Press the **EXIT** button to return to Live TV or press the **BACK** button to return to the previous menu.


Adjusting Blue Back (32 inch only)

When watching a channel with no or poor reception, or if there is no input from an external device, you can change the screen into a blue.



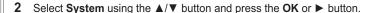

- 3 Select Blue Back using the ▲/▼ button.
- 4 Select On/Off using the **◄/▶** button.
- 5 Press the EXIT button to return to Live TV or press the BACK button to return to the previous menu.

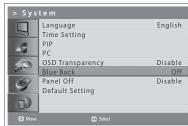

Panel Off



You can set the LCD panel to go out automatically for reduction of power consumption when watching a radio channel.


- 1 Press the MENU button.
- 2 Select System using the ▲/▼ button and press the OK or ▶ button.
- 3 Select Panel Off using the ▲/▼ button.
- 4 Select Enable using the ◄/► button. The LCD panel will automatically go out if there is no signal for 1 minute when watching a radio channel.

Default Settings

You can set your TV settings to the default setting values.

Warning: Please note that once you perform the Default Setting, all data such as, analog channel list, and user configured data are deleted.

To perform Default Setting:

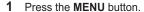

- Select System using the ▲/▼ button and press the OK or ▶ button.
- 3 Select Default Setting using the ▲/▼ button and press the OK or ▶ button. The confirm message will be displayed.
- 4 Select Yes and press the OK button to change all settings value to the factory default.
- **5** Default setting is completed.

Notes:

- After completing the default setting, the installation wizard for analog channels will appear automatically in a few seconds.
- This Default Setting does not operate for the digital channels. For more
 information about Default Setting of the digital channels, refer to Chapter 10.
 Setting the DTV Setup Menu > Installation > Default Setting.



(32 inch)

(19, 22 inch)



This chapter describes the various features for using the digital channels such as basic operation, digital channel list and EPG (Electronic Programme Guide).

Note: These features are available in the Digital TV input mode only.

Basic Operation

This section describes the basic functions for the digital channels such as subtitle, audio, option list and programme information. You can check or change the settings.



Subtitle

You can select the language for the subtitle if the programme provides subtitle information.

- 1 Press the **SUBTITLE** button to display the subtitle language list.
- 2 Select a subtitle language using the ▲/▼ button and press the OK button. The subtitle will be displayed in the selected language at the bottom of the screen.
- 3 Select Off from the subtitle language list to hide subtitle from the screen.

Note: You can select a default subtitle language in DTV SETUP-Preferences-Language Setting-Subtitle Language.





OTVSTP OPT- POS

Audio

If the current programme is available in multiple audio languages, you can select the language that you wish to listen to.

- 1 Press the SOUNDTRACK button.
- 2 Select an audio language using the ▲/▼ button.
- 3 Select audio direction(left, right, stereo) using the </▶ button.
- 4 Press the EXIT or SOUNDTRACK button to exit the audio list.

Notes:

- You can select the default audio language you want in DTV SETUP– Preferences-Language Setting-Audio Language.
- If the programme is broadcast in the compressed bitstream audio signal, you cannot set the audio direction.





Option List

You can view and confirm detailed information about the current channel and change the information if necessary.

Note: The default password is 0000. If you have forgotten the password, please contact your local TV distributor.


- 1 Press the OPT+ button.
- 2 Select Favourite using the ▲/▼ button and press the OK or ▶ button. Select a favourite group using the ▲/▼ button and press the OK button to register for favourite group.

Note: For detailed information about how to change favourite group name and how to register favourite channels from the complete channel list, please refer to **Chapter 10. Setting the DTV Setup Menu > Edit Channels > Edit Favourite Channels.**

3 Select Lock/Unlock using the ▲/▼ button and press the OK or ▶ button. Select Lock or Unlock option using the ▲/▼ button and press the OK button.

Note: When switching to the locked channel, you must enter the password to view the channel.

- 4 Select Delete using the A/▼ button and press the OK or ► button. Select Yes in the confirmation message and press the OK button.
- 5 Select Information using the ▲/▼ button to display the channel information automatically.

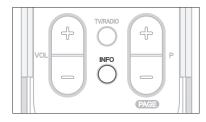


Programme Information (i- plate)

Programme information is always displayed for a certain period of time whenever you switch channels. You can view the programme information by pressing the **INFO** button while watching a programme. Press the **EXIT** button to hide the i-plate.

General Information

The general information is displayed on the screen as the following.

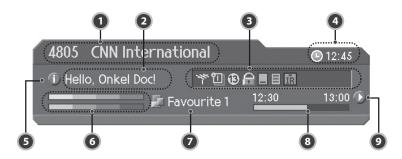

- 1 Channel number and name
- 2 Programme name
- 3 Icons

| 學學 | Displayed only when the channel is a satellite or terrestrial channel. | | |
|---|---|--|--|
| Displayed only if the programme is reserved. | | | |
| Represents parental level. Indicates the minimum level of ag viewing the programme. | | | |
| Displayed only when the channel is a locked channel. | | | |
| | Displayed only when subtitle information is available. | | |
| | Displayed only when the channel is a scrambled channel. | | |
| | Displayed only when there is any teletext information. | | |
| ₩ •c | Displayed only when the compressed bitstream audio signal is broadcasted. | | |

- 4 Current time
- 5 Detailed programme information
- 6 Signal strength and quality
- 7 Current channel list icon
- 8 Programme broadcasting time and progress bar
- 9 Next programme Information

Note: If there is no programme information available, programme information is not displayed.



Detailed Programme Information

You can see detailed information about the current programme. Press the **INFO** button when the i-plate is displayed to view detailed information.

Notes:

- 1. Press the INFO button again to hide the information box.
- If the detail information is more than one page, use the ▲/▼ button to move to the previous/next page.

Digital Channel List



This section will help you display the digital channel list using the **LIST** button and switch to another digital channel in the digital channel list.

Six types of channel lists are provided for easy and quick channel browsing.

| TV | The list of all Digital TV channels | | |
|-------------|--|--|--|
| Radio | The list of all Digital radio channels | | |
| Favourite | The list of Digital favourite channels in five subgroups according to your private taste | | |
| Terrestrial | The lists of Digital channels classified by terrestrial channels | | |
| Satellite | The lists of Digital channels classified by satellites | | |
| Scramble | The lists of Digital channels classified by CAS types | | |

You can display the channel list and switch to another channel on the channel list

- 1 Press the LIST button while watching a programme to display the channel list.
- 2 Select a channel using the ▲/▼ button and press the OK button to change the channel.
- 3 Enter the channel number directly using the NUMBER(0-9) buttons to move the cursor to the channel you want. And then press the OK button to change to the selected channel.
- 4 Press the ▶ button while the channel list is displayed to view the group list. Select a channel group using the ▲/▼ button and press the OK or ▶ button. Select a sub-group using the ▲/▼ button and press the OK button. The channel list for the selected subgroup is displayed.




- 1. You can also display the channel list by pressing the **OK** button.
- 2. Press the P+/-(Page) button to move to the previous/next page.
- To display scramble icon in the channel list, select On in DTV SETUP-Preferences-Miscellaneous Settings-Option in CH List.





Programme Guide

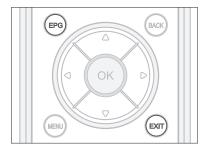

The programme guide displays the detailed programme information about each digital channel, based on the date and time. You can also schedule your watching using the information given.

Note: Press the EXIT or EPG button to exit the guide screen.

Viewing the Electronic Programme Guide(EPG)



You can view programme information for all digital channels.

- 1 Press the **EPG** button.
- 2 Move to previous or next programme within the same channel using the ◄/▶ button.
- 3 Move to another channel using the ▲/▼ button. If there are multiple channels, use the P+/- button to move to channels by page. Also, you can enter the channel number using the NUMBER(0-9) buttons on the remote control to move to the channel directly.
- 4 Select a programme and press the OK button. Then you can watch the programme if it is on air.
- **5** Press the **INFO** button in the selected programme to view the detailed information (if available) of the selected programme.





■ Viewing by Channel Group

You can view programme information of the selected channel list by groups.

- 1 Press the **RED** button to display the channel list group.
- 2 Select a channel list group using the ▲/▼ button.
- 3 Move the cursor to the sub-group using the ▶ button, select a sub-group using the ▲/▼ button and press the OK button. The programme guide for the selected channel list is displayed.







Viewing Using Time Bar

You can quickly search the time zone using the time bar.


- 1 Press the **GREEN** button to display time bar.
- 2 Select the each button using the ◄/► button and press the OK button to move the time bar. If you press the button repeatedly, the same operation is repeated.
- 3 Each button functions as follows.

Now Moves to the current programme where the cursor is located.

- Moves back to the previous programme or 30 minutes before.
- ▶ Moves forwards to the next programme or 30 minutes ahead.
- Moves back to 2 hours before.
- ▶▶ Moves forwards to 2 hours ahead.
- ■Day Moves back to one day before.
- Day► Moves forwards to one day ahead.
- 4 Select button and press the **OK** button to exit the time bar.

Reserving a Watching

You can reserve a watching of the future programme in the Electronic Programme Guide (EPG).

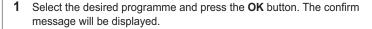

- 3 Press the YELLOW button to move to the Schedule screen. The schedule screen displays the reserved programme list and lets you review, edit or delete the reservations.
- **4** By the reserved time, the programme will be displayed.

Note: If the channel is locked, restricted by watching time, you will be prompted to enter your password to complete the reservation. The default password is 0000. If you have forgotten your password, please contact your local TV distributor.





6:42 24/05

111111






Schedule

You can add or edit the reservation using the Schedule screen.

Press the YELLOW button to display the schedule list.

Adding a Reservation

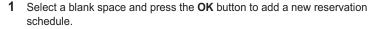

- 2 Change Channel No. and Time using the NUMBER (0-9) buttons.
- Change Repeat mode using the **◄/▶** button. The options are **Once**, **Daily** and Weekly.
- Select **Save** and press the **OK** button to complete.
- Select Cancel and press the OK button to cancel the reservation.

Notes:


- 1. If the programme is overlapped with another programme, adjust the reservation appropriately.
- 2. If the channel is locked, restricted by watching time, you will be prompted to enter your password to complete the reservation. The default password is 0000. If you have forgotten your password, please contact your local TV distributor.

Editing a Reservation


- Select the scheduled programme and press the **OK** button to edit the reservation information.
- 2 Change Channel No. and Time using the NUMBER (0-9) buttons.
- 3 Change Repeat mode using the **◄/▶** button. The options are **Once**, **Daily** and Weekly.
- 4 Select Save and press the OK button to complete.
- Select **Cancel** and press the **OK** button to cancel the editing.
- Select **Delete** and press the **OK** button to delete the reserved TV.



Finding a Programme

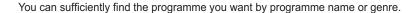



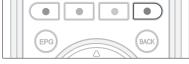








- Press the **BLUE** button.
- Enter the programme name directly using the keyboard displayed on the screen.
- When entering programme name is complete, select Find and press the OK button.

Notes:

- 1. Select the letter using the ▲/▼/◄/▶ button and press the **OK** button to enter the programme name on the keyboard screen.
- 2. If you select **Previous** or **Next** on the keyboard displayed on the screen and press the **OK** button, the keyboard layout is switched.
- Select By Genre and press the OK button to search programme by genre.
- Select the genre using the **△**/**▼**/**◄**/**▶** button and press the **OK** button.
- 6 If you select a programme from Found Programme List screen and press the **OK** button, you can watch the programme if it is on air or reserve it if it is the future programme. If you want to find another programmes, press the BACK button to return to the previous menu.

Note: Found Programme List may differ depending on the provided programme information.

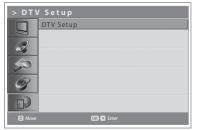

You can set the options such as the parental control, time setting, channel editing, installation setting and software upgrade.

This chapter describes how to set up the DTV Setup menu for digital channels.

Note: The DTV Setup menu is available in the Digital TV input mode only.

To access the **DTV Setup** menu, select **DTV Setup** on TV menu and press the **OK** button while in the Digital TV input mode. You can easily access by pressing the **DTV SETUP** button on your remote control.







Preferences

You can set censorship and all other items suitable for your environment.

Notes:

- Press the BACK or

 button to save the changes and return to the previous menu. Press the DTV SETUP or EXIT button to exit from the menu screen.
- You can easily select all menu items using the assigned number for each menu.

Parental Control

You can set parental control for each programme and watching time. You can also change your password.

- 1 Press the DTV SETUP button.
- 2 Select Preferences using the ▲/▼ button and press the OK or ▶ button.
- 3 Select Parental Control using the ▲/▼ button and press the OK or ▶ button.
- When prompting message is displayed to ask password, enter the password using the NUMBER(0-9) buttons.

Note: The default password is 0000. If you have forgotten your password, please contact your local TV distributor.





Censorship Classification

Censorship Classification allows you to block programmes according to the age level you have set.

- 1 Select Censorship Classification using the ▲/▼ button and press the OK or ► button.
- 2 Select the required age level using the ▲/▼ button and press the OK button

View All All programmes can be watched because there is no age limitation.

Programmes are blocked for children under the age of 7.
 Programmes are blocked for children under the age of 12.
 Programmes are blocked for children under the age of 14.

18 Programmes are blocked for children under the age of 18.

Lock All Programmes are blocked without considering the age level.

Notes:

- You have to enter the password to watch the programme which is blocked by the age level.
- The default password is 0000. If you have forgotten your password, please contact your local TV distributor.
- **3.** Some broadcasting companies do not broadcast the censorship classification.

Change Password

You can change the current password.

- 1 Select Change Password using the ▲/▼ button and press the OK or ▶ button
- 2 Enter New Password using the NUMBER(0-9) buttons, select OK and press the OK button.
- 3 Enter the new password again to confirm Verify Password and select OK and press the OK button.

Note: The default password is 0000. If you have forgotten your password, please contact your local TV distributor.





Language Setting

- 1 Press the DTV SETUP button.
- 2 Select Preferences using the ▲/▼ button and press the **OK** or ▶ button.
- 3 Select Language Setting using the ▲/▼ button and press the OK or ▶ button.

Menu/Audio/Subtitle Language

You can set the language for menu, audio and subtitle.

- 1 Select Menu/Audio/Subtitle Language using the ▲/▼ button and press the OK or ▶ button.
- 2 Select a language using the ▲/▼ button and press the **OK** button.

Subtitle Display

You can select to display the subtitle automatically or not.

- 1 Select Subtitle Display using the ▲/▼ button.
 - Select from **Auto** and **Manual** using the **OK** or ▶ button.

Auto Subtitles are displayed automatically in the predefined subtitle

language.

Manual Subtitles are displayed in the language when you select the

subtitle language by pressing the **SUBTITLE** button on the

remote control.



You can select the subtitle font.

- 1 Select Subtitle Font using the ▲/▼ button.
- 2 Select from Variable and Fixed using the OK or ▶ button.

Variable Uses the horizontally variable subtitle font.

Fixed Uses the fixed subtitle font.





Time Setting

- 1. Press the DTV SETUP button.
- 2. Select Preferences using the ▲/▼ button and press the OK or ▶ button.
- 3. Select Time Setting using th ▲/▼ button and press the OK or ▶ button.

GMT Offset

You can set the GMT offset for current time.

- 1. Select GMT Offset using the △/▼ button and press the OK or ▶ button.
- 2. Select your GMT offset using the ▲/▼ button and press the **OK** or ▶ button.

Notes:

- **1.** The current time is set automatically whenever GMT offset changes.
- When GMT Offset is set to Auto, you have to tune the terrestrial channel for a certain period of time to set the time automatically.

Daylight Saving Time

You can turn on/off the daylight-saving time. Select **Daylight Saving Time** using the ▲/▼ button and press the **OK** or ▶ button to select **Enable/Disable**.



Schedule

You can reserve a programme and watch it anytime you want.

- 1 Press the DTV SETUP button.
- 2 Select **Preferences** using the **△**/**▼** button and press the **OK** or **▶** button.
- 3 Select **Schedule** using the ▲/▼ button and press the **OK** or ▶ button.
- 4 The reserved programmes will be displayed in time order. Select the programme you want to edit and press the OK button. Select a blank space and press the OK button to add a new reservation.

Note: For detailed information about Schedule, refer to Chapter 9. Using the Digital TV Features > Programme Guide > Schedule.







3 Select Miscellaneous Settings using the ▲/▼ button and press the OK or ▶ button.

i-Plate Display Time

You can set the duration of the information box to be displayed when you switch

- 1 Select i-Plate Display Time using the ▲/▼ button and press the OK or ▶
- 2 Select an option between 1 ~ 20 seconds using the ▲/▼ button and press the OK button.

Note: When it is set to **Disable**, the i-plate will not be displayed when the channel is switched.

OSD Transparency

You can set the transparency of On Screen Display.

- Select OSD Transparency using the ▲/▼ button and press the OK or ▶ button.
- 2 Select an option among **Disable**, **25**, **50** and **75** using the **▲**/▼ button and press the **OK** button.

Disable Fully opaque screen

25, **50**, **75** The bigger the number, the more transparent the screen.



Option in Channel List

You can set whether or not to display the scrambled icon in the i-plate and channel list.

- 1 Select Option in CH List using the ▲/▼ button.
- 2 Select On/Off using the OK or ▶ button.
 - On Scramble icon is displayed in the i-plate and channel list.
 - **Off** Scramble icon disappears from the i-plate and channel list.

Edit Channels



| * Edit Terrestrial Channel Lists | TV | S89. TEST BOTTINELLI | S851 TNT | S852 Cartoon Net NL S853 Cartoon Net OB | S854 Cartoon Network | S854 Cartoon Network | S854 Cartoon Network | S856 Tryes | S857 TNBS Europe | S857 TNBS Europe | S857 TNN Int. | Select All | Unselect All | Unselect All | Unselect All | Unselect All | Celete | Tyou want to select / release, press ØK

Edit Terrestrial Channel Lists

Note: The default password is 0000. If you have forgotten your password, please contact your local TV distributor.

You can edit the terrestrial channels.

- 1 Press the DTV SETUP button.
- 2 Select Edit Channels using the ▲/▼ button and press the OK or ▶ button.
- 3 Select Edit Terrestrial Channel Lists using the ▲/▼ button and press the OK or ▶ button.
- 4 Press the **OK** or **▶** button in **Group** to select the group of channel list. Select the group using the **▲**/▼ button and press the **OK** button.
- 5 Select a channel using the ▲/▼ button and press the OK button. Select Renumber using the ▲/▼ button and press the OK button. Press the NUMBER(0-9) buttons to enter the channel number.
- Select a channel using the ▲/▼ button and press the OK button. You can select more than one channel. Select Move using the ▲/▼ button and press the OK button. Move the cursor to the destination using the ▲/▼ button and press the OK button.
- 7 Select a channel using the ▲/▼ button and press the OK button. You can select one channel at a time. Select Rename using the ▲/▼ button and press the OK button. Enter a channel name directly using the keyboard displayed on the screen. When entering channel name is complete, select OK and press the OK button.
- 8 Select a channel using the ▲/▼ button and press the OK button. You can select more than one channel. Select Delete/Lock using the ▲/▼ button and press the OK button.
- 9 Select Select All/Unselect All using the ▲/▼ button and press the OK button to select/unselect all channels.

Notes

- When the locked channel(s) is selected or all channels are locked, Lock
 is switched to Unlock. When you select Unlock and press the OK button,
 locked channel is switched to an unlocked channel.
- 2. Select Trash in Group to restore the deleted channels.

Installation


This section describes how to search for digital channels and other series of procedures.

Notes:

- Press the BACK or

 button to save the changes and return to the previous menu. Press the DTV SETUP or EXIT button to exit from the menu screen.
- You can easily select all menu items using the assigned number for each menu.



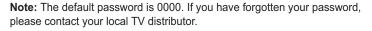

You can search the terrestrial channels.

- 1 Press the DTV SETUP button.
- 2 Select Installation using the **△**/**▼** button and press the **OK** or **▶** button.
- 3 Select Terrestrial Channel Search using the ▲/▼ button and press the OK or ▶ button.

Automatic Search

If your TV is connected to the aerial, you can automatically search channels without entering any other information.

- 1 Select Automatic Search using the ▲/▼ button and press the OK or ▶ button.
- 2 Wait while channel search continues. This may take a few minutes.
- While operating search, the cursor is located at Stop. Therefore, if you press the OK button during searching, the operation is stopped and the channels found until then will be displayed.
- 4 If search operation is successfully completed and the channel does not exist, press the OK button and try to reset the search operation again if necessary.
- 5 You can delete unnecessary channels from the searched channels. Select the channels to delete and press the OK button. Then select Delete and press the OK button. To delete all channels, select Select All to select all channels, select Delete and press the OK button.
- 6 When completing channel search and deleting unnecessary channels, select Save and press the OK button to save the changes.







Manual Search

You can search channels manually by searching parameters, using the MUX information.

- 1 Select Manual Search using the ▲/▼ button and press the OK or ▶ button.
- 2 Select Channel using the ▲/▼ button and press the OK or ▶ button. Select one of channels using the ▲/▼ button and press the OK button. When entering channel value, the appropriate frequency value is displayed.
- 3 Select Frequency using the ▲/▼ button and press the OK or ▶ button. Enter the frequency using the NUMBER(0-9) buttons and press the OK button. When entering frequency, the appropriate channel for the entered frequency is automatically displayed on channel.
- 4 Select Band Width using the ▲/▼ button and press the OK or ▶ button to select from 7 and 8MHz.
- 5 Select Network Search using the ▲/▼ button and press the OK or ▶ button to select Enable/Disable.
- 6 Select Search using the ▲/▼ button and press the OK button. Channel search will activate.

Invisible Channel Search

Select Invisible Channel Search using the ▲/▼ button and press the OK or ▶ button to select Enable/Disable.

Note: If you set **Invisible Channel Search** to **Enable**, search channel again to view the invisible channels.



Software Update

In order to maintain proper performance of the TV, it is essential to have the most up-to-date software. Visit the Humax website to check the latest news and newly released software versions. – http://www.humaxdigital.com.

It is recommended that you periodically check for the availability of software update.

- 1 Press the DTV SETUP button.
- 2 Select Installation using the ▲/▼ button and press the OK or ▶ button.
- 3 Select Terrestrial Software Update or Satellite Software Update using the △/▼ button and press the OK or ▶ button.

OTA (Over the Air)

OTA, an abbreviation of **Over-the-Air**, means that the software can be downloaded through your aerial. The manufacturer reserves the right to decide when and where to release software by this process. The software update via your aerial will only occur under the following circumstances.

- 1 The equipment should have appropriate loader software.
 - **Caution**: Please note that if you don't have normal loader software, the equipment may not be updated or work after software update.
- 2 The manufacturer decides to release software downloading via a designated aerial system.
- **3** The equipment must be **tuned** properly according to the guidelines within this manual.
- 4 Update software when the quality of receiving signal strength is high. If the weather is not so good that the quality of receiving signal strength is not recommendable, perform the software update later.

Caution:

- Please be careful to keep the power on and the power cord plugged in during software update. If the power is disconnected during software update, it may cause fatal damage to the TV.
- Please be careful not to pull out the signal line (co-axial Cable) during software update. Update may be interrupted and the TV may not work.

Notes:

- 1. The other functions of TV cannot work at all during software update.
- 2. It may take 5 ~10 minutes to update software.
- 3. Scheduling operation cannot work during software update.

Automatic Update

You can set the TV to find HUMAX software update site and update software automatically.

- Select Automatic Update using the ▲/▼ button and press the OK or ▶ button.
- 2 Automatically search for new software. Select Cancel and press the OK button to finish search.
- 3 When detecting software update, the following result is displayed. If new software is not found by automatic update, use manual update.
- 4 Select **Yes** and press the **OK** button to start updating. Select **No** and press the **OK** button to return to the previous menu without updating.
- When completing the software update, the TV is automatically powered off and on again.

Manual Update

You can perform manual update using know MUX information.

- 1 Select Manual Update using the ▲/▼ button and press the OK or ▶ button.
- 2 Select Channel using the ▲/▼ button and press the OK or ▶ button. Select the channel number using the ▲/▼ button and press the OK or ▶ button.
- 3 Select Frequency using the ▲/▼ button and press the OK or ▶ button. Enter the frequency using the NUMBER(0-9) buttons.
- 4 Select Search and press the OK button to search software. Existing new software will show. If new software does not exist, press the OK button to return to the manual update menu.
- 5 Select Yes and press the OK button to start updating. Select No and press the OK button to return to the previous menu. Performs software update. Please wait until it is completed.
- **6** When completing the software update, the TV is automatically powered off and on again.



Regular Auto Update

You can update the channel and software and specify the update option.

- 1 Select Regular Auto Update using the ▲/▼ button and press the OK or ▶ button.
- 2 Select Update Target using the ▲/▼ button and press the OK or ▶ button. Select an option from the list using the ▲/▼ button and press the OK or ▶ button.
- 3 Select Auto Search in Standby/Operate using the ▲/▼ button and press the OK or ▶ button to select Enable/Disable.
- 4 Select Search Time using the ▲/▼ button and press the OK or ▶ button. When selecting Enable, set Search Time using the NUMBER(0-9) buttons and select OK and press the OK button.
- 5 Select Frequency using the ▲/▼ button and press the OK or ▶ button to select from Daily and Weekly.

S/W Update from PC

You can connect your TV to the PC directly and update your software by transferring the new software from the PC. Follow these steps to download new software from PC to this TV.

- 1 Download new software file (HDF files) equivalent for this TV model from our website into your computer (http://www.humaxdigital.com).
- 2 Download and install download tool file from our website into your computer.
- 3 Connect your PC to this TV with RS-232C serial cable(not supplied).
- 4 Execute installed download tool, and then follow the instructions contained the download tool.
- 5 Reconnect the power cable of the TV and press the STANDBY button to make this TV operating.





Default Setting

Default setting restores the TV to the default settings.

Warning: Please note that once you perform default setting, all data for the digital channels such as digital channel list and user configured data are deleted.

- 1 Press the DTV SETUP button.
- 2 Select Installation using the ▲/▼ button and press the **OK** or ▶ button.
- 3 Enter the password using the NUMBER(0-9) buttons.
- 4 Select **Default Setting** using the **△**/**▼** button and press the **OK** or **▶** button.
- 5 Select Yes and press the OK button to restore all setting to factory default.
 Select No and press the OK or BACK button to return to the previous menu.
- 6 Confirm again to start loading default setting. Enter the password using the NUMBER(0-9) buttons to perform restoring.
- 7 When completing the default setting, the installation wizard for digital channels will run automatically.

For detailed information about the installation wizard, refer to *Chapter 3*. *Installation Wizard > Wizard for Digital Channels*.

Note: The default password is 0000. If you have forgotten your password, please contact your local TV distributor.

System



Status

You can view system information.

- 1 Press the DTV SETUP button.
- 2 Select System using the ▲/▼ button and press the OK or ▶ button.
- 3 Select **Status** using the **△**/▼ button and press the **OK** or ▶ button.

Signal Detection

You can view the signal strength and signal quality of the channel that is currently on AV.

- 1 Press the DTV SETUP button.
- 2 Select System using the ▲/▼ button and press the OK or ▶ button.
- 3 Select Signal Detection using the ▲/▼ button and press the OK or ▶ button.

Common Interface

You can view the current status of the CI-Module.

- 1 Press the DTV SETUP button.
- 2 Select System using the ▲/▼ button and press the OK or ▶ button.
- 3 Select Common Interface using the ▲/▼ button and press the OK or ▶ button.

Note: The displayed information about a Common Interface may differ depending on Common Interface type.

Setting the Aspect Ratio (for 32 inch)





You can select an aspect ratio mode by pressing the WIDE button repeatedly on the remote control.

Auto > Regular > Panoramic > 14:9 Zoom > 16:9 Zoom > 16:9 Zoom Subtitle > Full

Notes:

- 1. When the Component, HDMI1 or HDMI2 input mode, you can select only the Auto, Regular, 14:9 or Full.
- 2. It is not available in the PC input mode.

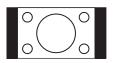

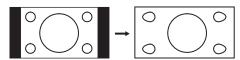

Regular

Use to view a normal picture (4:3 aspect ratio) unchanged.




Stretches the left and right sides of a normal picture to fill the screen, in a way that does not appear unnatural.


Note: In Panoramic mode, the top, bottom, left and right of the picture are slightly cut off.







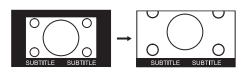

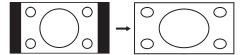

14:9 Zoom

Use to expand a picture with a 14:9 aspect ratio.

16:9 Zoom

Use to expand a wide picture (16:9 aspect ratio).

16:9 Zoom Subtitle

Use to expand a picture with a 16:9 aspect ratio having subtitles at the bottom of the screen.

Uniformly stretches the left and right sides of a normal picture (4:3 aspect ratio) to fill the wide TV screen.

Note: For pictures with a 16:9 aspect ratio that have been squeezed into a normal picture (4:3 aspect ratio), select Full mode to restore their original dimensions.

To mode the picture vertically:

If you cannot see subtitles at the bottom of the screen, or if the top or bottom is cut off, move the picture vertically using the ▲/▼ button before the display disappears.

Note: If you change the aspect ratio mode, the picture returns to its default position.

Setting the Aspect Ratio (for 19, 22 inch)



You can select the modes by simply pressing the **WIDE** button on the remote control.

Auto > 4:3 > 14:9 > Full > Zoom

Notes

- When the Component or HDMI input mode, you can select only the 4:3, 14:9 or Full.
- 2. It is not available in the PC input mode.

Auto

Displays the picture as the original aspect ratio of the signal you received.



4:3

Displays the picture in the 4:3 ratio. The black bar appears on each side.



14:9

Displays the picture in the 14:9 ratio. The thin black bar appears on each side.



Full

Displays the picture in the 15:9 ratio to fill the entire screen.



Zoom

Displays the picture zoomed to fill the 14:9 ratio with black sidebars. The top and bottom of the picture are slightly cropped.

Displaying Teletext information

You can display teletext information at any time on your TV.

Most TV broadcasting stations provide text information services via teletext. The index page of the teletext service gives you information on how to use the service. You can also select various options to fit your needs using the remote control buttons.

Note: To properly display teletext information, channel reception must be stable. Otherwise, information may be missing or some pages may not be displayed.

TELETEXT function buttons are as follows:



Activates or deactivates the teletext service.

(Mix)

Overlaps the teletext with the broadcasting screen. Adjusts the opacity to the background in Teletext mode.

(Index)

Displays the teletext index page.

■ (Cancel)

Displays TV programme when waiting for the new teletext page.

(Reveal)

Shows the hidden information. (answers to quiz games, for example) Press it again to return to normal display.

■ (Mode)

Selects the teletext mode (LIST/FLOF)

(Size)

Displays the double-size letters for lower half of the screen, press it again to return to normal display.

(Hold

Holds the display on a given page if the selected page is linked with several secondary pages that automatically follow. To resume, press it again.

(Subpage)


Displays the available subpage.

Numeric (0~9)


Press to enter the three-digit page number given in the content.

Coloured buttons (Red/Green/Yellow/Blue)

If the FASTEXT system is used by a broadcasting company, the different topics covered on a teletext page are colour-coded and can be selected by pressing the coloured buttons. Press one of them corresponding to your needs. The page is displayed with other coloured information that can be selected in the same way. To display the previous or next page, press the corresponding coloured button.

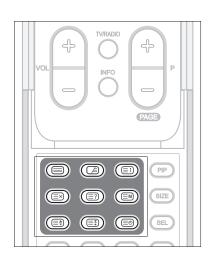


Chapter 13 >> Setting the PC

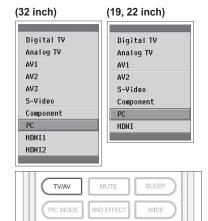

The **PC** menu is available only when there is a PC input signal.

- 1 Press the TV/AV button to switch to PC mode.
- 2 Select PC using the ▲/▼ button and press the OK button.


Auto Configure

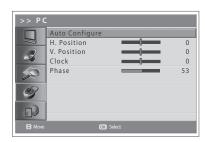

Automatically optimizes the display. This is recommended for the first time connecting to a PC.

- 3 Press the MENU button.
- 4 Select System using the ▲/▼ button and press the OK or ▶ button.
- 5 Select **PC** using the **△**/**▼** button and press the **OK** or **▶** button.
- 6 Select Auto Configure using the ▲/▼ button and press the OK button.

Position

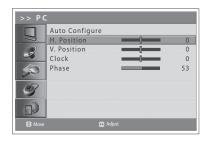


Adjusts the display position to PC if it does not fit the TV screen.

- 6 Select **H. Position/V. Position** using the **▲/▼** button.
- **7** Adjust the optimal position using the **◄/▶** button.

Chapter 12 >> Setting the PC


Clock

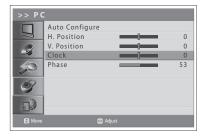

Adjusts the horizontal feature of screen by increasing or decreasing the number of pixels.

- 6 Select Clock using the ▲/▼ button.
- 7 Adjust the optimal horizontal feature using the **◄/▶** button.

Phase

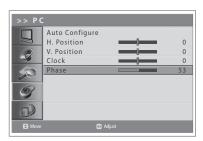

Sets the focus of screen.

- 6 Select Phase using the ▲/▼ button.
- 7 Adjust the optimal focus using the **◄/▶** button.

Note: If noise is present, change the PC mode to another resolution, change the refresh rate to another rate until the picture is clear. If the refresh rate of the PC graphic card can not be changed, change the PC graphic card or consult the manufacturer of the PC graphic card.

| Picture | Mode | | |
|-----------------------------------|--------------------------|--|--|
| | Brightness | | |
| | Contrast | | |
| | Sharpness | | |
| | Colour | | |
| | Hue | | |
| | Fleshtone | | |
| | Colour Temp. | | |
| | NR (32 inch only) | | |
| | Backlight | | |
| Sound | Effect | | |
| | Balance | | |
| | AVL | | |
| | SRS TruSurround XT | | |
| Channel (Analog TV Input only) | Country | | |
| (Analog 1 v Input only) | Antenna Power | | |
| | Auto Search | | |
| | Manual Search | | |
| | Edit Channels | | |
| System | Language | | |
| | Time Setting | | |
| | PIP (32 inch only) | | |
| | PC | | |
| | OSD Transparency | | |
| | Blue Back (32 inch only) | | |
| | Panel Off | | |
| | Default Setting | | |

| DTV Setup | Preference | Parental Control | |
|-------------------------|---------------|--------------------------------|--|
| (Digital TV Input only) | | Language Setting | |
| | | Time Setting | |
| | | Schedule | |
| | | Miscellaneous Settings | |
| | Edit Channels | Edit Terrestrial Channel Lists | |
| | | Edit Satellite Channel Lists | |
| | | Edit Favourite Channels | |
| | | Automatic Channel Numbering | |
| | | Renew Channel Numbers | |
| | Installation | Terrestrial Channel Search | |
| | | Satellite Channel Search | |
| | | Terrestrial Software Update | |
| | | Satellite Software Update | |
| | | Default Setting | |
| | System | Status | |
| | | Signal Detection | |
| | | Common Interface | |

Troubleshooting

Before contacting your local service dealer, please make sure you refer to the following guide. If the TV does not work normally after completing the following trouble shooting, please contact your local TV distributor or service centre.

(1) No message is displayed or the TV has no power.

- Check the main power cable and make sure it is plugged into a suitable power outlet.
- Check that the mains supply is switched on.
- Check that the power switch is on at the bottom of the TV (where applicable)
- Connect the power cable to a different power outlet.

(2) No picture

- Make sure that the TV is power on and in operation mode (press the STANDBY button).
- Make sure that the AV cable is firmly connected to the TV. You may need to remove the cable from both ends and reconnect.
- Make sure that the cable is properly connected to the TV.
- Be sure to activate channel search.
- Check the brightness level of the TV.
- Check if the channel is currently on air. Contact the broadcaster to ensure that the channel is running.

(3) Poor picture/sound quality

- Install the antenna in an obstacle-free place.
- Make sure there is no mobile phone or microwave oven near the TV.
- Keep the power and the antenna cable for the satellite apart from each other.
- Adjust the antenna direction to get the better picture.
- Set the antenna power in menu to On, if you use the active antenna to improve the reception.
- Check the signal levels and adjust your antenna if the level is too low. The signal level may be affected by weather conditions.

Note: If the antenna is covered with snow or the RF is weakened by heavy rain, the condition of the sound and picture may temporarily be poor. However, the poor sound and picture quality due to weather conditions cannot be accepted as a malfunction of product.

- Check that your dish alignment is correct.
- Change the satellite dish for a larger one as this will increase the signal levels received.
- Replace the LNB with a lower noise factor in cases where the noise factor is too high.
- Replace the LNB with a new one in case it is damaged or out of order.
- When the 1080i video input signal is displayed on the TV screen through the Component or HDMI jack, the screen flicker may occur. (19 inch only)

(4) No or poor sound

- Check that your AV cable is connected correctly.
- Check the volume levels of your TV.
- Check if the TV is on mute.
- Check audio type or soundtrack option in the AV menu.

(5) Remote Control does not operate.

- To control the TV, the top end of the remote control should point directly towards the receiving part of the TV.
- Remove and reinsert the batteries in the remote control.
- Replace the batteries in the remote control for a new set.

Troubleshooting

- (6) Cannot make reservations.
 - Check that no previous reservations are conflicting with the new reservation.
 - Check that the TV is switched on at the time of the reservation.
- (7) Cannot watch scrambled channel.
 - Check that you have the appropriate Smartcard. Reinsert the Smartcard and make sure it initializes correctly.
 - Check in the menu that the TV is detecting the Smartcard.
 - Check in the menu that you have a valid and working subscription to the channels you wish to view.
 - Ensure that the Smartcard is not damaged.
- (8) No password information is given.
 - The default password is always 0000.
- (9) Channel search does not work.
 - Check that your cable is connected correctly.
 - Make sure that the antenna setting in the menu is correct.
 - Use the appropriate antenna capable of receiving VHF or UHF channels for your area.
- (10) Cannot update new software.
 - You can get an update. If the TV does not show a message requesting update, that means no software is available.
- (11) Cannot watch pay channels.
 - Check in the menu that you have a valid and working subscription to the channels you wish to view.
 - Contact your network operator for more information.

Error Message

| Error message | Possible causes | What to do | |
|-----------------------------|--|--|--|
| | The satellite dish is not pointing at the satellite. | Adjust dish alignment. | |
| | Signal is too weak. | Connect a signal amplifier. | |
| | Satellite dish is too small. | Change to a larger dish. | |
| No or bad | Problem with LNB. | Change the LNB. | |
| signal | The aerial is not pointing properly. | Adjust aerial. Check the cable from the aerial. If you cannot resolve the problem, you may need to have your aerial and installation tested by a professional. | |
| | The channel has a signal, but no audio or video is provided. The channel has not been deleted by broadcasting company. | Confirm if the channel is currently on air. Remove the channel from the channel list and check for new transponder details. | |
| The channel is | The channel is for data broadcasting. | The channel cannot be viewed with the appropriate model that supports data channels. | |
| scrambled or not available. | Smartcard is not plugged in. | Insert Smartcard. | |
| | Wrong Smartcard is in use. | Insert the appropriate Smartcard for the channel(s) you wish to view. | |
| | Smartcard is not plugged in correctly. | Reinsert Smartcard; ensure that it is inserted correctly. | |
| | Smartcard is damaged. | Contact your Smartcard retailer or channel broadcaster for a Smartcard replacement. | |
| Audio not available | The channel has a video signal, but no audio is provided. | Press the audio button on your remote control to confirm that the channel has audio options. | |
| | CI module is not installed. | Insert CI module. | |
| CI module not | CI module is not inserted correctly | Reinsert CI module. | |
| installed. | CI module is not recognized. | Insert a different CI module to check if your existing module is working. | |
| | Wrong CI module. | Insert the correct CI module. | |
| Invalid CI module | CI module is not inserted correctly. | Remove and reinsert the CI module. | |
| | CI module is damaged | Replace CI module. | |
| | LNB cable is short. | Replace LNB Cable. | |
| 01 | LNB is internally short. | Replace LNB. | |
| Short LNB | Alien substance is inserted in LNB IN port and port may be damaged. | Remove the alien substance and contact local service center in case damaged has occurred. | |

| Item | | 32 Inch Model | 22 Inch Model | 19 Inch Model |
|------------|-----------------------|--|---|-------------------------|
| | Туре | Colour active matrix TFT-LCD | Colour active matrix TFT-LCD | |
| | Display Area | 32.0" | 22.0" | 19.0" |
| LCD Panel | Max. Resolution | 1366 x 768 pixels | 1680 x 1050 pixels | 1440 x 900 pixels |
| | Viewing Angle | R/L: 178, U/D: 178 (CR≥10) | R/L : 160, U/D : 160 (CR ≥10) | |
| | Sync | Separate | Separate | |
| DC Manitan | Horizontal Frequency | 31.469~48.363 kHz | 31.469~48.363 kHz | |
| PC Monitor | Vertical Frequency | 60Hz | 60Hz | |
| | MAX. Resolution | 1360 x 768 pixels@60Hz | 1360 x 768 pixels@60Hz | |
| Input/ | Video Input | Analog + Digital Tuner(1), Digital SatelliteTuner(1), SCART(2), RCA, S-Video, Component, HDMI(2), PC | Analog + Digital Tuner(1), Digital Satellite Tuner(1), SCART, RCA, S-Video, Component, HDMI, PC | |
| Output | Audio Input | RCA(R/L), Component (R/L), HDMI, PC Audio | RCA(R/L), Component (R/L), HDMI, PC Audio | |
| | Audio Output | S/PDIF, Speaker, Headphone | Speaker, Headphone | |
| | Data Interface | RS-232C (for SW update) | RS-232C (for SW update) | |
| Dogulation | Safety | CE | CE | |
| Regulation | EMI | CE | CE | |
| | Power | 133 W (Max.) | 78 W (Max.) | 75 W (Max.) |
| | Speaker Output | 7W x 2EA | 8W x 2EA | 3W x 2EA |
| | Plug & Play Level | DDC 1/2 B | DDC 1/2 B | |
| Others | Weight | NET 14.0kg / Gross 17.0kg | NET 7.2kg / Gross 8.9kg | NET 6.2kg / Gross 8.2kg |
| | Power Supply | AC 220V ~ 240V, 50/60Hz | AC 100V ~ 240V, 50/60Hz | |
| | Operating Temperature | 5°C ~ 35°C | 5°C ~ 35°C | |
| | Operating Humidity | 30 ~ 80% RH | 30 ~ 80% RH | |

| | | Analog | Digital (Terrestrial) | Digital (Satellite) |
|-----------|---------------|-------------------------------------|-----------------------|--------------------------------------|
| | Area | EU | EU | EU |
| | Antenna Input | IEC 169-2 Female | IEC 169-2 Female | IEC 169-24 (F-Type) |
| | Tuning System | FS | OFDM DVB-T | QPSK |
| TV Signal | Colour System | PAL, B/G, D/K, I SECAM, B/G, D/K | B/G, I, D/K | B/G, I, D/K |
| | Sound System | AM / FM / Nicam | MPEG 1 Layer 1/2 | MPEG-2 Audio/Musicam Layer I & II |
| | VHF | 145.00 ~ 424.00MHz | 177.50 ~ 226.50MHz | 950.00 ~ 2150.00 MHz |
| | UHF | 425.00 ~ 863.25MHz | 425.00 ~ 863.25MHz | 950.00 ~ 2150.00 MHZ |
| | Teletext | Yes | Yes | Yes |