
# Connecting a AV device

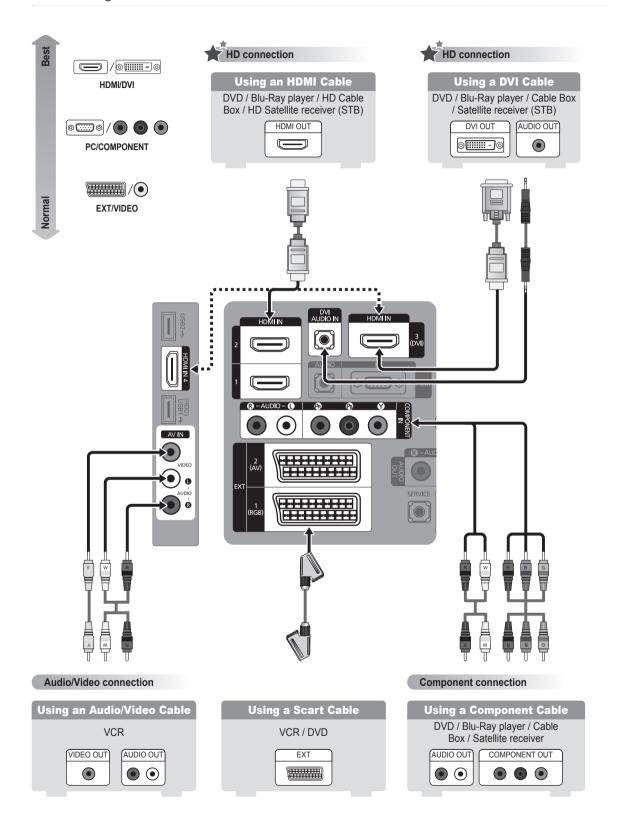



# LCD TV QUICK SETUP GUIDE

# **The Supplied Accessories**



Remote Control & Batteries (AAA x 2)



Cleaning Cloth



User Manual



Power Cord



Cover-Bottom

 


Programme CD



Holder-Wire Cable (Depending on the model)


# **Installing Batteries in the Remote Control**







BN68-01902F-01

#### Installing the Stand

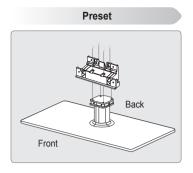

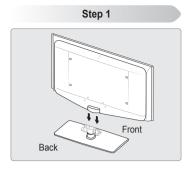


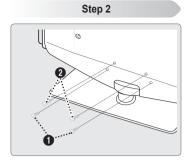


- Preset: Place the Guide Stand and Cover Neck onto the stand and fasten it using the screws.
- Step 1. Attach your LCD TV to the stand.
  - Two or more people should carry the TV.
  - Make sure to distinguish between the front and back of the stand when assembling them.
  - To make sure the TV is installed on the stand at a proper level, do not apply excess downward pressure to the upper left of right sides of the TV.
- Step 2. Fasten two screws at position 1 and then fasten two screw at position 2.
  - Stand the product up and fasten the screws. If you fasten the screws with the LCD TV placed down, it may lean to one side

## **Assembling the Cables**

Enclose the cables in the Holder-Wire Cable so that the cables are not visible through the transparent stand.

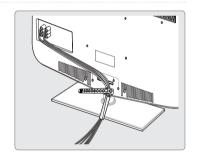


# Using the remote control buttons

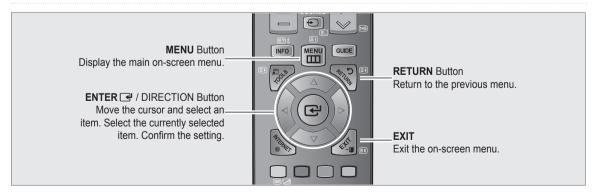

## Plug & Play

When the TV is initially powered on, basic settings proceed automatically and subsequently. If you want to reset this feature, press the **MENU** button to display menu. You can set the Plug & Play by selecting 'Setup → Plug & Play'.

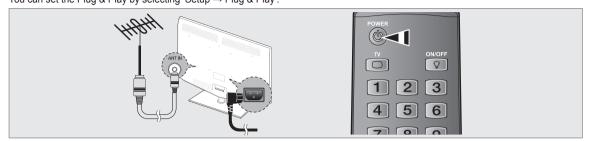

On the screen, you can set as follows.

The each step may vary depending on the Antenna source.

