



SONY -09616

MHC-5600


SONY SERVICE MANUAL

	MHC-5600	FHE-939CD
Amplifier	TA-H5600	TA-H5600
CD Player	CDP-H6600	CDP-H6600
Tuner	ST-H6600	#
Cassette deck	TC-H5600	TC-H5600
Speaker System	SS-H6600	SS-H6600

TA-H5600/H6600

SERVICE MANUAL

AEP Model
UK Model

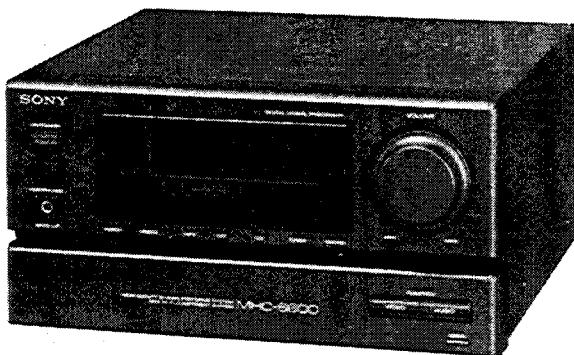

This unit is the Amplifier
for the MHC-5600/6600
component system.

Photo is TA-H6600

SPECIFICATIONS

Continuous RMS power output	
For satellite speaker:	
28 + 28 W (8 ohms at 1 kHz, DIN)	
33 + 33 W (8 ohms at 1 kHz, 5% THD)	
For bass speaker:	
32 + 32 W (6 ohms at 110 Hz, DIN)	
37 + 37 W (6 ohms at 110 Hz, 5% THD)	
Music power output	(for AEP and U.K. model)
For satellite speaker:	
44 + 44 W (8 ohms at 1 kHz, 10% THD)	
For bass speaker:	
48 + 48 W (6 ohm at 110 Hz, 10% THD)	
Peak music power output	
(EXCEPT AEP, UK)	550 W
Inputs	ADAPTOR (pin jacks): sensitivity 260 mV impedance 47 kilohms
Outputs	HEADPHONES (stereo minijack): accepts headphones of 8 ohms or more. ADAPTOR (pin jacks) output level 260 mV impedance 1 kilohms SPEAKER (SATELLITE): accepts speakers of 8 to 16 ohms. SPEAKER (BASS): accepts speakers of 6 to 16 ohms

TABLE OF CONTENTS

<u>Section</u>	<u>Title</u>	<u>Page</u>
1. GENERAL		3
2. DIAGRAMS		
2-1. IC Pin Description	9
2-2. Circuit Boards Location	16
2-3. Semiconductor Lead Layouts	17
2-4. IC Block Diagrams	18
2-5. Block Diagram	21
2-6. Printed Wiring Boards		
—Jack, Power Supply Section—	24
2-7. Schematic Diagram		
—Jack, Power Supply Section—	29
2-8. Schematic Diagram		
—Panel Section—	33
2-9. Printed Wiring Boards		
—Panel Section—	37
2-10. Schematic Diagram		
—DSP Section—	41
2-11. Printed Wiring Boards		
—DSP Section—	45
3. EXPLODED VIEWS		
3-1. Overall Section 1	48
3-2. Overall Section 2	49
4. ELECTRICAL PARTS LIST	50

Notes on chip component replacement


- Never reuse a disconnected chip component.
- Notice that the minus side of a tantalum capacitor may be damaged by heat.

Flexible Circuit Board Repairing

- Keep the temperature of the soldering iron around 270°C during repairing.
- Do not touch the soldering iron on the same conductor of the circuit board (within 3 times).
- Be careful not to apply force on the conductor when soldering or unsoldering.

MODEL IDENTIFICATION

— Specification Label —

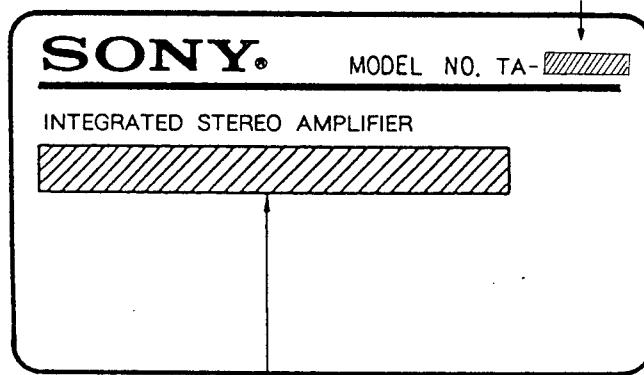H5600
H6600

AEP, Germany Model : AC 220V~50/60Hz

Italian Model : AC 220V~50/60Hz

UK Model : AC 240V~50/60Hz

SAFETY-RELATED COMPONENT WARNING!!


COMPONENTS IDENTIFIED BY MARK OR DOTTED LINE WITH MARK ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

SECTION 1


GENERAL

This section is extracted from instruction manual.

LOCATION AND FUNCTION CONTROLS

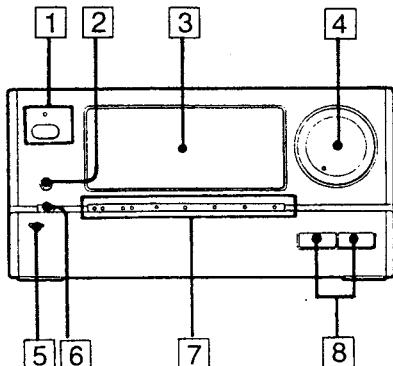

- 1** SYSTEM POWER switch and STANDBY indicator
The indicator remains lit as long as the AC power cord is connected to a wall outlet.
- 2** HEADPHONES jack (stereo minijack) 00
- 3** Display window
- 4** VOLUME control ②③
- 5** OPEN tab
- 6** WAKE UP indicator ④
- 7** Function indicators X: ⑩ ⑪
- 8** VIDEO and AUDIO FUNCTION selectors ⑩ ⑪

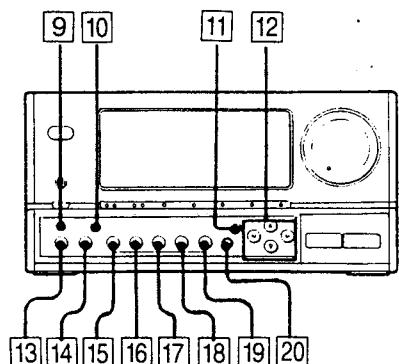


- 9** WAKE UP button ⑬
- 10** DISPLAY button ⑬
- 11** MEMORY button ⑯
- 12** CURSOR CONTROL button
- 13** DBFB (Dynamic Bass Feedback) button ⑯
- 14** BALANCE button ⑬
- 15** DSP button ⑰
- 16** PRESET buttons ⑰
- 17** DYNAMIC SOUND button ⑯
- 18** PARAMETRIC EQUALIZER button ⑯
- 19** PRESENCE SURROUND button ⑯
- 20** ON/OFF button ⑬ ⑯ ⑰ ⑯

Audio Adjustment

Volume Adjustment A

Turn VOLUME clockwise to increase the sound level, or counterclockwise to decrease it.
(Or press + or - on the remote commander.)

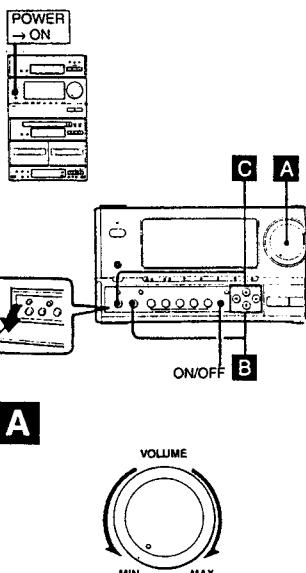

Balance Adjustment B

Adjust the balance of the speakers to correct the stereo imaging when the speaker position is not symmetrical.

- 1 Press BALANCE.
- 2 Adjust with CURSOR CONTROL ▲ or ▼.

Reinforcing Bass - DBFB C


- 1 Press DBFB.

- 2 Adjust with CURSOR CONTROL ▲ or ▼.

The more you press ▲, the more the bass is emphasized.

When you do not want to apply the DBFB effect
Press ON/OFF.

*DBFB = Dynamic bass feedback

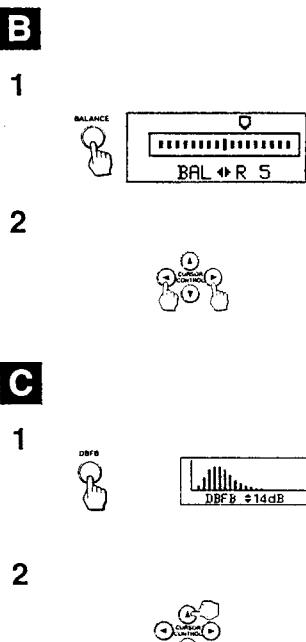


For personal listening
Connect headphones to HEADPHONES.
No sound comes from the speakers.

Using the Digital Sound Effects


This unit incorporates a Digital Signal Processing (DSP) system which consists of a Digital Parametric Equalizer, a Digital Presence Surround Processor, and a Digital Dynamic Sound Controller. Using this DSP system, you can get the optimum sound for the kind of music you want to listen to.

Twelve recommended sound field programs (Digital Sound Menu) are preset at the factory for easy use. You can enjoy the digital sound effects by just choosing from the Digital Sound Menu according to the program source.

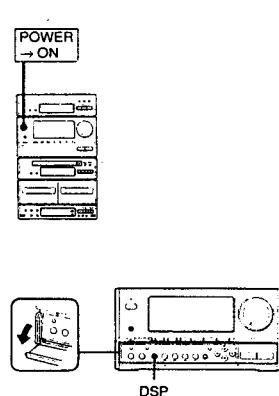

You can also create a variety of different sounds and effects by adjusting the Digital Sound Menu settings using three different sound manipulation functions.

Making full use of the DSP system allows you to maximize your music listening enjoyment.
You can also store up to six settings you have created in the memory (Personal File).

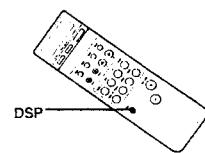


How to get the Digital Sound Effect



To adjust each of the Digital Sound Effect, you must activate the DSP system first.

Press DSP.

When the DSP is working, one of the 12 Digital Sound Menus (page 74) or one of the six Personal Files (page 86) displays in the display window.

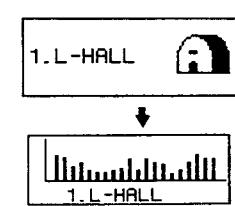

To cancel the DSP effect
Press DSP again.
The Digital Sound Menu or the Personal File disappears and the display shows "EFFECT OFF."

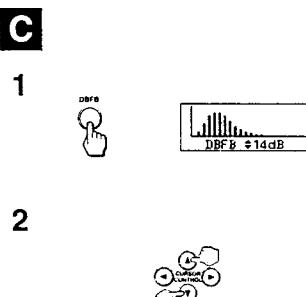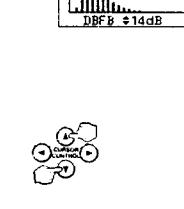

Using the Digital Sound Effects

Enjoying the Digital Sound Menu

When the system is shipped from the factory, 12 specially recommended combinations of settings for the Parametric Equalizer, Presence Surround and Dynamic Sound (Digital Sound Menu) are stored. Since these programs are appropriate for most types of music and listening situations, you can enjoy the digital sound effects by just choosing from the Digital Sound Menu according to the program source.

Before you start
If "EFFECT OFF" is displayed, press DSP to activate the DSP system.


- 1 Press PRESET.
The display shows a "menu display" (choices) of the Digital Sound Menu.
- 2 Select the Digital Sound Menu using CURSOR CONTROL and by referring to the table on page 76.
The selected Digital Sound Menu displays and the sound effect starts two seconds after releasing the CURSOR CONTROL buttons. Then, the display goes back to its normal state (see page 78).

To display the next or previous menu
a
Press **▲** or **▼**.

To move the cursor **b**
Press **◀** or **▶**.

To select the Digital Sound Menu directly
(Possible with the remote commander only)


- 1 Press DSP on the remote commander so that "DSP" appears on the display on the remote commander.
- 2 Press the numeric button **A** for the desired Digital Sound Menu

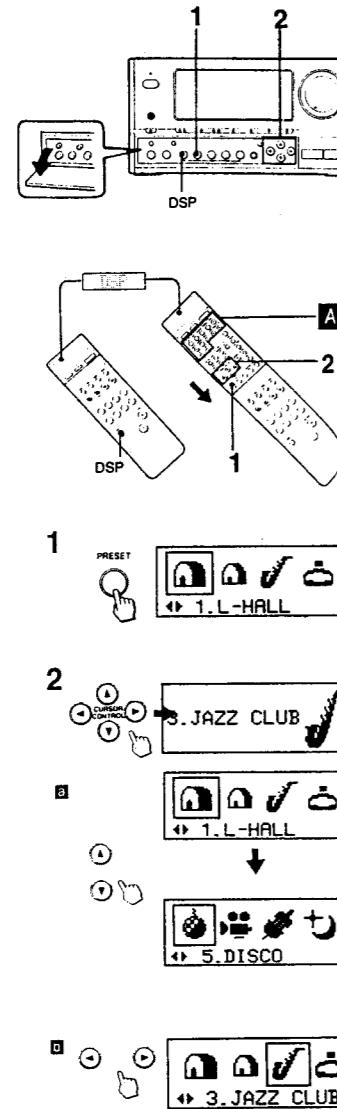

Using the Digital Sound Effects

Display	Applications
1 L-HALL	①
2 S-HALL	②
3 JAZZ CLUB	③
4 STADIUM	④
5 DISCO	⑤
6 MOVIE	⑥
7 SYMPHONY	⑦
8 NIGHT	⑧
9 BGM	⑨
10 SIMULATED	⑩
11 WM	⑪
12 CAR	⑫

- ① Gives the atmosphere of a large hall which seats more than 2000 people.
② For chamber music or an instrumental solo.
③ For jazz.
④ For a live concert in an open-air stadium.
⑤ Gives a sound similar to a disco which has hard floors and walls.
⑥ For DOLBY surround encoded video programs.
⑦ For orchestral music.
⑧ For enjoyment of sound at low listening levels.
⑨ For background music.
⑩ Gives width to a monaural program source.
⑪ For recording a tape to be listened to with stereo headphones.
⑫ For recording a tape to be listened to in a car.

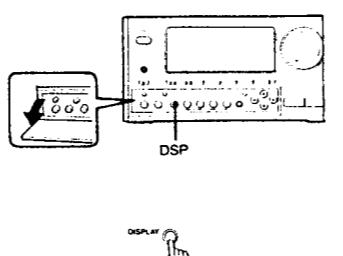

Using the Digital Sound Effects

Changing the Display

(Not possible with the remote commander)

Each time you press DISPLAY, the display changes in the following order:

- Spectrum analyzer 1
- Spectrum analyzer 2
- Digital Sound Menu Display

Note:
When the DSP system is not on, the display shows "EFFECT OFF" instead of the selected Digital Sound Menu.


To make the display move with the music A
(Not possible with the remote commander)

You can make the picture in the display move to the rhythm of the music as an animation. The picture moves quickly when the music is fast, slowly when the music is slow, and stops when the music stops. You can enjoy this effect along with any sound effect available with this unit.


Press BALANCE and DISPLAY at the same time.

The picture that represents the selected Digital Sound Menu starts moving. Each Digital Sound Menu has a different picture for this effect. The illustration **A** shows an example of this effect when the Digital Sound Menu "CAR" is selected. There is also a picture for when the DSP system is not active.

To exit this mode
Press DISPLAY.

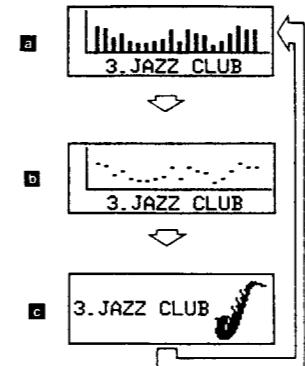

A

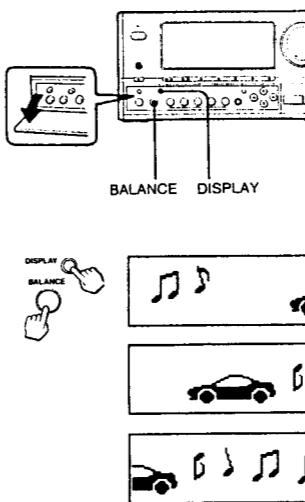

Using the Digital Sound Effects

Using the Digital Parametric Equalizer

This function allows you to adjust the sound by raising and lowering the levels of specific frequency ranges.

Before you start
If "EFFECT OFF" is displayed, press DSP to activate the DSP system.

- 1 Select the Digital Sound Menu (See page 74.)

- 2 Select the frequency range you wish to adjust by pressing PARAMETRIC EQUALIZER, (P.EQ on the remote commander)

Each time you press it, the frequency range in the Equalizer display changes as follows:
PEQ 1 → PEQ 2 → PEQ 3

Display	Frequency range
PEQ 1	Low range
PEQ 2	Middle range
PEQ 3	High range

When the unit is shipped from the factory, each of the three frequency positions is defined for a specific frequency range as shown in the above table. The adjustable frequency range can be freely moved from left to right (low → high) along the frequency scale as explained in the next step. This allows each of the frequencies (PEQ 1 – 3) to be used for any frequency range. For example, PEQ 1 does not have to be used to adjust a low-frequency range, but can be used instead to adjust a mid- or high-frequency range by moving it to the right along the scale.





- 3 Adjust the sound using CURSOR CONTROL.

a **◀** or **▶**: Shifts the frequency range to be adjusted to the left or to the right.

b **▲** or **▼**: Raises or lowers the level of the frequency range centering around the flashing dot

- 4 If you wish to adjust the level of another frequency range, repeat steps 2 and 3.
The "Equalizer display" disappears about 10 seconds after you adjust the sound.

Confirming the effect of the adjustment
Display the "Equalizer display" by pressing PARAMETRIC EQUALIZER and then press ON/OFF.
"±0 dB" displays and the equalizer curve becomes flat.
Each time you press ON/OFF, the sound switches back and forth between the adjusted settings and a flat curve, allowing you to hear and compare the difference.

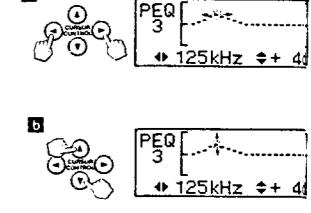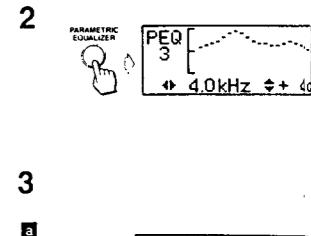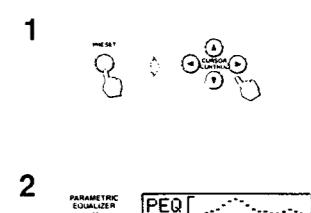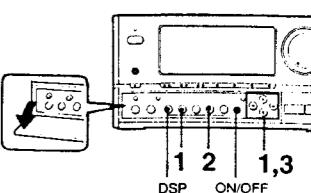

www.manualscenter.com

Using the Digital Sound Effects

Using the Digital Presence Surround Effects

The surround function allows you to adjust the length of the reverberation time and the level of the reverberated sound, putting you in control of a wide range of effects and sounds. The surround effect adjustments should usually be set to match the size of the envisaged concert hall. When you want to create the atmosphere of a small hall such as a live house or club, shorten the reverberation time. When you want to create the atmosphere of a large hall such as a concert hall, lengthen the reverberation time. If you want to add the feeling of being in a "live" hall where there is a lot of echo, increase the level (strength) of the reverberated sound. If you want to add the feeling of being in a "dead" hall where there is little echo, decrease the level of the reverberated sound.

Before you start
If "EFFECT OFF" is displayed, press DSP to activate the DSP system.

- 1 Select the Digital Sound Menu. (See page 74.)
- 2 Press PRESENCE SURROUND. (SURROUND on the remote commander) The "Surround display" appears.
- 3 Adjust the sound using CURSOR CONTROL.
 - A To change the reverberation time (①)
To shorten the reverberation time, press ▲.
To lengthen the reverberation time, press ▼.
 - B To change the level of the reverberated sound (②)
To increase the level, press ▲.
To decrease the level, press ▼.

The "Surround display" disappears about 10 seconds after you adjust the sound.

Confirming the effect of the adjustment
Display the "Surround display" by pressing PRESENCE SURROUND and then press ON/OFF. "---- dB" displays. Each time you press ON/OFF, the sound switches back and forth between the adjusted settings and no surround effect, allowing you to hear and compare the difference.

82

Using the Digital Sound Effects

Adjusting the Digital Dynamic Sound Controller

This unit allows you to select either of the two Dynamic Controls, Compressor (CP) or Noise Gate (NG). The compressor compresses the dynamic range of the output signal to increase the average output level without distortion. This function is useful for obtaining dynamic sound at a small output level or when recording a program source with a wide dynamic range, such as a compact disc or a cassette tape. On the other hand, the Noise Gate limits the dynamic range of the input signal to eliminate undesired noise between tunes, etc. You can set the Compressor or Noise Gate effect in seven increments: "CP.1" to "CP.4," "NG.1" to "NG.3." The higher the number selected, the stronger the effect. When the dynamic sound controller is set to "NORM," there is no special effect.

Before you start
If "EFFECT OFF" is displayed, press DSP to activate the DSP system.

- 1 Select the Digital Sound Menu. (See page 74.)
- 2 Press DYNAMIC SOUND. (DDS on the remote commander) The "Dynamic Sound display" appears.
- 3 Select the Compressor or Noise Gate using CURSOR CONTROL.

The "Dynamic Sound display" disappears about 10 seconds after adjusting the sound.

Confirming the effect of the adjustment
Display the "Dynamic Sound display" by pressing DYNAMIC SOUND and then press ON/OFF. "NORM" displays. Each time you press ON/OFF, the sound switches back and forth between the adjusted settings and no Dynamic Sound effect, allowing you to hear and compare the difference.

84

Storing the Volume Setting for Timer-Activated Operation Wake Up Volume

The volume setting is called up automatically when the power is turned on for timer-activated operation (page 128). This is convenient for when you want to wake up to music, etc. You can also use the Sleep Timer function (page 136) together with this function to listen to music in a low volume when you go to sleep, and in a high volume when you wake up.

- 1 Adjust the VOLUME.
- 2 Keep WAKE UP depressed until "WAKE UP MEMORY" appears on the display. The WAKE UP indicator lights up.

When you do not want to use the Wake Up Volume
Press WAKE UP so that the WAKE UP indicator goes off.

To activate the Wake Up Volume again
Press WAKE UP again.

134

Using the Digital Sound Effects

Storing Your Individual Sound Effect Settings – Personal File

By storing your individual sound effect settings in the Personal File, you can easily call up the settings at any desired time. You can store up to six combinations of settings.

Before you start
If "EFFECT OFF" is displayed, press DSP to activate the DSP system.

- 1 Obtain the desired sound effect. (See page 80, 82, 84)
- 2 Press MEMORY. "MEMORY menu display" (MEMORY and the letters A through F) appear on the display.
- 3 Select a letter (A through F) using CURSOR CONTROL.
- 4 Press MEMORY while the "MEMORY menu display" is displayed.

The Equalizer Curve, Presence Surround and Dynamic Sound settings are saved under the selected letter. The selected Personal File name appears on the display. The settings previously stored at this memory location are erased and replaced by the new settings.

If you do not press MEMORY in step 4
The "MEMORY menu display" disappears after about 10 seconds. The adjusted sound effect settings are not saved.

If you do not save the sound effect that you obtained
When you press PRESET, the sound effect settings are canceled and the sound goes back to the factory-set effect. Store your individual settings before operating other buttons.

86

Sleep Timer Operation

By setting the sleep timer, the system power can be turned off after the preset duration (up to 90 minutes). This operation is possible only with the remote commander.

- 1 Play the desired program source.
- 2 Press SLEEP to select the desired duration in minute. As you press SLEEP, the indication changes as follows:
90 → 80 → ... → 10 → ...

To turn off the system before the system is turned off by the sleep timer
Press SYSTEM POWER.

To check the remaining time before the sleep timer turns off the system
Press SLEEP once, and the remaining time appears. The display returns to the previous indication automatically after several seconds.

136

Using the Digital Sound Effects

Calling up settings from Personal File

Before you start
If "EFFECT OFF" is displayed, press DSP to activate the DSP system.

- 1 Press PRESET. The "menu display" of the Digital Sound Menu appears.
- 2 Select the Personal File with CURSOR CONTROL.

To display the Personal File menu
Press ▲ or ▼.



To select the desired Personal File
Press ◀ or ▶.

The selected Personal File displays and the sound effect starts two seconds after releasing the CURSOR CONTROL buttons. Then, the display goes back to its normal state (see page 78.)

To select the Personal File directly (Possible with the remote commander only)

- 1 Press DSP on the remote commander so that "DSP" appears on the display on the remote commander.
- 2 Press >12 and the numeric buttons.

Personal File A: >12 and 1
Personal File B: >12 and 2
Personal File C: >12 and 3
Personal File D: >12 and 4
Personal File E: >12 and 5
Personal File F: >12 and 6

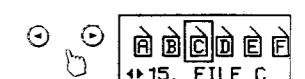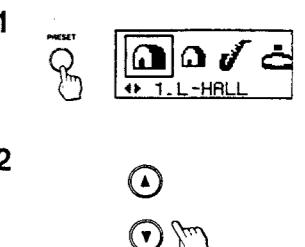


www.manualscenter.com

88


Editing the Sound with a Video Equipment

When you connect a video equipment with this system, you can edit the sound of the audio equipment with the picture of the video equipment.

- 1 Press FUNCTION VIDEO (VIDEO 1 or VIDEO 2 on the remote commander) to select the video source. The green and red lamps of the program function indicators light up.

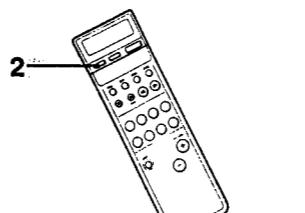

- 2 Press FUNCTION AUDIO (TUNER, CD, TAPE or TAPE A/B, DAT or PHONO on the remote commander) to select the audio source. The green lamp of the video source (①) stays on and the red lamp goes off. The red lamp of the audio source (②) lights up.

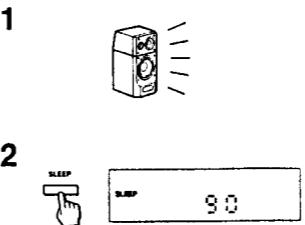

The sound of selected the audio source is mixed with the picture of the selected video source.

138

-8-

SECTION 2 DIAGRAMS

2-1. IC PIN DESCRIPTION

- IC101 Dual VCA IC for HiFi Electronic Volume (M5283P)

Pin No.	Name	Mark	Description
1	CH1 side (+) power supply	(+) Vcc	CH1 side power supply terminal
2	CH1 control terminal	Vc1	Controls the signal for ch1 side. Controls the signal by giving 0~5v of the voltage to this terminal. Requires approx. 30nA (standard) as bias current.
3	CH1 output terminal	OUT1	CH1 side output terminal
4 5	(-) power supply terminal	(-) Vcc	Terminals 4, 5, 12, 13 are connected internally.
6	CH1 grounding terminal	GND1	CH1 side grounding terminal (GND)
7	Not connected	NC	Condition is OPEN.
8	CH1 input terminal	IN1	CH1 side input terminal approx. 47K of resistance is inserted for DC bias between GND and this terminal (terminal 8).
9	CH2 input terminal	IN2	CH2 side input terminal approx. 47K of resistance is inserted for DC bias between GND and this terminal (terminal 9).
10	Not connected	NC	Condition is OPEN.
11	Grounding terminal	GND2	CH2 side grounding terminal (GND)
12 13	(-) power supply terminal	(-) Vcc	Terminals 4, 5, 12, 13 are connected internally.
14	CH2 input terminal	OUT2	CH2 side output terminal
15	CH2 control terminal	Vc2	Controls the signal for ch2 side. Controls the signal by giving 0~5v of the voltage to this terminal. Requires approx. 30nA (standard) as bias current.
16	CH2 side (+) power supply	(+) Vcc	CH2 side power supply terminal

- IC111 Digital Signal Operation for Audio (CXD2701Q)

Digital signal operation for 2 channel audio "LSI" which executes reverberation function and equalizer function in 1 chip.

Pin No.	Pin Name	I/O	Description
1	IMODE	I	Input data format setting terminal Data position changes with "H", "L".
2	IDIR	I	Input data format setting terminal MSB first with "H", LSB first with "L".
3	DATAI	I	Serial data input terminal with 1 sampling, 2 channels. Data format is the complement of 2.
4	BCKI	I	Serial bit clock input terminal for serial input data.
5	LRCKI	I	Serial I/O sampling frequency clock input terminal. L-ch data is transferred with level "H", R-ch data is transferred with level "L".
6	Vss 1	—	GND terminal
7	DATAO	O	Serial data output terminal. Data format is the complement of 2.
8	BCKO	O	Bit clock output terminal. 64 slots.
9	LRCKO	O	Serial data sampling frequency clock output terminal
10	BS1	I	Output data, bit numbers setting terminal BS2 = H, BS1 = H 24bit BS2 = H, BS1 = L 20bit BS2 = L, BS1 = H 18bit BS2 = L, BS1 = L 16bit
11	BS2	I	Output data format setting terminal MSB first with "H", LSB first with "L".
12	ODIR	I	—

Pin No.	Name	I/O	Description
13	V _{ss} 3	—	GND terminal
14	SCK	O	System clock output terminal. fsck = fxt = 512fs
15	XOUT	O	Quartz oscillation circuit output terminal
16	XIN	I	Quartz oscillation circuit input terminal
17	V _{DD} 1	—	+5V Power supply terminal
18	I/O4	I/O	Data input and output I/O4 for outside DRAM
19	I/O3	I/O	Data input and output I/O3 for outside DRAM
20	CAS	O	Outside DRAM column address strobe output terminal.
21	I/O2	I/O	Data input and output I/O2 for outside DRAM
22	I/O1	I/O	Data input and output I/O1 for outside DRAM
23	WE	O	Outside DRAM write enable output terminal. Valid with "L" level
24	A0	O	Outside DRAM address output A0
25	RAS	O	Outside DRAM row address strobe output terminal
26	A1	O	Outside DRAM address output A1
27	A2	O	Outside DRAM address output A2
28	V _{ss} 2	—	GND terminal
29	A3	O	Outside DRAM address A3
30	A4	O	Outside DRAM address A4
31	A5	O	Outside DRAM address A5
32	A6	O	Outside DRAM address A6
33	A7	O	Outside DRAM address A7
34	A8	O	Outside DRAM address A8
35	TEST1	I	Test terminal. Normally fixed to GND.
36	TEST2	I	Test terminal. Normally fixed to GND.
37	TEST3	I	Test terminal. Normally fixed to GND.
38	TEST0	O	Test terminal
39	V _{DD} 2	—	+5V power supply terminal
40	PRGD	I	Serial data input terminal which receives the transmission of order, coefficient and control from the micro computer.
41	PRGCK	I	PRGD serial clock input terminal which receives data at positive edge.
42	PRGL	I	Latch input terminal to latch the serial data in IC from the microcomputer. Active "L".
43	INIT	I	Initialize terminal. Valid with "L". Re-synchronize at positive edge.
44	OVF	O	Output the over flow flag of DSP, L-ch MIX, R-ch MIX, L-ch EQ and R-ch EQ.

- IC109 Device Controller (M37450)
- The following items are conducted with the IC109 device controller.
- AU BUS is received and converted for transmission to feature controller (IC508).
- Devices such as DSP (IC111), DIO (IC123) and DPAC (IC112) are controlled in accordance with commands from feature controller (IC508).
- Tuner, deck and CD player are controlled by command transmissions to AU BUS.
- Power ON/OFF of CD players and cassette decks

Pin No.	Name	I/O	Description
1		—	Not used.
2	EV2	I	AU-BUS input
3	EV1	I	AU-BUS input
4	P57	O	AU-BUS output
5	P56	I	AU-BUS input
6	DBDATA	O	LC7822 (DBFB) control (serial data)
7	DBCE	O	LC7822 (DBFB) control (chip enable)
8	DBCLK	O	LC7822 (DBFB) control (clock)
9	DBRES	O	LC7822 (DBFB) control (reset)
10		—	Not used (OPEN).
11	MUTE	O	After VCA Mute. Low : Mute
12, 16	AMUTE	O	Analog Mute. Low : Mute
13	2DB	O	EQ Gain Switch + 2dB * 1
14	4DB	O	EQ Gain Switch + 4dB * 1
15	8DB	O	EQ Gain Switch + 8dB * 1
17		—	Not used.
18	DINERR	I	CDX2905Q (DIO) status input. High : Unlock
19	INT1	I	Not used (GND).
20-24		—	Not used (OPEN).
25	CNV _{ss}	—	Power supply terminal (GND)
26	RESET	I	System reset input
27		—	Not used (OPEN).
28	XIN	I	Clock input (8MHz)
29	XOUT	O	Clock output
30, 31		—	Not used (OPEN).
32	V _{ss}	—	Power supply terminal (GND)
33		—	Not used (OPEN).
34	CDOFF	O	Power control for CDP-H6600, TC-H5600/H6600. Low : POWER ON
35		—	Not used (OPEN).
36	FRES	I	Function request from analog function controller in TC-H5600/H6600.
37	FS48	I	Receives the sampling frequency information from CXD2905Q (DIO). H : fs = 48KHz
38	2701LT	O	Latch to CXD2701Q (DPS + EQ).
39	DEVCLK	O	Data and shift clock to CXD2905Q, CXD1160AX, CXD2701Q.
40	DEVDATA	O	Data and shift clock to CXD2905Q, CXD1160AX, CXD2701Q.
41		—	Not used (OPEN).
42	FS32	I	Receives the sampling frequency information from CXD2905Q (DIO). H : FS = 32KHz
43	DIORDY	I	Handshake with CXD2905Q (DIO). Ready with High.
44		—	Not used (OPEN).
45	DIOIFST	O	CPU I/F for CXD2905Q
46	VCO/XTA	O	VCO/X'tal select. Low for Analog input.
47	AD/DIN	O	AD/DIN select. High for Analot input.
48	EMPH	I	Receives the emphasis information from CXD2905Q (DIO). H : Emphasis On

Pin No.	Name	I/O	Description
49	CD/DAT	O	CD/DAT DIN select. L : CD, H : DAT
50	DIOIFINI	O	Initializes CPU I/F in CXD2905Q (DIO).
51	INITDA	—	Not used (OPEN).
52	INITP'O	O	CXD2905Q (DIO) reset
53	DOENA	O	Enable and Disable for digital Out
54	NENA	O	Enable output for noise generator of CXD8245M.
55	INIT EQ/D	O	Reset for CXD2701Q and CXD2560M
56	DPAC LT	O	Latch to CXD1160AQ (DPAC)
57	INIT AD	O	Initialization and calibration for CS5339 (A/D). Normal with Low.
58~62	P47~P43	—	Not used (OPEN).
63	NOSIGR	I	Low with no-digital signal
64	NOSIGL	I	Low with no-digital signal
65	AN	—	Not used (OPEN).
66	D-A2	O	D/A output to VCA
67	D-A1	O	D/A output to VCA
68	DAVref	—	Power supply terminal (+ 5V)
69	ADVref	—	Power supply terminal (+ 5V)
70	AV _{ss}	—	Power supply terminal (GND)
71	AS _{cc}	—	Power supply terminal (+ 5V)
72	V _{cc}	—	Power supply terminal (+ 5V)
73	V _{ss}	—	Power supply terminal (GND)
74, 75		—	Not used (OPEN).
76	TXD	O	Transmission output to MC68HC11 (feature controller). 4800 bps
77	RXD	I	Transmission input to MC68HC11 (feature controller). 4800 bps
78~80		—	Not used (OPEN).

※1 Equalizer gain switch

EQ gain [dB]		-12~0	2	4	6	8	10	12
⑬ pin	+ 2dB	H	L	H	L	H	L	H
⑭ pin	+ 4dB	H	H	L	L	H	H	L
⑮ pin	+ 8dB	H	H	H	H	L	L	L

• IC506 Display Controller (TMP91C640F - 2302)

The FL tube display is controlled with the display command from feature controller (IC506).

Pin No.	Pin Name	I/O	Description
1~11	—	I	Not used. (GND)
12	STB B	I	DATA send LATCH input from IC508
13,14	—	I	Not used. (GND)
15	NMI	I	AC power supply interrupt detect input. (Normally set to "H".) Once "L" is received, the operation is terminated until the Pin No. 16 RESET is cancelled.
16	RESET	I	Reset input. Resets when "L".
17	CLK	I	Not used. (GND)
18~25	PO0~PO7	I/O	Display command input from IC508
26	V _{ss}	—	Power supply terminal (GND)
27	X1	I	Clock input (15 MHz)
28	X2	O	Clock output (15 MHz)
29,30	—	—	Not used. (Open)
31	STB A	O	DATA receive LATCH output to IC508
32	REQUEST	O	Normally set to "L". The Pin No. ⑯~⑰ ports are output when "H".
33~36	—	—	Not used. (Open)

Pin No.	Pin Name	I/O	Description
37~44	—	I	Not used. (GND)
45	—	—	Not used. (Open)
46	DCLR	O	Normally set to "H". Grid is not displayed when "L". DCLR is used for AC outlet ON/OFF only.
47	SCLR	O	Normally set to "L". Segment is not displayed when "H". SCLR is used for AC outlet ON/OFF only.
48	LATCH	O	Data LATCH output to IC501~IC505
49	EA	I	Not used. (Pull-up)
50,51	—	I	Not used. (GND)
52	SCLK	O	Segment display clock output to IC502, IC503 and IC505 (segment drivers)
53	SDATA	O	Serial data output to IC502, IC503 and IC505 (segment drivers)
54	—	—	Not used. (GND)
55	DCLK	O	Grid display clock output to IC501 and IC504 (grid drivers)
56	DATA	O	Serial data output (approx. 10 msec sync pulse) to IC501 and IC504 (grid drivers)
57	—	—	Not used. (GND)
58	Vcc	—	Power supply terminal (+5 V)
59	Vref	—	Power supply terminal (+5 V)
60	A GND	—	Power supply terminal (GND)
61~64	—	—	Not used. (GND)

- IC508 Feature Controller (MC68H011E9-FU)

General controls such as FL display (IC506), IC109 control, spectrum analyzer input, and ON/OFF of mute, relay and LED, are conducted with the AU BUS data and key input from device controller (IC109).

Pin No.	Pin Name	I/O	Description
1	PA0	I	Specification select input (H5600 : L) (H6600 : H)
2~4	NC	—	Not used. (GND)
5	—	O	Not used. (Open)
6~12	LED A~G	O	LED output. Lights up when "H". Conducts dynamic light up at Pin No. ⑤ (LED SW).
13~16	Spectrum analyzer A~D	I	Spectrum analyzer data input (Analog)
17	VOL DATA	I	Volume (RV601) position detect input (Analog)
18	PE 6	I	Specification select input
19	KEY A	I	} Key input (Analog)
20	KEY B	I	
21	VRL	—	A/D converter (internal) power supply (GND)
22	VRH	—	A/D converter (internal) power supply (+5.6 V)
23, 24	Vss	—	Power supply terminal (GND)
25	MODE B	I	Mode select input (Pull-up fixed)
26	NC	—	Not used. (GND)
27	MODE A	I	Mode select input (GND fixed)
28	STR A	I	DATA receive LATCH input from IC506
29	E	O	Not used. (Open)
30	STR B	O	Data send LATCH input to IC506
31	EXTAL	I	Clock input (8 MHz)
32	NC	—	Not used. (Open)
33	XTAL	O	Clock output
34	PCO	I/O	Display command output to IC506
35	NC	—	Not used. (Open)
36~42	PC1~PC7	I/O	Display command output to IC506
43	RESET	I	Reset input. Resets when "L".
44	NC	—	Not used. (GND)
45	IRQ	I	Not used. (+5.6 V)


Pin No.	Pin Name	I/O	Description
46	XIRQ	I	AC power supply interrupt detect input. (Normally set to "H".)
47	RX	I	Serial data input from IC109
48	NC	—	Not Used. (Open)
49	Vss	—	Power supply terminal (GND)
50	TX	O	Serial data output to IC109
51	POWER	O	Power relay (RY901) ON/OFF output. Active when "H".
52	SPEAKER	O	Speaker relay (RY801, 802) ON/OFF output. Active when "H".
53	MUTE	O	Muting output. Mutes when "L".
54	HP	I	Headphones switch input. "L" when headphones are connected.
55	V _{DD}	—	Power supply terminal (+ 5.6 V)
56	VOL UP	O	UP signal output to volume motor (RV601)
57	VOL DOWN	O	DOWN signal output to volume motor (RV601)
58	—	—	Not used (Open)
59	SPASW A	O	LED dynamic display/spectrum analyzer select output (3.5 msec square wave)
60, 61	NC	—	Not used. (GND)
62	SPASW B	O	Spectrum analyzer select output (2 msec square wave)
63	REQUEST	I	Normally set to "L". The Pin No. ④, and ⑩~⑫ ports are input when "H".
64	—	I	Not used. (GND)

• Test Mode

A test mode is provided to conduct FL tube (FL501) lighting test without disassembling the unit.

Press and release the [POWER] button while pressing the [DISP] button during the power ON condition. Release the [DISP] button to enter the Test Mode.

The following three types of patterns will be displayed each time the [DISP] button is pressed during this condition.

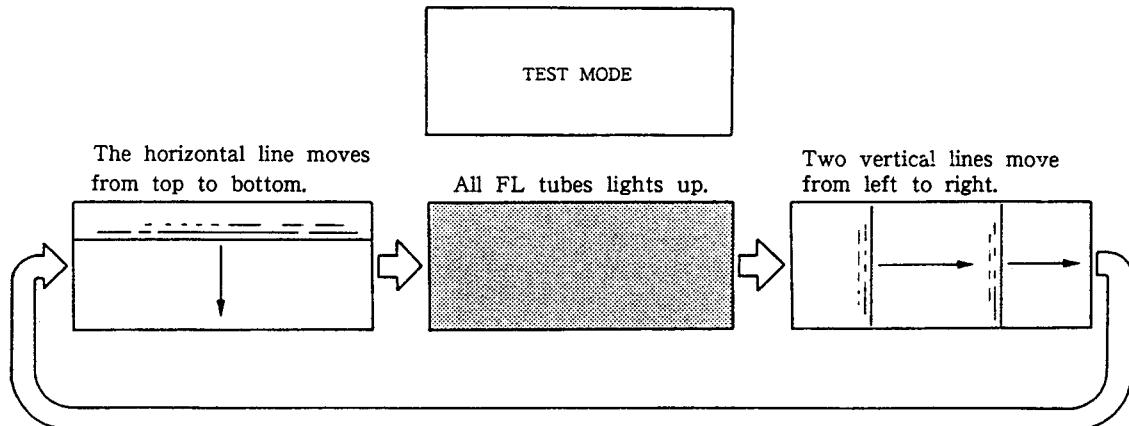

Other amplifier operations are identical to those during normal conditions (i.e. non-test mode condition). To exit the Test Mode, switch the power ON again.

• IC331 Pulse D/A Converter (CXD2561M)

The converter is a small, high-performance 1 bit pulse D/A converter that provides 4 asymmetrical PWM wave outputs in each ch of L/R.



Pin No.	Pin Name	I/O	Description
1	DV _{DD}	—	Digital power supply
2	TEST	I	Test terminal. Normally fixed at "L".
3	INIT	I	Again synchronized at the buildup edge of the signal.
4	LRCKI	I	LRCK input
5	DRI	I	Rch data input
6	DLI	I	Lch data input
7	BCKI	I	BCK input
8	DVss	—	Digital GND
9	512Fs	O	512Fs output
10	XVss	—	Clock GND
11	XIN	I	X'tal oscillator input terminal (512Fs)
12	XOUT	O	X'tal oscillator output terminal
13	XV _{DD}	—	Clock power supply
14	VSUB	—	Substrate. Connected to GND.
15	AV _{DDR}	—	Analog power supply
16	R1 (+)	O	Rch PLM output 1 (normal phase)
17	AVssR	—	Analog GND
18	R1 (-)	O	Rch PLM output 1 (reverse phase)
19	R2 (+)	O	Rch PLM output 2 (normal phase)
20	R2 (-)	O	Rch PLM output 2 (reverse phase)
21	AV _{DD}	—	Analog power supply
22	AVss	—	Analog GND
23	L2 (-)	O	Lch PLM output 2 (reverse phase)
24	L2 (+)	O	Lch PLM output 2 (normal phase)
25	L1 (-)	O	Lch PLM output 1 (reverse phase)
26	AVssL	—	Analog GND
27	L1 (+)	O	Lch PLM output 1 (normal phase)
28	AV _{DDL}	—	Analog power supply

• IC332 Digital Filter (CXD2560M)


The filter is a digital audio 8x oversampling digital filter with built-in L/R 2ch filter, noise shaping attenuator, softmuting deemphasis, etc.

Pin No.	Pin Name	I/O	Description
1	Vss	—	Power terminal (GND)
2	SYSM	I	System mute input. Effective upon "H"
3	ATT	I	ATT data input in CTL "L." EMP input upon CTL "H."
4	SHIFT	I	Shift clock input upon CTL "L." FS32 input upon CTL "H."
5	LATCH	I	Latch clock input upon CTL "L." FS48 input upon CTL "H."
6	CTL	I	Pull-down in the IC. Direct input mode upon "H." Serial transfer mode upon "L."
7	INIT	I	Synchronized again at the buildup edge of the signal.
8	BCKI	I	BCK input
9	DATAI	I	Data input
10	LACKI	I	LRCK input
11	TEST	I	Test terminal. Fixed at "L" during normal use.
12	Vss	—	Power terminal (GND)
13	128Fs	O	128Fs clock output
14	INVI	I	Inverter input
15	INVO	O	Inverter output
16	INVO2	O	Inverter output
17	MCLK	I	Master clock input (f=512Fs)
18	V _{DD}	—	Power terminal (+5 V)
19	BCKO	O	BCK output
20	DL	O	Lch data output.
21	DR	O	Rch data output
22	LRCKO	O	LRCK output
23	FLGL	O	Lch φ mute flag output
24	FLGR	O	Rch φ mute flag output

2-2. CIRCUIT BOARDS LOCATION

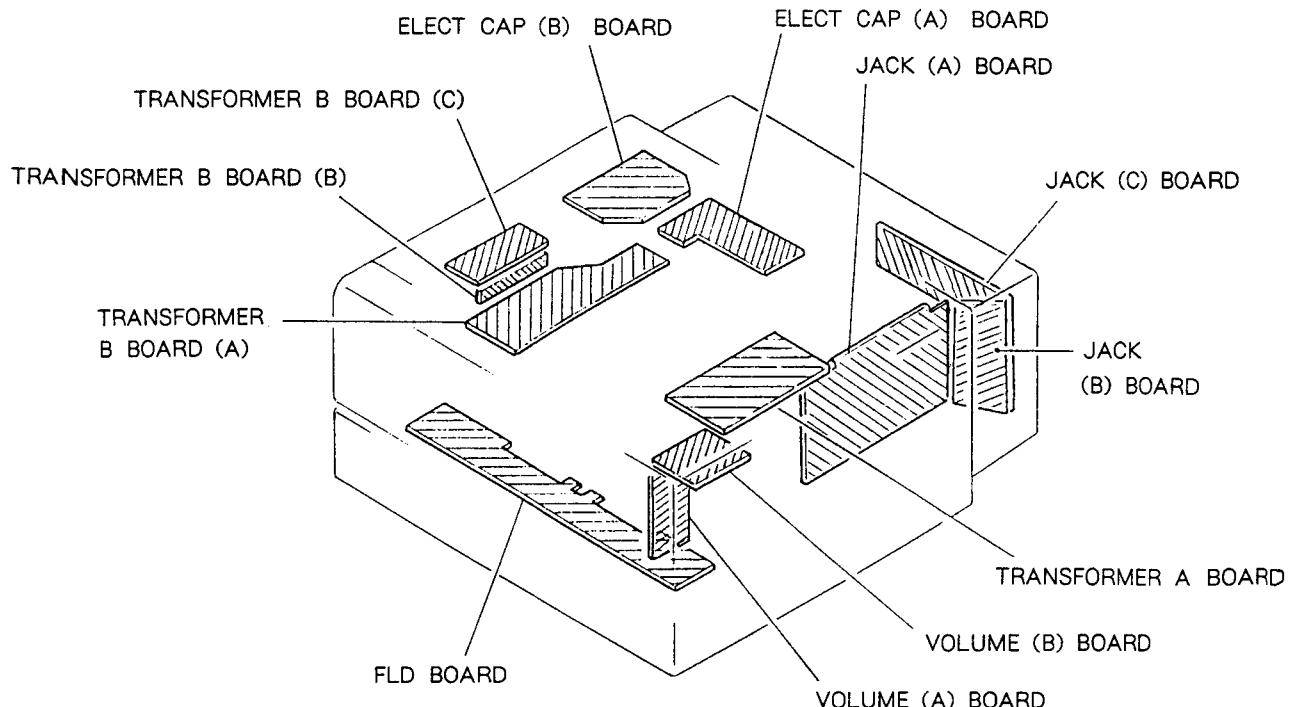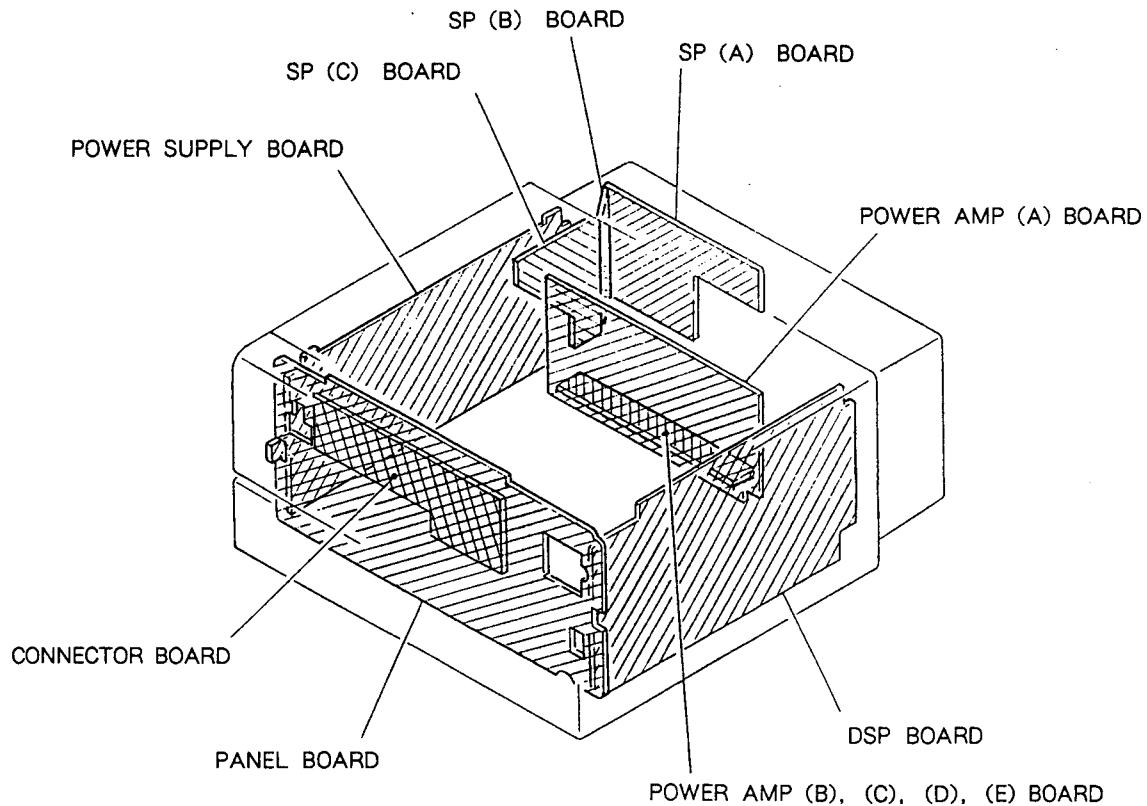

2-3. SEMICONDUCTOR LEAD LAYOUTS

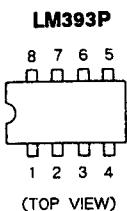**LM3875-2**

1 + IN
2 - IN
3 - VEE
4 OUT
5 VCC

DTC114ES

2SA1134

2SC2603-EF

RBV-602-01

LC7822

(TOP VIEW)

MSC7162

M51953BL

12345

μ PC1237HA

M5218AL

M5230L-A

12345678

SN75521
SN75531

44 34
1 11 33
12 22

CXD1160AQ

64 41
65 40
60 25
1 24

MARKING SIDE VIEW

2SC1841-PAFAEA

E B C

2SC3398
2SC3624A-15

C E
B

1SS226

3 1
2

2SA1175-HFE

LETTER SIDE

E C B

SEL2410E-D

Long Short
Anode Cathode

GP1F34R
GP1F34T

1	VCC	IN
2	GND	VCC
3	OUT	GND

2SB1013-4
2SD1387-3
2SD1616A-K

E C B

HZS6B1L

HZS7B2L

HZS11B3L

1SS120

11ES2


Cathode
Anode

www.manualscenter.com


- 17 -










2~4. IC BLOCK DIAGRAMS

IC331 CXD2561


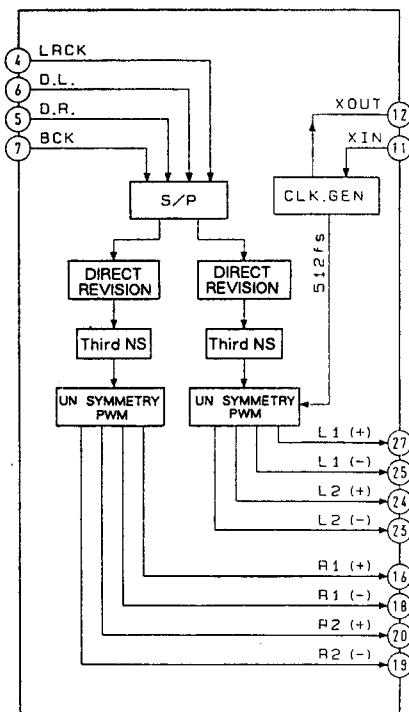


IC332 CXD2560M


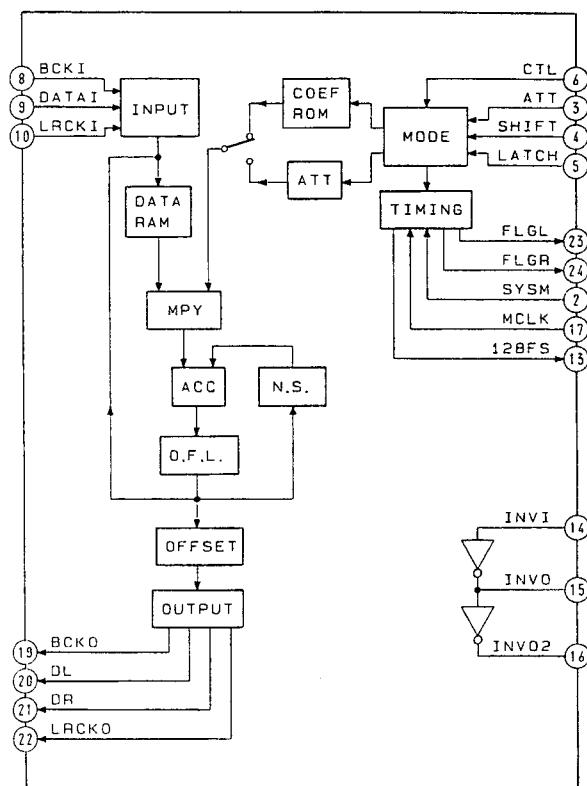


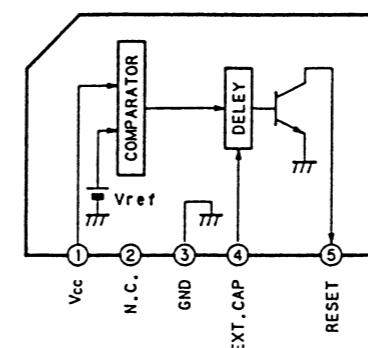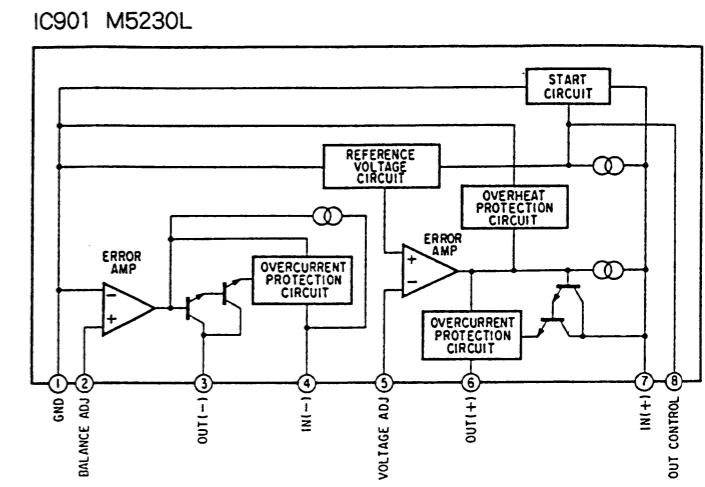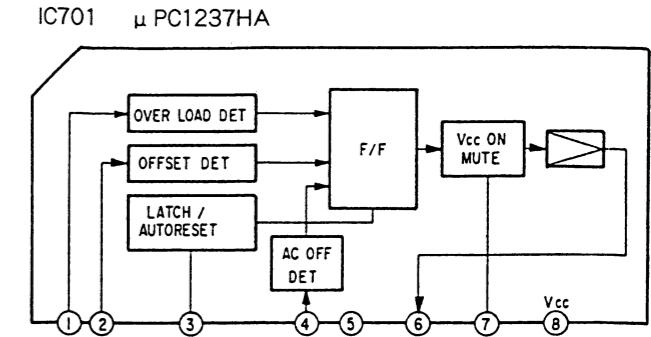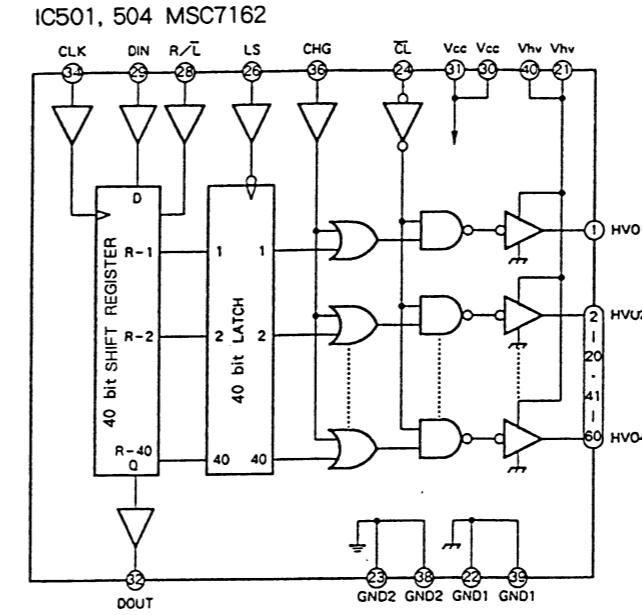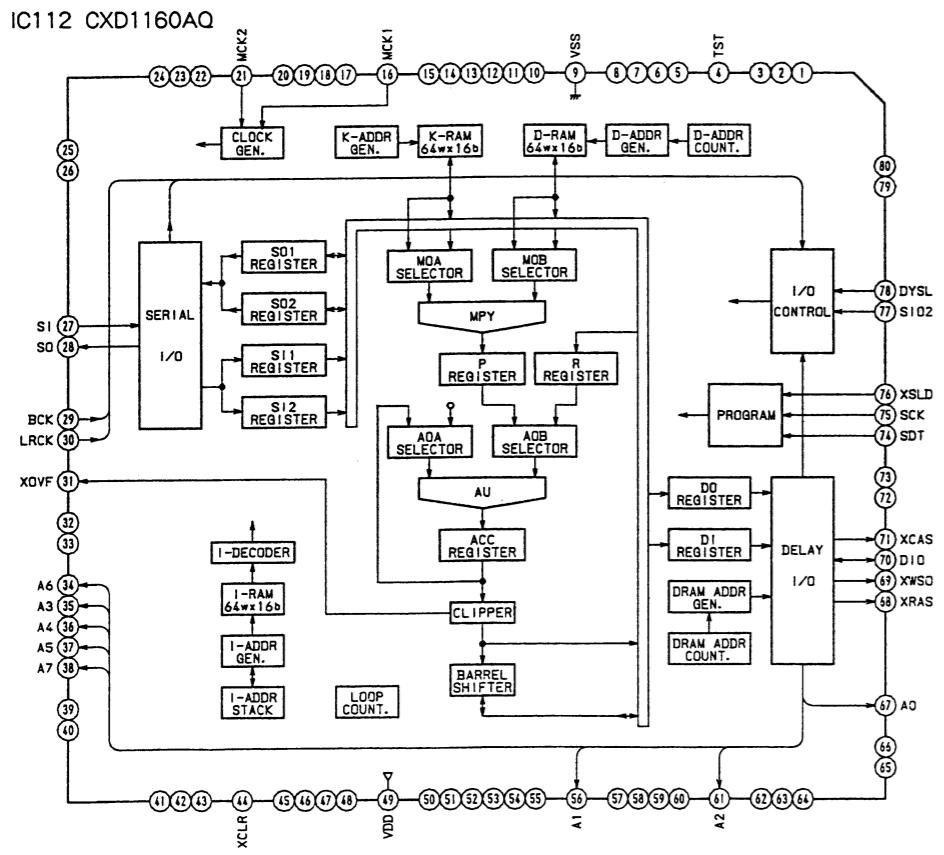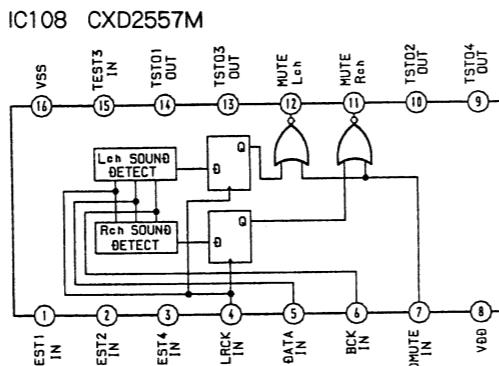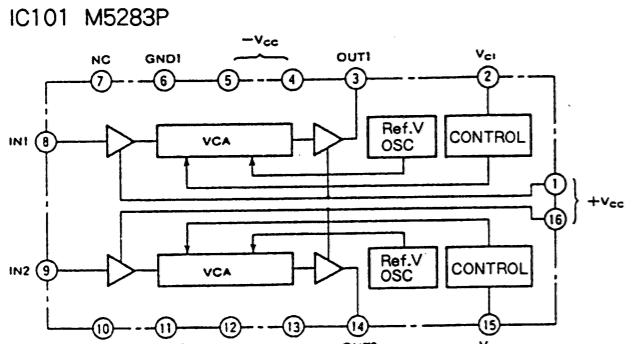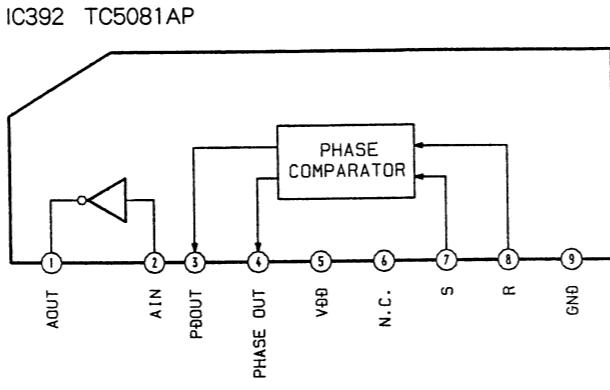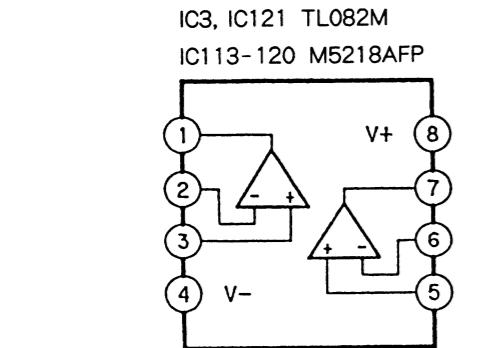


www.manualscenter.com

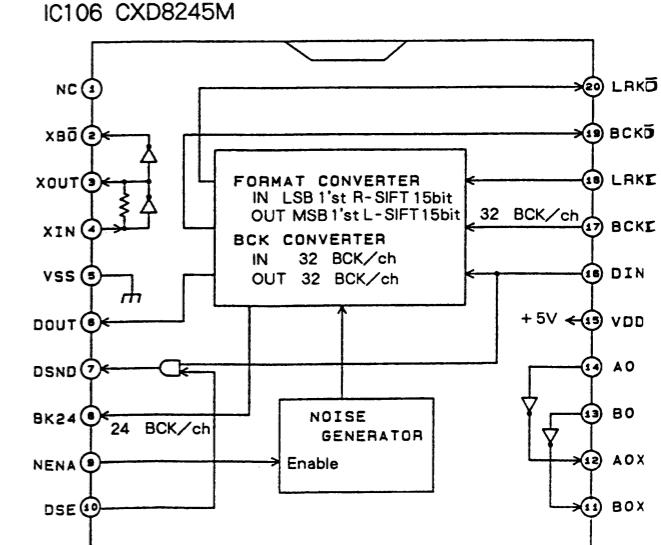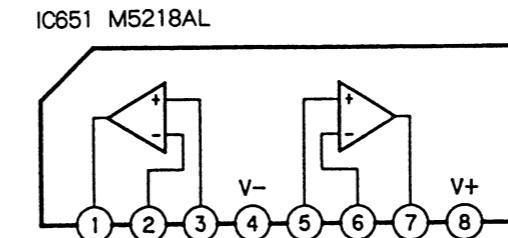

2-5. BLOCK DIAGRAM

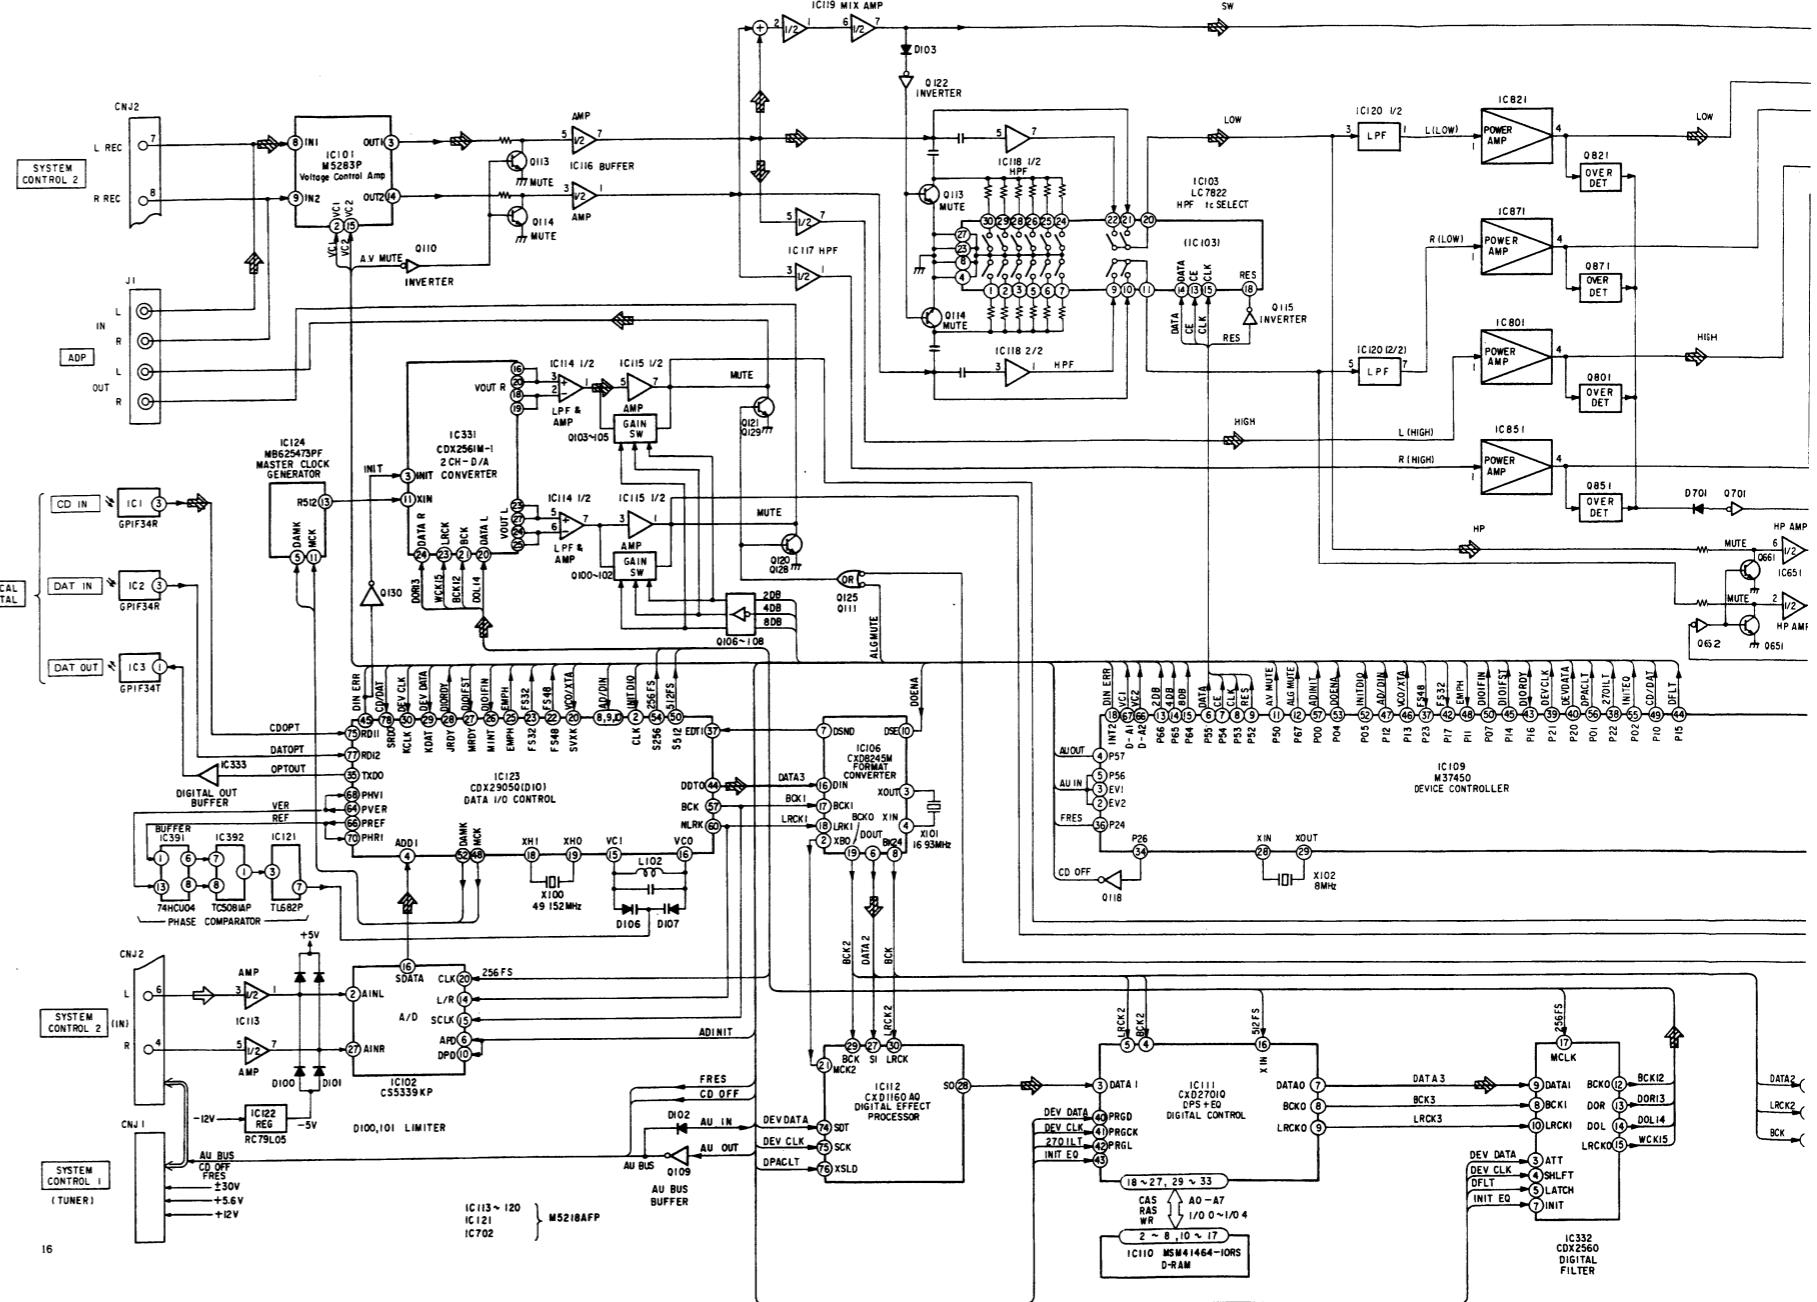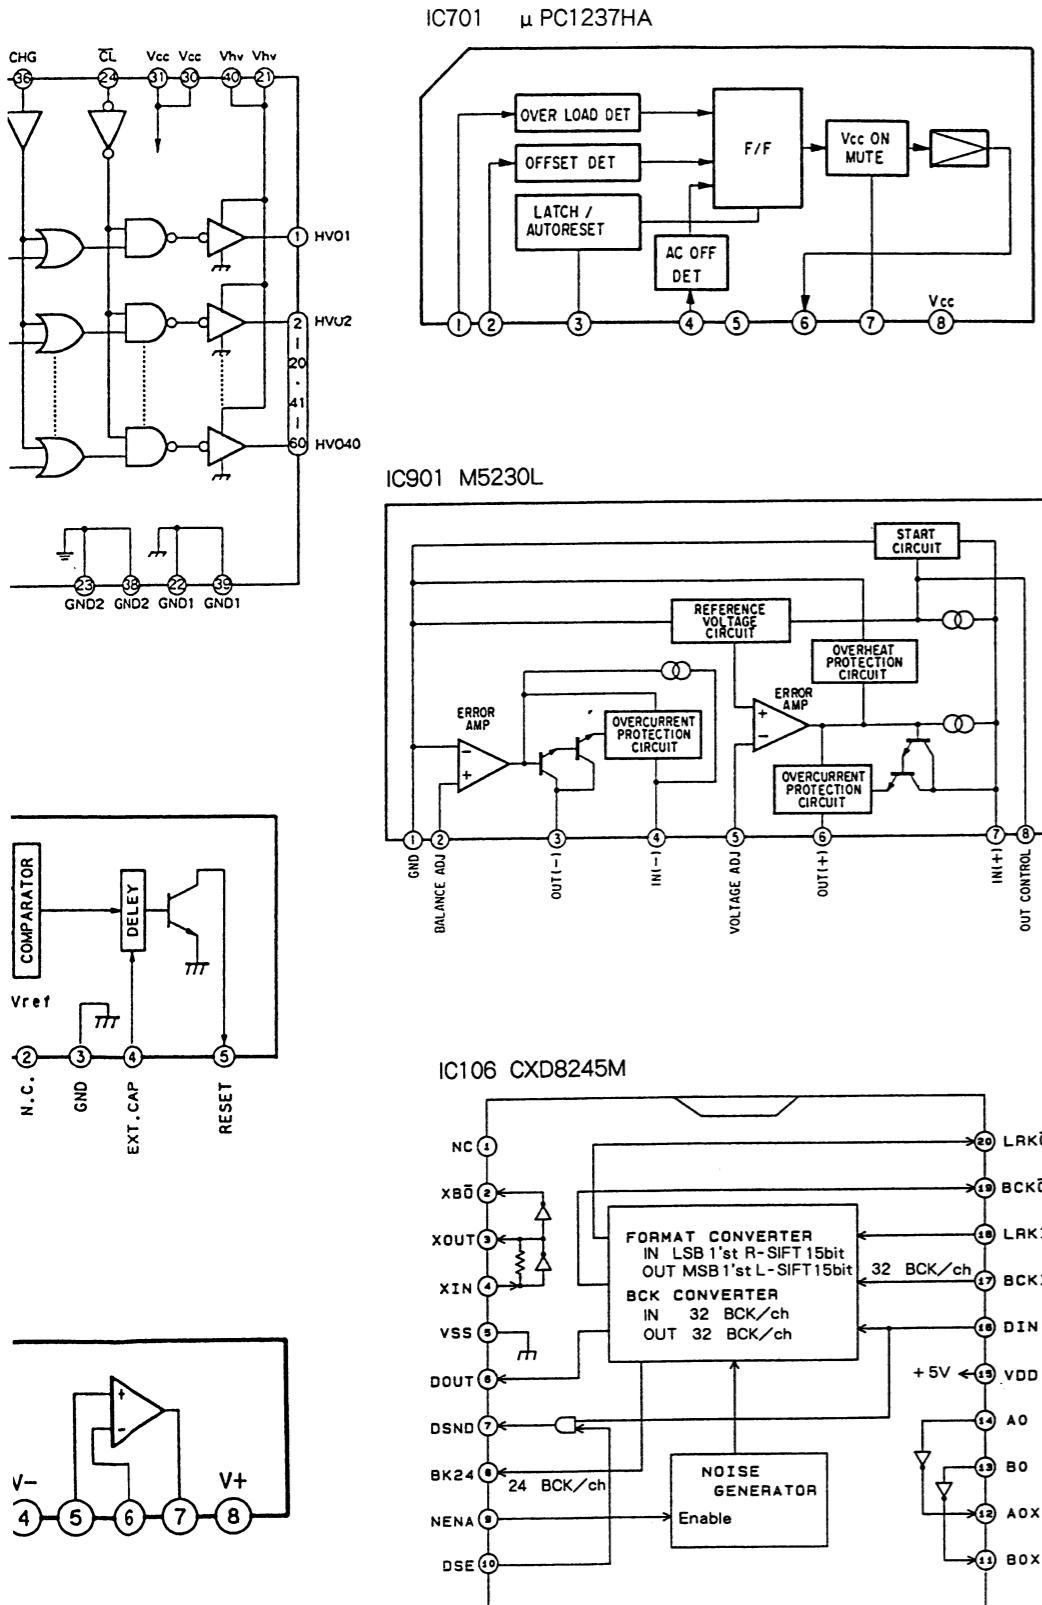

www.manualscenter.com

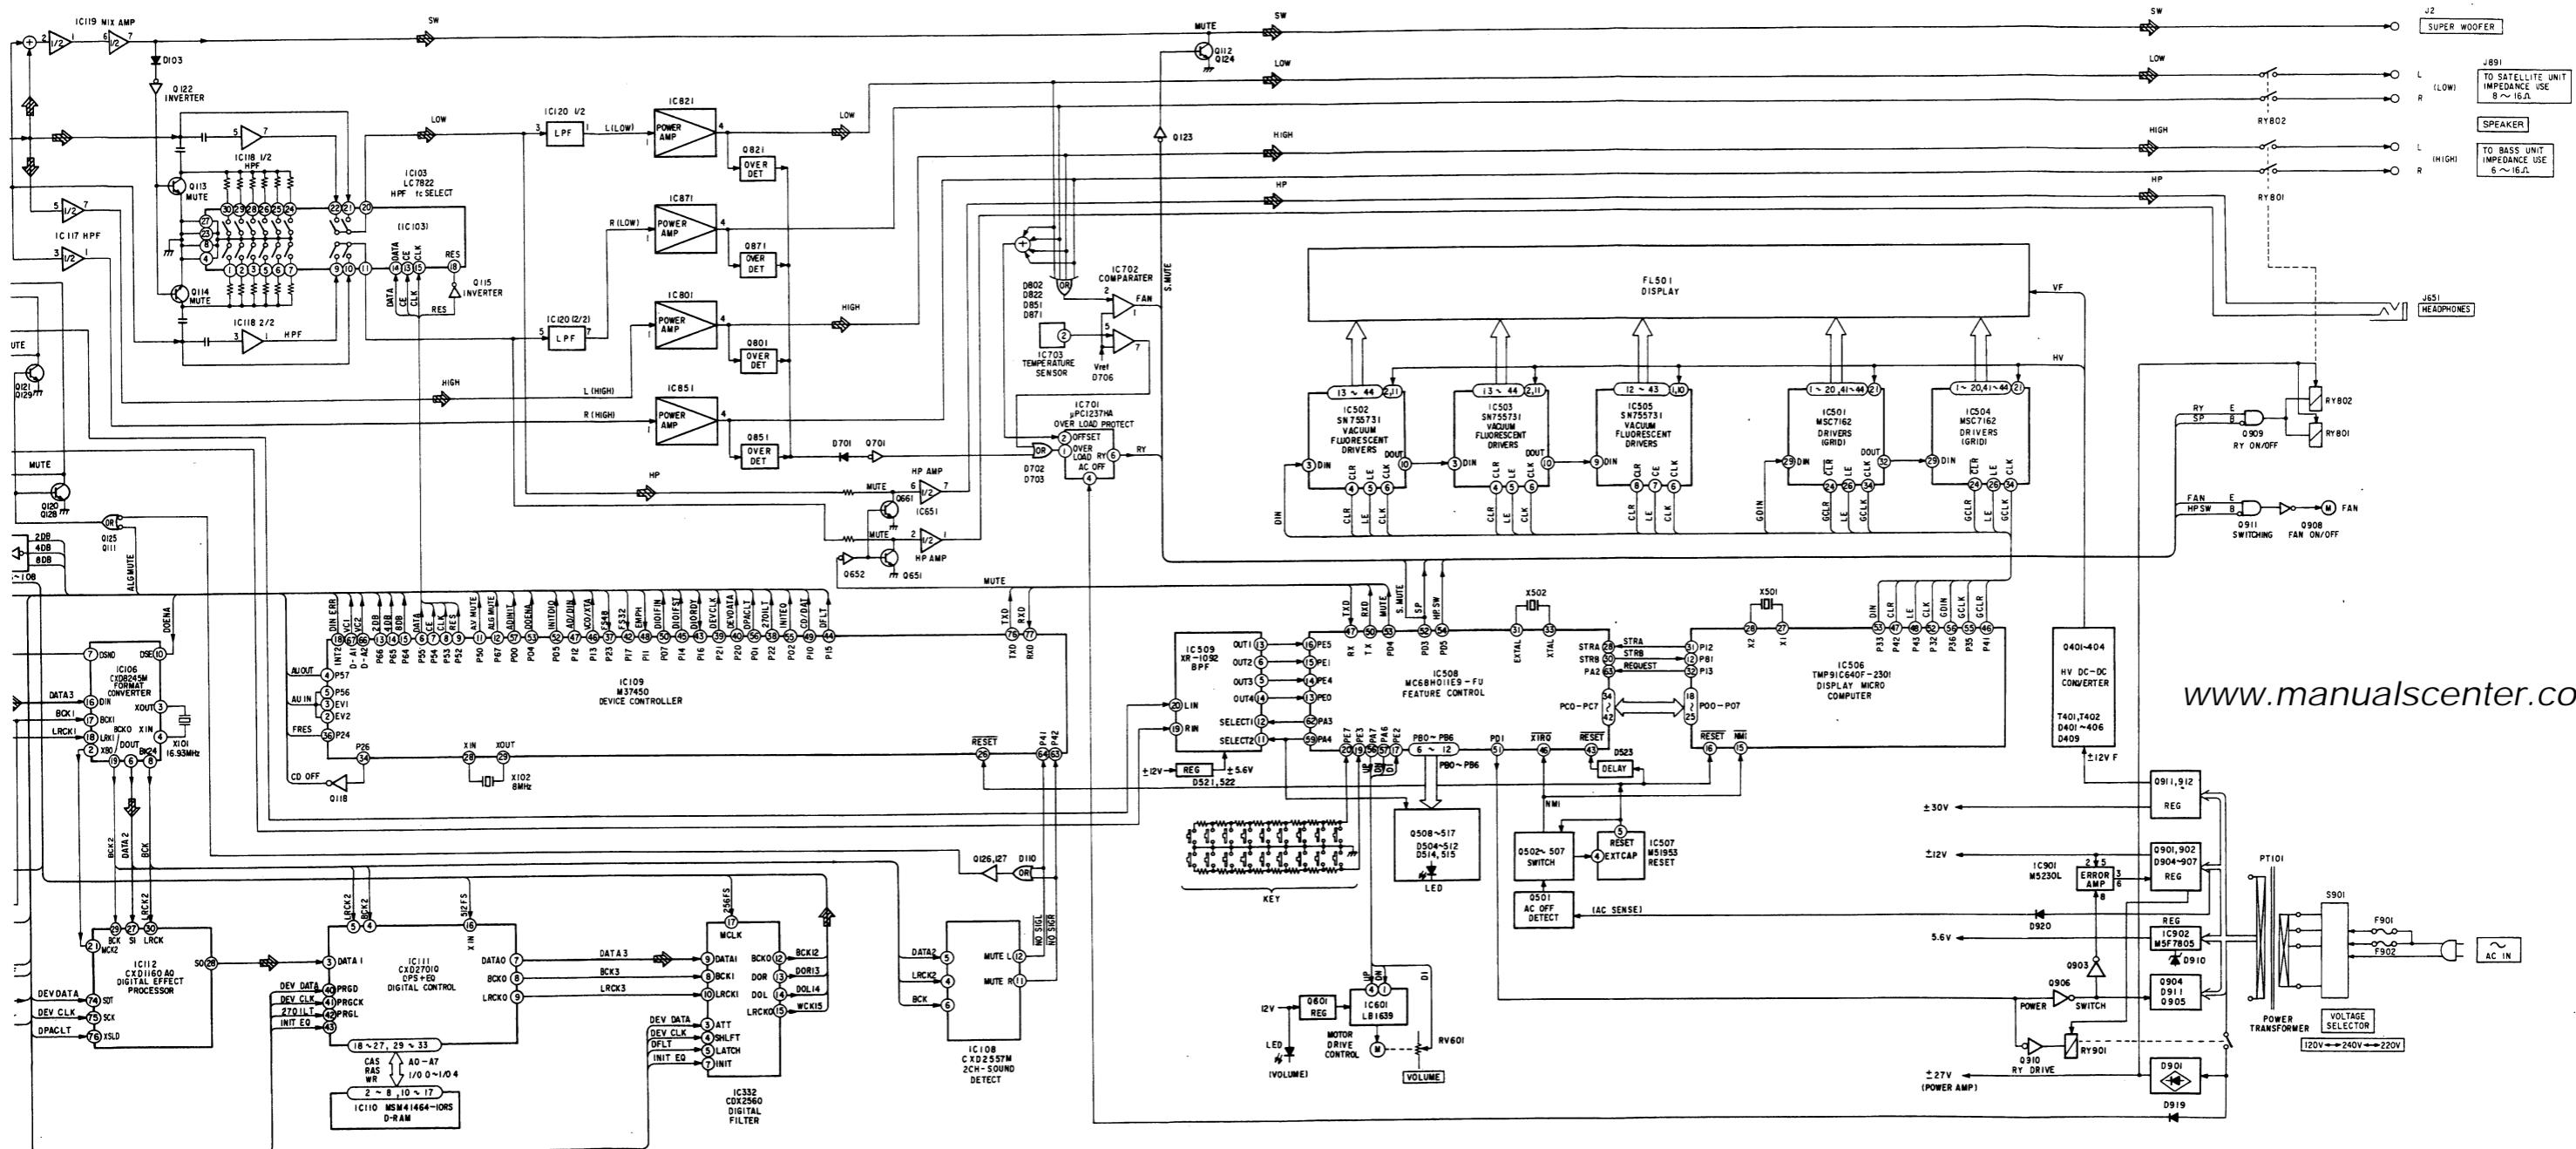


www.manualscenter.com

2-6. PRINTED WIRING BOARDS - JACK, POWER SUPPLY SECTION - • See page 16 to 17 for Circuit Boards Location and Semiconductor Lead Layouts.

• Semiconductor Location

Ref. No.	Location	Ref. No.	Location
D401	J-3	Q403	J-4
D402	J-3	Q404	J-4
D403	J-3	Q651	D-31
D404	J-4	Q652	D-31
D405	J-4	Q661	D-31
D406	J-6	Q701	H-22
D409	J-7	Q801	I-20
D701	H-22	Q821	J-19
D702	H-22	Q851	I-23
D703	H-23	Q871	J-24
D704	I-21	Q901	E-30
D705	I-22	Q902	E-29
D706	I-22	Q903	D-30
D801	J-21	Q904	B-30
D802	I-21	Q905	B-31
D821	J-20	Q906	C-31
D822	I-20	Q907	G-7
D851	J-22	Q908	B-27
D852	I-21	Q909	C-25
D871	J-23	Q910	C-28
D872	I-20	Q911	H-20
D891	D-24	Q911	B-26
D892	C-24	Q912	G-10
D901	C-26		
D902	C-28		
D903			
D904	B-29		
D905	C-28		
D907	C-28		
D908	B-29		
D909	B-29		
D910	B-31		
D911	B-31		
D912	G-8		
D913	G-8		
D914	G-8		
D915	H-8		
D916	H-8		
D917	H-7		
D918	H-7		
D919	B-25		
D920	B-31		
D921	H-11		
D922	H-11		
D923	G-11		
D924	G-11		
IC1	C-2		
IC2	E-2		
IC3	D-2		
IC651	C-31		
IC701	H-22		
IC702	J-22		
IC703	I-22		
IC801	K-21		
IC821	K-19		
IC851	K-22		
IC871	K-24		
IC901	D-29		
IC902	B-31		
Q401	J-9		
Q402	J-10		

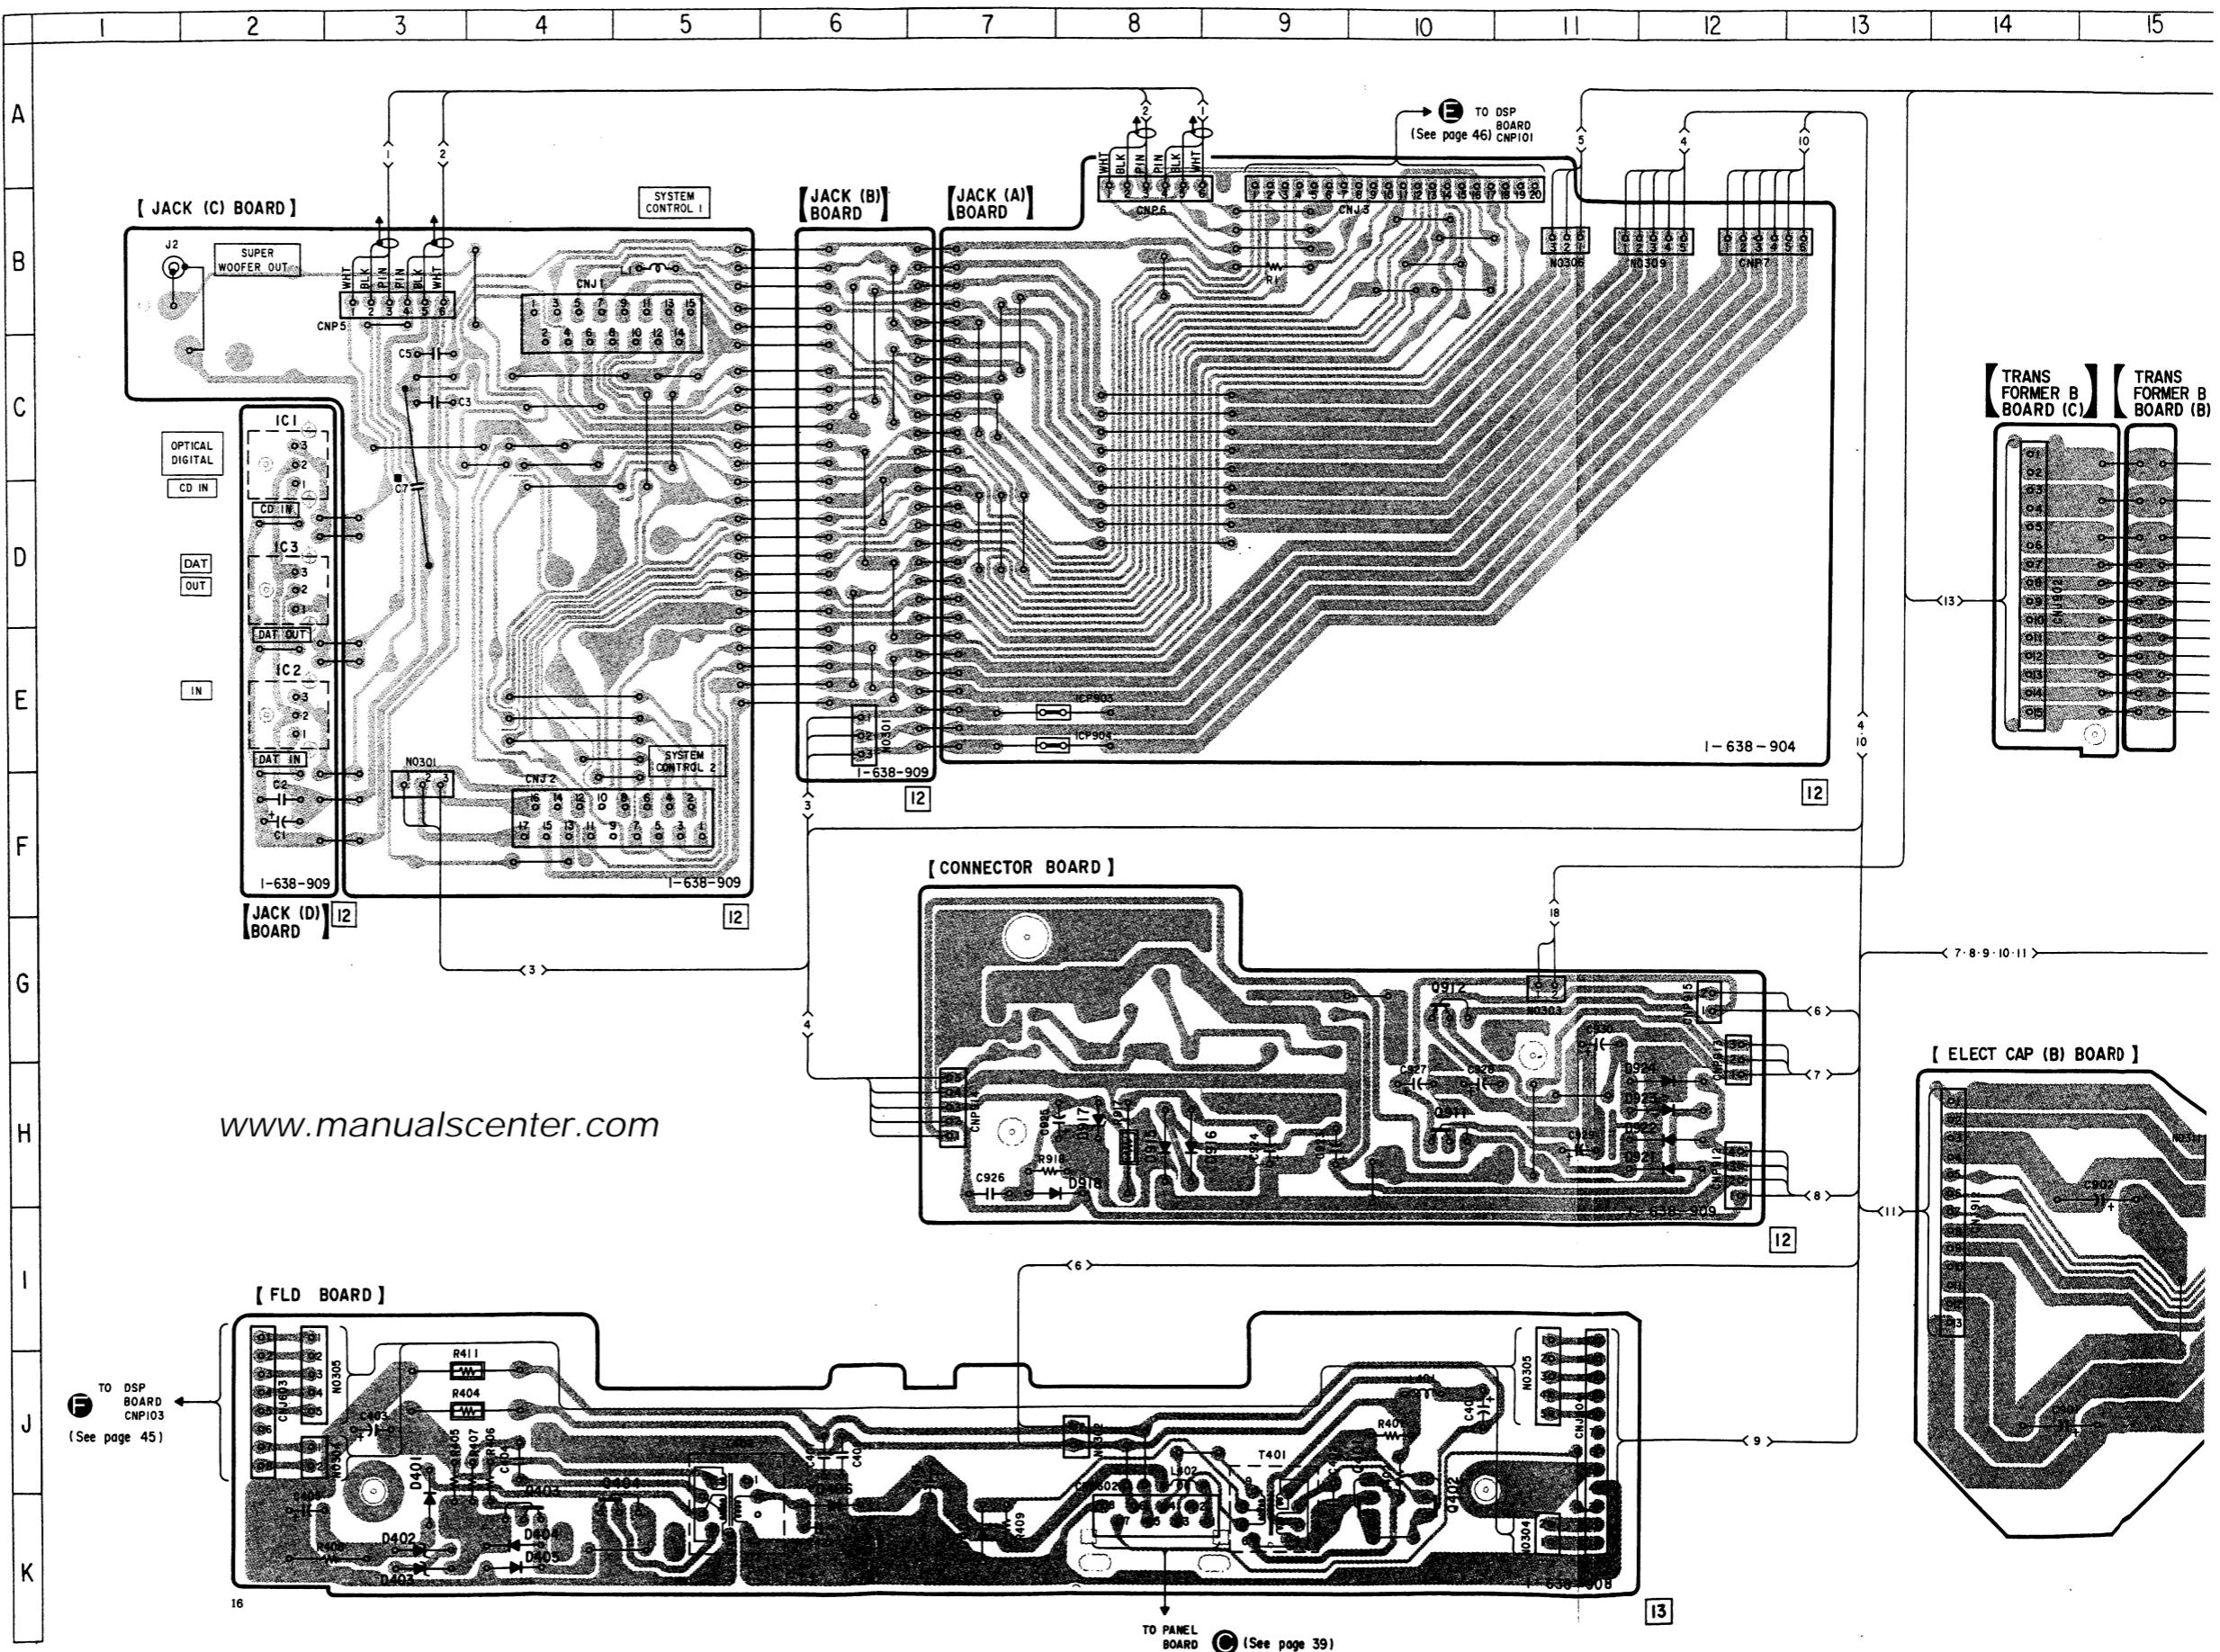


www.manualscenter.com


Note on Mounting Diagram :

- : Parts extracted from the component side.



11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29

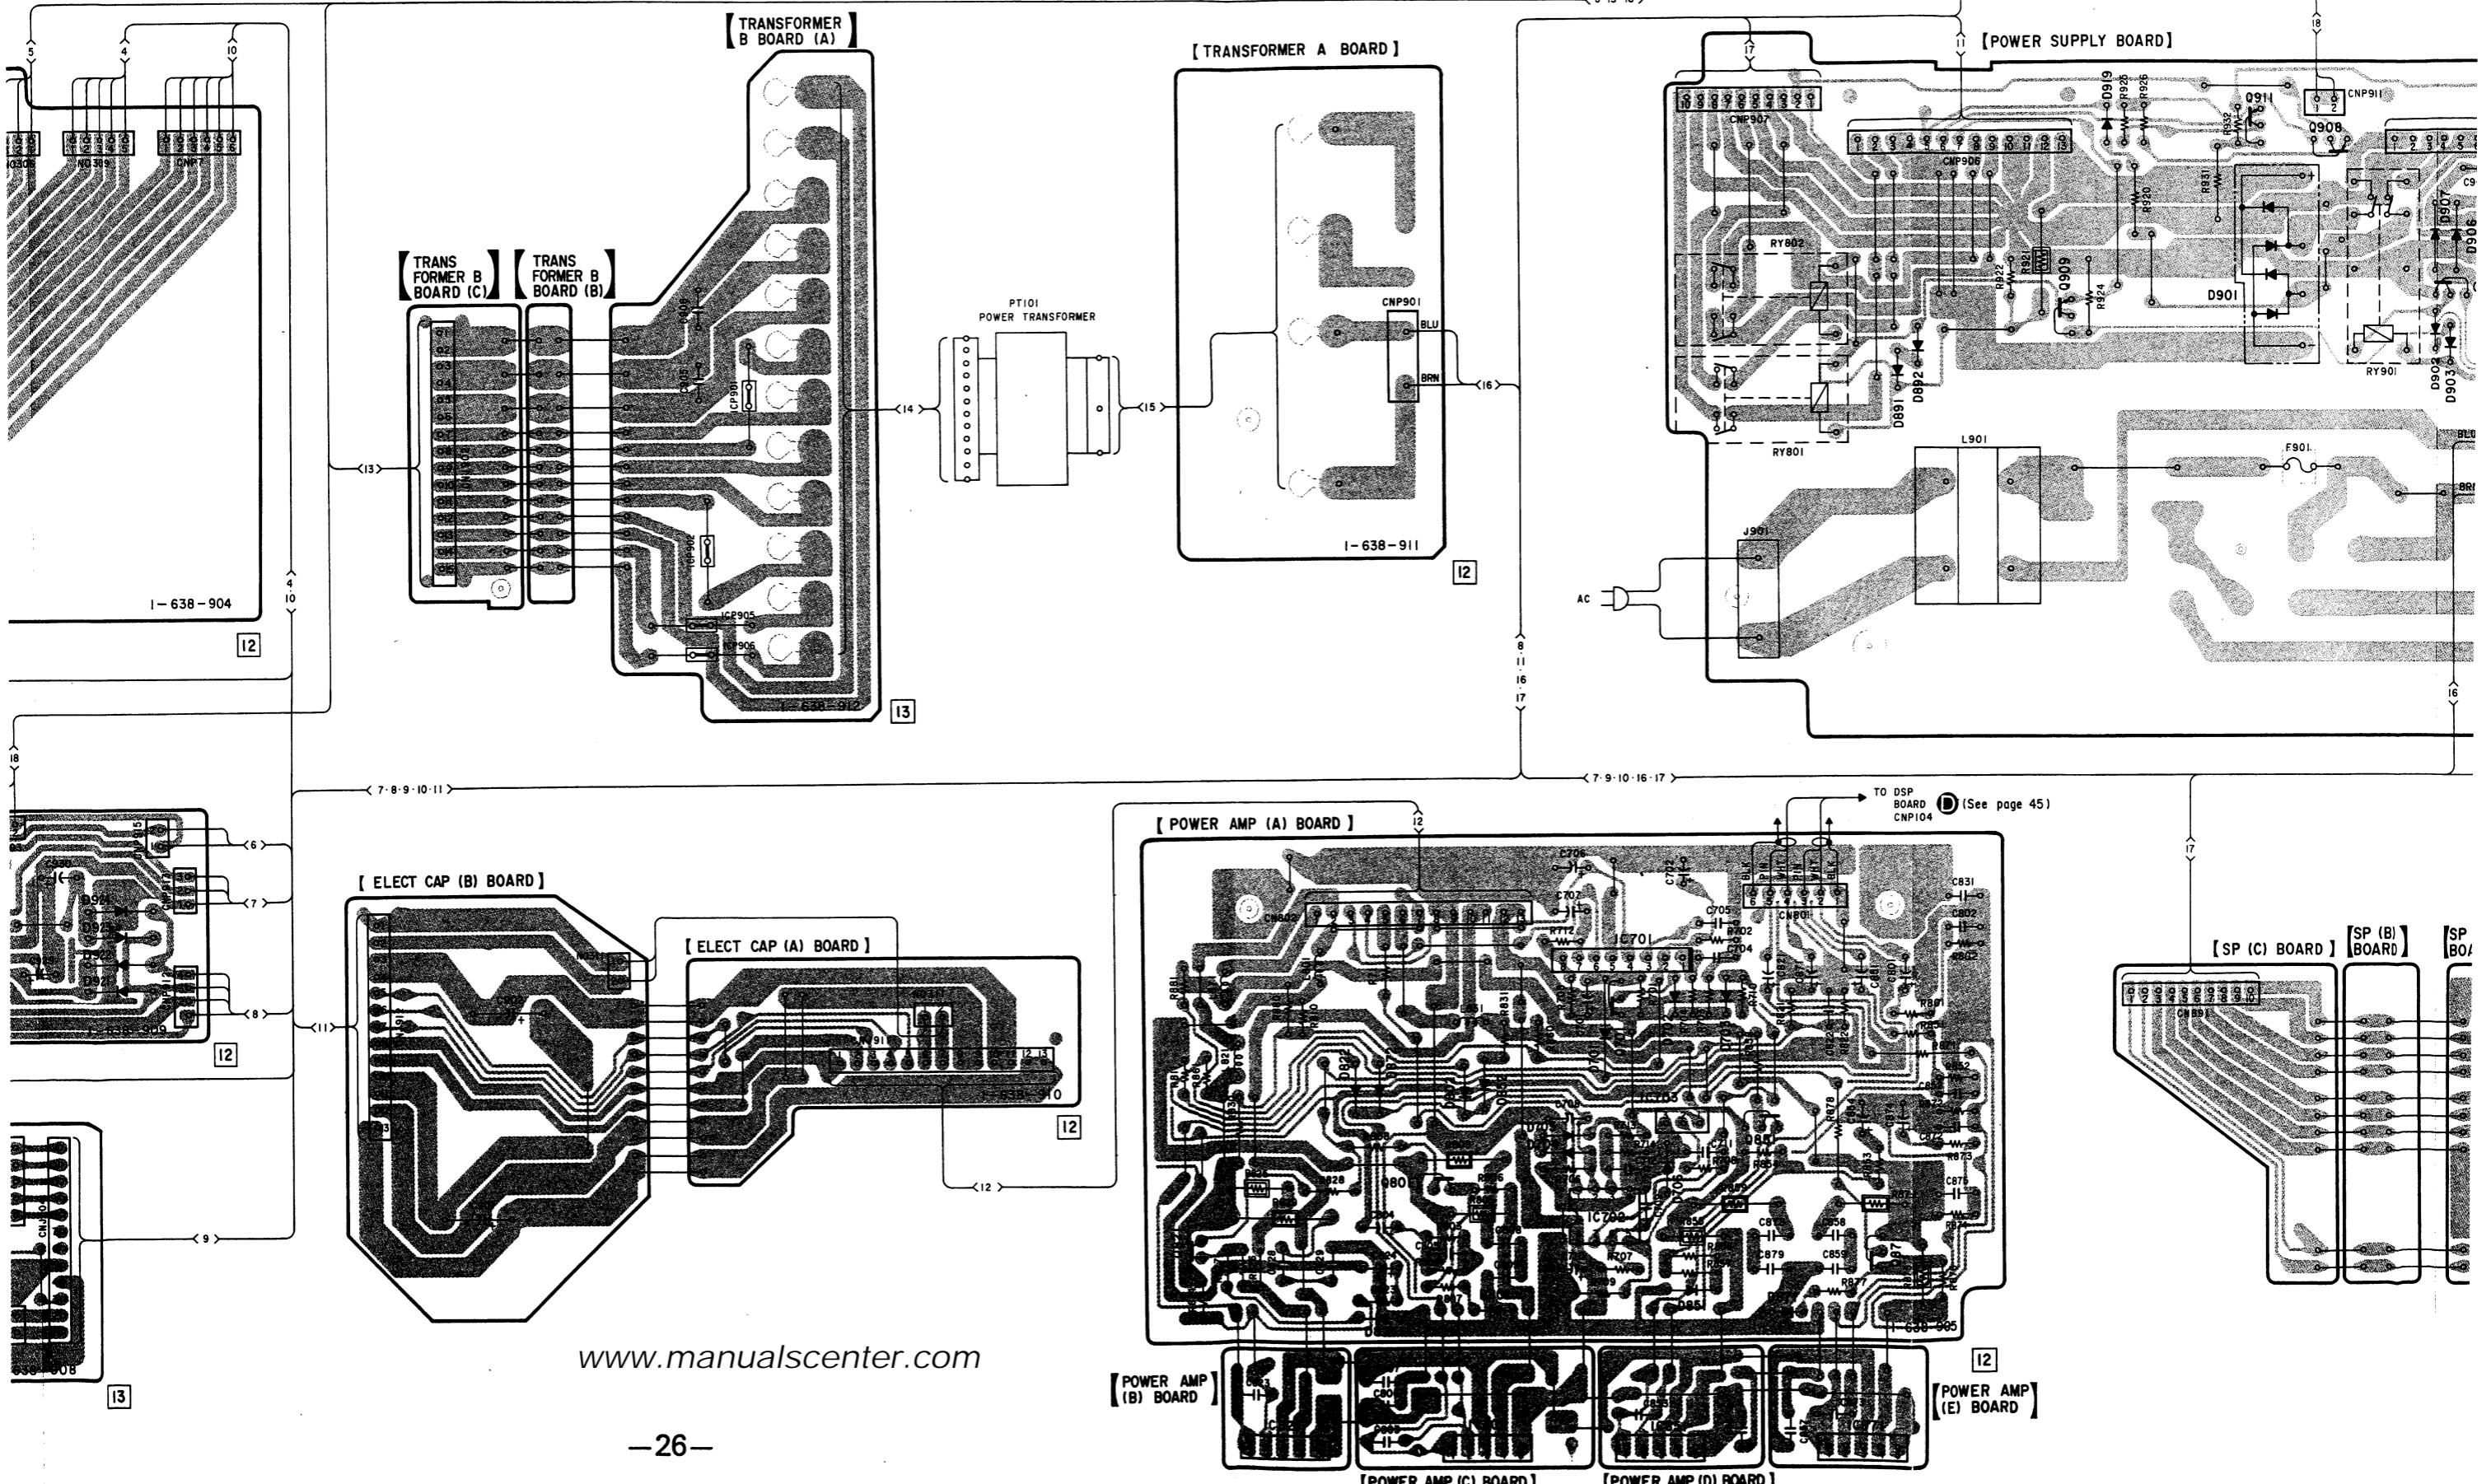

21	22	23	24	25	26	27	28	29	30	31	32	33	34	35
----	----	----	----	----	----	----	----	----	----	----	----	----	----	----

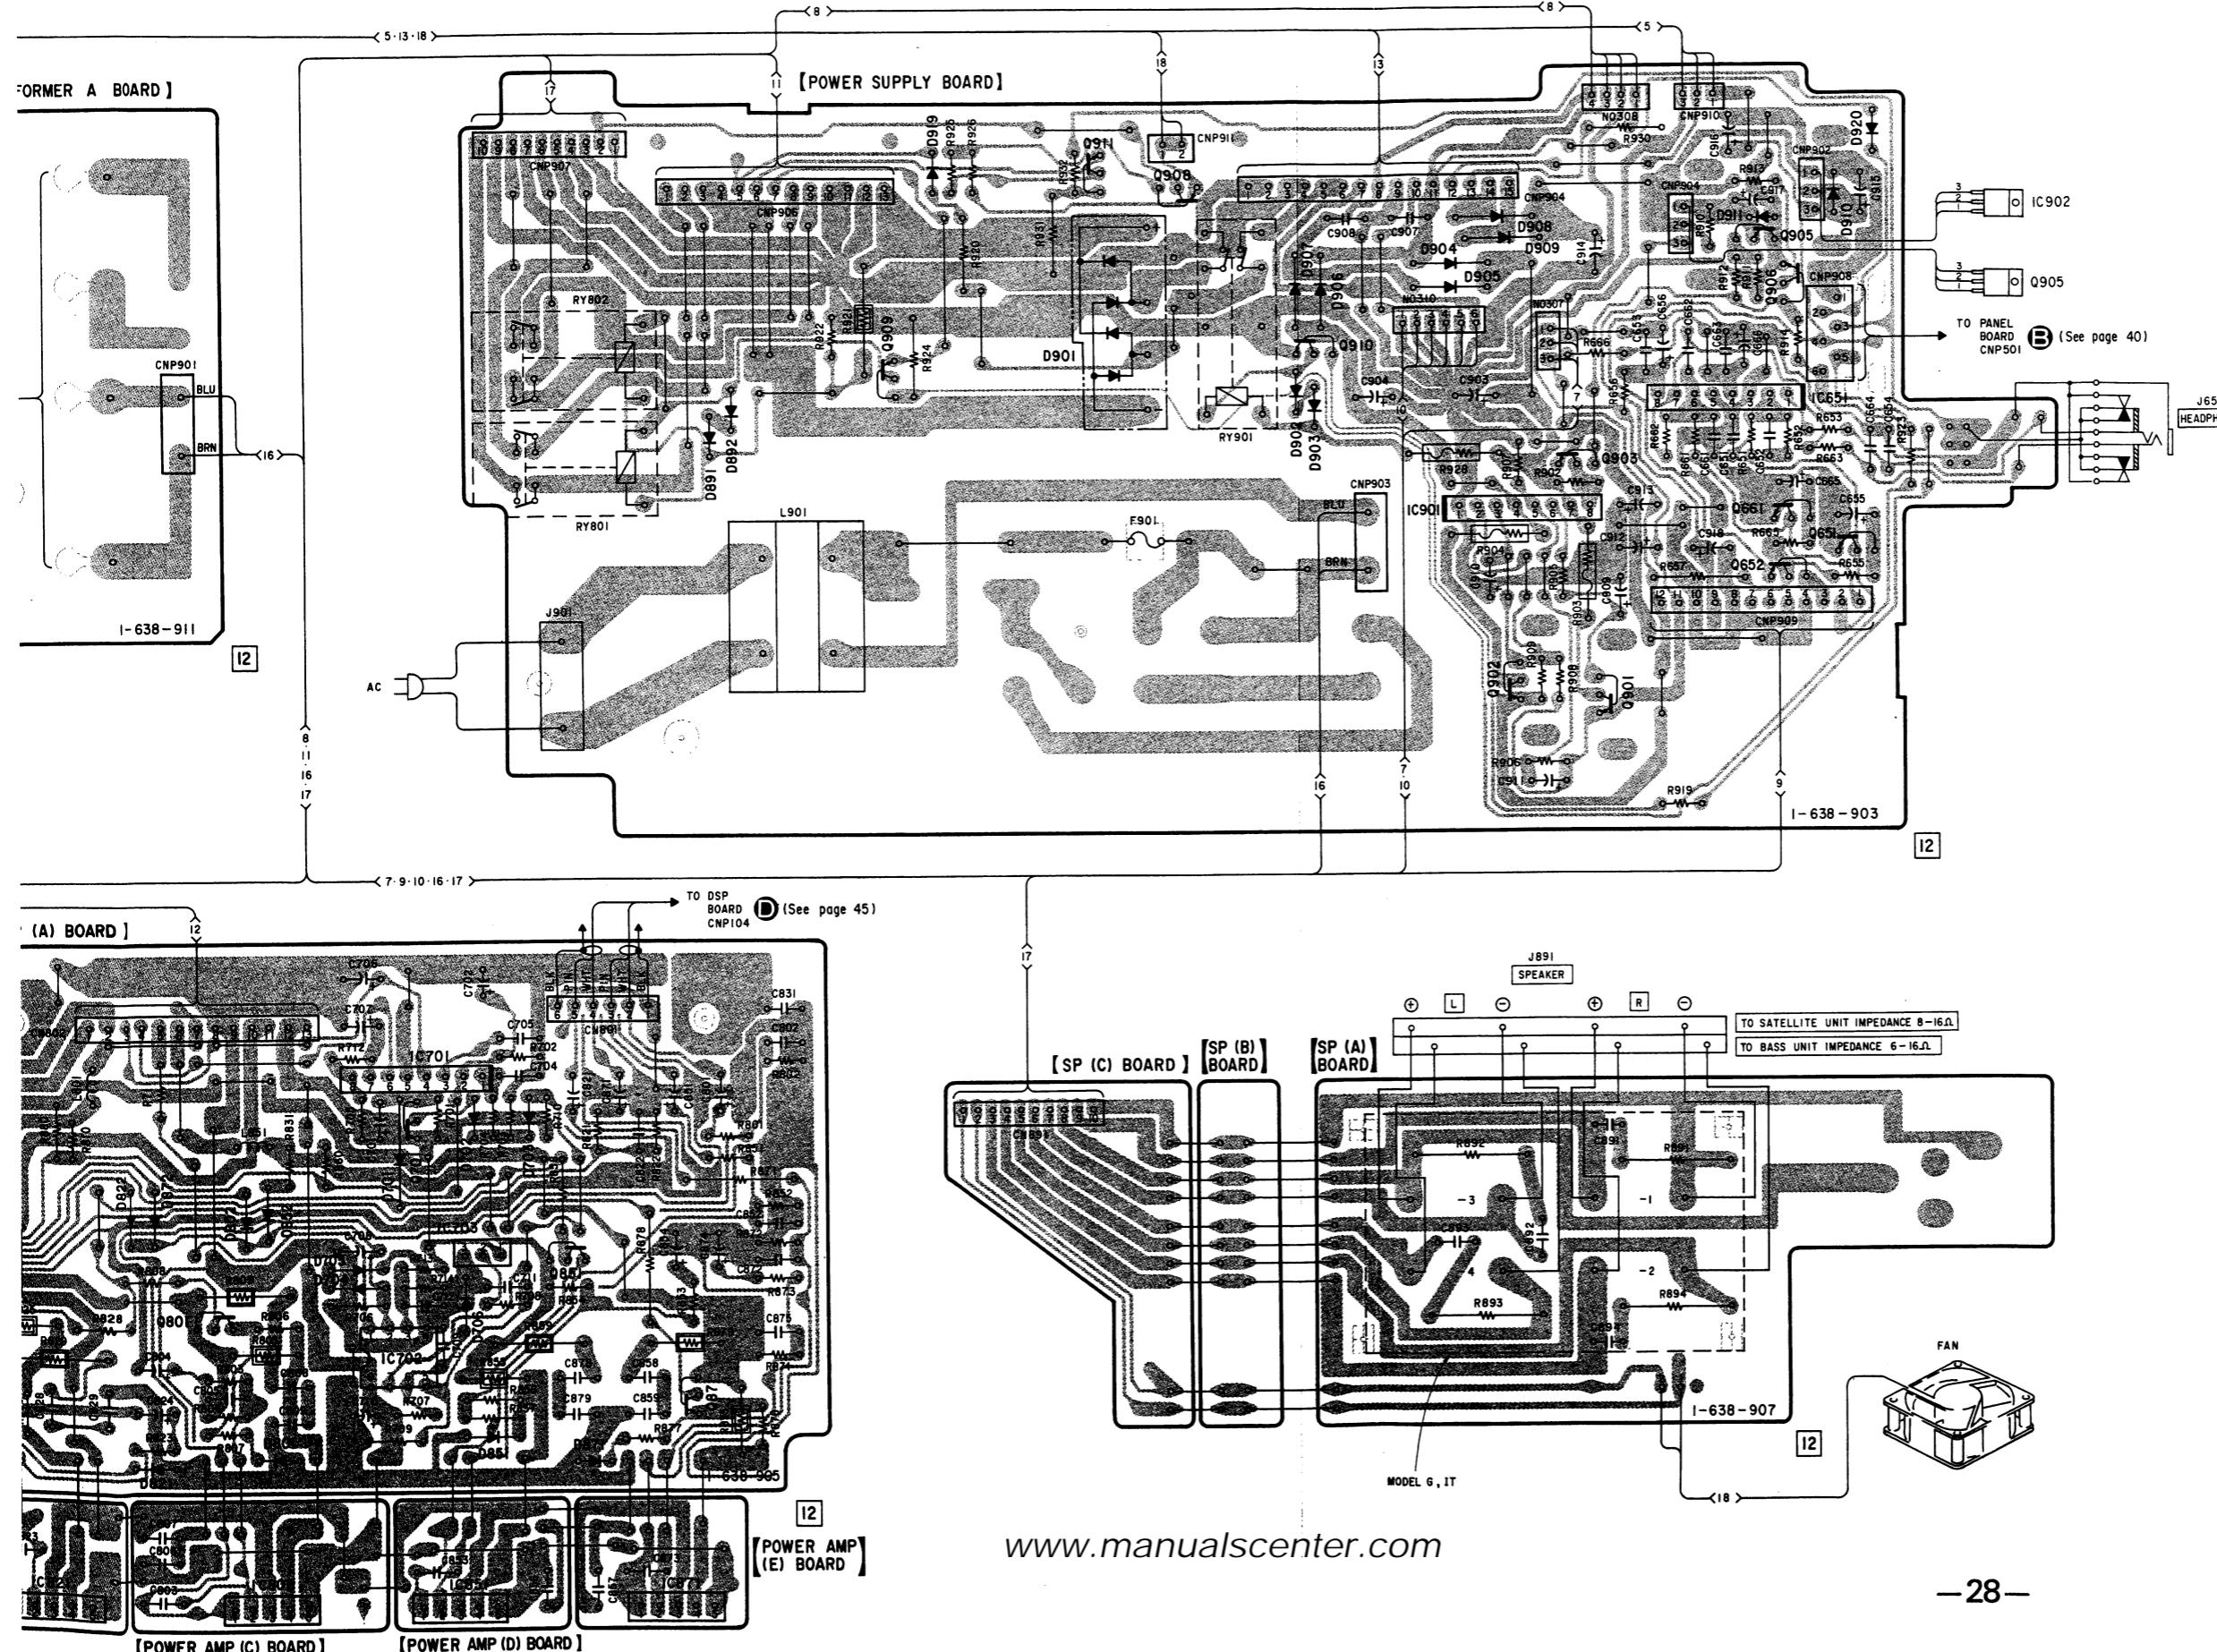


1 2 3 4 5 6

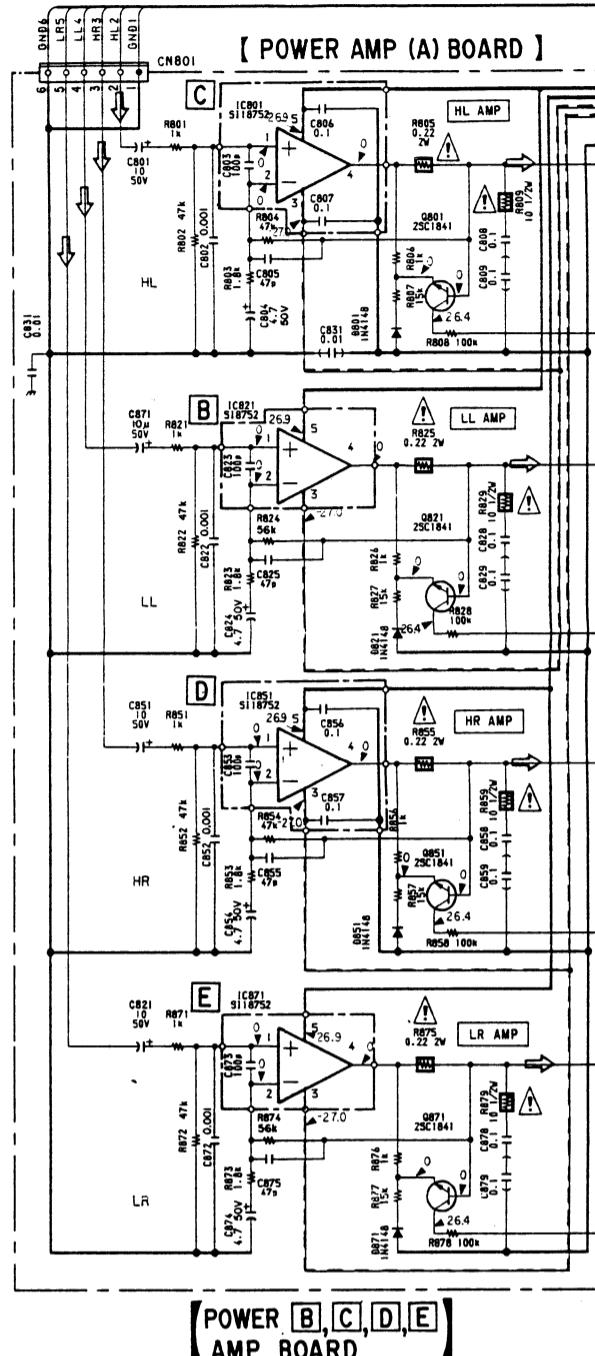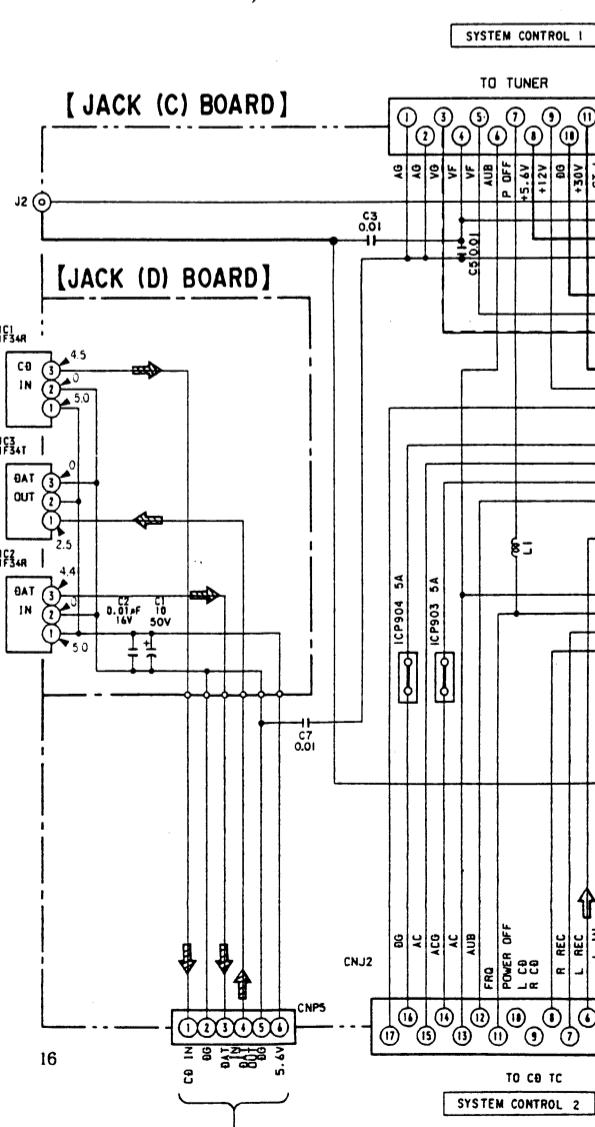A
B
C
D
E
F
G
H
I
J
K
L
M
N
O**[POWER B, C, D, E]
AMP BOARD****Note on Schematic Diagram :**




- All capacitors are in μF unless otherwise noted. pF: $\mu\mu\text{F}$ 50V or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and $\frac{1}{4}$ W or less unless otherwise specified.
- : nonflammable resistor.
- : fusible resistor.


The components identified by mark Δ or dotted line with mark Δ are critical for safety.
Replace only with part number specified.


- : B + Line.
 - : B - Line.
 - Voltage and waveforms are dc with respect to ground under no-signal conditions.
 - no mark : CD, VIDEO 1
 - Voltages are taken with a VOM (input impedance 10 M Ω).
 - Waveforms are taken with a oscilloscope.
 - Circled numbers refer to waveforms.
 - Signal path.
- : sound signal
 : CD
 : digital out

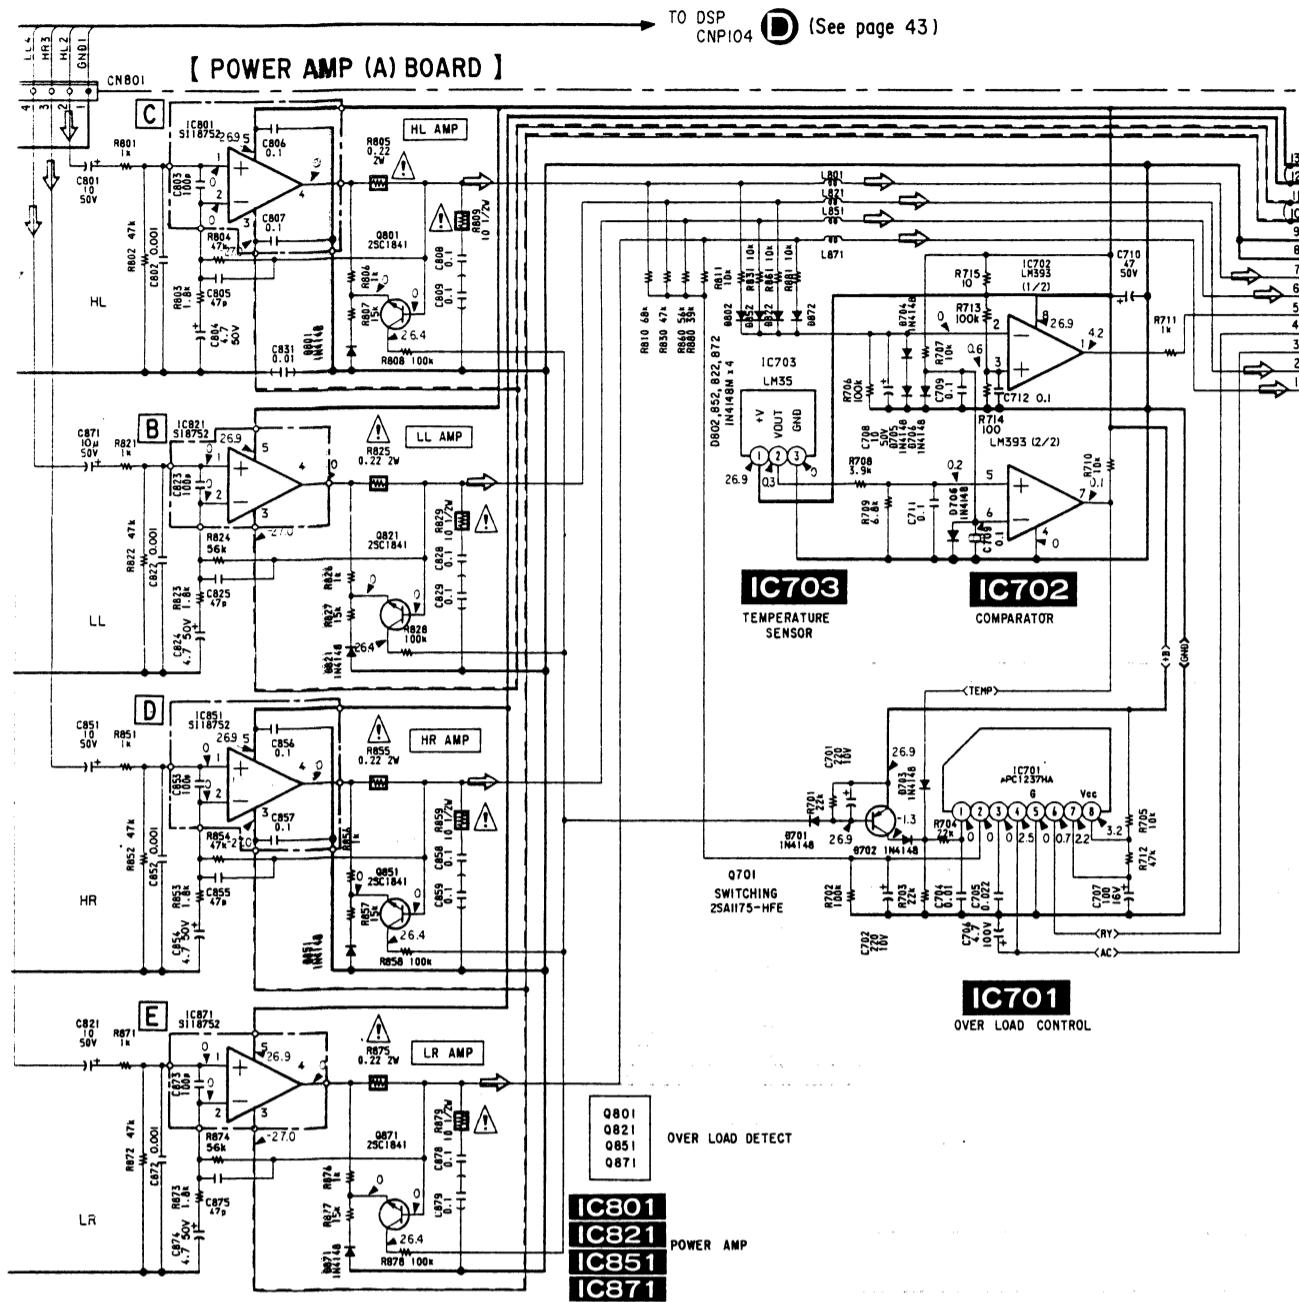

[POWER B, C, D, E] AMP BOARD

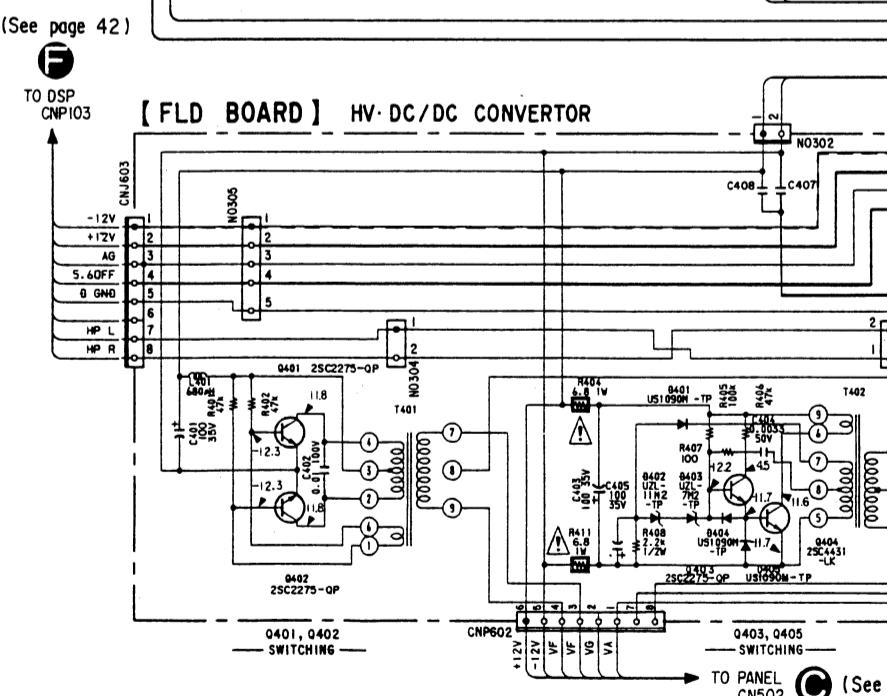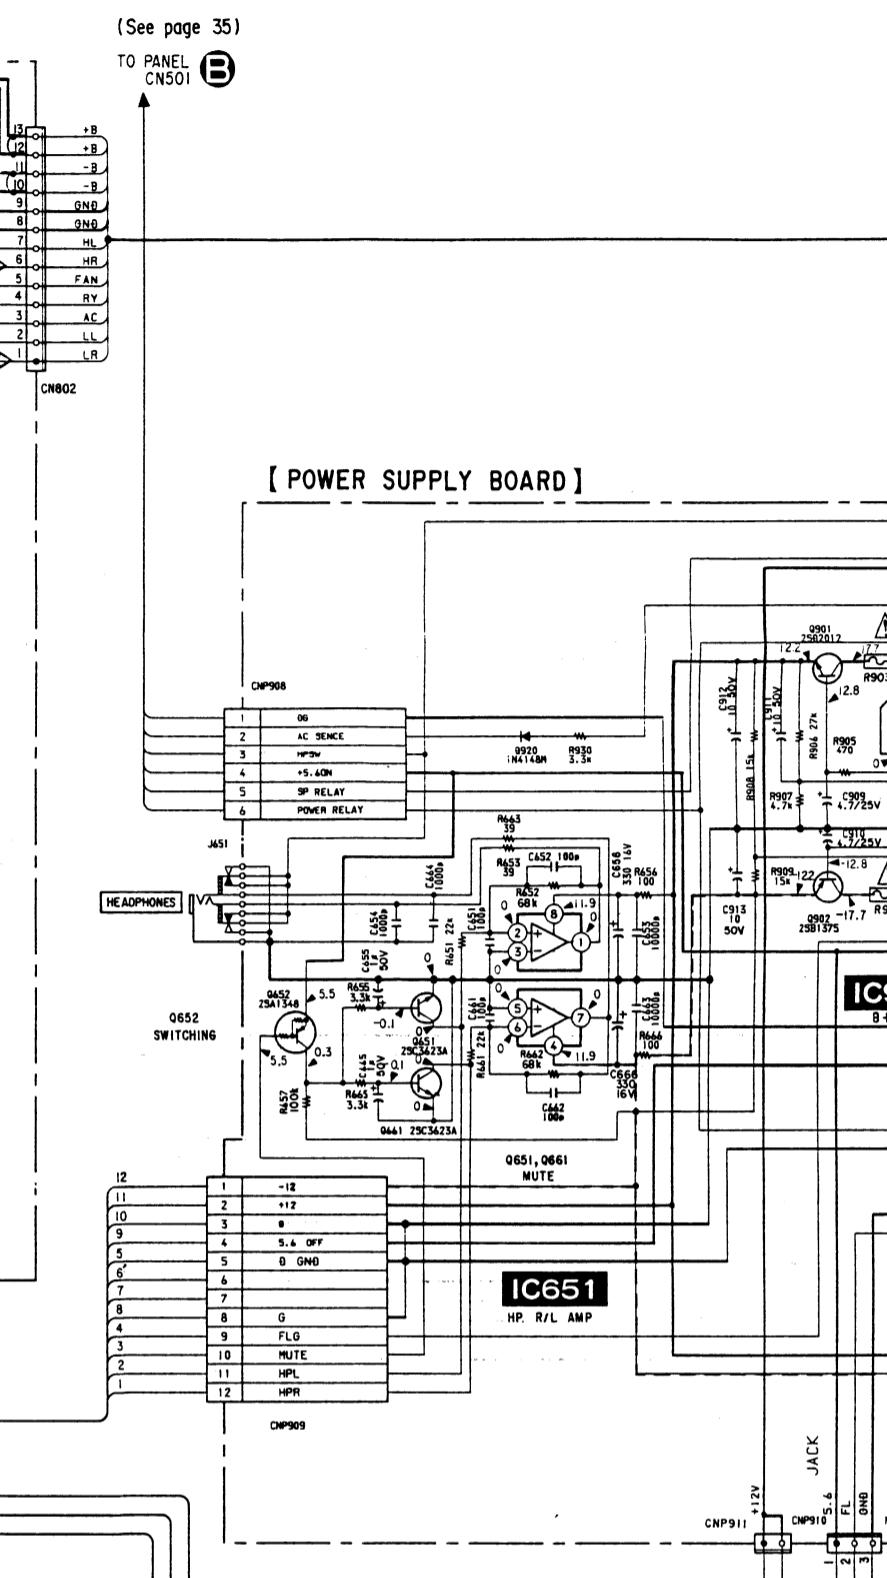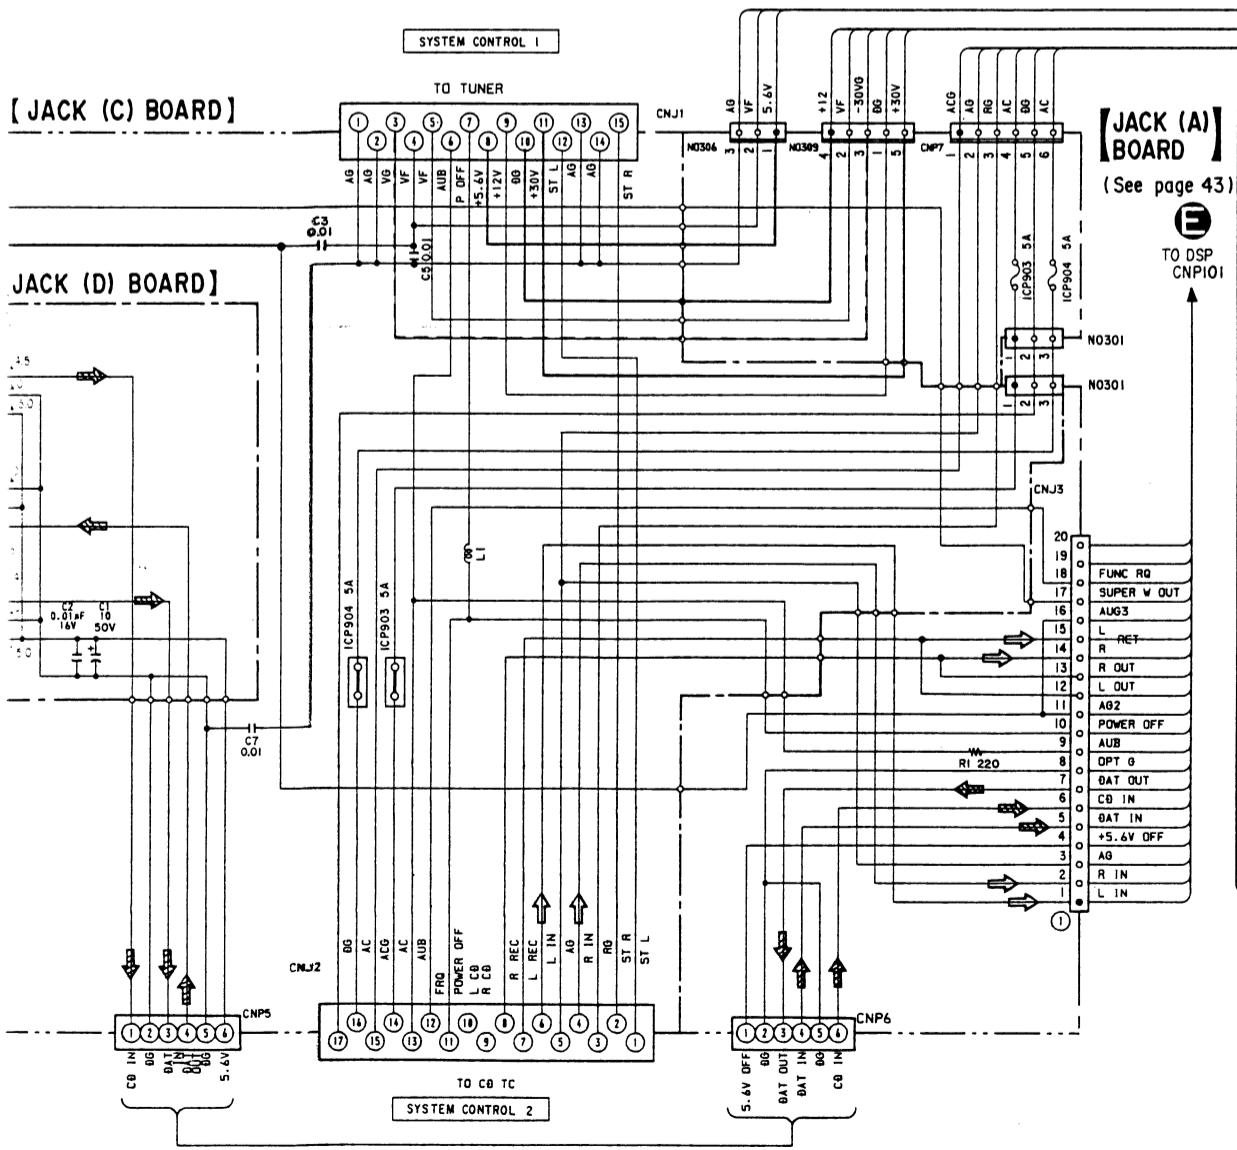


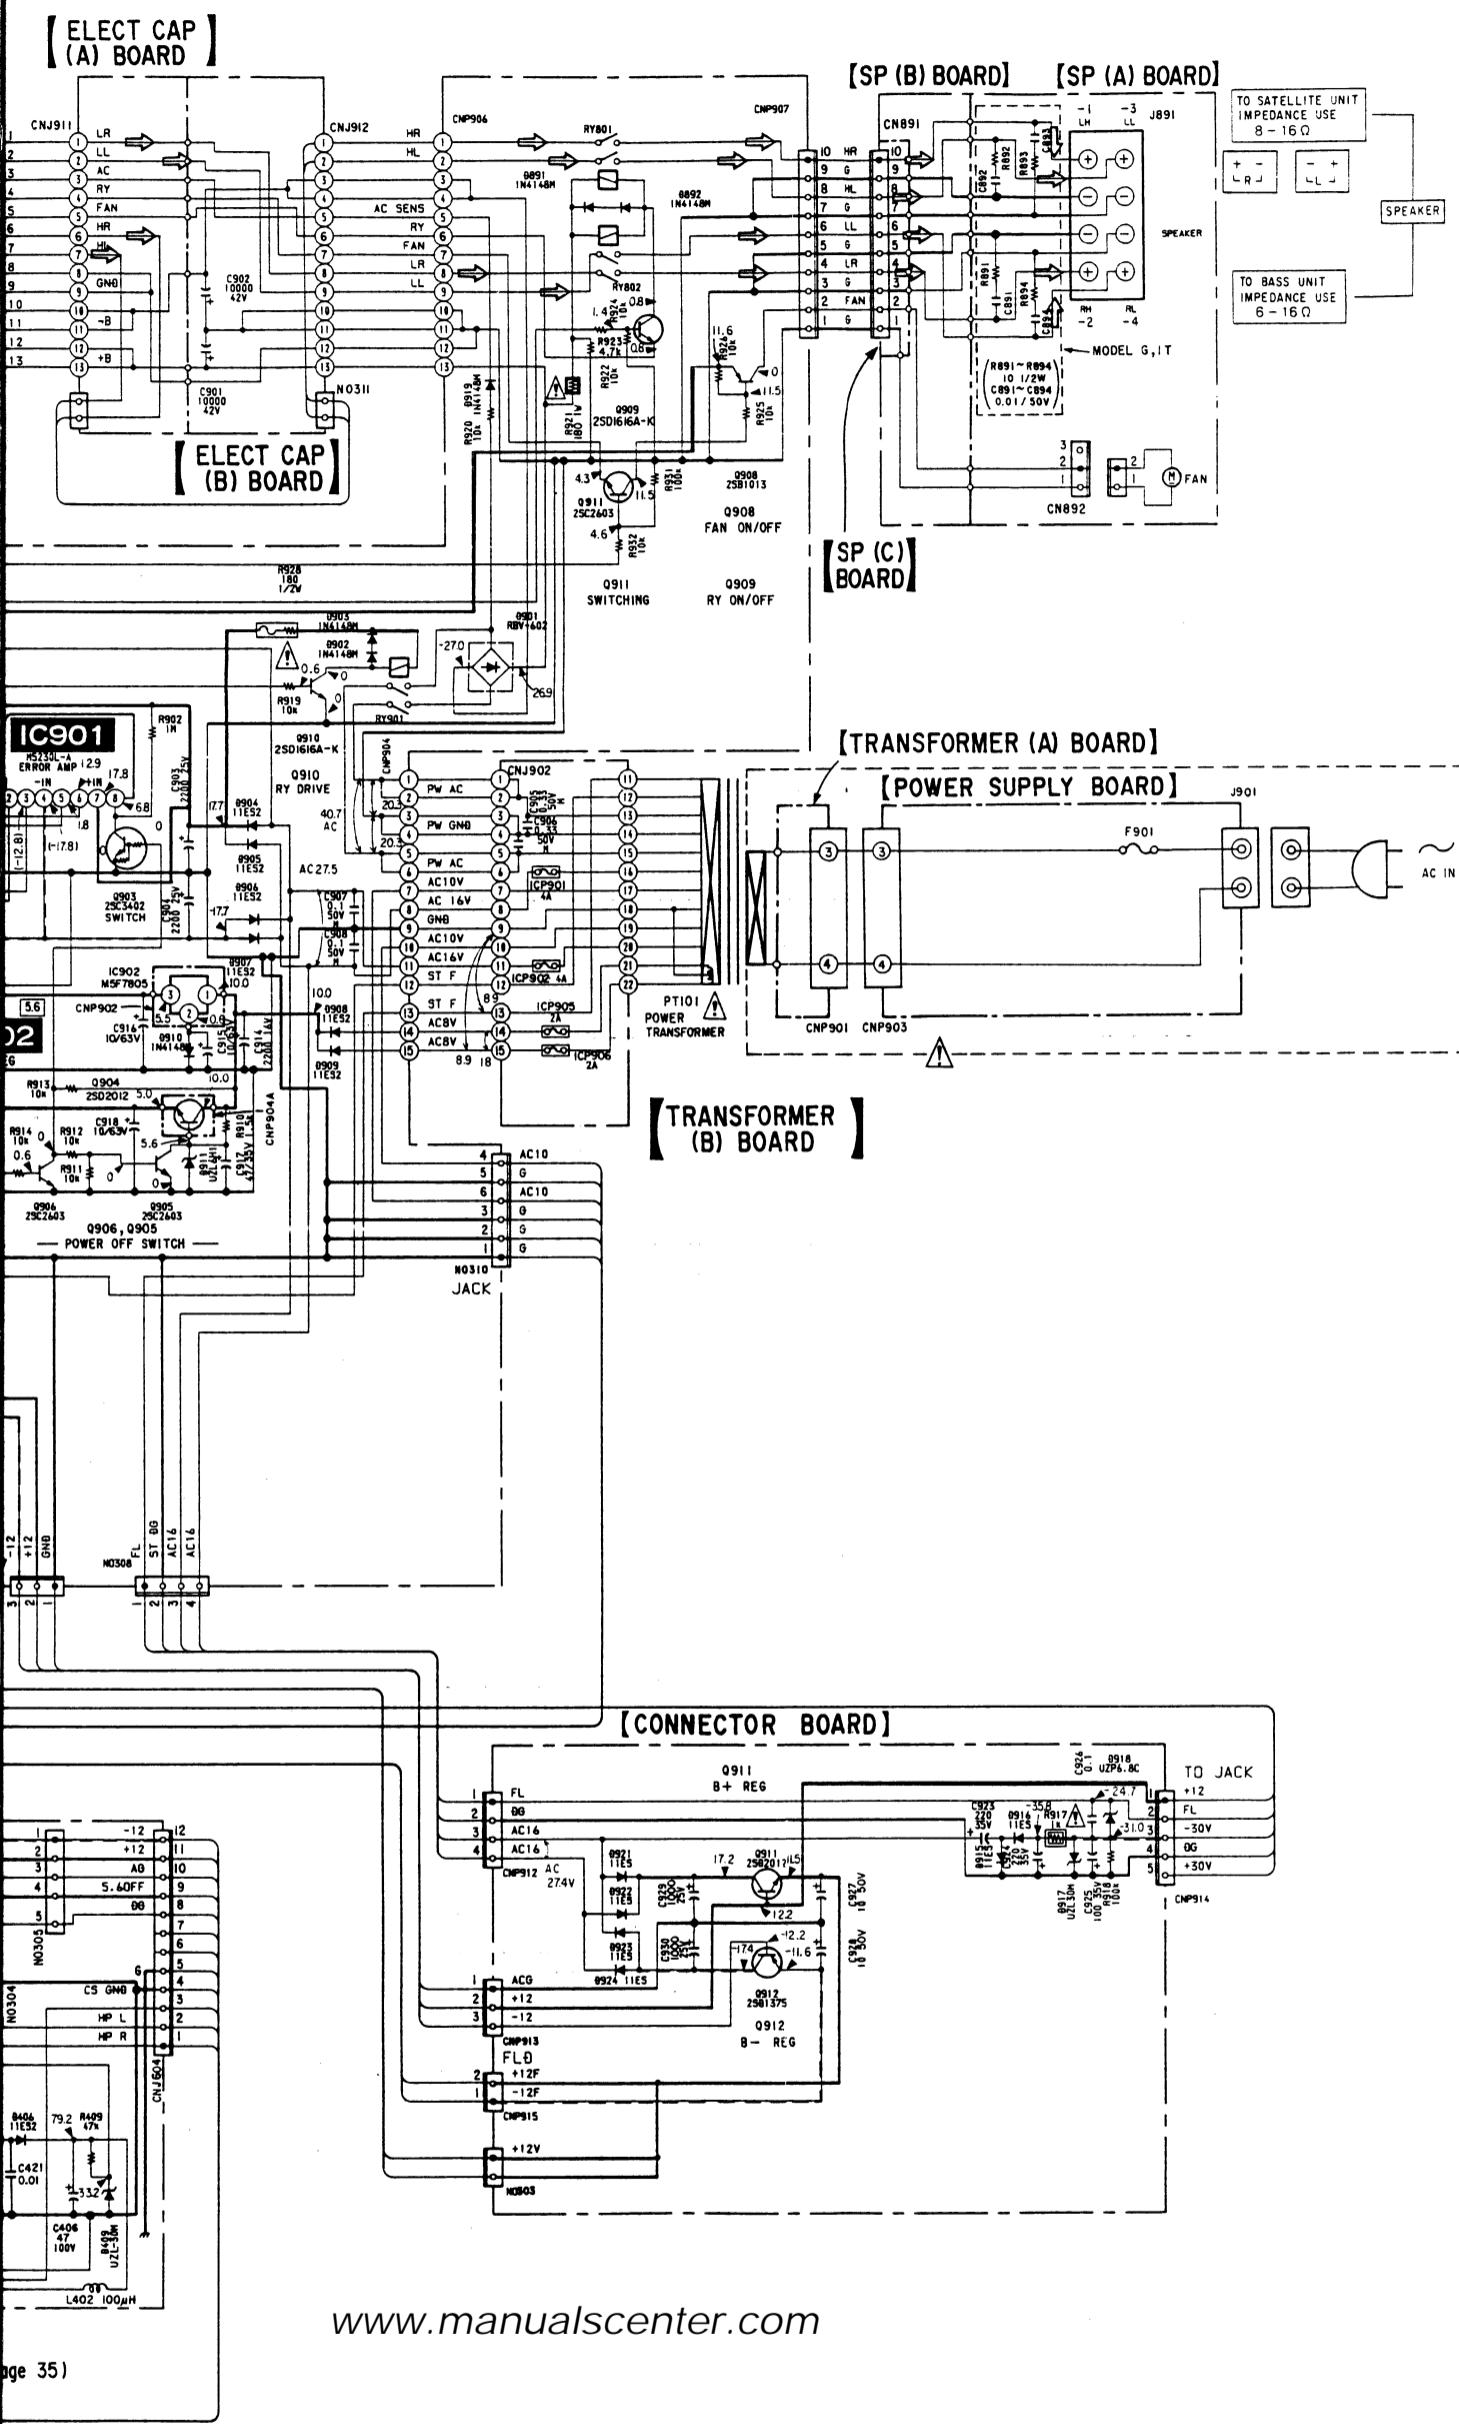
www.manualscenter.com

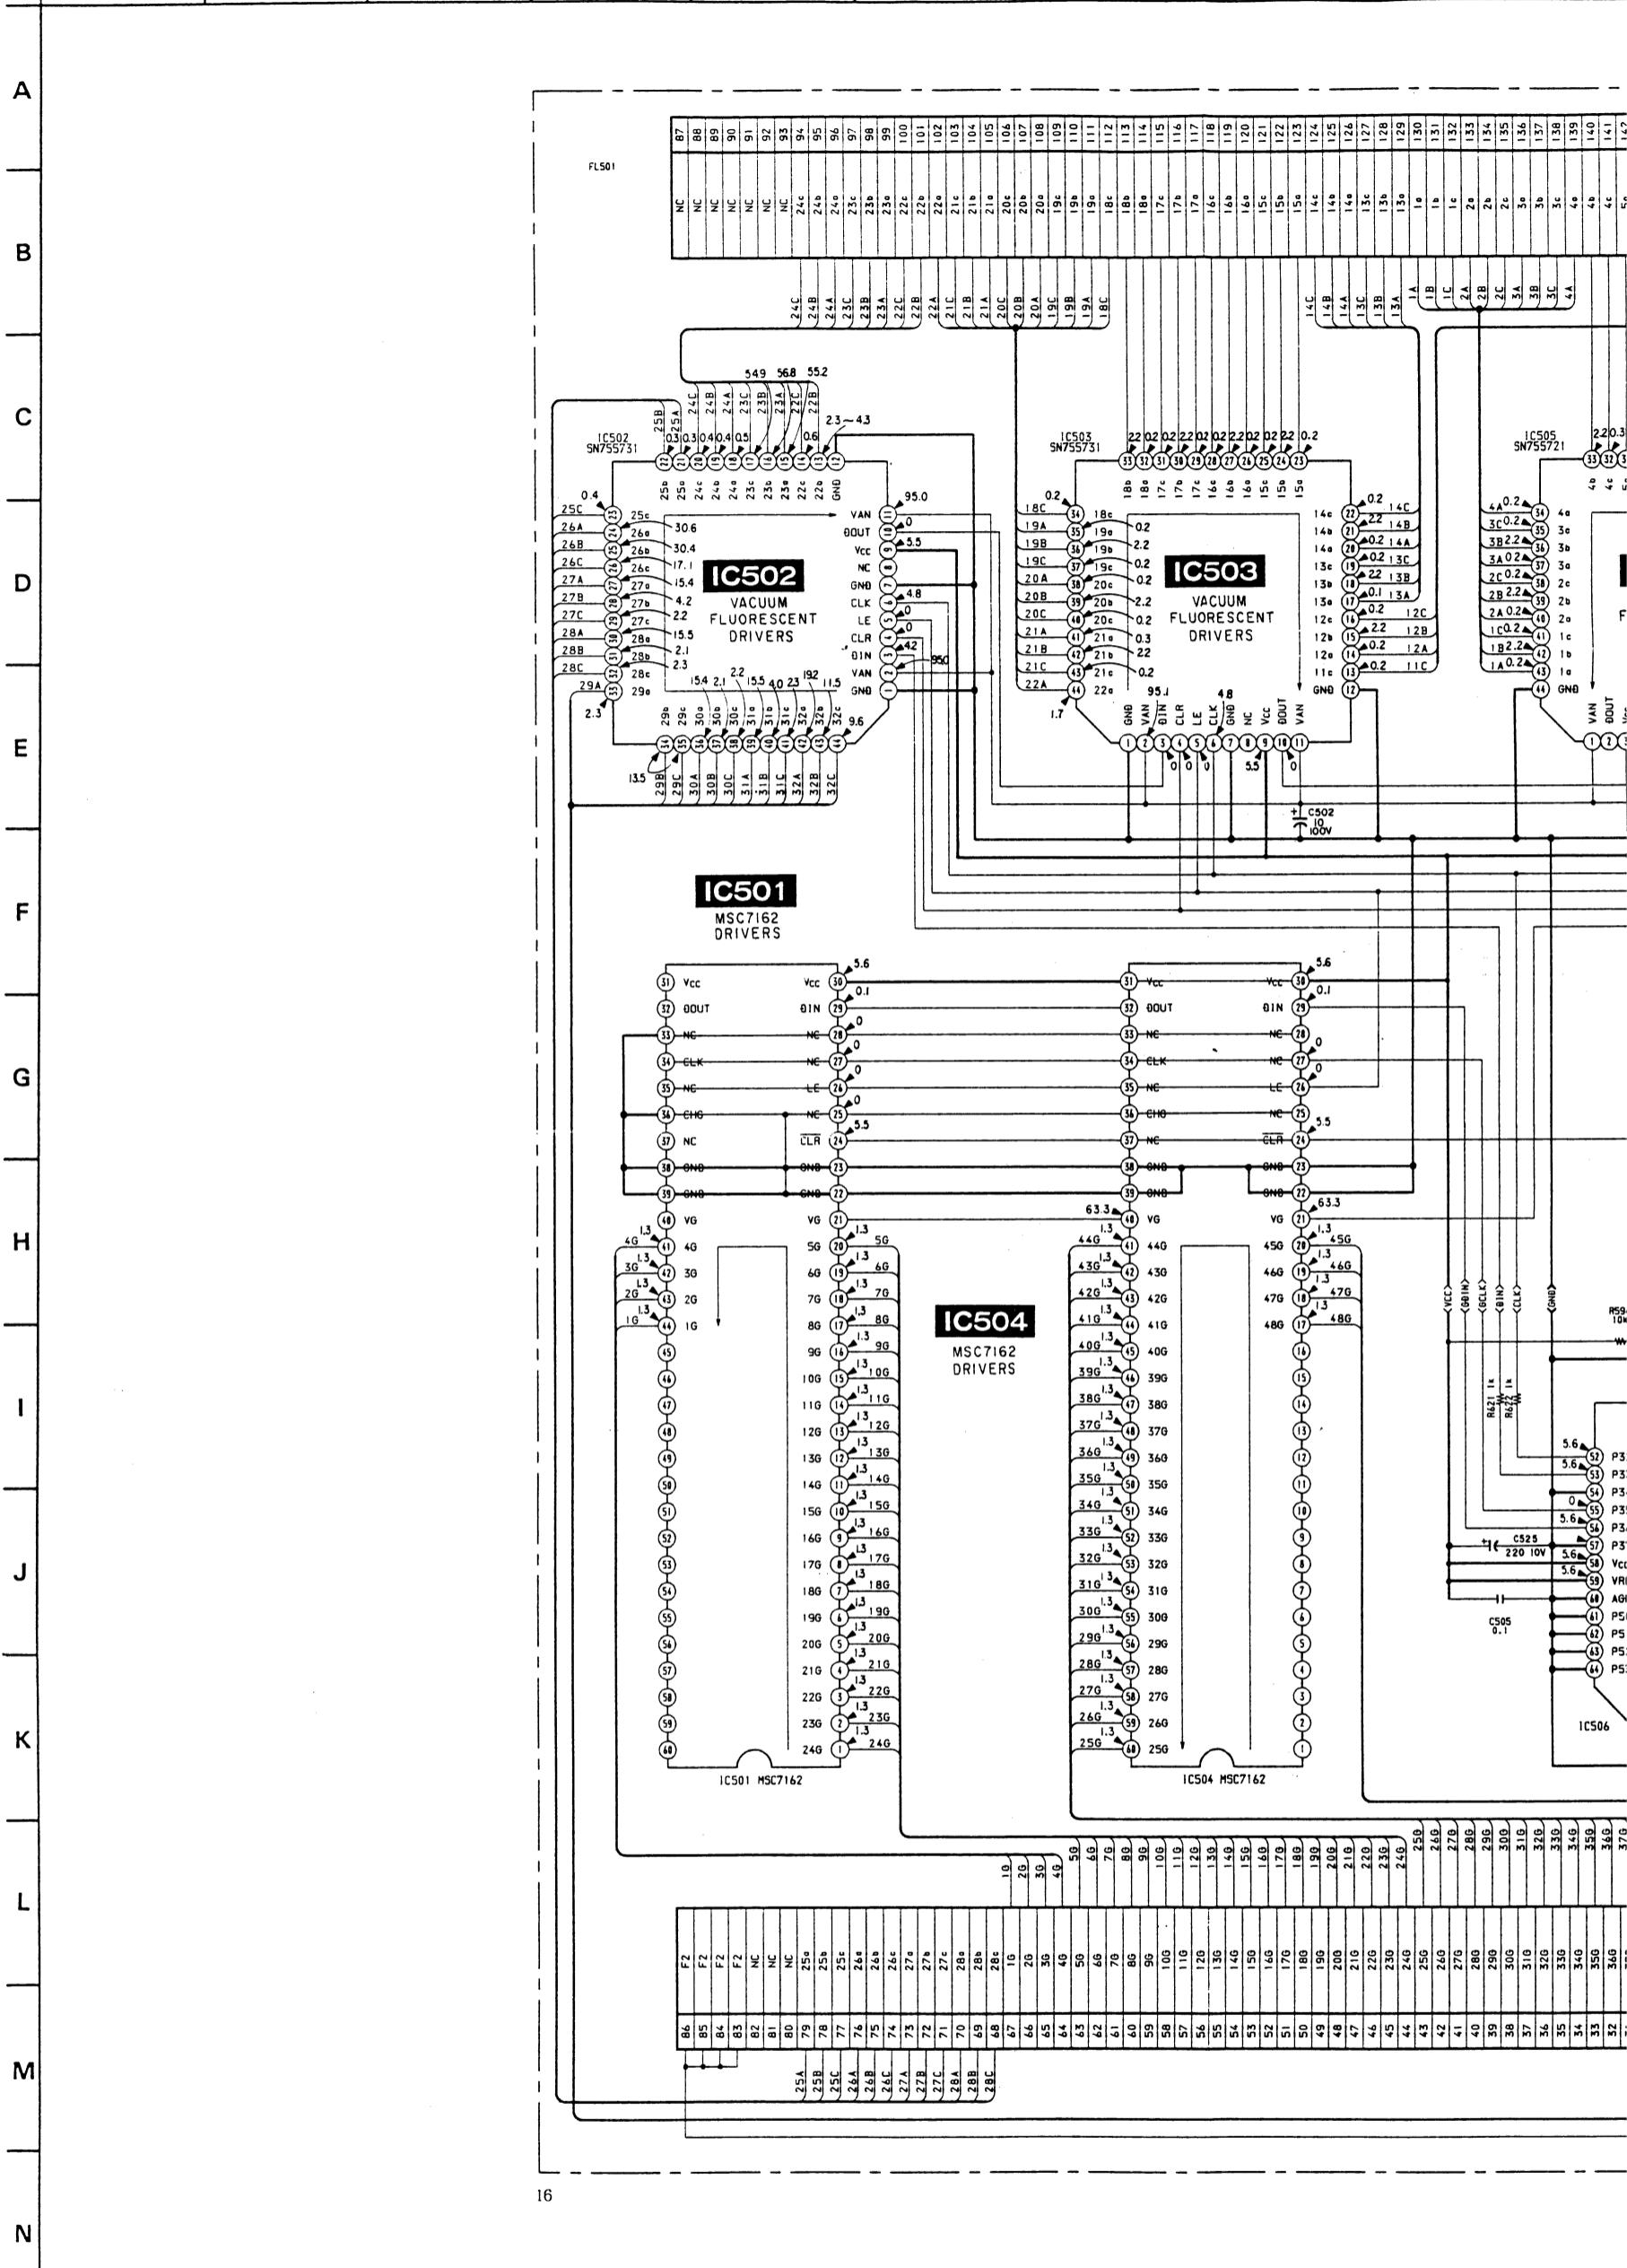

Schematic Diagram Note.

11 12 13 14 15 16 17 18 19 20 21 22

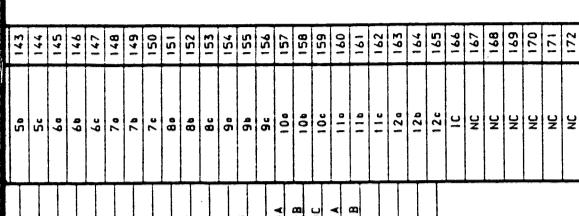

[PANEL BOA

S501	S503	S505	S507	S509	S511	S513	S515	S517
POWER	BALANCE	0BFB	0BS	EQ	SUR	▷	▽	V10E0
S502	S504	S506	S508	S510	S512	S514	S516	S518
DISPLAY	WAKE UP	DSP	RESET	ON/OFF	MEMO	△	◀	AU010

DIGITAL SIGNAL PROCESSOR


IC505

VACUUM LUORESCENT DRIVERS

11.0 11.1 11.2 11.3 11.4 11.5 11.6 11.7 11.8 11.9 11.10 11.11 11.12 11.13 11.14 11.15 11.16 11.17 11.18 11.19 11.20 11.21 11.22 11.23 11.24 11.25 11.26 11.27 11.28 11.29 11.30 11.31 11.32 11.33 11.34 11.35 11.36 11.37 11.38 11.39 11.40 11.41 11.42 11.43 11.44 11.45 11.46 11.47 11.48 11.49 11.50 11.51 11.52 11.53 11.54 11.55 11.56 11.57 11.58 11.59 11.60 11.61 11.62 11.63 11.64 11.65 11.66 11.67 11.68 11.69 11.70 11.71 11.72

Q503, Q504, Q507
SWITCHING


Q501
AC OFF DETECT

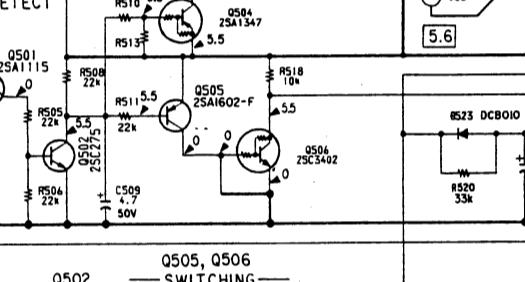


Q502
INVERTER

IC507
RESET

IC507
RESET</


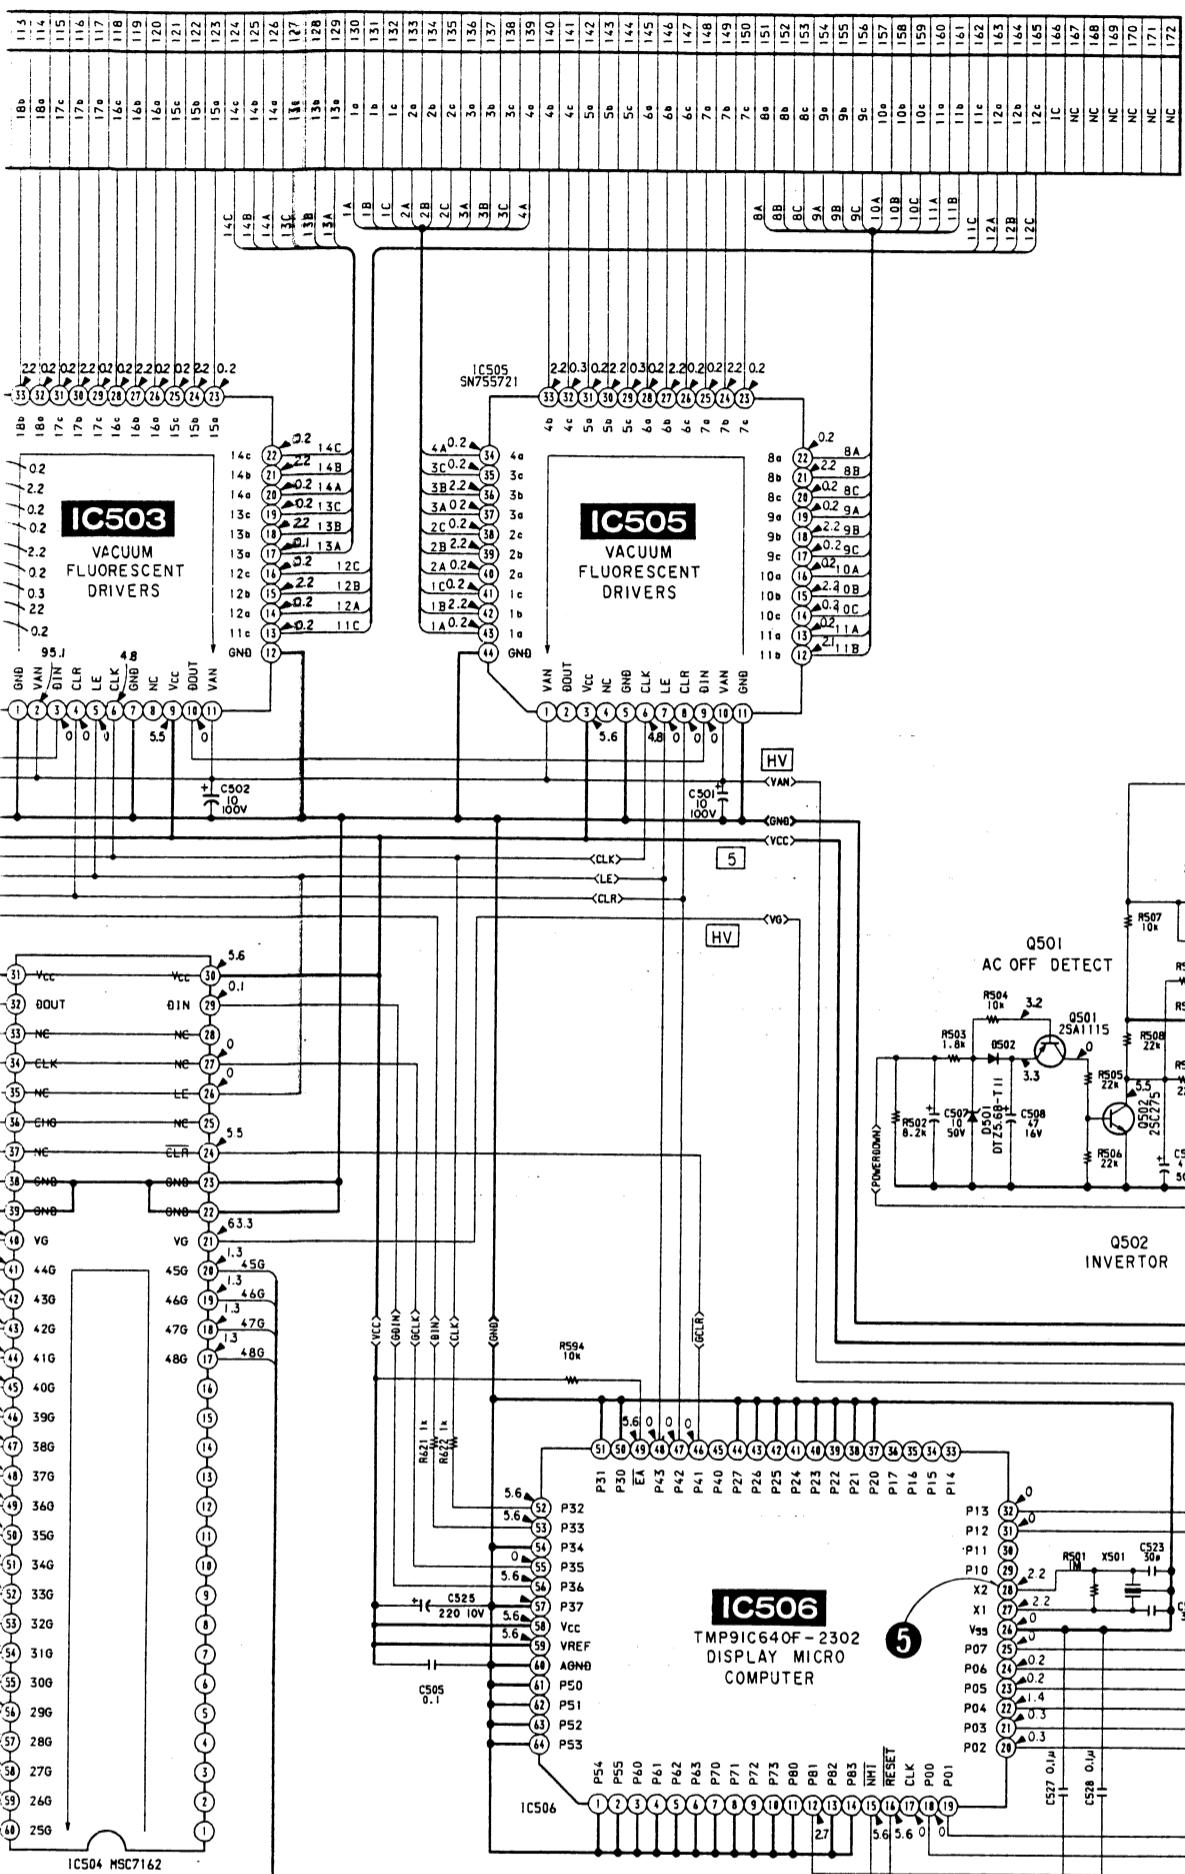


Q503, Q504, Q507
SWITCHING

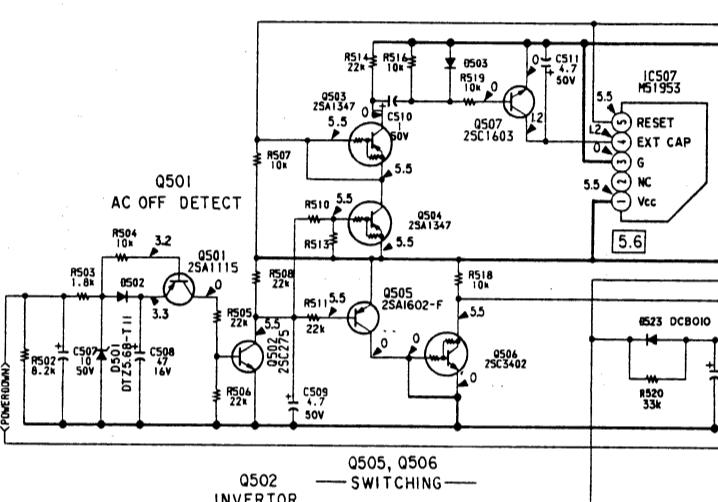




5

A To DSP
BOARD
CNJ102
(See page 43)

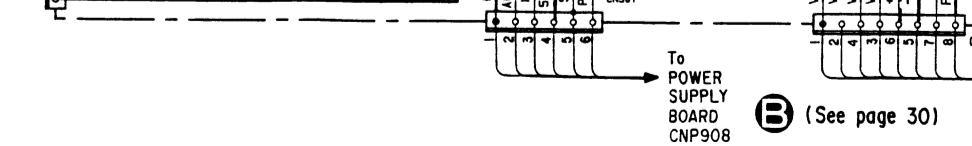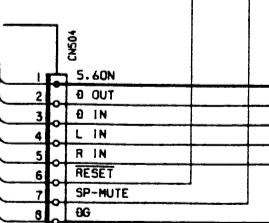

[PANEL BOARD]


S505	S507	S509	S511	S513	S515	S517
0BFB	005	EQ	SUR	▷	▽	V10EO
S506	S508	S510	S512	S514	S516	S518
DSP	RESET	ON/OFF	MEMO	△	◀	AUDIO

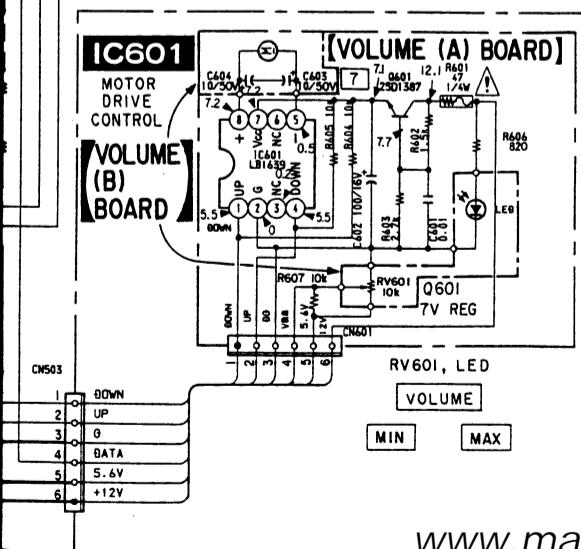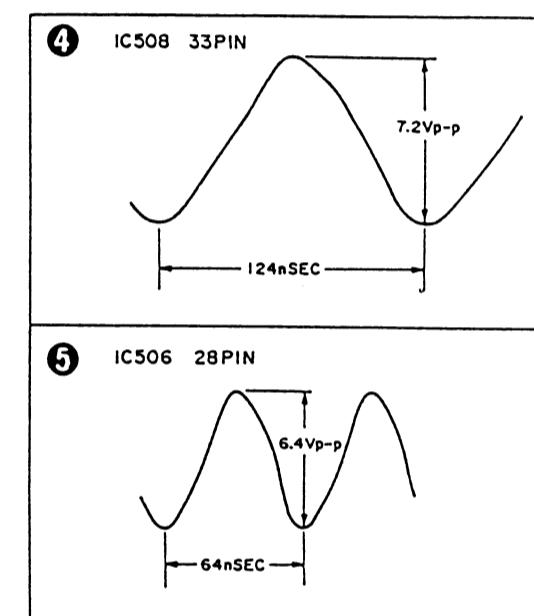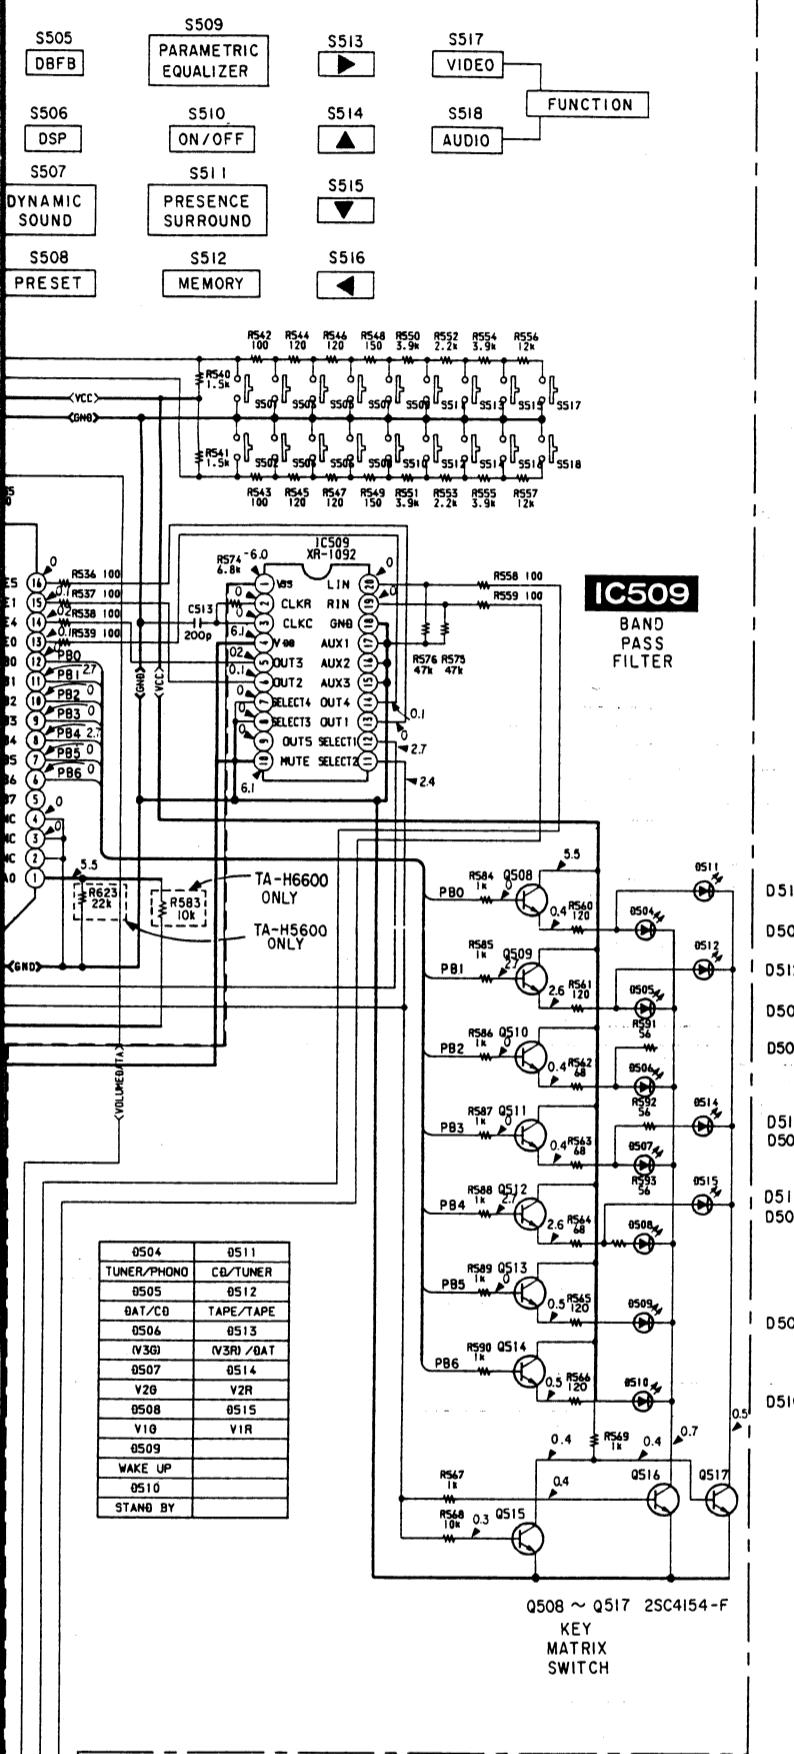

www.manualscenter.com


To FLD BOARD CNP602 **C** (See page 31)

A
B
C
D
E
F
G

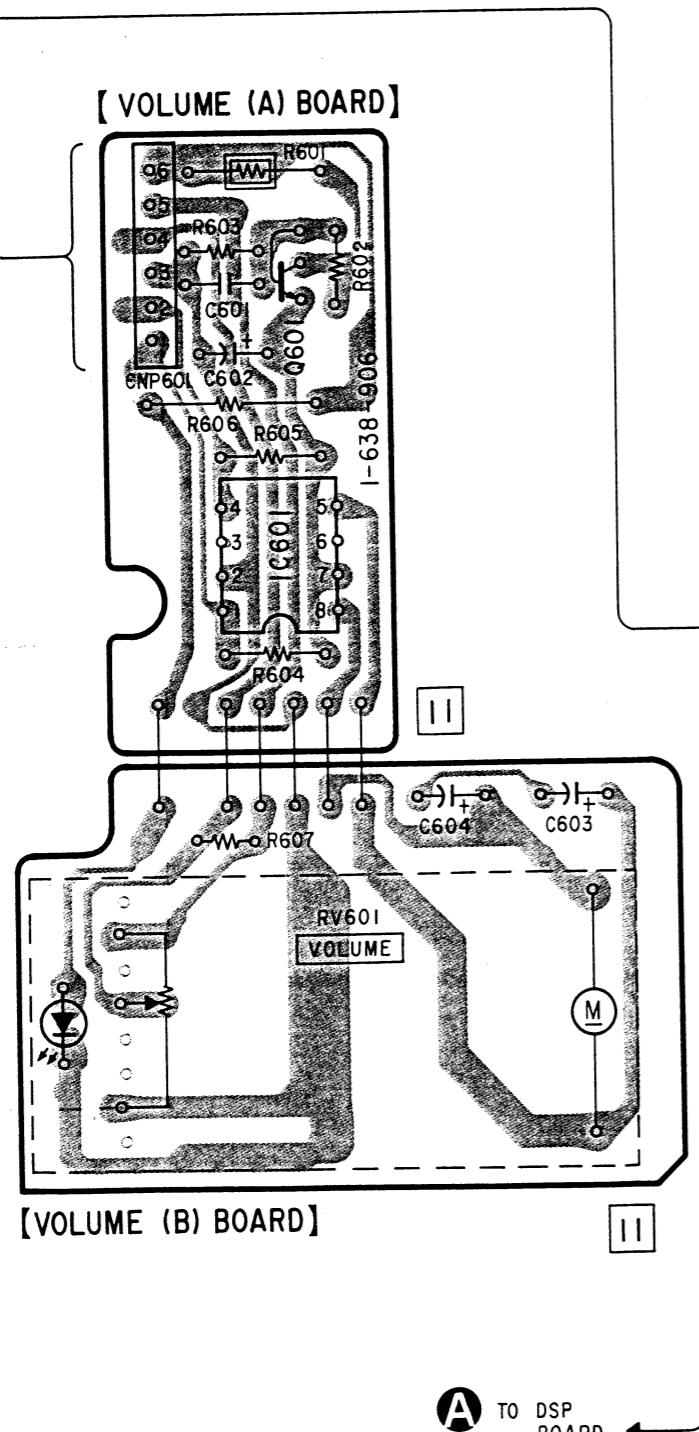


A TO DSP BOARD CNJ102 ←
(See page 45)


(See page 45)

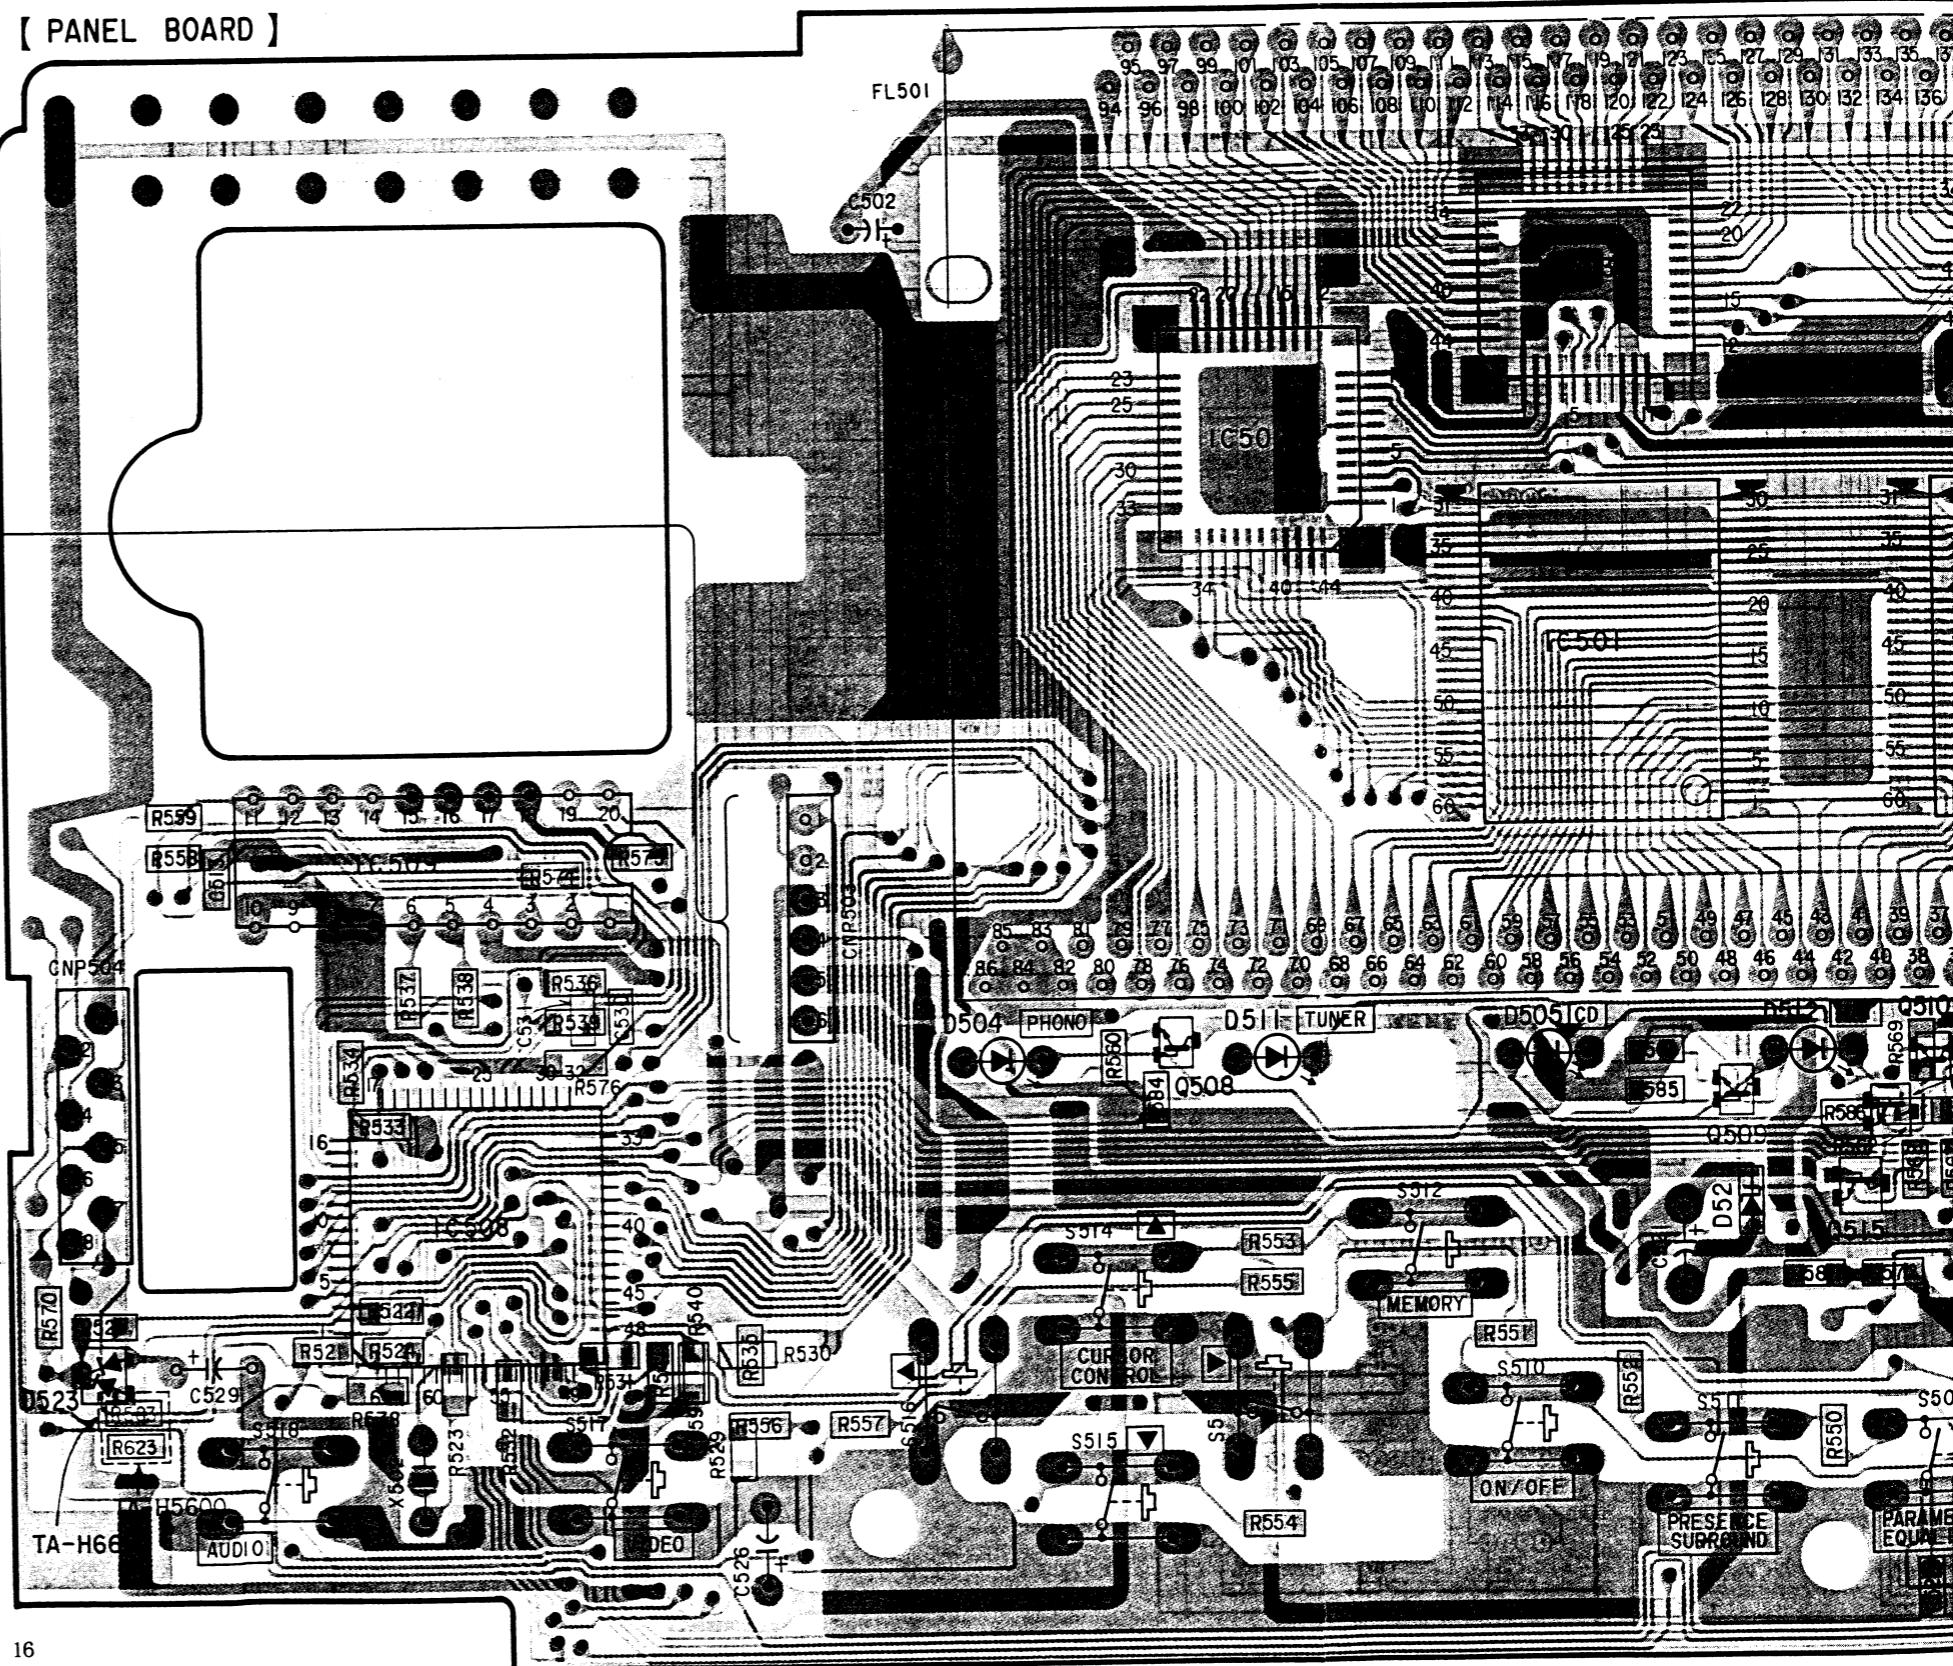


[PANEL BOARD]

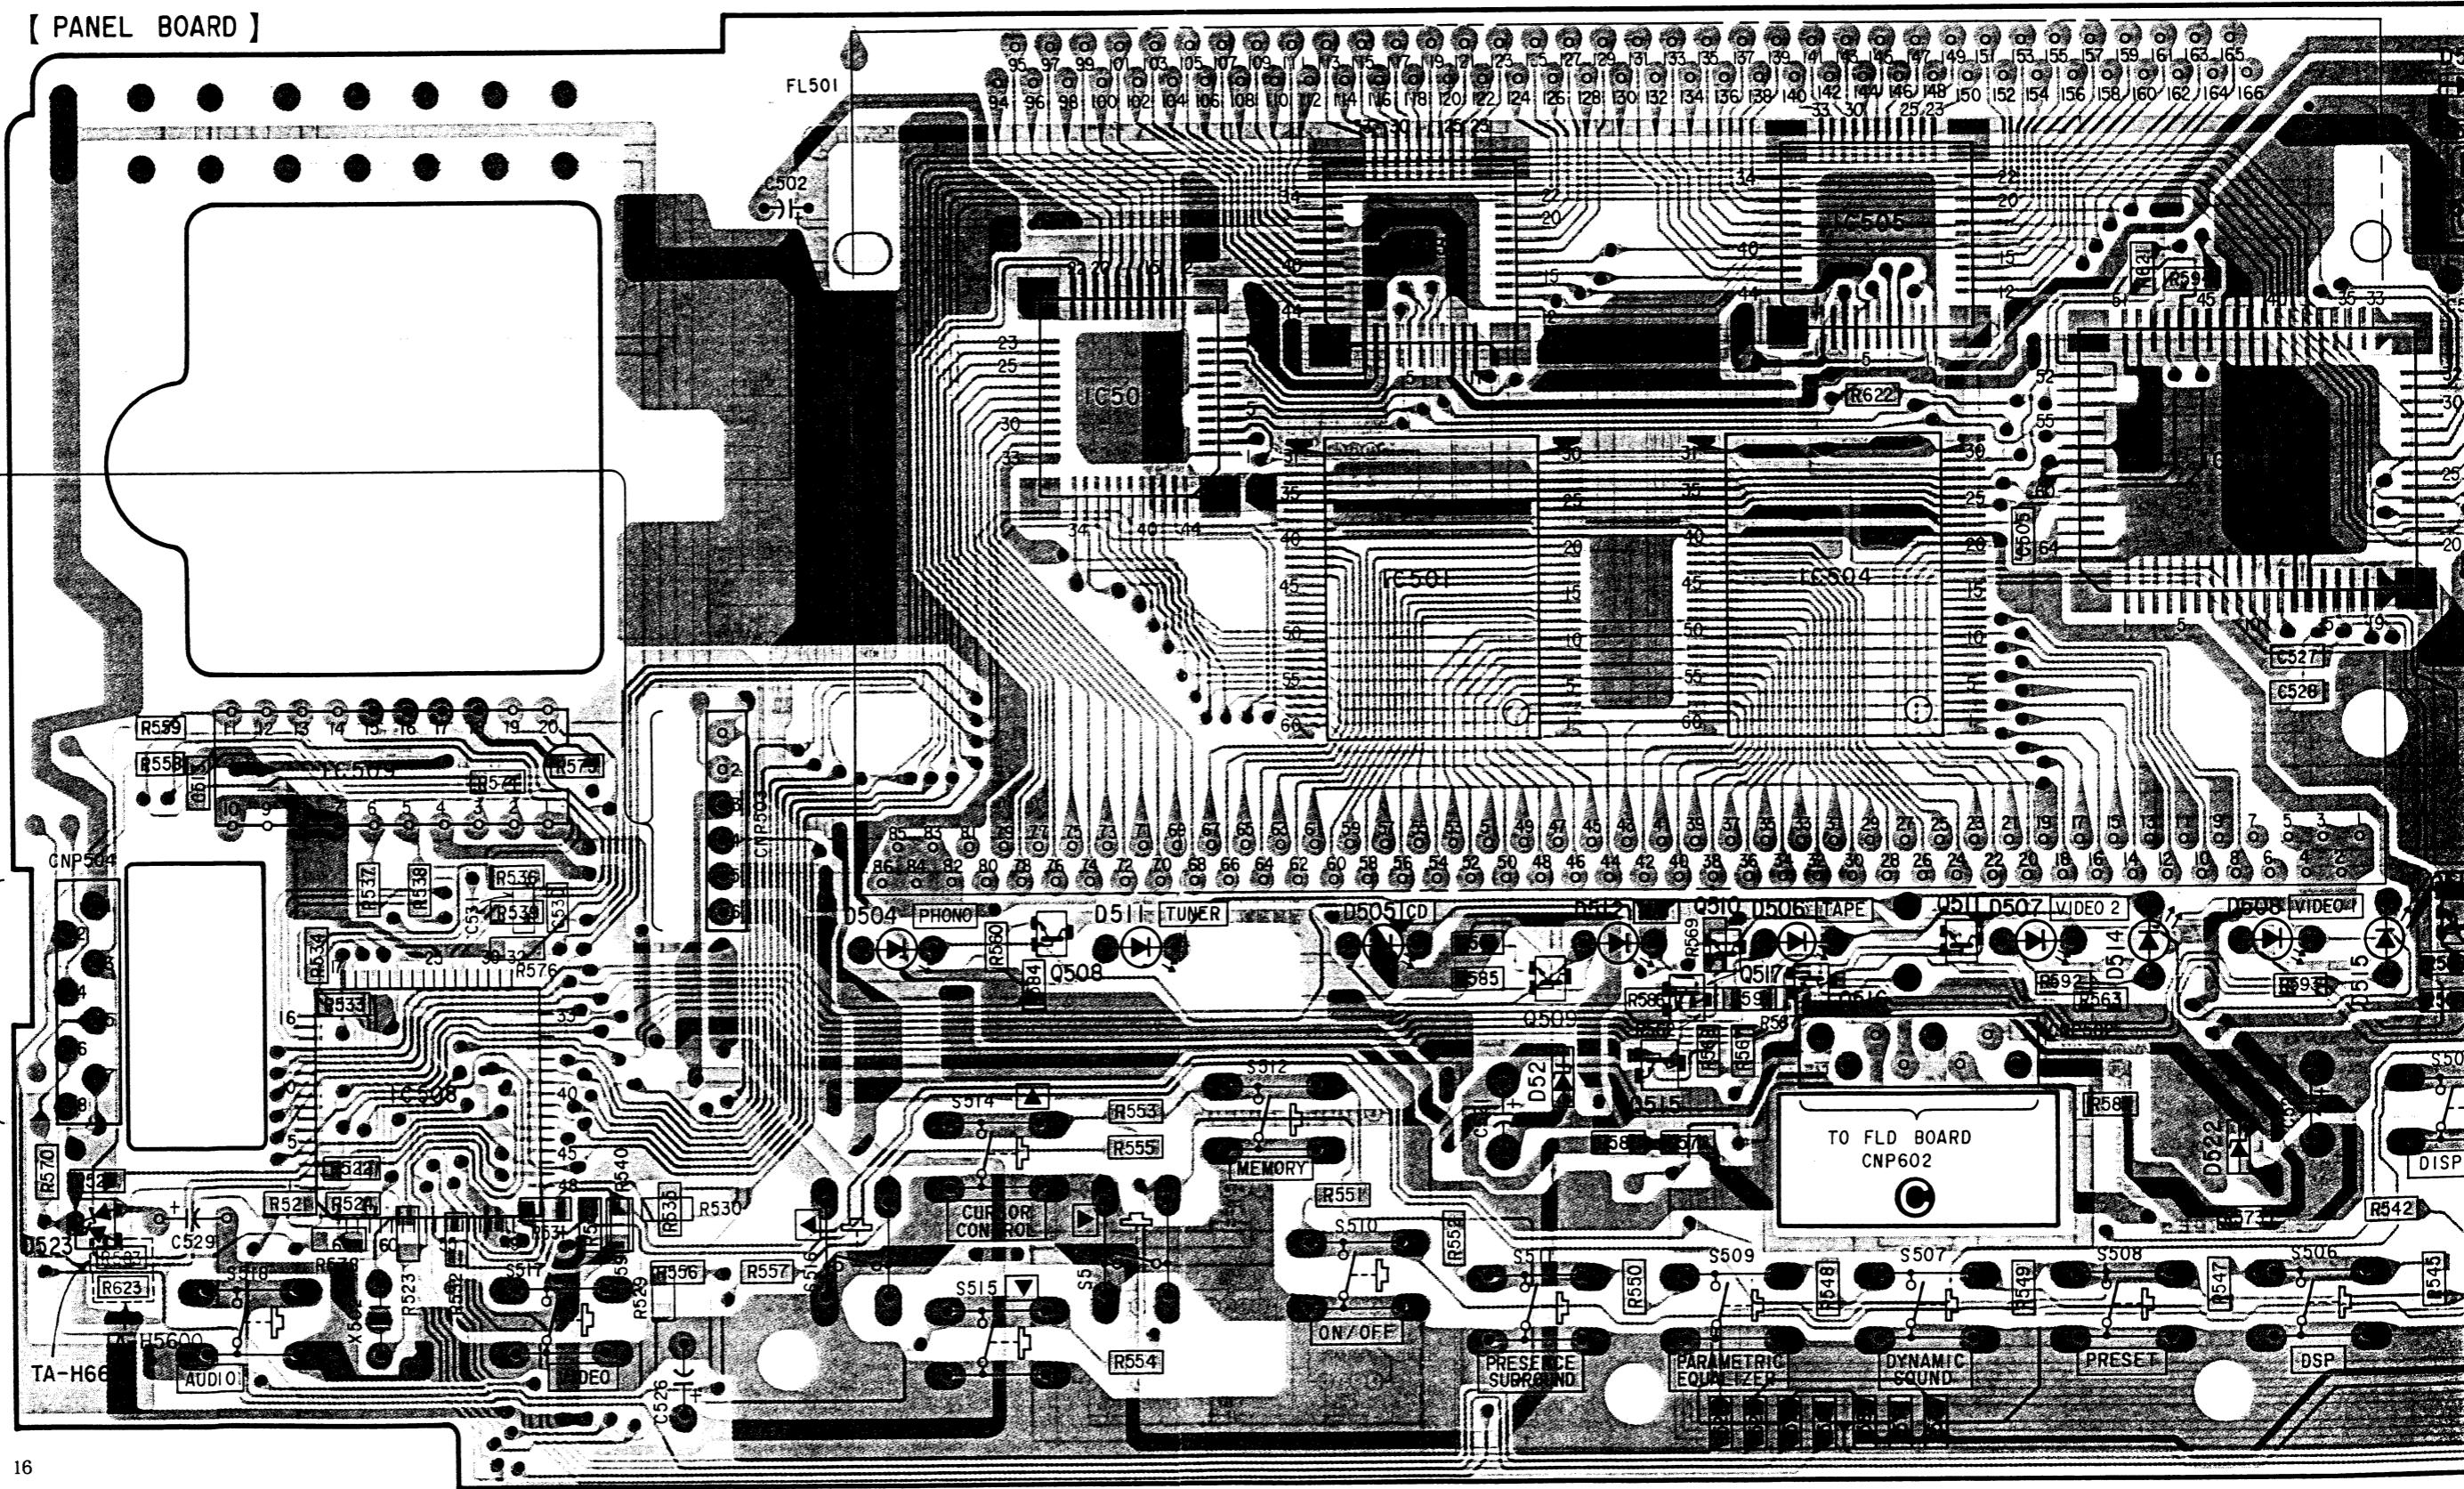

[PANEL BOARD]

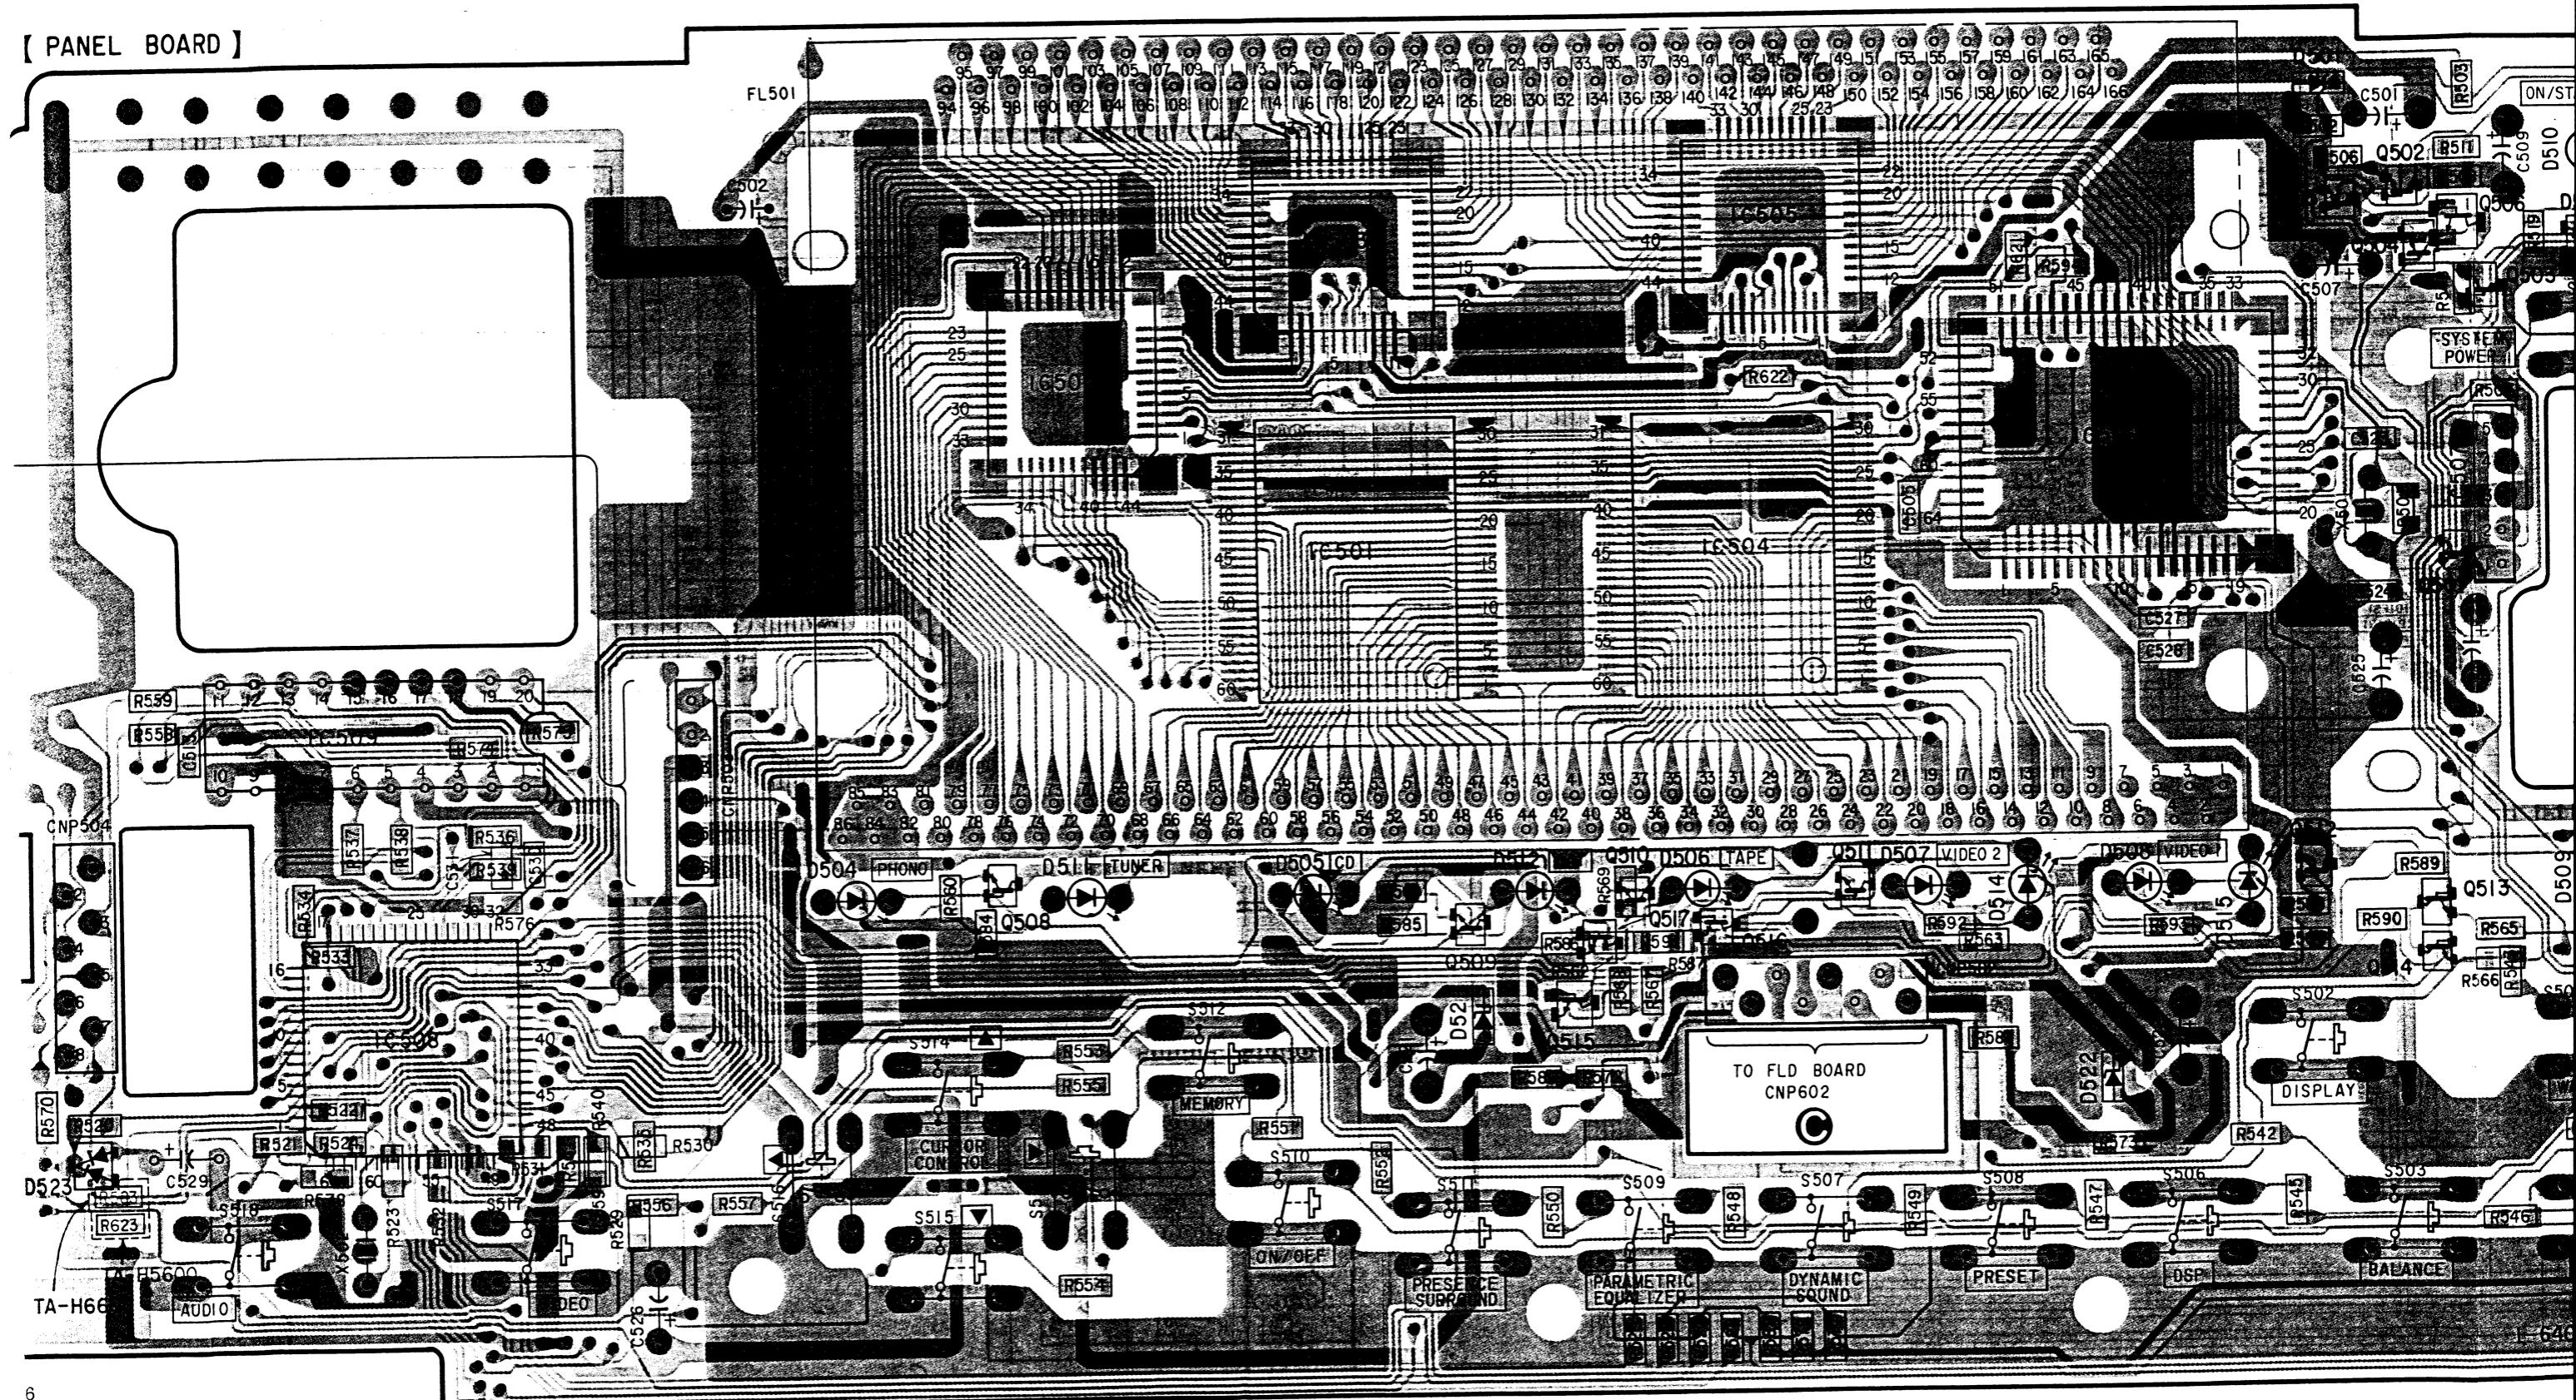


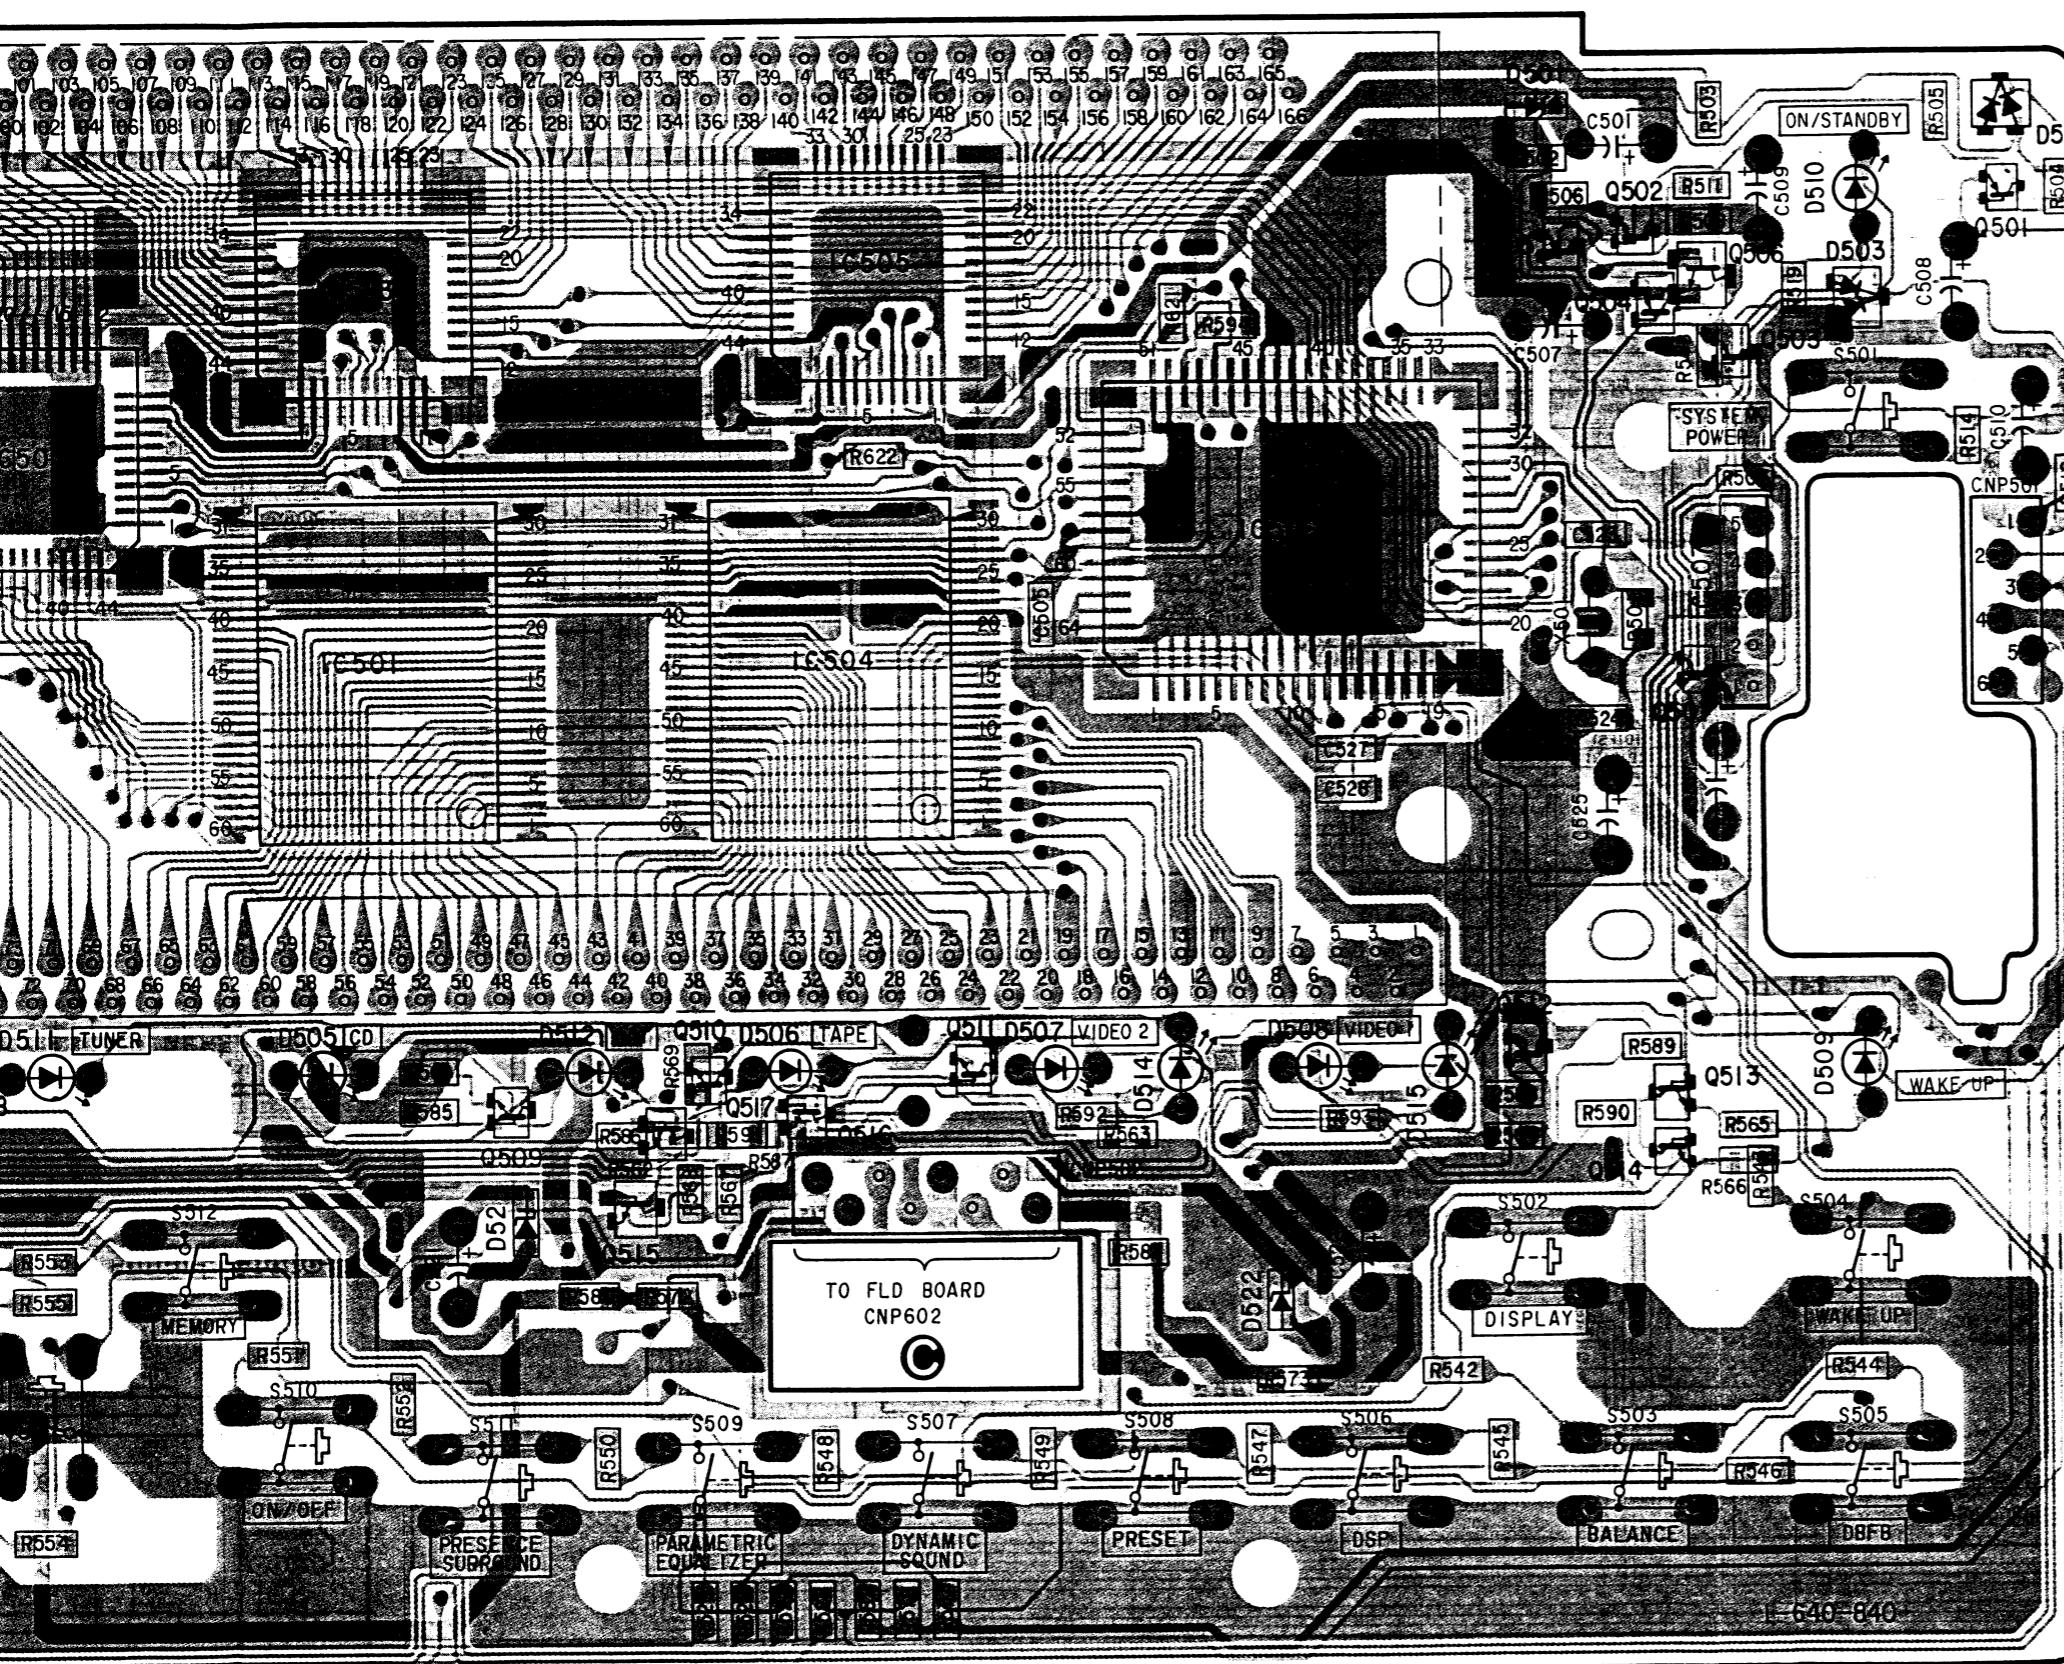



TO
POWER SUPPLY
BOARD
CNP908
B
(See page 28)



• Semiconductor Location

Ref. No.	Location
D501	B-14
D502	B-15
D503	B-15
D504	E-7
D505	E-9
D506	E-11
D507	E-12
D508	E-13
D509	E-15
D510	B-15
D511	E-18
D512	E-10
D513	E-11
D514	E-12
D515	E-13
D521	E-10
D522	F-13
D523	E-4
IC501	C-9
IC502	C-8
IC503	B-9
IC504	C-11
IC505	B-11
IC506	C-13
IC507	C-14
IC508	E-5
IC509	D-5
Q501	B-15
Q502	B-14
Q503	B-14
Q504	B-14
Q505	B-14
Q506	B-14
Q507	B-14
Q508	B-14
Q509	B-14
Q510	B-14
Q511	B-14
Q512	B-14
Q513	E-8
Q514	E-10
Q515	E-11
Q516	E-11
Q517	E-12
Q518	E-14
Q519	E-14
Q520	E-14
Q521	E-10
Q522	E-11
Q523	E-11
R501	B-15
R502	B-15
R503	B-15
R504	B-15
R505	B-15
R506	B-15
R507	B-15
R508	B-15
R509	B-15
R510	B-15
R511	B-15
R512	B-15
R513	B-15
R514	B-15
R515	B-15
R516	B-15
R517	B-15
R518	B-15
R519	B-15
R520	B-15
R521	B-15
R522	B-15
R523	B-15
R524	B-15
R525	B-15
R526	B-15
R527	B-15
R528	B-15
R529	B-15
R530	B-15
R531	B-15
R532	B-15
R533	B-15
R534	B-15
R535	B-15
R536	B-15
R537	B-15
R538	B-15
R539	B-15
R540	B-15
R541	B-15
R542	B-15
R543	B-15
R544	B-15
R545	B-15
R546	B-15
R547	B-15
R548	B-15
R549	B-15
R550	B-15
R551	B-15
R552	B-15
R553	B-15
R554	B-15
R555	B-15
R556	B-15
R557	B-15
R558	B-15
R559	B-15
R560	B-15
R561	B-15
R562	B-15
R563	B-15
R564	B-15
R565	B-15
R566	B-15
R567	B-15
R568	B-15
R569	B-15
R570	B-15
R571	B-15
R572	B-15
R573	B-15
R574	B-15
R575	B-15
R576	B-15
R577	B-15
R578	B-15
R579	B-15
R580	B-15
R581	B-15
R582	B-15
R583	B-15
R584	B-15
R585	B-15
R586	B-15
R587	B-15
R588	B-15
R589	B-15
R590	B-15
R591	B-15
R592	B-15
R593	B-15
R594	B-15
R595	B-15
R596	B-15
R597	B-15
R598	B-15
R599	B-15
R600	B-15
R601	B-15
R602	B-15
R603	B-15
R604	B-15
R605	B-15
R606	B-15
R607	B-15
R608	B-15
R609	B-15
R610	B-15
R611	B-15
R612	B-15
R613	B-15
R614	B-15
R615	B-15
R616	B-15
R617	B-15
R618	B-15
R619	B-15
R620	B-15
R621	B-15
R622	B-15
R623	B-15
R624	B-15
R625	B-15
R626	B-15
R627	B-15
R628	B-15
R629	B-15
R630	B-15
R631	B-15
R632	B-15
R633	B-15
R634	B-15
R635	B-15
R636	B-15
R637	B-15
R638	B-15
R639	B-15
R640	B-15
R641	B-15
R642	B-15
R643	B-15
R644	B-15
R645	B-15
R646	B-15
R647	B-15
R648	B-15
R649	B-15
R650	B-15
R651	B-15
R652	B-15
R653	B-15
R654	B-15
R655	B-15
R656	B-15
R657	B-15
R658	B-15
R659	B-15
R660	B-15
R661	B-15
R662	B-15
R663	B-15
R664	B-15
R665	B-15
R666	B-15
R667	B-15
R668	B-15
R669	B-15
R670	B-15
R671	B-15
R672	B-15
R673	B-15
R674	B-15
R675	B-15
R676	B-15
R677	B-15
R678	B-15
R679	B-15
R680	B-15
R681	B-15
R682	B-15
R683	B-15
R684	B-15
R685	B-15
R686	B-15
R687	B-15
R688	B-15
R689	B-15
R690	B-15
R691	B-15
R692	B-15
R693	B-15
R694	B-15
R695	B-15
R696	B-15
R697	B-15
R698	B-15
R699	B-15
R700	B-15
R701	B-15
R702	B-15
R703	B-15
R704	B-15
R705	B-15
R706	B-15
R707	B-15
R708	B-15
R709	B-15
R710	B-15
R711	B-15
R712	B-15
R713	B-15
R714	B-15
R715	B-15
R716	B-15
R717	B-15
R718	B-15
R719	B-15
R720	B-15
R721	B-15
R722	B-15
R723	B-15
R724	B-15
R725	B-15
R726	B-15
R727	B-15
R728	B-15
R729	B-15
R730	B-15
R731	B-15
R732	B-15
R733	B-15
R734	B-15
R735	B-15
R736	B-15
R737	B-15
R738	B-15
R739	B-15
R740	B-15
R741	B-15
R742	B-15
R743	B-15
R744	B-15
R745	B-15
R746	B-15
R747	B-15
R748	B-15
R749	B-15
R750	B-15
R751	B-15
R752	B-15
R753	B-15
R754	B-15
R755	B-15
R756	B-15
R757	B-15
R758	B-15
R759	B-15
R760	B-15
R761	B-15
R762	B-15
R763	B-15
R764	B-15
R765	B-15
R766	B-15
R767	B-15
R768	B-15
R769	B-15
R770	B-15
R771	B-15
R772	B-15
R773	B-15
R774	B-15
R775	B-15
R776	B-15
R777	B-15
R778	B-15
R779	B-15
R780	B-15
R781	B-15
R782	B-15
R783	B-15
R784	B-15
R785	B-15
R786	B-15
R787	B-15
R788	B-15
R789	B-15
R790	B-15
R791	B-15
R792	B-15
R793	B-15
R794	B-15
R795	B-15
R796	B-15
R797	B-15
R798	B-15
R799	B-15
R800	B-15
R801	B-15
R802	B-15
R803	B-15
R804	B-15
R805	B-15
R806	B-15</td

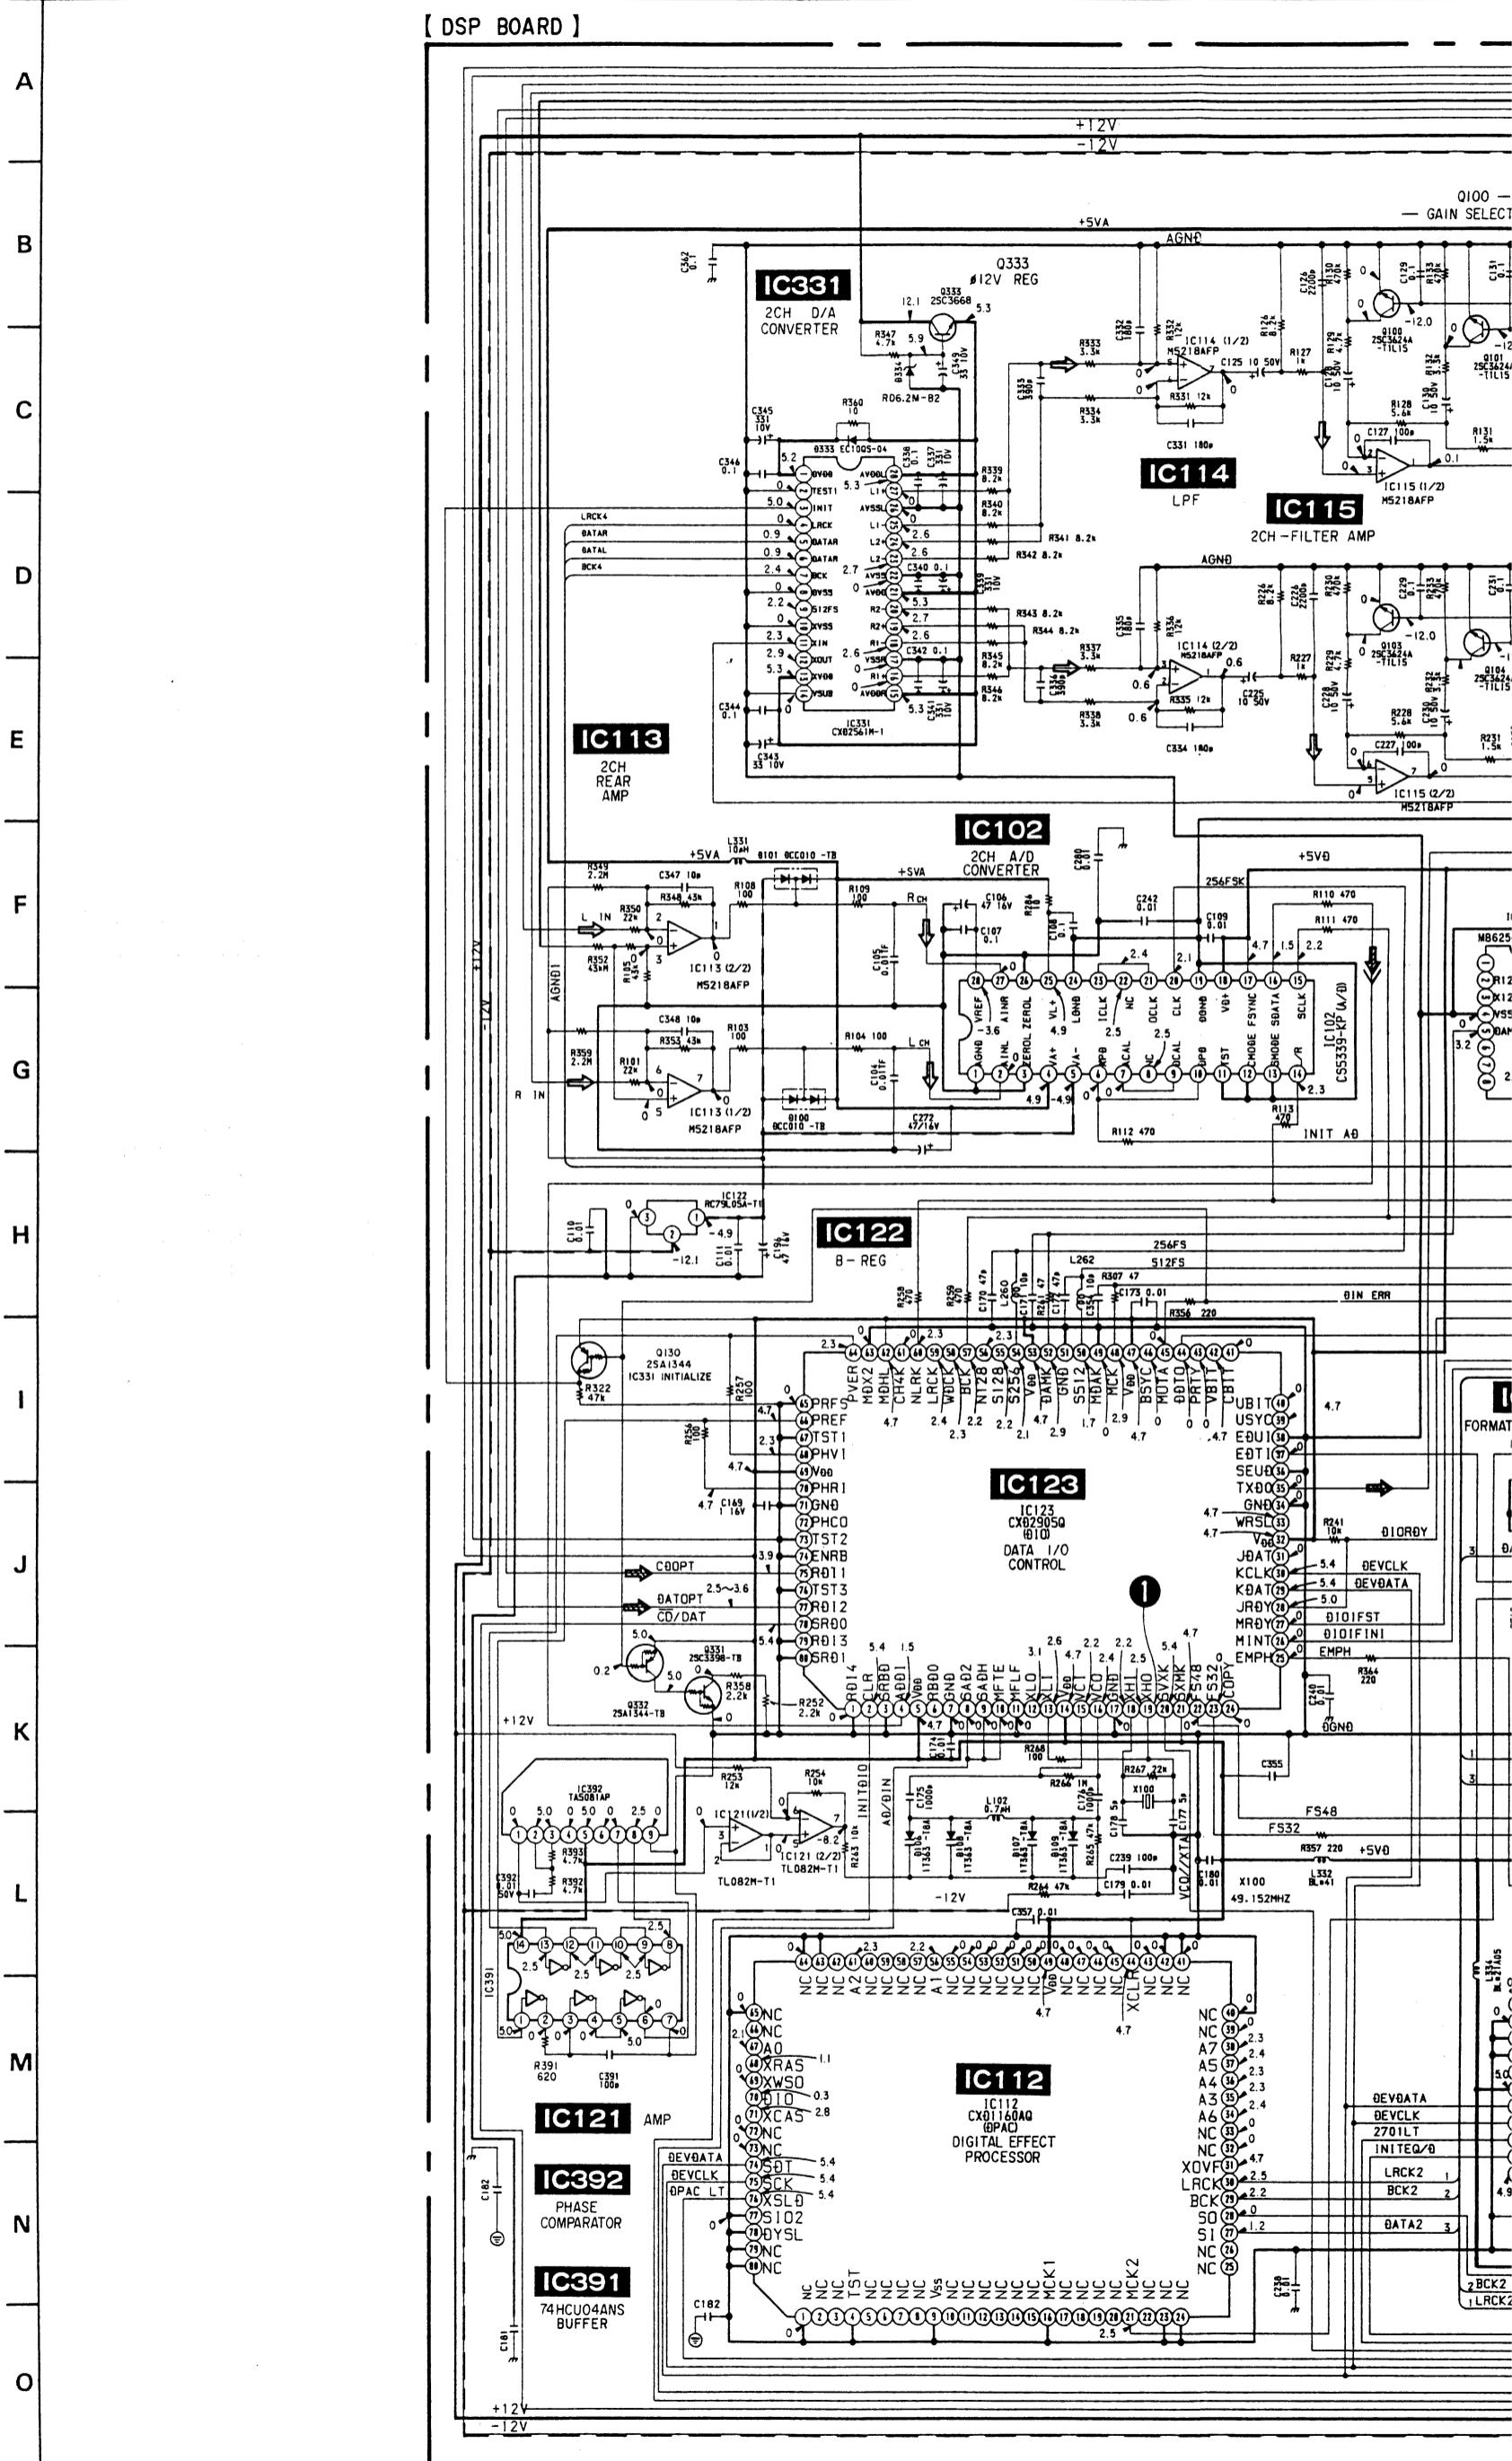

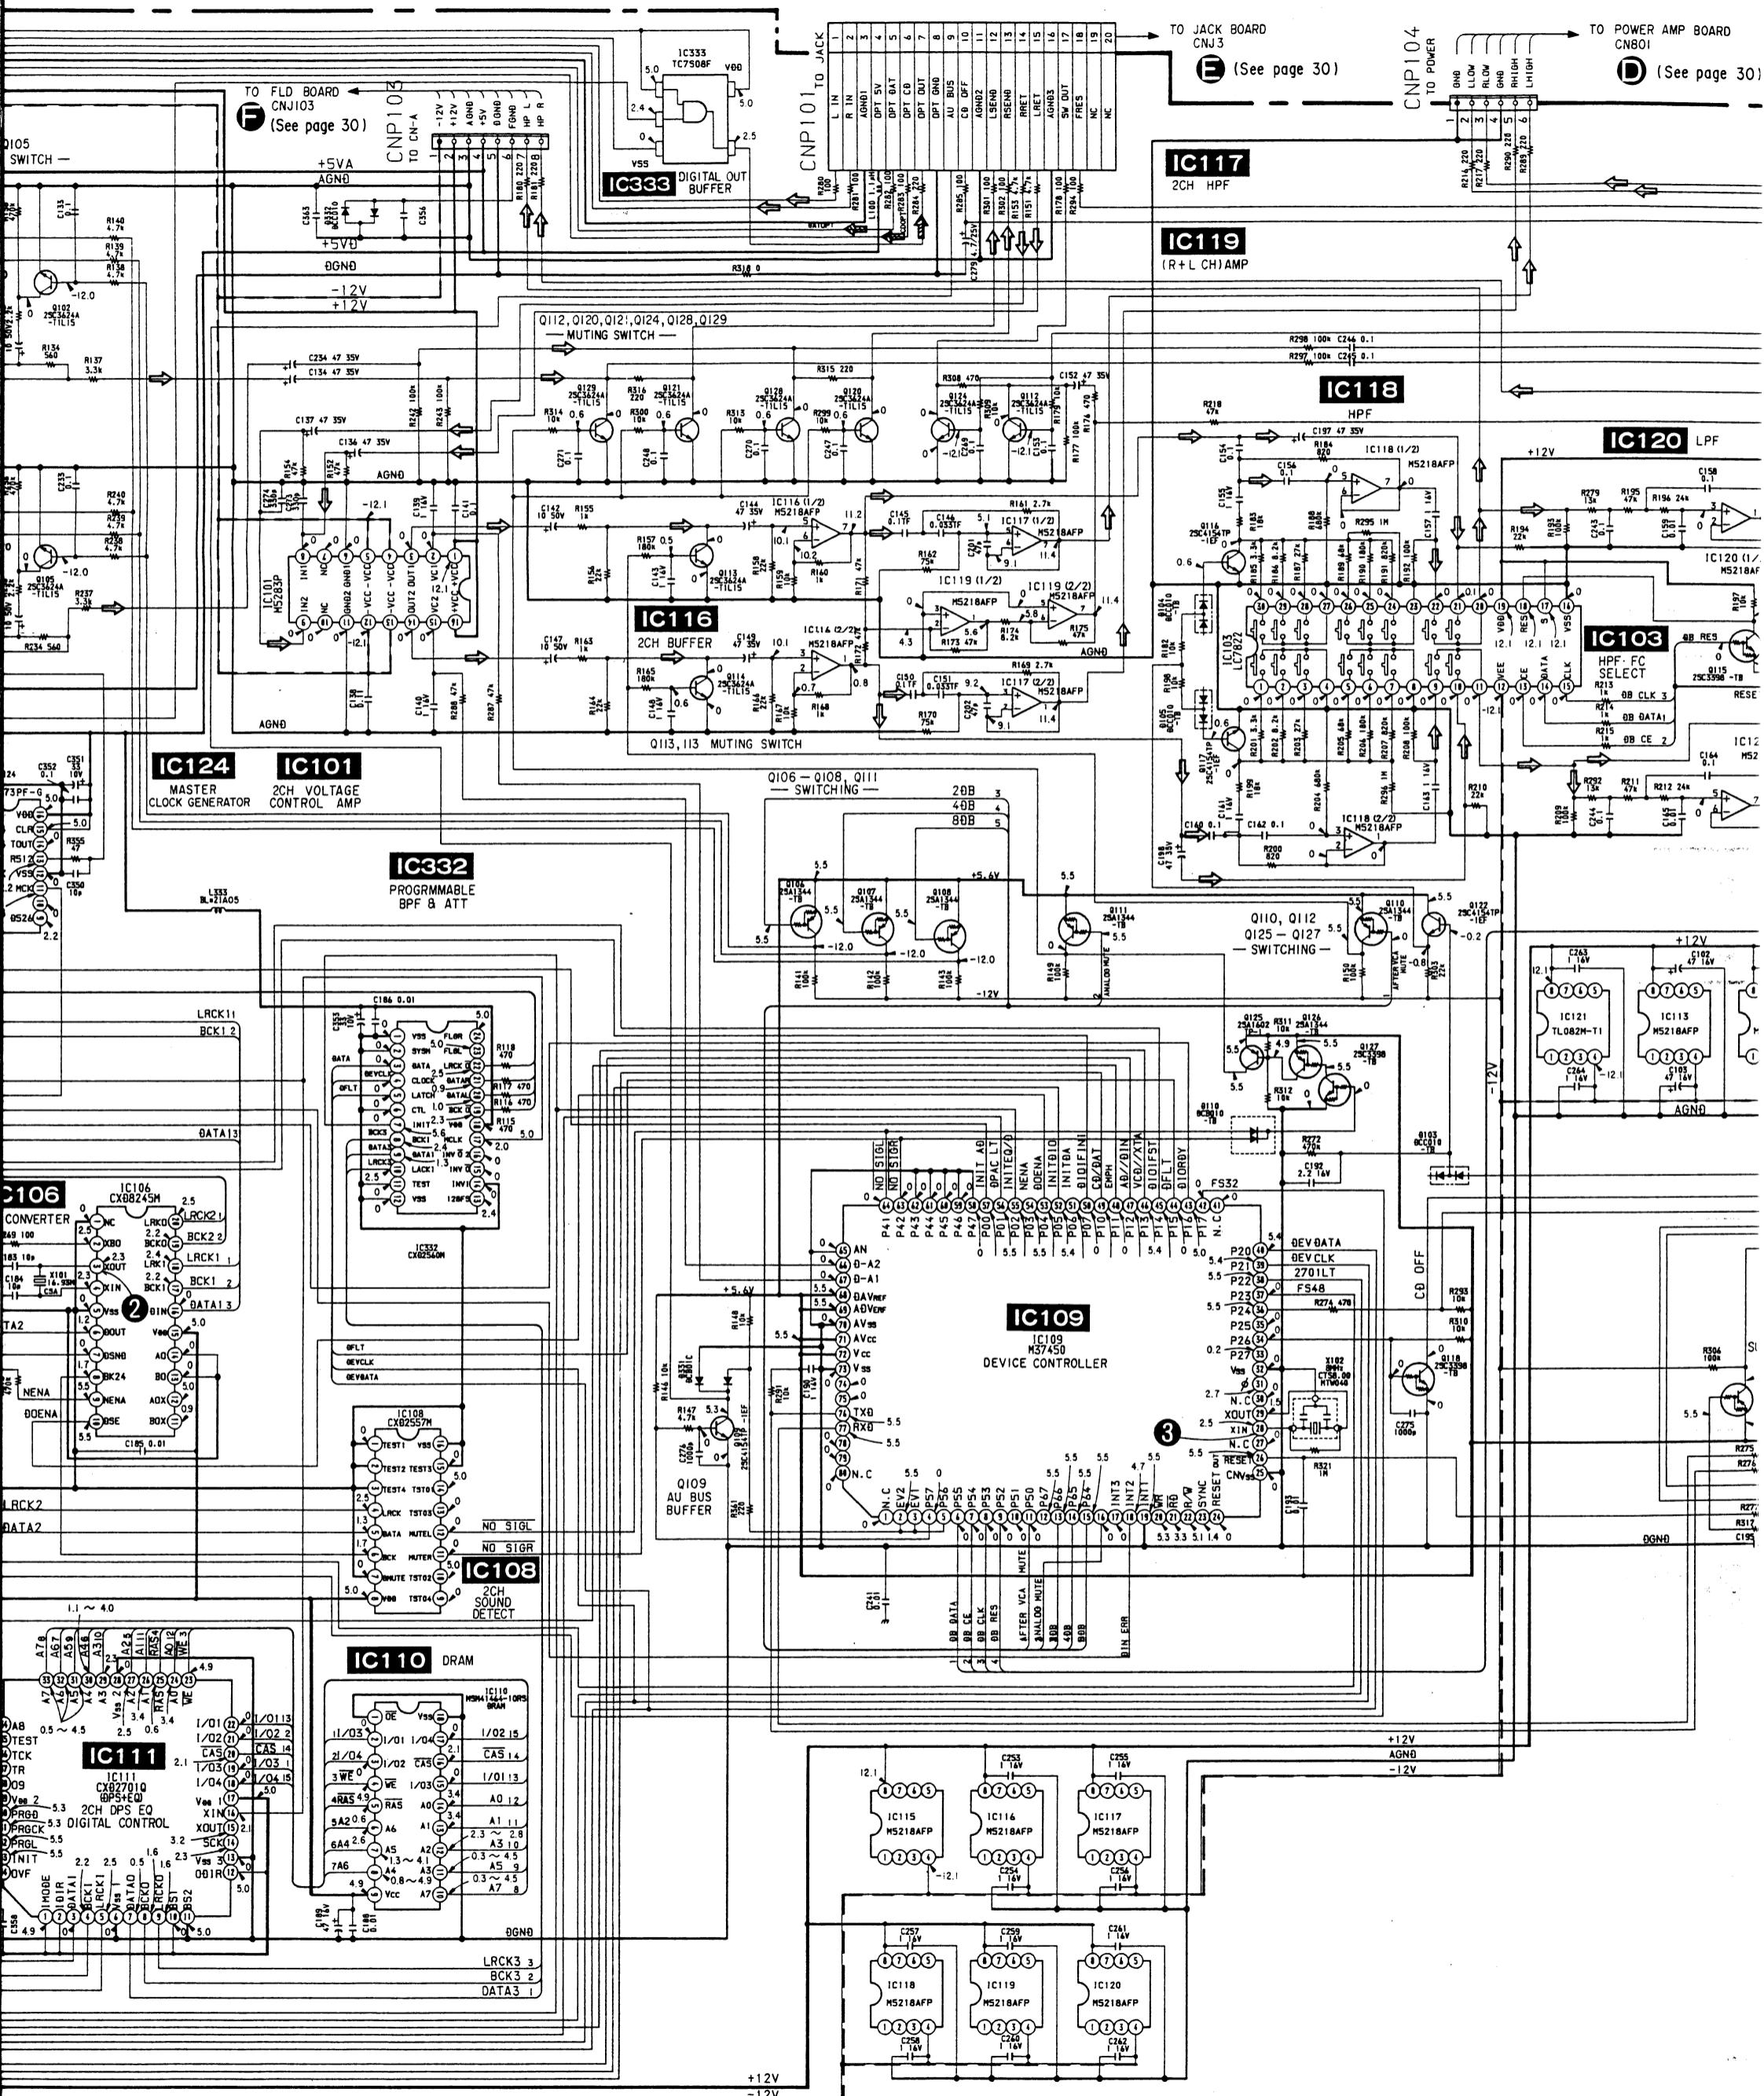

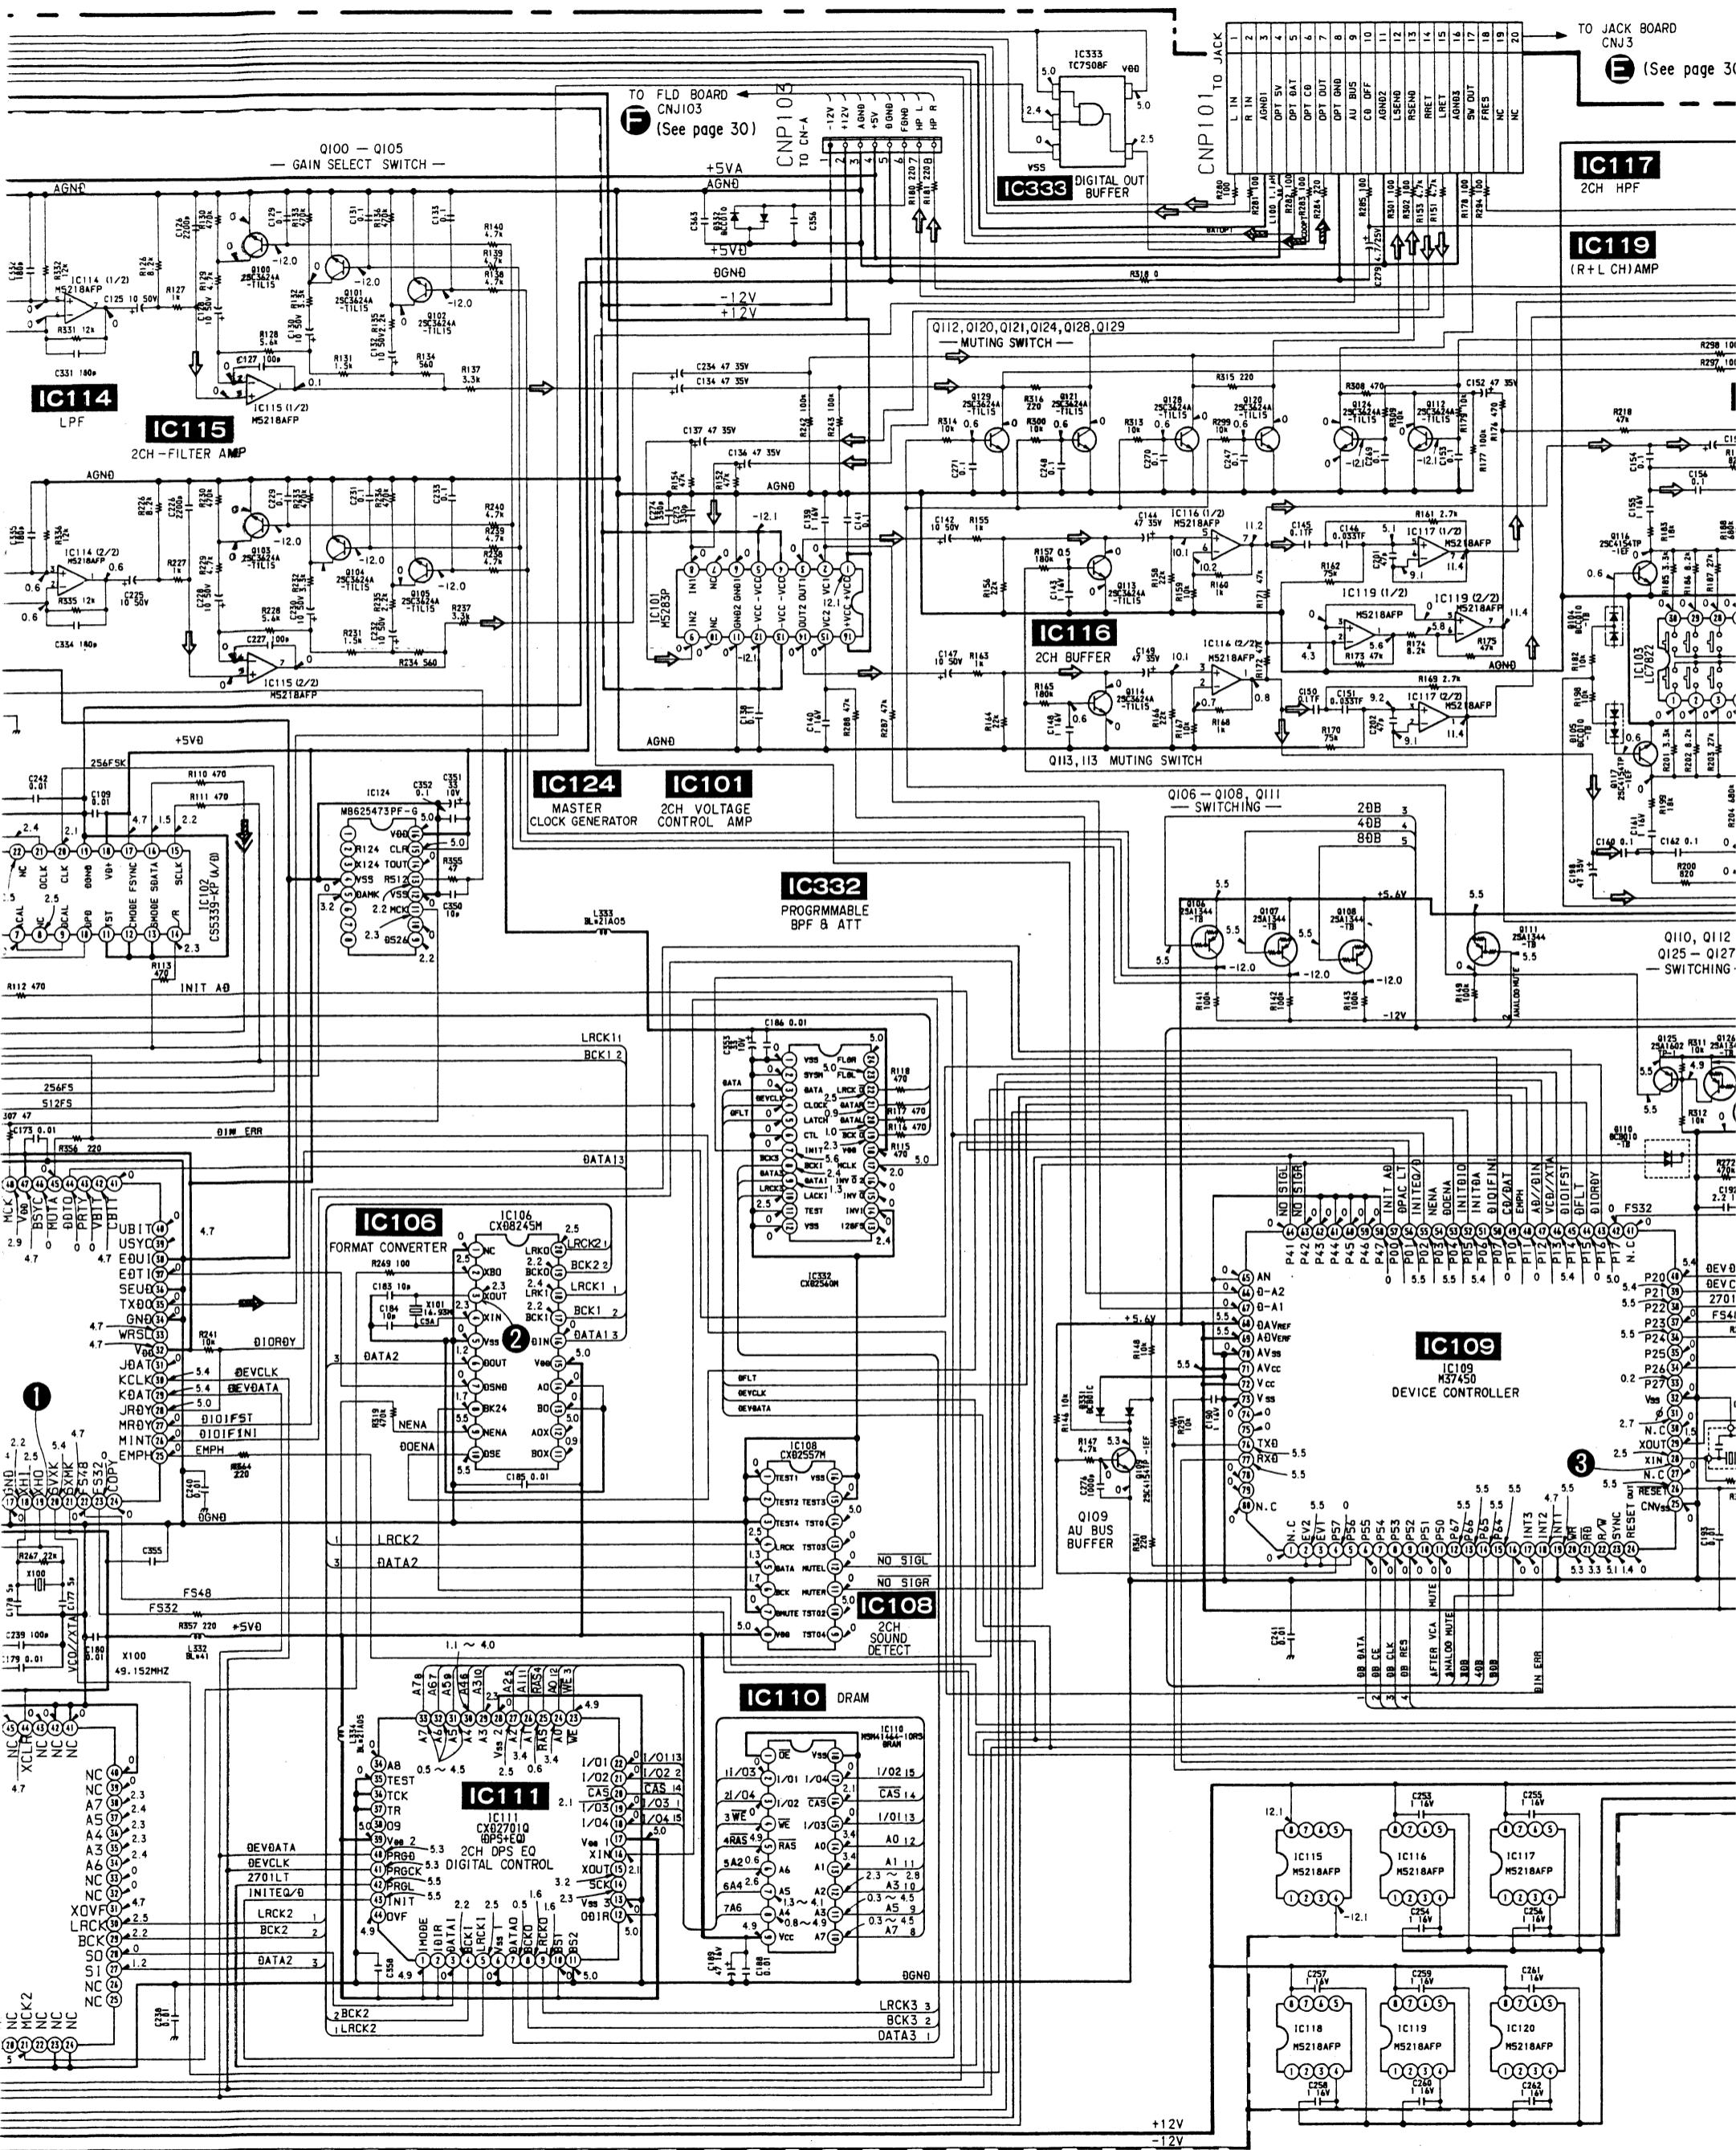

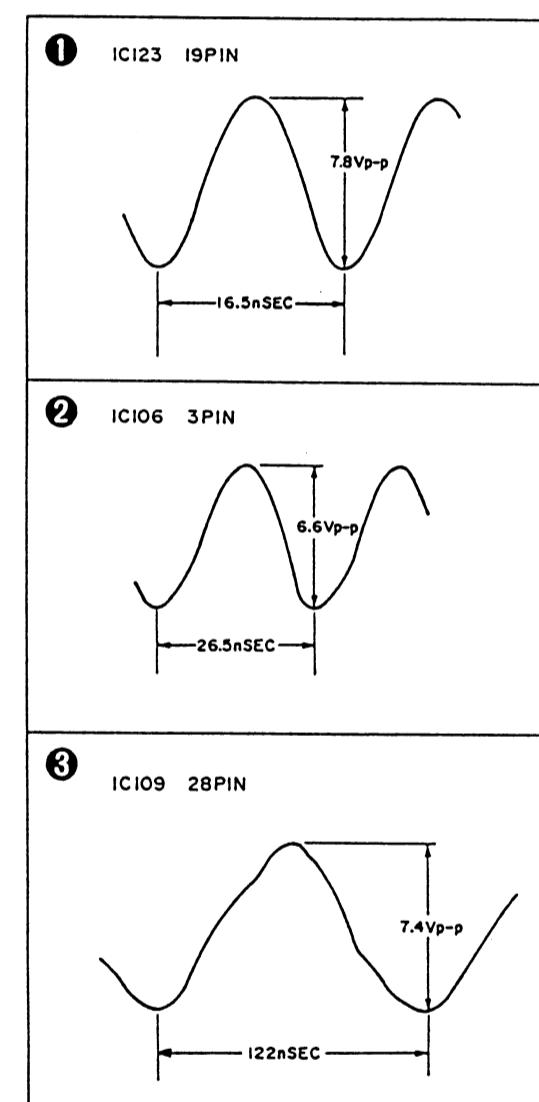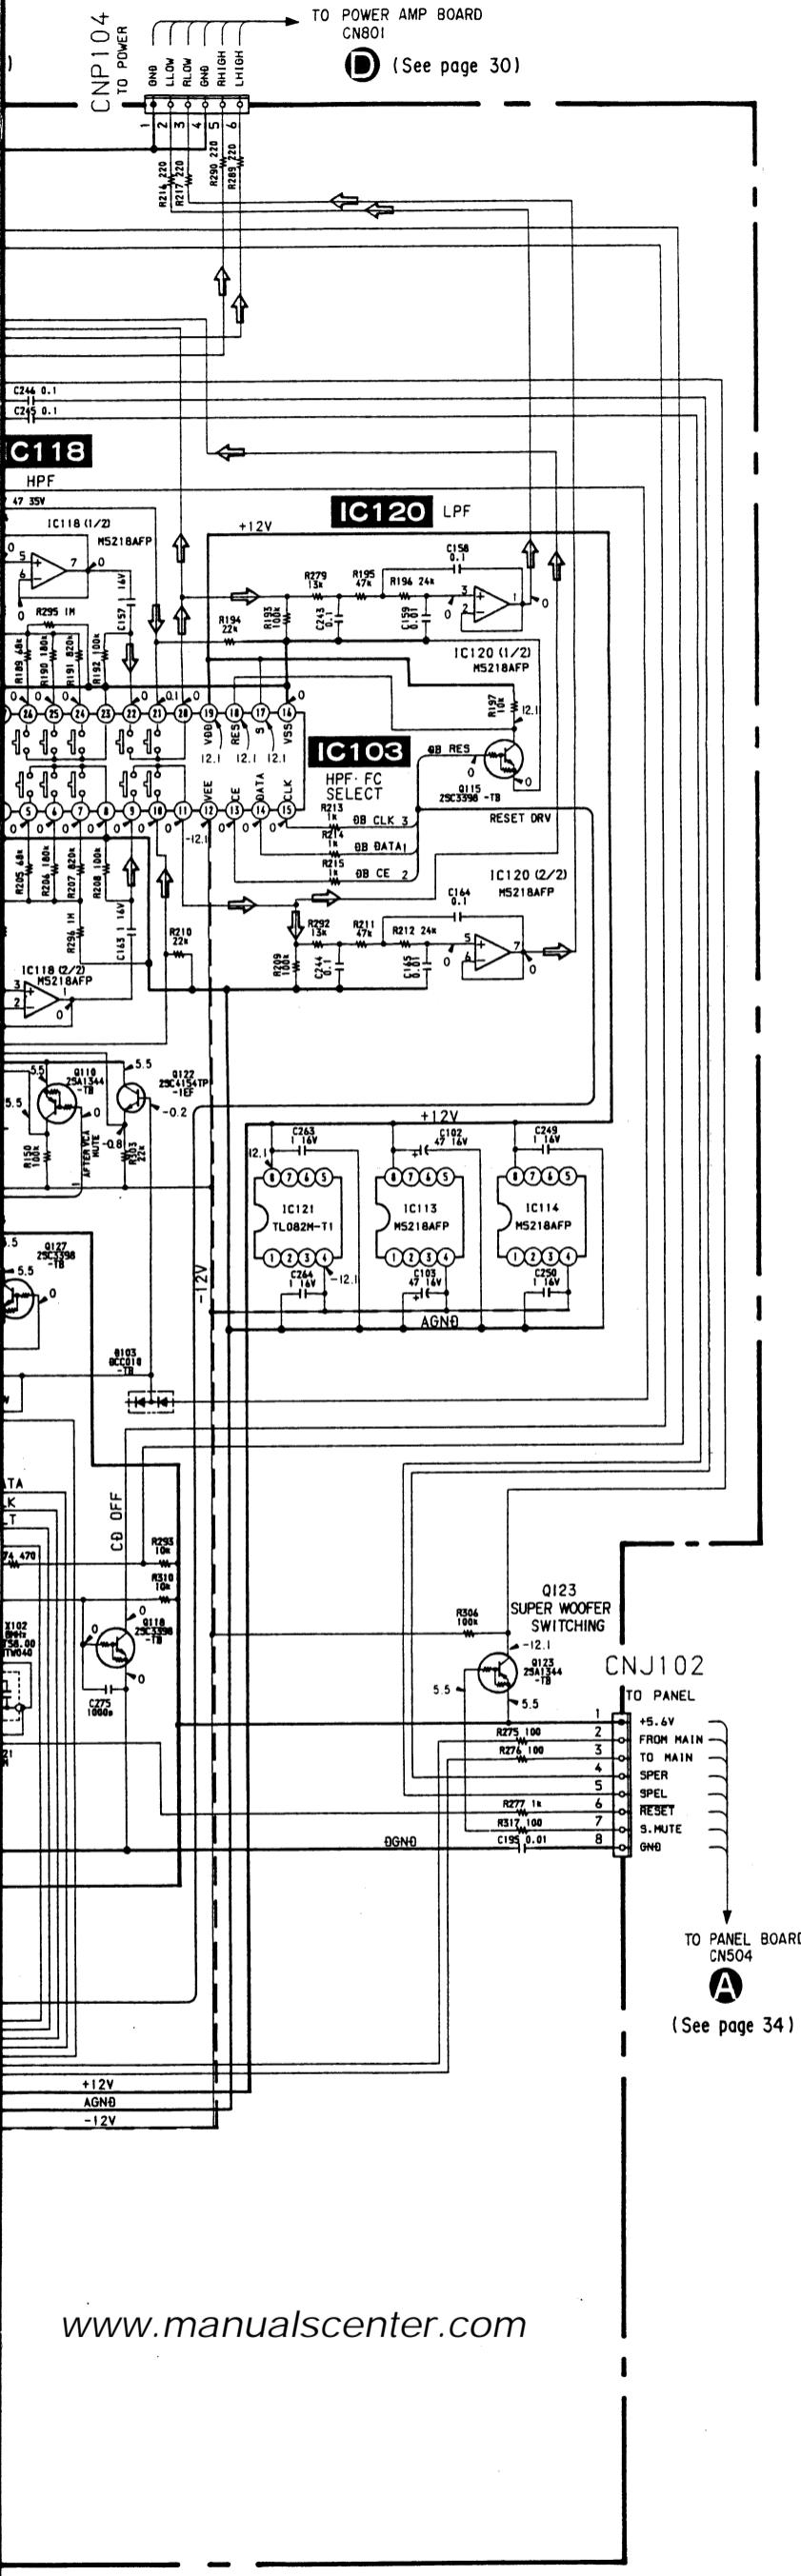

2-11. PRINTED WIRING BOARDS - DSP SECTION - • See page 16 to 17 for Circuit Boards Location and Semiconductor Lead Layouts.

1 2 3 4 5 6 7 8 9 10 11

A

8


C

□

8


8

1

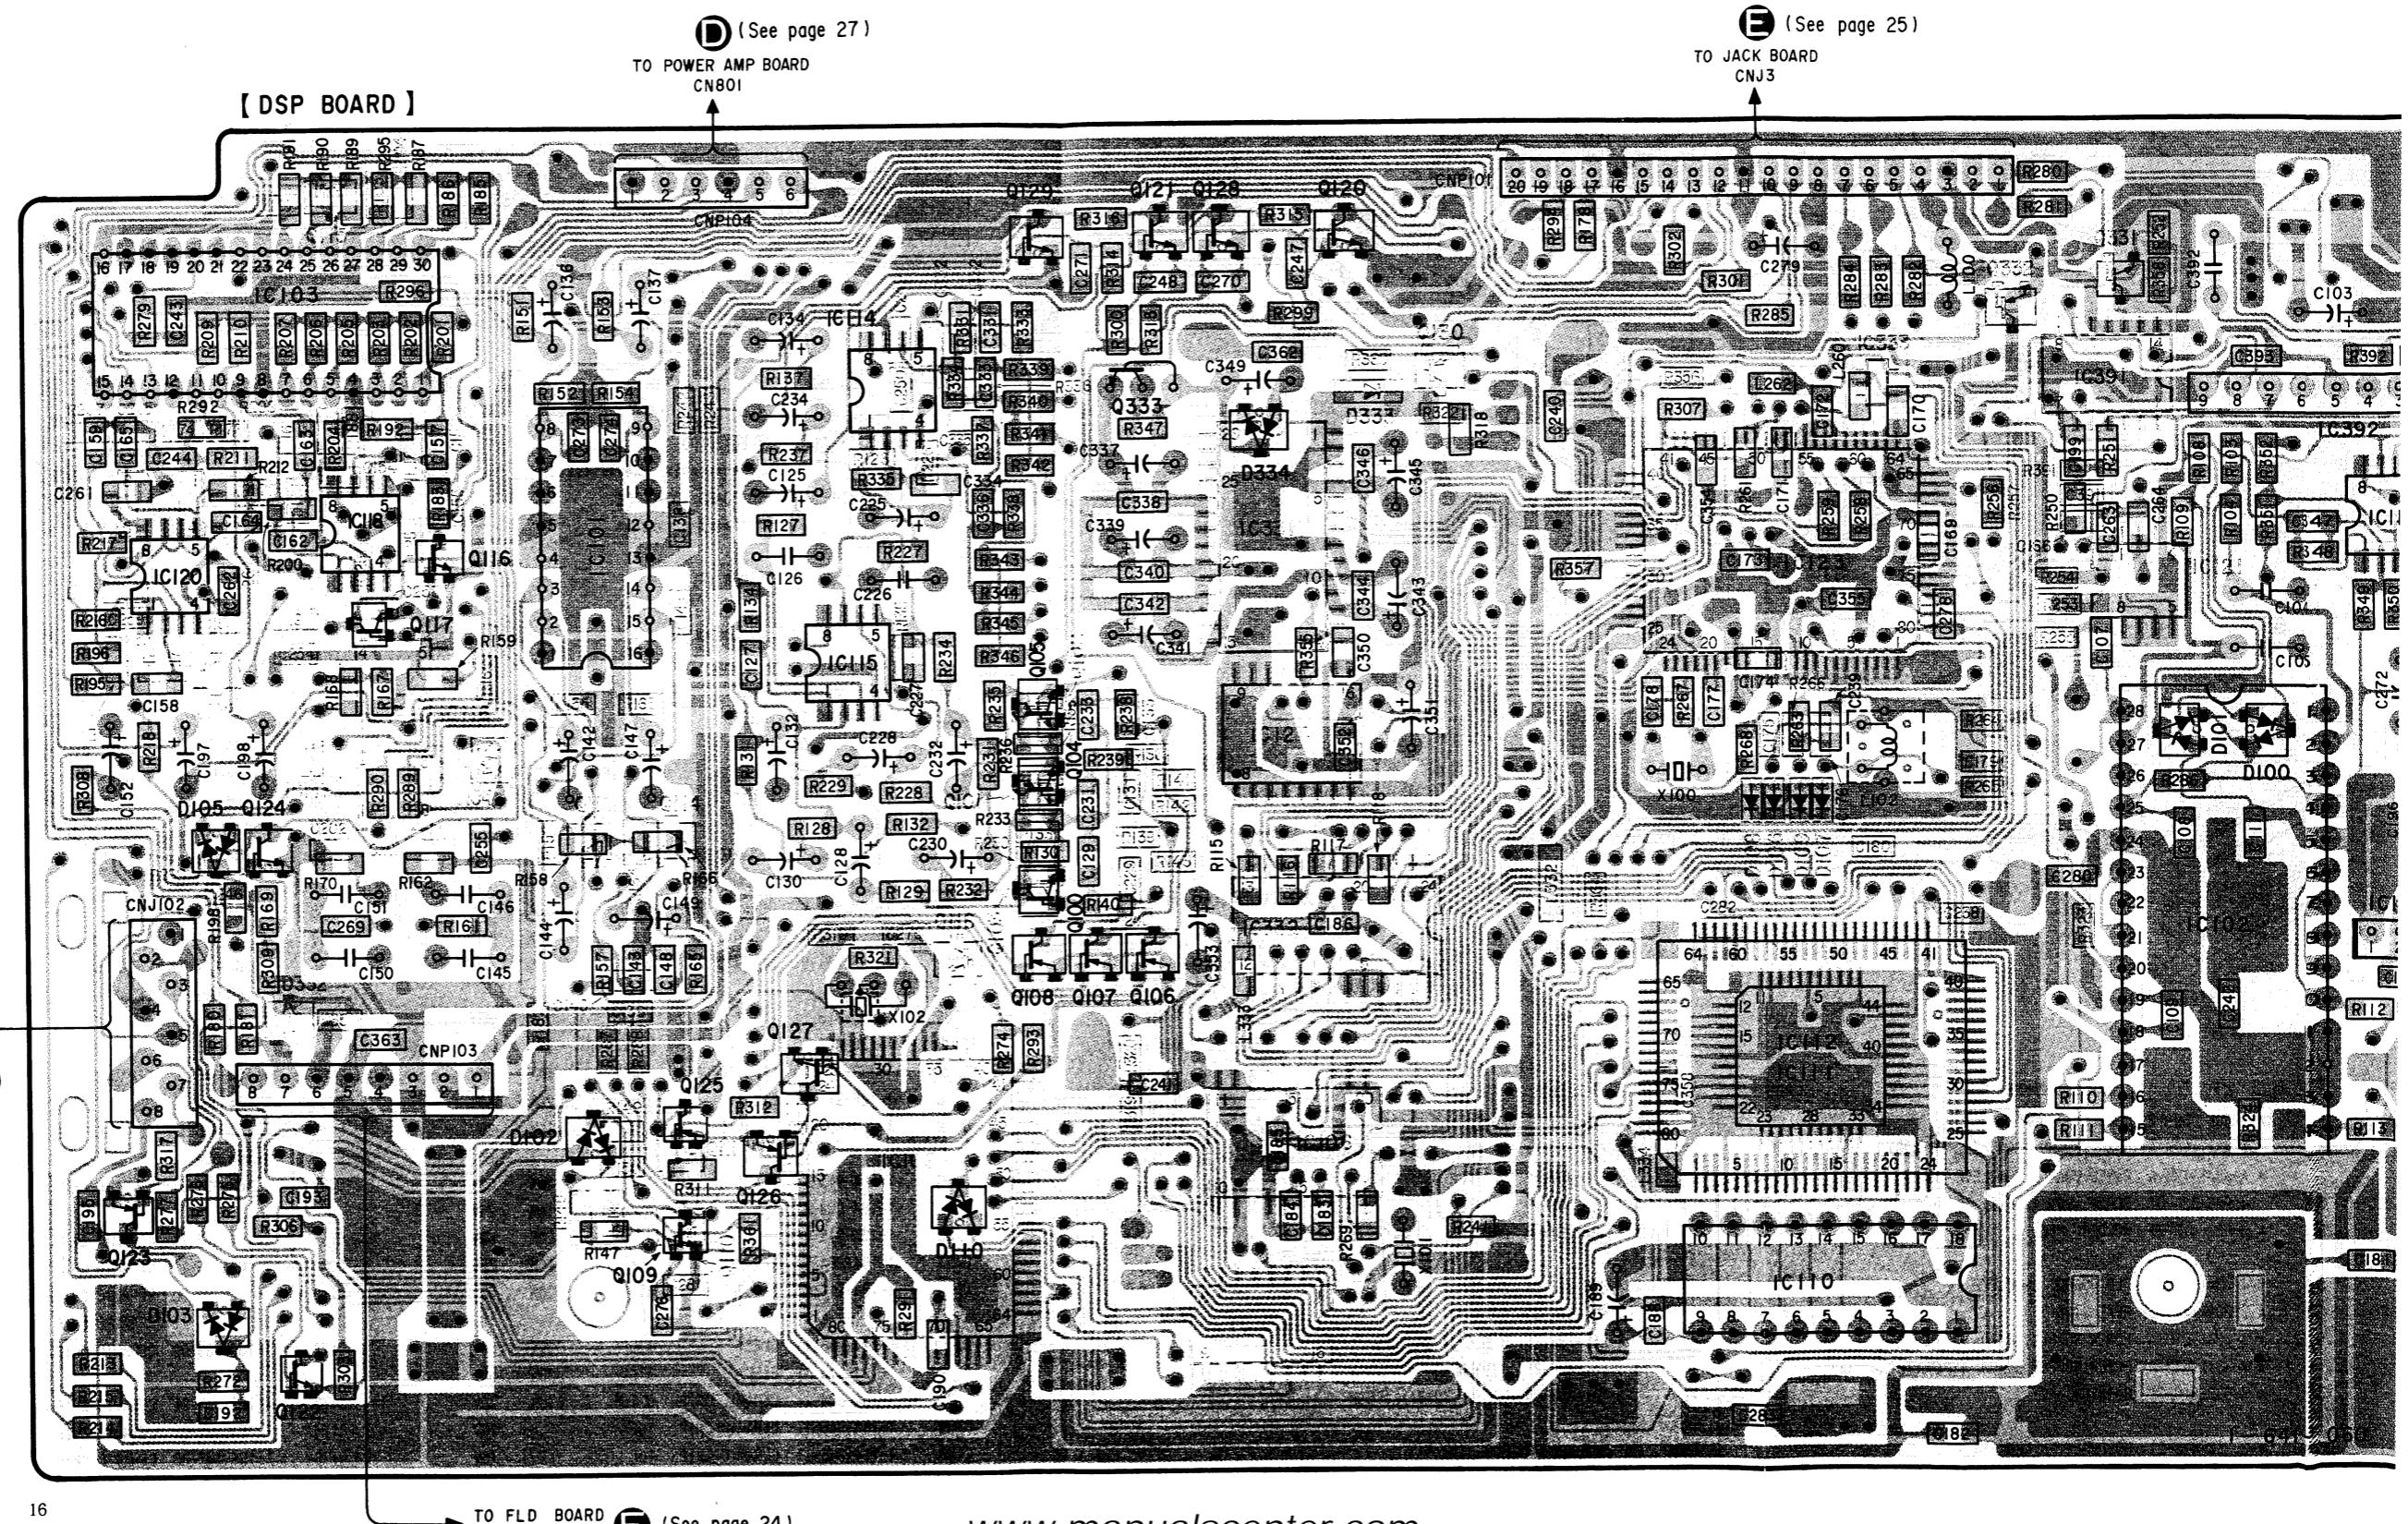

Semiconductor Lead Layouts.

6	7	8	9	10	11	12	13	14	15
---	---	---	---	----	----	----	----	----	----

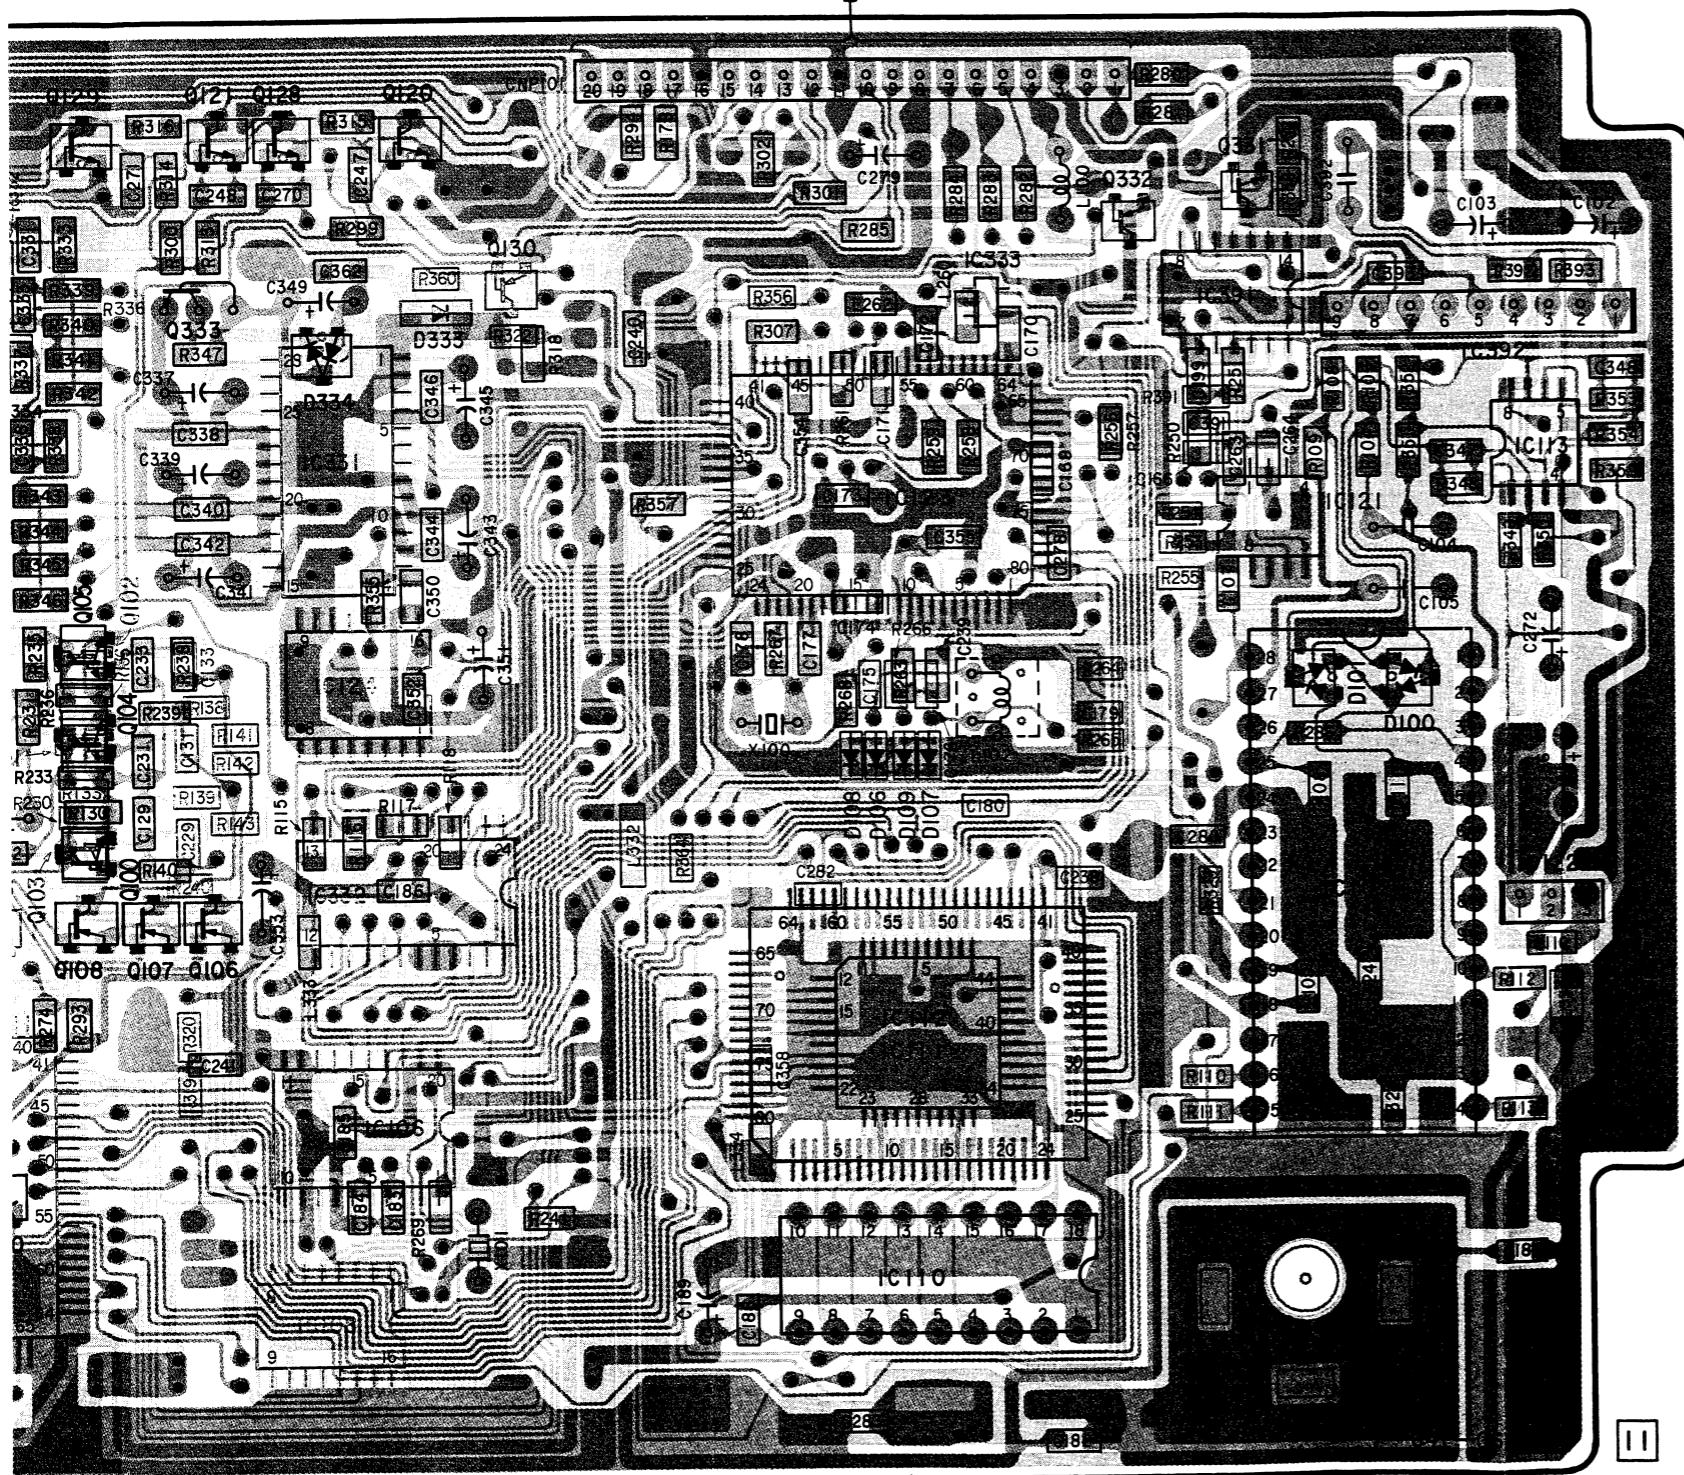

• Semiconductor Location

Ref. No.	Location	Ref. No.	Location
D100	D-11	Q125	F-4
D101	D-11	Q126	F-5
D102	F-4	Q127	E-5
D103	G-2	Q128	B-7
D104	D-4	Q129	B-6
D105	D-2	Q130	B-8
D106	D-9	Q331	B-11
D107	D-9	Q332	B-10
D108	D-9	Q333	B-6
D109	D-9		
D110	F-6		
D332	E-3		
D333	B-7		
D334	C-7		
IC101	C-4		
IC102	E-11		
IC103	B-3		
IC106	F-7		
IC108	G-7		
IC109	F-5		
IC110	F-9		
IC111	F-9		
IC112	E-9		
IC113	C-12		
IC114	B-5		
IC115	D-5		
IC116	D-3		
IC117	D-3		
IC118	C-3		
IC119	C-2		
IC120	C-2		
IC121	C-11		
IC122	E-12		
IC123	C-9		
IC124	D-7		
IC331	C-7		
IC332	E-7		
IC333	B-10		
IC391	B-11		
IC392	B-12		
Q100	E-6		
Q101	D-6		
Q102	D-6		
Q103	E-6		
Q104	D-6		
Q105	D-6		
Q106	E-6		
Q107	E-6		
Q108	E-6		
Q109	F-4		
Q110	F-4		
Q111	F-4		
Q112	D-2		
Q113	D-4		
Q114	D-4		
Q115	B-3		
Q116	C-3		
Q117	C-3		
Q118	E-6		
Q120	B-7		
Q121	B-7		
Q122	G-3		
Q123	F-2		
Q124	D-3		

Note on Mounting Diagram :

- : Parts extracted from the component side.
- : Through hole.
- : Pattern on the side which is seen.
- : Pattern of the rear side.

SECTION 3 EXPLODED VIEWS

NOTE :

- XX, - X mean standardized parts, so they may have some differences from the original one.
- Color Indication of Appearance Parts Example : KNOB, BALANCE (WHITE)...(RED)


↑ ↑
Parts color Cabinet's color

- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.
- Hardware (# mark) list is given in the last of this parts list.

The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.


- G : Germany model
- IT : Italian model

3-1. OVERALL SECTION 1

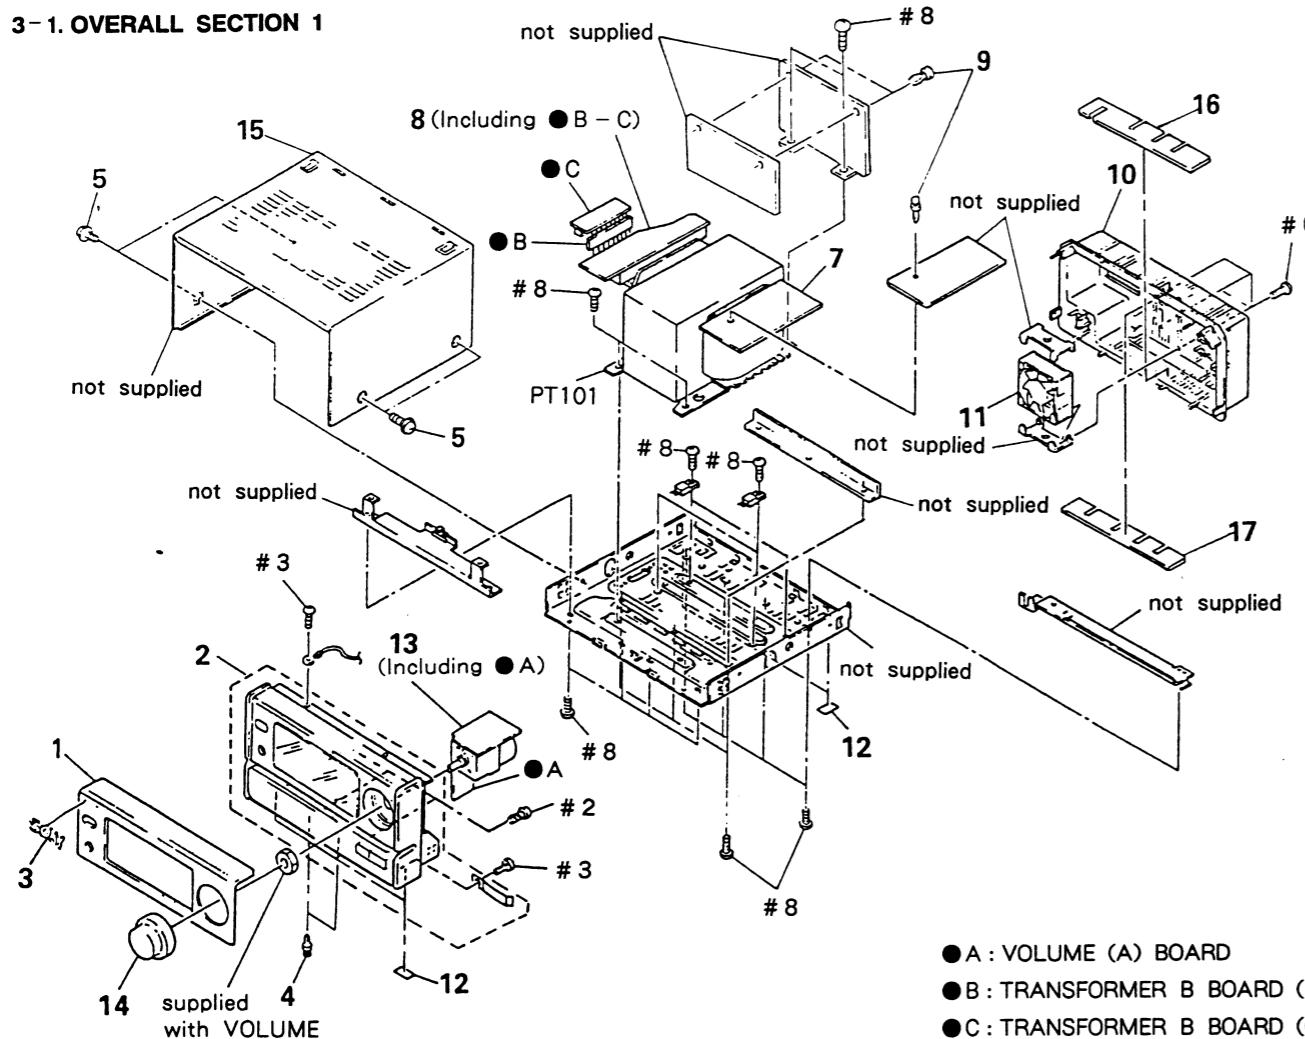


Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
1	X-4941-948-1	PANEL ASSY, FRONT		11	1-541-860-11	MOTOR, DC FAN	
2	X-4941-537-1	PANEL (BASE) ASSY (H5600)		12	4-930-336-01	FOOT (FELT)	
	X-4941-539-1	PANEL (BASE) ASSY (H6600)		13	* 1-638-906-12	VOLUME BOARD	
3	4-942-636-01	EMBLEM (NO. 3.5), SONY		14	X-4941-532-1	KNOB (VOLUME) ASSY	
4	4-812-134-00	RIVET NYLON, 3.5		15	* 4-932-841-41	CASE	
5	3-363-099-01	SCREW (CASE +3X8 TP2)		16	4-947-205-01	PLATE (A), ORNAMENTAL	
7	* 1-638-911-13	TRANSFORMER (A) BOARD		17	4-947-206-01	PLATE (B), ORNAMENTAL	
8	* 1-638-912-12	TRANSFORMER (B) BOARD		PT101	△1-450-355-11	TRANSFORMER, POWER (UK)	
9	4-812-134-11	RIVET NYLON, 3.5			△1-450-356-11	TRANSFORMER, POWER (AEP, G, IT)	
10	4-943-336-41	PANEL, BACK					

3-2. OVERALL SECTION 2

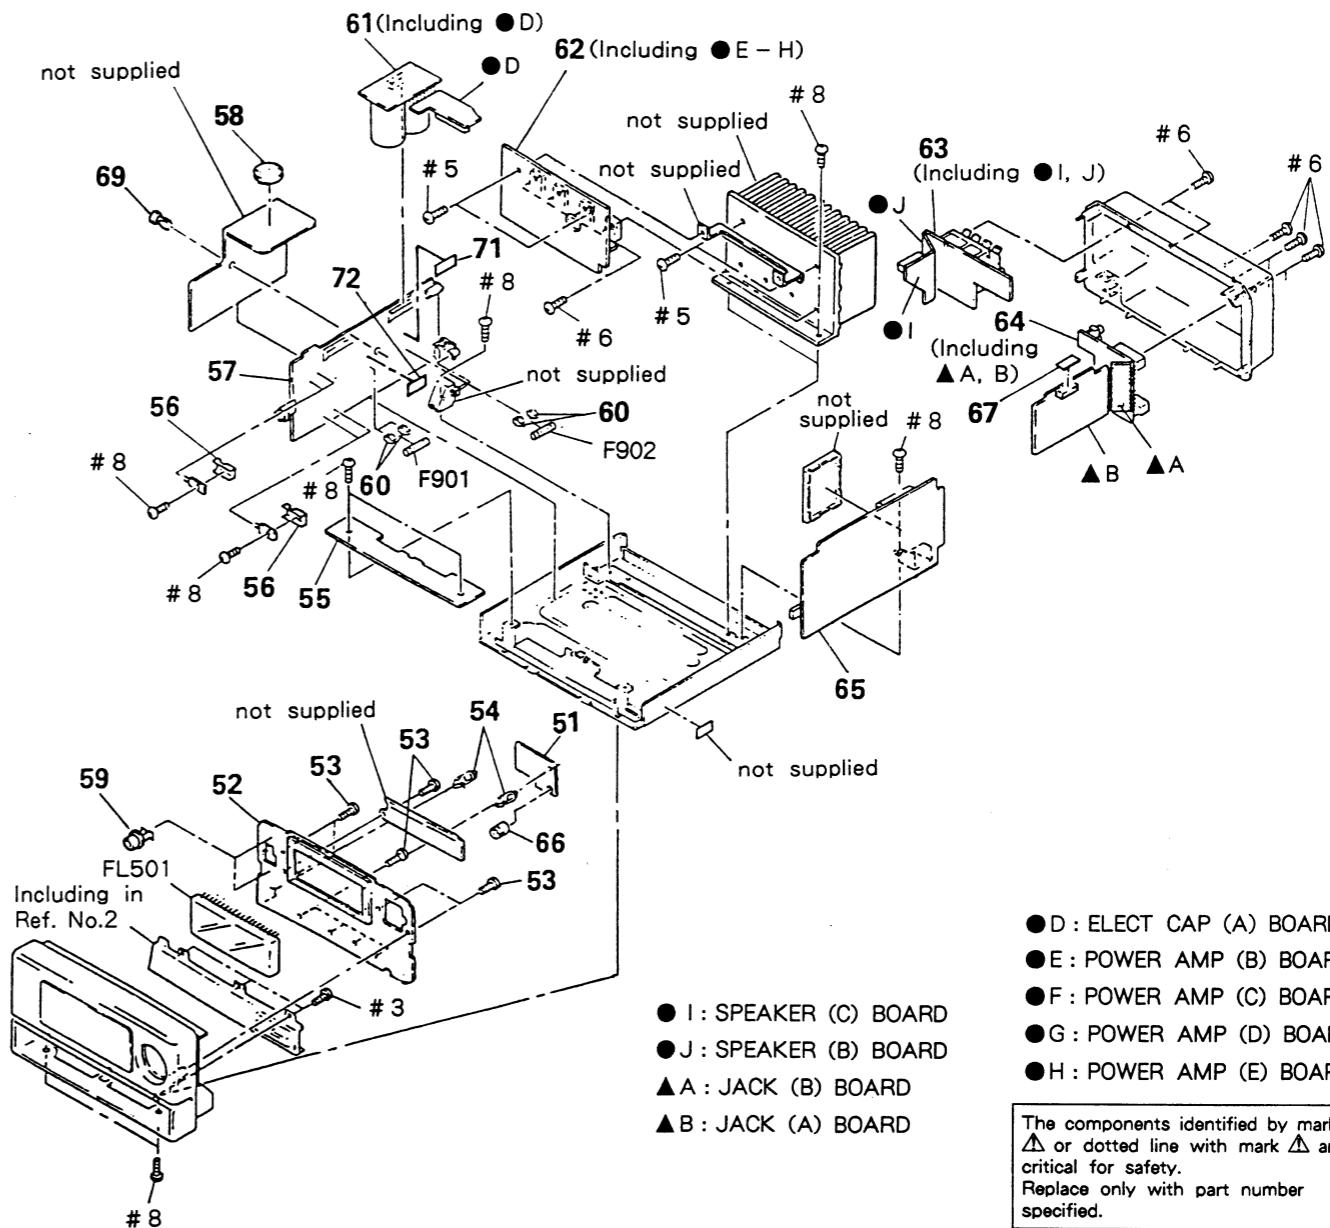

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
51	* 1-638-909-12	CONNECTOR BOARD		62	* A-4341-620-A	POWER AMP BOARD, COMPLETE (AEP, UK)	
52	* A-4341-606-A	PANEL BOARD, COMPLETE (H6600)		62	* A-4341-624-A	POWER AMP BOARD, COMPLETE (G, IT)	
	* A-4345-734-A	PANEL BOARD, COMPLETE (H5600)		63	* 1-638-907-12	SPEAKER BOARD	
53	4-928-635-01	SCREW, +BV (2.6X8) TAPPING		64	* 1-638-904-12	JACK BOARD	
54	* 3-682-419-71	HOLDER, PCB		65	* A-4341-586-A	DSP BOARD, COMPLETE	
55	* A-4341-598-A	FLD BOARD, COMPLETE		66	* 4-886-873-00	SPACER	
56	* 3-309-144-21	HEAT SINK		67	4-860-518-00	CUSHION	
57	* A-4341-619-A	POWER SUPPLY BOARD, COMPLETE (AEP, UK)		69	4-812-134-11	RIBET NYLON, 3.5	
	* A-4341-623-A	POWER SUPPLY BOARD, COMPLETE (G, IT)		70	* 3-561-427-21	CUSHION	
58	* 4-932-810-11	CUSHION (FL)		72	3-701-947-15	LABEL (T2.5A), FUSE	
59	* 3-362-478-21	HOLDER (T), LED		F901	△1-532-286-00	FUSE (T2.5A)	
60	1-533-213-31	HOLDER, FUSE		FL501	1-519-654-11	INDICATOR TUBE, FLUORESCENT	
61	* 1-638-910-12	ELECT CAP BOARD					

3-2. OVERALL SECTION 2

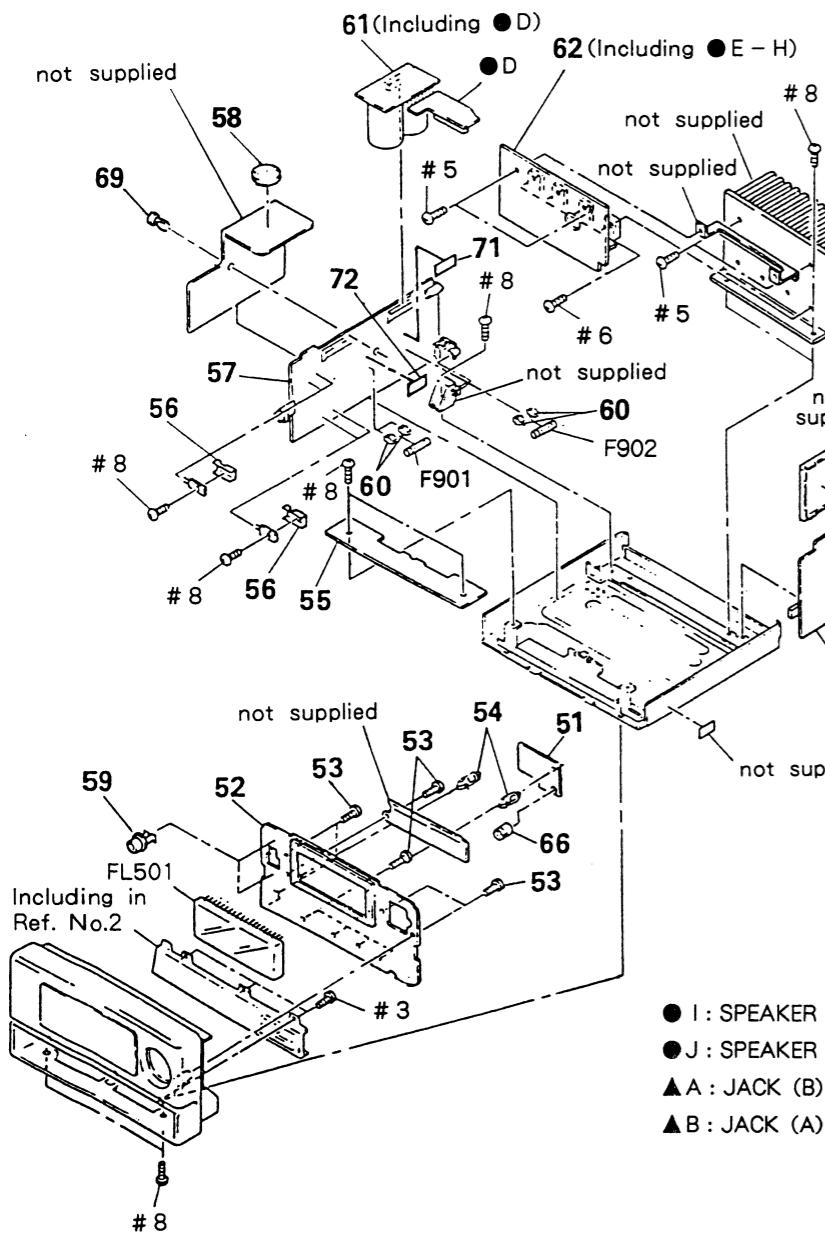

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
51	* 1-638-909-12	CONNECTOR BOARD		62	* A-4341-620-A	POWER AMP BOARD, COMPLETE (AEP, UK)	
52	* A-4341-606-A	PANEL BOARD, COMPLETE (H6600)		62	* A-4341-624-A	POWER AMP BOARD, COMPLETE (G, IT)	
	* A-4345-734-A	PANEL BOARD, COMPLETE (H5600)		63	* 1-638-907-12	SPEAKER BOARD	
53	4-928-635-01	SCREW, +BV (2.6X8) TAPPING		64	* 1-638-904-12	JACK BOARD	
54	* 3-682-419-71	HOLDER, PCB		65	* A-4341-586-A	DSP BOARD, COMPLETE	
55	* A-4341-598-A	FLD BOARD, COMPLETE		66	* 4-886-873-00	SPACER	
56	* 3-309-144-21	HEAT SINK		67	4-860-518-00	CUSHION	
57	* A-4341-619-A	POWER SUPPLY BOARD, COMPLETE (AEP, UK)		69	4-812-134-11	RIBET NYLON, 3.5	
	* A-4341-623-A	POWER SUPPLY BOARD, COMPLETE (G, IT)		70	* 3-561-427-21	CUSHION	
58	* 4-932-810-11	CUSHION (FL)		72	3-701-947-15	LABEL (T2.5A), FUSE	
59	* 3-362-478-21	HOLDER (T), LED		F901	△1-532-286-00	FUSE (T2.5A)	
60	1-533-213-31	HOLDER, FUSE		FL501	1-519-654-11	INDICATOR TUBE, FLUORESCENT	
61	* 1-638-910-12	ELECT CAP BOARD					

PANEL DSP

NOTE:

The components identified by mark \triangle or dotted line with mark \triangle are critical for safety.
Replace only with part number specified.

When indicating parts by reference number, please include the board name.

SECTION 4 ELECTRICAL PARTS LIST

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- XX, -X mean standardized parts, so they may have some difference from the original one.
- RESISTORS
All resistors are in ohms.
METAL : metal-film resistor
METAL OXIDE: Metal Oxide-film resistor
F : nonflammable
- SEMICONDUCTORS
In each case, u: μ , for example:
uA... : μ A..., μ PA..., μ PA...,
 μ PB... , μ PB..., μ PC..., μ PC...,
 μ PD... , μ PD...
- CAPACITORS :
uF : μ F
- COILS
uH : μ H

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks	
	* A-4341-606-A	PANEL BOARD, COMPLETE (H6600)		C141	1-164-004-11	CERAMIC CHIP	0.1uF 10% 25V	
	* A-4345-734-A	PANEL BOARD, COMPLETE (H5600)		C142	1-124-915-11	ELECT	10uF 20% 63V	
		*****		C143	1-164-346-11	CERAMIC CHIP	1uF 16V	
	* A-4341-586-A	DSP BOARD, COMPLETE		C144	1-124-910-11	ELECT	47uF 20% 50V	
		*****		C145	1-136-165-00	FILM	0.1uF 5% 50V	
	* 3-362-478-21	HOLDER (T), LED		C146	1-136-159-00	FILM	0.033uF 5% 50V	
		< CAPACITOR >		C147	1-124-915-11	ELECT	10uF 20% 63V	
	C102	1-124-589-11	ELECT	47uF 20% 16V	C148	1-164-346-11	CERAMIC CHIP	1uF 16V
	C103	1-124-589-11	ELECT	47uF 20% 16V	C149	1-124-910-11	ELECT	47uF 20% 50V
	C104	1-136-153-00	FILM	0.01uF 5% 50V	C150	1-136-165-00	FILM	0.1uF 5% 50V
	C105	1-136-153-00	FILM	0.01uF 5% 50V	C151	1-136-159-00	FILM	0.033uF 5% 50V
	C106	1-124-589-11	ELECT	47uF 20% 16V	C152	1-124-910-11	ELECT	47uF 20% 50V
	C107	1-164-004-11	CERAMIC CHIP	0.1uF 10% 25V	C153	1-164-004-11	CERAMIC CHIP	0.1uF 10% 25V
	C108	1-164-004-11	CERAMIC CHIP	0.1uF 10% 25V	C154	1-164-004-11	CERAMIC CHIP	0.1uF 10% 25V
	C109	1-163-021-91	CERAMIC CHIP	0.01uF 10% 50V	C155	1-164-346-11	CERAMIC CHIP	1uF 16V
	C110	1-163-021-91	CERAMIC CHIP	0.01uF 10% 50V	C156	1-164-004-11	CERAMIC CHIP	0.1uF 10% 25V
	C111	1-163-021-91	CERAMIC CHIP	0.01uF 10% 50V	C157	1-164-346-11	CERAMIC CHIP	1uF 16V
	C125	1-124-915-11	ELECT	10uF 20% 63V	C158	1-164-004-11	CERAMIC CHIP	0.1uF 10% 25V
	C126	1-130-475-00	MYLAR	0.0022uF 5% 50V	C159	1-163-021-91	CERAMIC CHIP	0.01uF 10% 50V
	C127	1-163-117-00	CERAMIC CHIP	100PF 5% 50V	C160	1-164-004-11	CERAMIC CHIP	0.1uF 10% 25V
	C128	1-124-915-11	ELECT	10uF 20% 63V	C161	1-164-346-11	CERAMIC CHIP	1uF 16V
	C129	1-164-004-11	CERAMIC CHIP	0.1uF 10% 25V	C162	1-164-004-11	CERAMIC CHIP	0.1uF 10% 25V
	C130	1-124-915-11	ELECT	10uF 20% 63V	C163	1-164-346-11	CERAMIC CHIP	1uF 16V
	C131	1-164-004-11	CERAMIC CHIP	0.1uF 10% 25V	C164	1-164-004-11	CERAMIC CHIP	0.1uF 10% 25V
	C132	1-124-915-11	ELECT	10uF 20% 63V	C165	1-163-021-91	CERAMIC CHIP	0.01uF 10% 50V
	C133	1-164-004-11	CERAMIC CHIP	0.1uF 10% 25V	C166	1-164-004-11	CERAMIC CHIP	0.1uF 10% 25V
	C134	1-124-910-11	ELECT	47uF 20% 50V	C169	1-164-346-11	CERAMIC CHIP	1uF 16V
	C136	1-124-910-11	ELECT	47uF 20% 50V	C170	1-163-109-00	CERAMIC CHIP	47PF 5% 50V
	C137	1-124-910-11	ELECT	47uF 20% 50V	C171	1-163-227-11	CERAMIC CHIP	10PF 5% 50V
	C138	1-164-004-11	CERAMIC CHIP	0.1uF 10% 25V	C172	1-163-109-00	CERAMIC CHIP	47PF 5% 50V
	C139	1-164-346-11	CERAMIC CHIP	1uF 16V	C173	1-163-021-91	CERAMIC CHIP	0.01uF 10% 50V
	C140	1-164-346-11	CERAMIC CHIP	1uF 16V	C174	1-163-021-91	CERAMIC CHIP	0.01uF 10% 50V
				C175	1-163-141-00	CERAMIC CHIP	0.001uF 5% 50V	
				C176	1-163-141-00	CERAMIC CHIP	0.001uF 5% 50V	
				C177	1-163-222-91	CERAMIC CHIP	5PF 0.25PF 50V	

PANEL **DSP**

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>			<u>Remarks</u>	<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>			<u>Remarks</u>
C178	1-163-222-91	CERAMIC CHIP	5PF	0.25PF	50V	C256	1-164-346-11	CERAMIC CHIP	1uF		16V
C179	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V	C257	1-164-346-11	CERAMIC CHIP	1uF		16V
C180	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V	C258	1-164-346-11	CERAMIC CHIP	1uF		16V
C183	1-163-227-11	CERAMIC CHIP	10PF	5%	50V	C259	1-164-346-11	CERAMIC CHIP	1uF		16V
C184	1-163-227-11	CERAMIC CHIP	10PF	5%	50V	C260	1-164-346-11	CERAMIC CHIP	1uF		16V
C185	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V	C261	1-164-346-11	CERAMIC CHIP	1uF		16V
C186	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V	C262	1-164-346-11	CERAMIC CHIP	1uF		16V
C188	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V	C263	1-164-346-11	CERAMIC CHIP	1uF		16V
C189	1-124-589-11	ELECT	47uF	20%	16V	C264	1-164-346-11	CERAMIC CHIP	1uF		16V
C190	1-164-346-11	CERAMIC CHIP	1uF		16V	C269	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C192	1-164-505-11	CERAMIC CHIP	2.2uF		16V	C270	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C193	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V	C271	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C195	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V	C272	1-124-589-11	ELECT	47uF	20%	16V
C196	1-124-589-11	ELECT	47uF	20%	16V	C273	1-163-129-00	CERAMIC CHIP	330PF	5%	50V
C197	1-124-910-11	ELECT	47uF	20%	50V	C274	1-163-129-00	CERAMIC CHIP	330PF	5%	50V
C198	1-124-910-11	ELECT	47uF	20%	50V	C275	1-163-141-00	CERAMIC CHIP	0.001uF	5%	50V
C199	1-163-129-00	CERAMIC CHIP	330PF	5%	50V	C276	1-163-141-00	CERAMIC CHIP	0.001uF	5%	50V
C201	1-163-109-00	CERAMIC CHIP	47PF	5%	50V	C279	1-126-163-11	ELECT	4.7uF	20%	50V
C202	1-163-109-00	CERAMIC CHIP	47PF	5%	50V	C280	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C225	1-124-915-11	ELECT	10uF	20%	63V	C282	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V
C226	1-130-475-00	MYLAR	0.0022uF	5%	50V	C283	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C227	1-163-117-00	CERAMIC CHIP	100PF	5%	50V	C331	1-163-123-00	CERAMIC CHIP	180PF	5%	50V
C228	1-124-915-11	ELECT	10uF	20%	63V	C332	1-163-123-00	CERAMIC CHIP	180PF	5%	50V
C229	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V	C333	1-163-131-00	CERAMIC CHIP	390PF	5%	50V
C230	1-124-915-11	ELECT	10uF	20%	63V	C334	1-163-123-00	CERAMIC CHIP	180PF	5%	50V
C231	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V	C335	1-163-123-00	CERAMIC CHIP	180PF	5%	50V
C232	1-124-915-11	ELECT	10uF	20%	63V	C336	1-163-131-00	CERAMIC CHIP	390PF	5%	50V
C233	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V	C337	1-124-229-00	ELECT	33uF	20%	10V
C234	1-124-910-11	ELECT	47uF	20%	50V	C338	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C238	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V	C339	1-124-229-00	ELECT	33uF	20%	10V
C239	1-163-117-00	CERAMIC CHIP	100PF	5%	50V	C340	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C240	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V	C341	1-124-229-00	ELECT	33uF	20%	10V
C241	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V	C342	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V
C242	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V	C343	1-124-229-00	ELECT	33uF	20%	10V
C243	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V	C344	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C244	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V	C345	1-124-229-00	ELECT	33uF	20%	10V
C245	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V	C346	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C246	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V	C347	1-163-101-00	CERAMIC CHIP	22PF	5%	50V
C247	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V	C348	1-163-101-00	CERAMIC CHIP	22PF	5%	50V
C248	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V	C349	1-126-157-11	ELECT	10uF	20%	16V
C249	1-164-346-11	CERAMIC CHIP	1uF		16V	C350	1-163-222-91	CERAMIC CHIP	5PF	0.25PF	50V
C250	1-164-346-11	CERAMIC CHIP	1uF		16V	C351	1-124-229-00	ELECT	33uF	20%	10V
C253	1-164-346-11	CERAMIC CHIP	1uF		16V	C352	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C254	1-164-346-11	CERAMIC CHIP	1uF		16V	C353	1-124-229-00	ELECT	33uF	20%	10V
C255	1-164-346-11	CERAMIC CHIP	1uF		16V	C355	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V

PANEL **DSP**

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remarks</u>			<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remarks</u>
C356	1-163-141-00	CERAMIC CHIP	0.001uF	5%	50V	D105	8-719-800-76	DIODE	1SS226
C357	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V	D106	8-719-002-81	DIODE	1T363
C358	1-163-021-91	CERAMIC CHIP	0.01uF	10%	50V	D107	8-719-002-81	DIODE	1T363
C362	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V	D108	8-719-002-81	DIODE	1T363
C363	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V	D109	8-719-002-81	DIODE	1T363
C391	1-163-117-00	CERAMIC CHIP	100PF	5%	50V	D110	8-719-990-39	DIODE	DCB010
C392	1-136-153-00	FILM	0.01uF	5%	50V	D332	8-719-800-76	DIODE	1SS226
C393	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V	D333	8-719-210-39	DIODE	EC100S-04
C501	1-124-667-11	ELECT	10uF	20%	100V	D334	8-719-106-08	DIODE	RD6.2M-B2
C502	1-124-667-11	ELECT	10uF	20%	100V	D501	8-719-977-03	DIODE	DTZ5.6B
C505	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V	D502	8-719-990-39	DIODE	DCB010
C507	1-124-261-00	ELECT	10uF	20%	50V	D503	8-719-990-39	DIODE	DCB010
C508	1-124-589-11	ELECT	47uF	20%	16V	D504	8-719-301-39	LED	SEL2210S-D
C509	1-126-163-11	ELECT	4.7uF	20%	50V	D505	8-719-301-39	LED	SEL2210S-D
C510	1-126-301-11	ELECT	1uF	20%	50V	D506	8-719-301-39	LED	SEL2210S-D
C511	1-126-163-11	ELECT	4.7uF	20%	50V	D507	8-719-301-39	LED	SEL2210S-D
C513	1-163-124-00	CERAMIC CHIP	200PF	5%	50V	D508	8-719-301-39	LED	SEL2210S-D
C521	1-124-589-11	ELECT	47uF	20%	16V	D509	8-719-301-39	LED	SEL2210S-D
C522	1-124-589-11	ELECT	47uF	20%	16V	D510	8-719-301-39	LED	SEL2210S-D
C523	1-163-104-00	CERAMIC CHIP	30PF	5%	50V	D511	8-719-301-39	LED	SEL2210S-D
C524	1-163-104-00	CERAMIC CHIP	30PF	5%	50V	D512	8-719-301-39	LED	SEL2210S-D
C525	1-126-176-11	ELECT	220uF	20%	10V	D514	8-719-301-44	LED	SEL2410E-D
C526	1-124-261-00	ELECT	10uF	20%	50V	D515	8-719-301-44	LED	SEL2410E-D
C527	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V	D521	8-719-977-04	DIODE	DTZ5.6C
C528	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V	D522	8-719-977-04	DIODE	DTZ5.6C
C529	1-124-234-00	ELECT	22uF	20%	16V	D523	8-719-990-39	DIODE	DCB010
C530	1-163-141-00	CERAMIC CHIP	0.001uF	5%	50V	< INDICATOR TUBE >			
C531	1-163-141-00	CERAMIC CHIP	0.001uF	5%	50V	FL501	1-519-654-11	INDICATOR TUBE, FLUORESCENT	
< CONNECTOR >									
CN501	* 1-568-318-11	PLUG, CONNECTOR 6P							< IC >
CN502	* 1-568-320-11	PLUG, CONNECTOR 8P							
CN503	1-561-115-00	SOCKET, CONNECTOR 6P				IC101	8-759-635-26	IC	M5283P
CN504	* 1-568-320-11	PLUG, CONNECTOR 8P				IC102	8-759-504-36	IC	AK5339-KP
CNJ102	1-568-319-11	SOCKET, CONNECTOR 8P				IC103	8-759-805-14	IC	LC7822
CNP101	* 1-566-154-11	CONNECTOR, BOARD TO BOARD 20P				IC106	8-759-511-68	IC	CXD8245M
CNP103	1-573-146-11	PLUG, CONNECTOR 8P				IC108	8-752-339-86	IC	CXD2557M
CNP104	* 1-564-509-11	PLUG, CONNECTOR 6P				IC109	8-759-041-72	IC	M37450M8-464FP
< DIODE >									
D100	8-719-800-76	DIODE	1SS226			IC110	8-759-973-04	IC	MSM41464-10RS-K
D101	8-719-800-76	DIODE	1SS226			IC111	8-752-341-99	IC	CXD2701Q
D102	8-719-990-39	DIODE	DCB010			IC112	8-752-332-80	IC	CXD1160AQ
D103	8-719-800-76	DIODE	1SS226			IC113	8-759-636-55	IC	M5218AFFF
D104	8-719-800-76	DIODE	1SS226						

			PANEL			DSP		
Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks	
IC114	8-759-636-55	IC M5218AFP		Q105	8-729-107-46	TRANSISTOR 2SC3624A-L15		
IC115	8-759-636-55	IC M5218AFP		Q106	8-729-805-65	TRANSISTOR 2SA1344		
IC116	8-759-636-55	IC M5218AFP		Q107	8-729-805-65	TRANSISTOR 2SA1344		
IC117	8-759-636-55	IC M5218AFP		Q108	8-729-805-65	TRANSISTOR 2SA1344		
IC118	8-759-636-55	IC M5218AFP		Q109	8-729-602-21	TRANSISTOR 2SC4154-F		
IC119	8-759-636-55	IC M5218AFP		Q110	8-729-805-65	TRANSISTOR 2SA1344		
IC120	8-759-636-55	IC M5218AFP		Q111	8-729-805-65	TRANSISTOR 2SA1344		
IC121	8-759-908-17	IC TL082CPS		Q112	8-729-107-46	TRANSISTOR 2SC3624A-L15		
IC122	8-759-982-44	IC RC79L05A		Q113	8-729-107-46	TRANSISTOR 2SC3624A-L15		
IC123	8-759-512-96	IC CXD2905Q		Q114	8-729-107-46	TRANSISTOR 2SC3624A-L15		
IC124	8-759-517-14	IC MB625473PF-G		Q115	8-729-805-41	TRANSISTOR 2SC3398		
IC331	8-752-344-10	IC CXD2561M-1		Q116	8-729-602-21	TRANSISTOR 2SC4154-F		
IC332	8-752-342-65	IC CXD2560M		Q117	8-729-602-21	TRANSISTOR 2SC4154-F		
IC333	8-759-234-20	IC TC7S08F		Q118	8-729-805-41	TRANSISTOR 2SC3398		
IC391	8-759-927-29	IC SN74HC04ANS		Q119	8-729-107-46	TRANSISTOR 2SC3624A-L15		
IC392	8-759-250-81	IC TC5081AP		Q121	8-729-107-46	TRANSISTOR 2SC3624A-L15		
IC501	8-759-512-46	IC MSC7162		Q122	8-729-602-21	TRANSISTOR 2SC4154-F		
IC502	8-759-512-45	IC SN75573I		Q123	8-729-805-65	TRANSISTOR 2SA1344		
IC503	8-759-512-45	IC SN75573I		Q124	8-729-107-46	TRANSISTOR 2SC3624A-L15		
IC504	8-759-512-46	IC MSC7162		Q125	8-729-602-36	TRANSISTOR 2SA1602-F		
IC505	8-759-512-47	IC SN75572I		Q126	8-729-805-65	TRANSISTOR 2SA1344		
IC506	8-759-246-46	IC TMP91C640F-2302		Q127	8-729-805-41	TRANSISTOR 2SC3398		
IC507	8-759-605-16	IC M51953BL		Q128	8-729-107-46	TRANSISTOR 2SC3624A-L15		
IC508	8-759-039-78	IC MC68HC11E9SC400366FU		Q129	8-729-107-46	TRANSISTOR 2SC3624A-L15		
IC509	8-759-512-48	IC XR-1092		Q130	8-729-805-65	TRANSISTOR 2SA1344		
< COIL >								
L100	1-410-397-21	FERRITE BEAD INDUCTOR (1.1uH)		Q331	8-729-805-41	TRANSISTOR 2SC3398		
L102	1-406-416-11	COIL (OSC) (0.6uH)		Q332	8-729-805-65	TRANSISTOR 2SA1344		
L260	1-412-390-21	INDUCTOR, CHIP 0uH		Q333	8-729-205-97	TRANSISTOR 2SC3668-Y		
L262	1-412-390-21	INDUCTOR, CHIP 0uH		Q501	8-729-602-36	TRANSISTOR 2SA1602-F		
L331	1-410-381-11	INDUCTOR CHIP 10uH		Q502	8-729-602-21	TRANSISTOR 2SC4154-F		
L332	1-543-610-11	BEAD, FERRITE		Q503	8-729-805-65	TRANSISTOR 2SA1344		
L333	1-412-390-21	INDUCTOR, CHIP 0uH		Q504	8-729-805-65	TRANSISTOR 2SA1344		
L334	1-412-390-21	INDUCTOR, CHIP 0uH		Q505	8-729-602-36	TRANSISTOR 2SA1602-F		
< TRANSISTOR >								
Q100	8-729-107-46	TRANSISTOR 2SC3624A-L15		Q508	8-729-602-21	TRANSISTOR 2SC4154-F		
Q101	8-729-107-46	TRANSISTOR 2SC3624A-L15		Q509	8-729-602-21	TRANSISTOR 2SC4154-F		
Q102	8-729-107-46	TRANSISTOR 2SC3624A-L15		Q510	8-729-602-21	TRANSISTOR 2SC4154-F		
Q103	8-729-107-46	TRANSISTOR 2SC3624A-L15		Q511	8-729-602-21	TRANSISTOR 2SC4154-F		
Q104	8-729-107-46	TRANSISTOR 2SC3624A-L15		Q512	8-729-602-21	TRANSISTOR 2SC4154-F		
				Q513	8-729-602-21	TRANSISTOR 2SC4154-F		
				Q514	8-729-602-21	TRANSISTOR 2SC4154-F		
				Q515	8-729-602-21	TRANSISTOR 2SC4154-F		
				Q516	8-729-602-21	TRANSISTOR 2SC4154-F		
				Q517	8-729-602-21	TRANSISTOR 2SC4154-F		

			PANEL			DSP					
Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
< RESISTOR >											
R103	1-216-025-00	METAL CHIP	100 5% 1/10W	R104	1-216-025-00	METAL CHIP	100 5% 1/10W	R105	1-216-025-00	METAL CHIP	100 5% 1/10W
R106	1-216-041-00	METAL CHIP	470 5% 1/10W	R107	1-216-041-00	METAL CHIP	470 5% 1/10W	R108	1-216-041-00	METAL CHIP	470 5% 1/10W
R109	1-216-041-00	METAL CHIP	470 5% 1/10W	R110	1-216-041-00	METAL CHIP	470 5% 1/10W	R111	1-216-041-00	METAL CHIP	470 5% 1/10W
R112	1-216-041-00	METAL CHIP	470 5% 1/10W	R113	1-216-041-00	METAL CHIP	470 5% 1/10W	R114	1-216-041-00	METAL CHIP	470 5% 1/10W
R115	1-216-041-00	METAL CHIP	470 5% 1/10W	R116	1-216-041-00	METAL CHIP	470 5% 1/10W	R117	1-216-041-00	METAL CHIP	470 5% 1/10W
R118	1-216-041-00	METAL CHIP	470 5% 1/10W	R119	1-216-065-00	METAL CHIP	4.7K 5% 1/10W	R120	1-216-065-00	METAL CHIP	4.7K 5% 1/10W
R121	1-216-065-00	METAL CHIP	4.7K 5% 1/10W	R122	1-216-065-00	METAL CHIP	4.7K 5% 1/10W	R123	1-216-065-00	METAL CHIP	4.7K 5% 1/10W
R124	1-216-113-00	METAL CHIP	470K 5% 1/10W	R125	1-216-053-00	METAL CHIP	1.5K 5% 1/10W	R126	1-216-061-00	METAL CHIP	3.3K 5% 1/10W
R127	1-216-049-00	METAL CHIP	1K 5% 1/10W	R128	1-216-067-00	METAL CHIP	5.6K 5% 1/10W	R129	1-216-065-00	METAL CHIP	4.7K 5% 1/10W
R130	1-216-043-00	METAL CHIP	560 5% 1/10W	R131	1-216-057-00	METAL CHIP	2.2K 5% 1/10W	R132	1-216-061-00	METAL CHIP	470 5% 1/10W
R133	1-216-113-00	METAL CHIP	470K 5% 1/10W	R134	1-216-043-00	METAL CHIP	470K 5% 1/10W	R135	1-216-053-00	METAL CHIP	470K 5% 1/10W
R136	1-216-061-00	METAL CHIP	3.3K 5% 1/10W	R137	1-216-061-00	METAL CHIP	3.3K 5% 1/10W	R138	1-216-065-00	METAL CHIP	470K 5% 1/10W
R139	1-216-065-00	METAL CHIP	4.7K 5% 1/10W	R140	1-216-065-00	METAL CHIP	4.7K 5% 1/10W	R141	1-216-097-00	METAL CHIP	100K 5% 1/10W
R142	1-216-097-00	METAL CHIP	100K 5% 1/10W	R143	1-216-097-00	METAL CHIP	100K 5% 1/10W	R144	1-216-025-00	METAL CHIP	100 5% 1/10W
R145	1-216-073-00	METAL CHIP	10K 5% 1/10W	R146	1-216-073-00	METAL CHIP	10K 5% 1/10W	R147	1-216-065-00	METAL CHIP	4.7K 5% 1/10W
R148	1-216-073-00	METAL CHIP	10K 5% 1/10W	R149	1-216-097-00	METAL CHIP	100K 5% 1/10W	R150	1-216-097-00	METAL CHIP	100K 5% 1/10W
R151	1-216-065-00	METAL CHIP	4.7								

PANEL							PANEL								
Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
R201	1-216-061-00	METAL CHIP	3.3K 5% 1/10W	R259	1-216-041-00	METAL CHIP	470 5% 1/10W	R312	1-216-073-00	METAL CHIP	10K 5% 1/10W	R392	1-216-065-00	METAL CHIP	4.7K 5% 1/10W
R202	1-216-071-00	METAL CHIP	8.2K 5% 1/10W	R261	1-216-017-00	METAL CHIP	47 5% 1/10W	R313	1-216-073-00	METAL CHIP	10K 5% 1/10W	R393	1-216-065-00	METAL CHIP	4.7K 5% 1/10W
R203	1-216-083-00	METAL CHIP	27K 5% 1/10W	R263	1-216-073-00	METAL CHIP	10K 5% 1/10W	R314	1-216-073-00	METAL CHIP	10K 5% 1/10W	R501	1-216-121-00	METAL CHIP	1M 5% 1/10W
R204	1-216-117-00	METAL CHIP	680K 5% 1/10W	R264	1-216-089-00	METAL CHIP	47K 5% 1/10W	R315	1-216-033-00	METAL CHIP	220 5% 1/10W	R502	1-216-071-00	METAL CHIP	8.2K 5% 1/10W
R205	1-216-093-00	METAL CHIP	68K 5% 1/10W	R265	1-216-089-00	METAL CHIP	47K 5% 1/10W	R316	1-216-033-00	METAL CHIP	220 5% 1/10W	R503	1-216-055-00	METAL CHIP	1.8K 5% 1/10W
R206	1-216-103-00	METAL CHIP	180K 5% 1/10W	R266	1-216-121-00	METAL CHIP	1M 5% 1/10W	R317	1-216-025-00	METAL CHIP	100 5% 1/10W	R504	1-216-073-00	METAL CHIP	10K 5% 1/10W
R207	1-216-119-00	METAL CHIP	820K 5% 1/10W	R267	1-216-081-00	METAL CHIP	22K 5% 1/10W	R318	1-216-295-00	METAL CHIP	0 5% 1/10W	R505	1-216-081-00	METAL CHIP	22K 5% 1/10W
R208	1-216-097-00	METAL CHIP	100K 5% 1/10W	R268	1-216-025-00	METAL CHIP	100 5% 1/10W	R319	1-216-113-00	METAL CHIP	470K 5% 1/10W	R506	1-216-081-00	METAL CHIP	22K 5% 1/10W
R209	1-216-097-00	METAL CHIP	100K 5% 1/10W	R269	1-216-025-00	METAL CHIP	100 5% 1/10W	R320	1-216-065-00	METAL CHIP	4.7K 5% 1/10W	R507	1-216-073-00	METAL CHIP	10K 5% 1/10W
R210	1-216-081-00	METAL CHIP	22K 5% 1/10W	R272	1-216-113-00	METAL CHIP	470K 5% 1/10W	R321	1-216-121-00	METAL CHIP	1M 5% 1/10W	R508	1-216-081-00	METAL CHIP	22K 5% 1/10W
R211	1-216-089-00	METAL CHIP	47K 5% 1/10W	R274	1-216-041-00	METAL CHIP	470 5% 1/10W	R322	1-216-089-00	METAL CHIP	47K 5% 1/10W	R511	1-216-081-00	METAL CHIP	22K 5% 1/10W
R212	1-216-082-00	METAL GLAZE	24K 5% 1/10W	R275	1-216-025-00	METAL CHIP	100 5% 1/10W	R323	1-216-295-00	METAL CHIP	0 5% 1/10W	R514	1-216-081-00	METAL CHIP	22K 5% 1/10W
R213	1-216-049-00	METAL CHIP	1K 5% 1/10W	R276	1-216-025-00	METAL CHIP	100 5% 1/10W	R331	1-216-075-00	METAL CHIP	12K 5% 1/10W	R516	1-216-073-00	METAL CHIP	10K 5% 1/10W
R214	1-216-049-00	METAL CHIP	1K 5% 1/10W	R277	1-216-049-00	METAL CHIP	1K 5% 1/10W	R332	1-216-075-00	METAL CHIP	12K 5% 1/10W	R518	1-216-073-00	METAL CHIP	10K 5% 1/10W
R215	1-216-049-00	METAL CHIP	1K 5% 1/10W	R279	1-216-076-00	METAL GLAZE	13K 5% 1/10W	R333	1-216-061-00	METAL CHIP	3.3K 5% 1/10W	R519	1-216-073-00	METAL CHIP	10K 5% 1/10W
R216	1-216-033-00	METAL CHIP	220 5% 1/10W	R280	1-216-025-00	METAL CHIP	100 5% 1/10W	R334	1-216-061-00	METAL CHIP	3.3K 5% 1/10W	R520	1-216-085-00	METAL CHIP	33K 5% 1/10W
R217	1-216-033-00	METAL CHIP	220 5% 1/10W	R281	1-216-025-00	METAL CHIP	100 5% 1/10W	R335	1-216-075-00	METAL CHIP	12K 5% 1/10W	R521	1-216-025-00	METAL CHIP	100 5% 1/10W
R218	1-216-089-00	METAL CHIP	47K 5% 1/10W	R282	1-216-025-00	METAL CHIP	100 5% 1/10W	R336	1-216-075-00	METAL CHIP	12K 5% 1/10W	R522	1-216-025-00	METAL CHIP	100 5% 1/10W
R226	1-216-071-00	METAL CHIP	8.2K 5% 1/10W	R283	1-216-025-00	METAL CHIP	100 5% 1/10W	R337	1-216-061-00	METAL CHIP	3.3K 5% 1/10W	R523	1-216-121-00	METAL CHIP	1M 5% 1/10W
R227	1-216-049-00	METAL CHIP	1K 5% 1/10W	R284	1-216-033-00	METAL CHIP	220 5% 1/10W	R338	1-216-061-00	METAL CHIP	3.3K 5% 1/10W	R524	1-216-025-00	METAL CHIP	100 5% 1/10W
R228	1-216-067-00	METAL CHIP	5.6K 5% 1/10W	R285	1-216-025-00	METAL CHIP	100 5% 1/10W	R339	1-216-071-00	METAL CHIP	8.2K 5% 1/10W	R525	1-216-025-00	METAL CHIP	100 5% 1/10W
R229	1-216-065-00	METAL CHIP	4.7K 5% 1/10W	R286	1-216-001-00	METAL CHIP	10 5% 1/10W	R340	1-216-071-00	METAL CHIP	8.2K 5% 1/10W	R526	1-216-025-00	METAL CHIP	100 5% 1/10W
R230	1-216-113-00	METAL CHIP	470K 5% 1/10W	R287	1-216-089-00	METAL CHIP	47K 5% 1/10W	R341	1-216-071-00	METAL CHIP	8.2K 5% 1/10W	R527	1-216-025-00	METAL CHIP	100 5% 1/10W
R231	1-216-053-00	METAL CHIP	1.5K 5% 1/10W	R288	1-216-089-00	METAL CHIP	47K 5% 1/10W	R342	1-216-071-00	METAL CHIP	8.2K 5% 1/10W	R528	1-216-025-00	METAL CHIP	100 5% 1/10W
R232	1-216-061-00	METAL CHIP	3.3K 5% 1/10W	R289	1-216-033-00	METAL CHIP	220 5% 1/10W	R343	1-216-071-00	METAL CHIP	8.2K 5% 1/10W	R529	1-216-025-00	METAL CHIP	100 5% 1/10W
R233	1-216-113-00	METAL CHIP	470K 5% 1/10W	R290	1-216-033-00	METAL CHIP	220 5% 1/10W	R344	1-216-071-00	METAL CHIP	8.2K 5% 1/10W	R530	1-216-025-00	METAL CHIP	100 5% 1/10W
R234	1-216-043-00	METAL CHIP	560 5% 1/10W	R291	1-216-073-00	METAL CHIP	10K 5% 1/10W	R345	1-216-071-00	METAL CHIP	8.2K 5% 1/10W	R531	1-216-025-00	METAL CHIP	100 5% 1/10W
R235	1-216-057-00	METAL CHIP	2.2K 5% 1/10W	R292	1-216-076-00	METAL GLAZE	13K 5% 1/10W	R346	1-216-071-00	METAL CHIP	8.2K 5% 1/10W	R532	1-216-025-00	METAL CHIP	100 5% 1/10W
R236	1-216-113-00	METAL CHIP	470K 5% 1/10W	R293	1-216-073-00	METAL CHIP	10K 5% 1/10W	R347	1-216-065-00	METAL CHIP	4.7K 5% 1/10W	R534	1-216-073-00	METAL CHIP	10K 5% 1/10W
R237	1-216-061-00	METAL CHIP	3.3K 5% 1/10W	R294	1-216-025-00	METAL CHIP	100 5% 1/10W	R348	1-216-088-00	METAL CHIP	43K 5% 1/10W	R535	1-216-025-00	METAL CHIP	100 5% 1/10W
R238	1-216-065-00	METAL CHIP	4.7K 5% 1/10W	R295	1-216-121-00	METAL CHIP	1M 5% 1/10W	R349	1-216-129-00	METAL CHIP	2.2M 5% 1/10W	R536	1-216-025-00	METAL CHIP	100 5% 1/10W
R239	1-216-065-00	METAL CHIP	4.7K 5% 1/10W	R296	1-216-121-00	METAL CHIP	1M 5% 1/10W	R350	1-216-081-00	METAL CHIP	22K 5% 1/10W	R537	1-216-025-00	METAL CHIP	100 5% 1/10W
R240	1-216-065-00	METAL CHIP	4.7K 5% 1/10W	R297	1-216-097-00	METAL CHIP	100K 5% 1/10W	R351	1-216-088-00	METAL CHIP	43K 5% 1/10W	R538	1-216-025-00	METAL CHIP	100 5% 1/10W
R241	1-216-073-00	METAL CHIP	10K 5% 1/10W	R298	1-216-097-00	METAL CHIP	100K 5% 1/10W	R352	1-216-088-00	METAL CHIP	43K 5% 1/10W	R539	1-216-025-00	METAL CHIP	100 5% 1/10W
R242	1-216-097-00	METAL CHIP	100K 5% 1/10W	R299	1-216-073-00	METAL CHIP	10K 5% 1/10W	R353	1-216-088-00	METAL CHIP	43K 5% 1/10W	R540	1-216-053-00	METAL CHIP</	

PANEL	DSP	POWER SUPPLY	JACK
-------	-----	--------------	------

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
R551	1-216-063-00	METAL CHIP	3.9K 5% 1/10W	R623	1-216-081-00	METAL CHIP	22K 5% 1/10W (H5600)
R552	1-216-057-00	METAL CHIP	2.2K 5% 1/10W				< SWITCH >
R553	1-216-057-00	METAL CHIP	2.2K 5% 1/10W	S501	1-554-303-21	SWITCH, TACTILE (SYSTEM POWER)	
R554	1-216-063-00	METAL CHIP	3.9K 5% 1/10W	S502	1-554-303-21	SWITCH, TACTILE (DISPLAY)	
R555	1-216-063-00	METAL CHIP	3.9K 5% 1/10W	S503	1-554-303-21	SWITCH, TACTILE (BALANCE)	
R556	1-216-075-00	METAL CHIP	12K 5% 1/10W	S504	1-554-303-21	SWITCH, TACTILE (WAKE UP)	
R557	1-216-075-00	METAL CHIP	12K 5% 1/10W	S505	1-554-303-21	SWITCH, TACTILE (DBFB)	
R558	1-216-025-00	METAL CHIP	100 5% 1/10W	S506	1-554-303-21	SWITCH, TACTILE (EFFECT)	
R559	1-216-025-00	METAL CHIP	100 5% 1/10W	S507	1-554-303-21	SWITCH, TACTILE (DYNAMIC SOUND)	
R560	1-216-027-00	METAL CHIP	120 5% 1/10W	S508	1-554-303-21	SWITCH, TACTILE (PRESET)	
R561	1-216-027-00	METAL CHIP	120 5% 1/10W	S509	1-554-303-21	SWITCH, TACTILE (PARAMETRIC EQUALIZER)	
R562	1-216-021-00	METAL CHIP	68 5% 1/10W	S510	1-554-303-21	SWITCH, TACTILE (ON/OFF)	
R563	1-216-021-00	METAL CHIP	68 5% 1/10W	S511	1-554-303-21	SWITCH, TACTILE (PRESENCE SURROUND)	
R564	1-216-021-00	METAL CHIP	68 5% 1/10W	S512	1-554-303-21	SWITCH, TACTILE (MEMORY)	
R565	1-216-027-00	METAL CHIP	120 5% 1/10W	S513	1-554-303-21	SWITCH, TACTILE (►) (CURSOR CONTROL)	
R566	1-216-027-00	METAL CHIP	120 5% 1/10W	S514	1-554-303-21	SWITCH, TACTILE (▲) (CURSOR CONTROL)	
R567	1-216-049-00	METAL CHIP	1K 5% 1/10W	S515	1-554-303-21	SWITCH, TACTILE (▼) (CURSOR CONTROL)	
R568	1-216-073-00	METAL CHIP	10K 5% 1/10W	S516	1-554-303-21	SWITCH, TACTILE (◀) (CURSOR CONTROL)	
R569	1-216-049-00	METAL CHIP	1K 5% 1/10W	S517	1-554-303-21	SWITCH, TACTILE (VIDEO)	
R570	1-216-025-00	METAL CHIP	100 5% 1/10W	S518	1-554-303-21	SWITCH, TACTILE (AUDIO)	
R572	1-216-025-00	METAL CHIP	100 5% 1/10W				< VIBRATOR >
R573	1-216-025-00	METAL CHIP	100 5% 1/10W	X100	1-579-069-11	VIBRATOR, CRYSTAL (49.152MHz)	
R574	1-216-069-00	METAL CHIP	6.8K 5% 1/10W	X101	1-577-253-11	VIBRATOR, CERAMIC (16.93MHz)	
R575	1-216-089-00	METAL CHIP	47K 5% 1/10W	X102	1-579-125-11	VIBRATOR, CERAMIC (8MHz)	
R576	1-216-089-00	METAL CHIP	47K 5% 1/10W	X501	1-579-351-11	VIBRATOR, CERAMIC (15MHz)	
R577	1-216-073-00	METAL CHIP	10K 5% 1/10W	X502	1-579-125-11	VIBRATOR, CERAMIC (8MHz)	
R578	1-216-073-00	METAL CHIP	10K 5% 1/10W				*****
R579	1-216-073-00	METAL CHIP	10K 5% 1/10W				*****
R580	1-216-025-00	METAL CHIP	100 5% 1/10W				*****
R581	1-216-025-00	METAL CHIP	100 5% 1/10W				*****
R582	1-216-073-00	METAL CHIP	10K 5% 1/10W				* A-4341-619-A POWER SUPPLY BOARD, COMPLETE (AEP, UK)
R583	1-216-049-11	METAL CHIP	10K 5% 1/10W (H6600)				* A-4341-623-A POWER SUPPLY BOARD, COMPLETE (G, IT)
R584	1-216-049-00	METAL CHIP	1K 5% 1/10W				*****
R585	1-216-049-00	METAL CHIP	1K 5% 1/10W				* 1-638-904-12 JACK BOARD
R586	1-216-049-00	METAL CHIP	1K 5% 1/10W				*****
R587	1-216-049-00	METAL CHIP	1K 5% 1/10W				* 1-533-213-31 HOLDER, FUSE
R588	1-216-049-00	METAL CHIP	1K 5% 1/10W				* 3-309-144-21 HEAT SINK
R589	1-216-049-00	METAL CHIP	1K 5% 1/10W				7-682-547-04 SCREW +BVTT 3X6 (S)
R590	1-216-049-00	METAL CHIP	1K 5% 1/10W				
R591	1-216-019-00	METAL CHIP	56 5% 1/10W				< CAPACITOR >
R592	1-216-019-00	METAL CHIP	56 5% 1/10W	C1	1-124-915-11	ELECT	10uF 20% 63V
R593	1-216-019-00	METAL CHIP	56 5% 1/10W	C2	1-162-306-11	CERAMIC	0.01uF 20% 16V
R594	1-216-073-00	METAL CHIP	10K 5% 1/10W	C3	1-162-306-11	CERAMIC	0.01uF 20% 16V
R621	1-216-049-00	METAL CHIP	1K 5% 1/10W	C5	1-136-153-00	FILM	0.01uF 5% 50V
R622	1-216-049-00	METAL CHIP	1K 5% 1/10W	C7	1-162-306-11	CERAMIC	0.01uF 20% 16V

POWER SUPPLY **JACK**

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remarks</u>			<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remarks</u>		
C651	1-162-282-31	CERAMIC	100PF	10%	50V	< DIODE >					
C652	1-162-282-31	CERAMIC	100PF	10%	50V	D891	8-719-912-20	DIODE	1SS120		
C653	1-161-379-00	CERAMIC	0.01uF	20%	25V	D892	8-719-912-20	DIODE	1SS120		
C654	1-162-294-31	CERAMIC	0.001uF	10%	50V	D901	8-719-302-38	DIODE	RBV-602-01		
C655	1-124-903-11	ELECT	1uF	20%	50V	D902	8-719-912-20	DIODE	1SS120		
C656	1-124-119-00	ELECT	330uF	20%	16V	D903	8-719-912-20	DIODE	1SS120		
C661	1-162-282-31	CERAMIC	100PF	10%	50V	D904	8-719-200-82	DIODE	11ES2		
C662	1-162-282-31	CERAMIC	100PF	10%	50V	D905	8-719-200-82	DIODE	11ES2		
C663	1-161-379-00	CERAMIC	0.01uF	20%	25V	D906	8-719-200-82	DIODE	11ES2		
C664	1-162-294-31	CERAMIC	0.001uF	10%	50V	D907	8-719-200-82	DIODE	11ES2		
C665	1-124-903-11	ELECT	1uF	20%	50V	D908	8-719-200-82	DIODE	11ES2		
C903	1-126-943-11	ELECT	2200uF	20%	25V	D909	8-719-200-82	DIODE	11ES2		
C904	1-126-943-11	ELECT	2200uF	20%	25V	D910	8-719-912-20	DIODE	1SS120		
C907	1-136-165-00	FILM	0.1uF	5%	50V	D911	8-719-933-36	DIODE	HZS6B1L		
C908	1-136-165-00	FILM	0.1uF	5%	50V	D919	8-719-912-20	DIODE	1SS120		
C909	1-124-477-11	ELECT	47uF	20%	25V	D920	8-719-912-20	DIODE	1SS120		
C910	1-124-477-11	ELECT	47uF	20%	25V	< IC >					
C911	1-124-915-11	ELECT	10uF	20%	63V	IC1	8-749-922-41	IC	GP1F34R		
C912	1-124-915-11	ELECT	10uF	20%	63V	IC2	8-749-922-41	IC	GP1F34R		
C913	1-124-915-11	ELECT	10uF	20%	63V	IC3	8-749-922-39	IC	GP1F34T		
C914	1-126-768-11	ELECT	2200uF	20%	16V	IC651	8-759-634-50	IC	M5218AL		
C915	1-124-915-11	ELECT	10uF	20%	63V	IC901	8-759-602-66	IC	M5230L-A		
C916	1-124-915-11	ELECT	10uF	20%	63V	IC902	8-759-231-53	IC	M5F7805		
C917	1-124-910-11	ELECT	47uF	20%	50V	ICP903	1-532-846-21	L1	NK, IC 5A		
C918	1-124-915-11	ELECT	10uF	20%	63V	ICP904	1-532-846-21	L1	NK, IC 5A		
< CONNECTOR >											
CNJ1	* 1-580-739-11	SOCKET, CONNECTOR 15P (SYSTEM CONTROL 1)	< JACK >								
CNJ2	* 1-580-740-11	SOCKET, CONNECTOR 17P (SYSTEM CONTROL 2)	J2	1-569-662-11	JACK, PIN 1P (SUPER WOOFER)						
CNP5	* 1-564-509-11	PLUG, CONNECTOR 6P	J651	1-562-837-21	JACK (HEADPHONES)						
CNP6	* 1-564-509-11	PLUG, CONNECTOR 6P	J901	1-526-931-11	INLET, AC (AC IN)						
CNP7	* 1-564-499-11	PIN, CONNECTOR 6P	< COIL >								
CNP902	1-564-506-41	PIN, CONNECTOR 3P (YEL)	L901	A1-424-485-11	FILTER, LINE						
CNP903	* 1-564-321-00	PIN, CONNECTOR 2P	< TRANSISTOR >								
CNP904	* 1-573-109-11	PIN, CONNECTOR 15P	0651	8-729-141-30	TRANSISTOR	2SC3623A-LK					
CNP904A	1-564-506-31	PIN, CONNECTOR 3P (RED)	0652	8-729-900-61	TRANSISTOR	DTA114ES					
CNP906	* 1-573-087-11	PIN, CONNECTOR 13P	0661	8-729-141-30	TRANSISTOR	2SC3623A-LK					
CNP907	* 1-506-981-11	PIN, CONNECTOR 10P	0901	8-729-209-15	TRANSISTOR	2SD2012					
CNP908	1-568-317-11	SOCKET, CONNECTOR 6P	0902	8-729-111-67	TRANSISTOR	2SB1094-L					
CNP909	* 1-573-148-11	PLUG, CONNECTOR 12P	The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.								
CNP910	* 1-564-337-00	PIN, CONNECTOR 3P									
CNP911	* 1-564-505-11	PLUG, CONNECTOR 2P									

POWER SUPPLY	JACK	POWER AMP	VOLUME	SPEAKER
FLD	CONNECTOR	ELECT CAP	TRANSFORMER (A),(B)	

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>			<u>Remarks</u>	<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>			<u>Remarks</u>
0903	8-729-900-80	TRANSISTOR	DTC114ES			R932	1-249-429-11	CARBON	10K	5%	1/4W
0904	8-729-209-15	TRANSISTOR	2SD2012					< RELAY >			
0905	8-729-620-05	TRANSISTOR	2SC2603-EF			RY801	1-515-790-11	RELAY			
0906	8-729-620-05	TRANSISTOR	2SC2603-EF			RY802	1-515-790-11	RELAY			
0908	8-729-801-84	TRANSISTOR	2SB1013-4			RY901	1-515-626-11	RELAY			
0909	8-729-111-29	TRANSISTOR	2SD1616A-K					*****			
0910	8-729-111-29	TRANSISTOR	2SD1616A-K					*****			
0911	8-729-620-05	TRANSISTOR	2SC2603-EF					*****			
< RESISTOR >											
R651	1-249-433-11	CARBON	22K	5%	1/4W			* A-4341-620-A POWER AMP BOARD, COMPLETE (AEP, UK)			
R652	1-249-439-11	CARBON	68K	5%	1/4W			* A-4341-624-A POWER AMP BOARD, COMPLETE (G, IT)			
R653	1-249-400-11	CARBON	39	5%	1/4W			*****			
R654	1-249-423-11	CARBON	3.3K	5%	1/4W			* 1-638-906-12 VOLUME BOARD			
R655	1-249-423-11	CARBON	3.3K	5%	1/4W			*****			
R656	1-249-405-11	CARBON	100	5%	1/4W			* 1-638-907-12 SPEAKER BOARD			
R657	1-249-441-11	CARBON	100K	5%	1/4W			*****			
R661	1-249-433-11	CARBON	22K	5%	1/4W			* 1-638-908-13 FLD BOARD			
R662	1-249-439-11	CARBON	68K	5%	1/4W			*****			
R663	1-249-400-11	CARBON	39	5%	1/4W			* 1-638-909-12 CONNECTOR BOARD			
R664	1-249-423-11	CARBON	3.3K	5%	1/4W			*****			
R665	1-249-423-11	CARBON	3.3K	5%	1/4W			* 1-638-910-12 ELECT CAP BOARD			
R666	1-249-405-11	CARBON	100	5%	1/4W			*****			
R902	1-247-903-00	CARBON	1M	5%	1/4W			* 1-638-911-12 TRANSFORMER (A) BOARD			
R905	1-249-413-11	CARBON	470	5%	1/4W			*****			
R906	1-249-434-11	CARBON	27K	5%	1/4W			* 1-638-912-12 TRANSFORMER (B) BOARD			
R907	1-249-425-11	CARBON	4.7K	5%	1/4W			*****			
R908	1-249-431-11	CARBON	15K	5%	1/4W			* 3-309-144-21 HEAT SINK			
R909	1-249-431-11	CARBON	15K	5%	1/4W			7-682-547-04 SCREW +BVTT 3X6 (S)			
R910	1-249-419-11	CARBON	1.5K	5%	1/4W			< CAPACITOR >			
R911	1-249-429-11	CARBON	10K	5%	1/4W	C401	1-126-948-11	ELECT	100uF	20%	3V
R912	1-249-429-11	CARBON	10K	5%	1/4W	C402	1-130-955-00	FILM	0.01uF	5%	110V
R913	1-249-429-11	CARBON	10K	5%	1/4W	C403	1-126-948-11	ELECT	100uF	20%	3V
R914	1-249-429-11	CARBON	10K	5%	1/4W	C404	1-130-477-00	MYLAR	0.0033uF	5%	5V
R919	1-249-429-11	CARBON	10K	5%	1/4W	C405	1-126-948-11	ELECT	100uF	20%	3V
R920	1-249-429-11	CARBON	10K	5%	1/4W	C406	1-124-931-11	ELECT	47uF	47%	110V
R921	△1-216-428-00	METAL OXIDE	180	5%	1W F	C421	1-136-955-00	FILM	0.01uF	5%	110V
R922	1-249-429-11	CARBON	10K	5%	1/4W	C601	1-162-306-11	CERAMIC	0.01uF	20%	1V
R923	1-249-425-11	CARBON	4.7K	5%	1/4W	C602	1-126-933-11	ELECT	100uF	20%	1V
R924	1-249-429-11	CARBON	10K	5%	1/4W	C603	1-124-915-11	ELECT	10uF	20%	6V
R925	1-249-429-11	CARBON	10K	5%	1/4W	C604	1-124-915-11	ELECT	10uF	20%	6V
R926	1-249-429-11	CARBON	10K	5%	1/4W	C701	1-126-176-11	ELECT	220uF	20%	1V
R928	1-247-742-11	CARBON	180	5%	1/2W	C702	1-126-176-11	ELECT	220uF	20%	1V
R930	1-249-423-11	CARBON	3.3K	5%	1/4W	C704	1-162-306-11	CERAMIC	0.01uF	20%	1V
R931	1-249-441-11	CARBON	100K	5%	1/4W	C705	1-161-494-00	CERAMIC	0.022uF		2V

The components identified by mark △ or dotted line with mark △ are critical for safety.
Replace only with part number specified.

POWE AMP	VOLUME	SPEAKER	FLD	CONNECTOR
ELECT CAP	TRANSFORMER (A),(B)			

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>			<u>Remarks</u>	<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>			<u>Remarks</u>
C706	1-124-927-11	ELECT	4.7uF	20%	100V	C924	1-126-949-11	ELECT	220uF	20%	35V
C707	1-126-101-11	ELECT	100uF	20%	16V	C925	1-126-948-11	ELECT	100uF	20%	35V
C708	1-124-907-11	ELECT	10uF	20%	50V	C926	1-164-159-11	CERAMIC	0.1uF		50V
C709	1-164-159-11	CERAMIC	0.1uF		50V	C927	1-124-915-11	ELECT	10uF	20%	63V
C710	1-124-910-11	ELECT	47uF	20%	50V	C928	1-124-915-11	ELECT	10uF	20%	63V
C711	1-164-159-11	CERAMIC	0.1uF		50V	C929	1-124-557-11	ELECT	1000uF	20%	25V
C801	1-124-907-11	ELECT	10uF	20%	50V	C930	1-124-557-11	ELECT	1000uF	20%	25V
C802	1-162-294-31	CERAMIC	0.001uF	10%	50V	< CONNECTOR >					
C803	1-162-282-31	CERAMIC	100PF	10%	50V	CN601	1-560-942-00	PIN, CONNECTOR 6P			
C804	1-124-927-11	ELECT	4.7uF	20%	100V	CN801	* 1-564-521-11	PLUG, CONNECTOR 6P			
C806	1-136-165-00	FILM	0.1uF	5%	50V	CN802	* 1-573-087-11	PIN, CONNECTOR 13P			
C807	1-136-165-00	FILM	0.1uF	5%	50V	CN891	1-563-311-11	CONNECTOR, BOARD TO BOARD 10P			
C808	1-136-165-00	FILM	0.1uF	5%	50V	CN892	* 1-564-518-11	PLUG, CONNECTOR 3P			
C821	1-124-907-11	ELECT	10uF	20%	50V	CNJ603	1-569-656-11	HOUSING, CONNECTOR 8P			
C822	1-162-294-31	CERAMIC	0.001uF	10%	50V	CNJ604	1-573-147-11	HOUSING, CONNECTOR 12P			
C823	1-162-282-31	CERAMIC	100PF	10%	50V	CNJ902	1-573-095-11	SOCKET, CONNECTOR 15P			
C824	1-124-927-11	ELECT	4.7uF	20%	100V	CNJ911	* 1-573-094-11	SOCKET, CONNECTOR 13P			
C828	1-136-165-00	FILM	0.1uF	5%	50V	CNJ912	* 1-573-094-11	SOCKET, CONNECTOR 13P			
C829	1-136-165-00	FILM	0.1uF	5%	50V	CNP7	* 1-564-499-11	PIN, CONNECTOR 6P			
C831	1-162-306-11	CERAMIC	0.01uF	20%	16V	CNP602	1-568-319-11	SOCKET, CONNECTOR 8P			
C851	1-124-907-11	ELECT	10uF	20%	50V	CNP901	* 1-564-321-00	PIN, CONNECTOR 2P			
C852	1-162-294-31	CERAMIC	0.001uF	10%	50V	CNP912	* 1-564-338-00	PIN, CONNECTOR 4P			
C853	1-162-282-31	CERAMIC	100PF	10%	50V	CNP913	* 1-564-337-00	PIN, CONNECTOR 3P			
C854	1-124-927-11	ELECT	4.7uF	20%	100V	CNP914	* 1-564-339-00	PIN, CONNECTOR 5P			
C856	1-136-165-00	FILM	0.1uF	5%	50V	CNP915	* 1-564-505-11	PLUG, CONNECTOR 2P			
C857	1-136-165-00	FILM	0.1uF	5%	50V	< DIODE >					
C858	1-136-165-00	FILM	0.1uF	5%	50V	D401	8-719-815-85	DIODE	1S1585		
C859	1-136-165-00	FILM	0.1uF	5%	50V	D402	8-719-933-67	DIODE	HZS11B2L		
C871	1-124-907-11	ELECT	10uF	20%	50V	D403	8-719-933-47	DIODE	HZS7B2L		
C872	1-162-294-31	CERAMIC	0.001uF	10%	50V	D404	8-719-815-85	DIODE	1S1585		
C873	1-162-282-31	CERAMIC	100PF	10%	50V	D405	8-719-815-85	DIODE	1S1585		
C874	1-124-927-11	ELECT	4.7uF	20%	100V	D406	8-719-200-82	DIODE	11ES2		
C878	1-136-165-00	FILM	0.1uF	5%	50V	D409	8-719-934-22	LED	HZS30-2L		
C879	1-136-165-00	FILM	0.1uF	5%	50V	D701	8-719-912-20	DIODE	1SS120		
C891	1-136-153-00	FILM	0.01uF	5%	50V (G, IT)	D702	8-719-912-20	DIODE	1SS120		
C892	1-136-153-00	FILM	0.01uF	5%	50V (G, IT)	D703	8-719-912-20	DIODE	1SS120		
C893	1-136-153-00	FILM	0.01uF	5%	50V (G, IT)	D704	8-719-912-20	DIODE	1SS120		
C894	1-136-153-00	FILM	0.01uF	5%	50V (G, IT)	D705	8-719-912-20	DIODE	1SS120		
C901	1-128-329-11	ELECT	10000uF	20%	42V	D706	8-719-912-20	DIODE	1SS120		
C902	1-128-329-11	ELECT	10000uF	20%	42V	D801	8-719-912-20	DIODE	1SS120		
C905	1-136-171-00	FILM	0.33uF	5%	50V	D802	8-719-912-20	DIODE	1SS120		
C906	1-136-171-00	FILM	0.33uF	5%	50V						
C921	1-126-948-11	ELECT	100uF	20%	35V						
C923	1-126-949-11	ELECT	220uF	20%	35V						

POWE AMP	VOLUME	SPEAKER	FLD	CONNECTOR
ELECT CAP	TRANSFORMER (A),(B)			

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remarks</u>	<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remarks</u>
D821	8-719-912-20	DIODE	ISS120				< TRANSISTOR >
D822	8-719-912-20	DIODE	ISS120	0401	8-729-141-46	TRANSISTOR	2SC4431-LK
D851	8-719-912-20	DIODE	ISS120	0402	8-729-141-46	TRANSISTOR	2SC4431-LK
D852	8-719-912-20	DIODE	ISS120	0403	8-729-142-01	TRANSISTOR	2SC1941-LK
D871	8-719-912-20	DIODE	ISS120	0404	8-729-141-46	TRANSISTOR	2SC4431-LK
D872	8-719-912-20	DIODE	ISS120	0601	8-729-801-93	TRANSISTOR	2SD1387-3
D912	8-719-200-82	DIODE	11ES2	0701	8-729-119-76	TRANSISTOR	2SA1175-HFE
D913	8-719-200-82	DIODE	11ES2	0801	8-729-140-84	TRANSISTOR	2SC1841-PAFAEA
D914	8-719-934-22	DIODE	HZS30-2L	0821	8-729-140-84	TRANSISTOR	2SC1841-PAFAEA
D915	8-719-200-82	DIODE	11ES2	0851	8-729-140-84	TRANSISTOR	2SC1841-PAFAEA
D916	8-719-200-82	DIODE	11ES2	0871	8-729-140-84	TRANSISTOR	2SC1841-PAFAEA
D917	8-719-934-22	DIODE	HZS30-2L	0911	8-729-209-15	TRANSISTOR	2SD2012
D918	8-719-014-88	DIODE	UZP-6.8BC	0912	8-729-111-67	TRANSISTOR	2SA473
D921	8-719-200-82	DIODE	11ES2				
D922	8-719-200-82	DIODE	11ES2				
D923	8-719-200-82	DIODE	11ES2				
D924	8-719-200-82	DIODE	11ES2				
			< IC >				
IC601	8-759-820-62	IC	LB1639	R401	1-249-437-11	CARBON	47K 5% 1/4W
IC701	8-759-111-68	IC	uPC1237HA	R402	1-249-437-11	CARBON	47K 5% 1/4W
IC702	8-759-987-16	IC	LM393P	R404	△1-213-056-11	FUSIBLE	6.8 5% 1W F
IC703	8-759-512-73	IC	LM35DZ-SL	R405	1-249-441-11	CARBON	100K 5% 1/4W
IC801	8-759-323-30	IC	LM3875-2	R406	1-249-437-11	CARBON	47K 5% 1/4W
IC821	8-759-323-30	IC	LM3875-2	R407	1-249-405-11	CARBON	100 5% 1/4W
IC851	8-759-323-30	IC	LM3875-2	R408	1-247-756-11	CARBON	2.2K 5% 1/2W
IC871	8-759-323-30	IC	LM3875-2	R409	1-249-437-11	CARBON	47K 5% 1/4W
ICP901	△1-532-845-21	LI	NK, IC 4A	R411	△1-213-056-11	FUSIBLE	6.8 5% 1W F
ICP902	△1-532-845-21	LI	NK, IC 4A	R601	△1-212-849-00	FUSIBLE	4.7 5% 1/4W F
ICP905	△1-532-842-11	LI	NK, IC 2A	R602	1-249-419-11	CARBON	1.5K 5% 1/4W
ICP906	△1-532-842-11	LI	NK, IC 2A	R603	1-249-422-11	CARBON	2.7K 5% 1/4W
			< JACK >	R604	1-249-429-11	CARBON	10K 5% 1/4W
J891	1-537-336-11	TERMINAL BOARD (SP)	(TO SATELLITE/BASS UNIT SPEAKER)	R605	1-249-429-11	CARBON	10K 5% 1/4W
				R606	1-249-416-11	CARBON	820 5% 1/4W
			< COIL >	R701	1-249-433-11	CARBON	22K 5% 1/4W
L401	1-410-761-11	INDUCTOR	0.68mH	R702	1-249-441-11	CARBON	100K 5% 1/4W
L402	1-410-521-11	MICRO INDUCTOR		R703	1-249-433-11	CARBON	22K 5% 1/4W
L801	* 1-420-872-00	COIL, AIR CORE		R704	1-249-433-11	CARBON	22K 5% 1/4W
L821	* 1-420-872-00	COIL, AIR CORE		R705	1-249-429-11	CARBON	10K 5% 1/4W
L851	* 1-420-872-00	COIL, AIR CORE		R706	1-249-441-11	CARBON	100K 5% 1/4W (AEP, UK)
L871	* 1-420-872-00	COIL, AIR CORE		R707	1-249-429-11	CARBON	10K 5% 1/4W
				R708	1-249-424-11	CARBON	3.9K 5% 1/4W
				R709	1-249-427-11	CARBON	6.8K 5% 1/4W
				R710	1-249-429-11	CARBON	10K 5% 1/4W
				R711	1-249-417-11	CARBON	1K 5% 1/4W
				R712	1-249-437-11	CARBON	47K 5% 1/4W (AEP, UK)
				R802	1-249-437-11	CARBON	47K 5% 1/4W
				R803	1-249-420-11	CARBON	1.8K 5% 1/4W
				R804	1-249-437-11	CARBON	47K 5% 1/4W

The components identified by mark Δ or dotted line with mark Δ are critical for safety.
Replace only with part number specified.

POWE AMP

VOLUME

SPEAKER

FLD

CONNECTOR

ELECT CAP

TRANSFORMER (A),(B)

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
R805	△1-217-151-00	RES, METAL PLATE 0.22	2W F	R916	△1-249-429-11	CARBON	1K 5% 1/2W F
R806	1-249-417-11	CARBON	1K 5% 1/4W	R917	△1-247-752-11	CARBON	1K 5% 1/2W F
R807	1-249-431-11	CARBON	15K 5% 1/4W	R891	1-247-727-11	CARBON	10 5% 1/2W (G, IT)
R808	1-249-441-11	CARBON	100K 5% 1/4W	R892	1-247-727-11	CARBON	10 5% 1/2W (G, IT)
R809	△1-212-958-00	FUSIBLE	10 5% 1/2W F	R893	1-247-727-11	CARBON	10 5% 1/2W (G, IT)
R810	1-249-439-11	CARBON	68K 5% 1/4W	R894	1-247-727-11	CARBON	10 5% 1/2W (G, IT)
R811	1-249-429-11	CARBON	10K 5% 1/4W	R918	1-249-441-11	CARBON	100K 5% 1/4W
R821	1-249-417-11	CARBON	1K 5% 1/4W				< VARIABLE RESISTOR >
R822	1-249-437-11	CARBON	47K 5% 1/4W				
R823	1-249-420-11	CARBON	1.8K 5% 1/4W	RV601	1-241-418-11	RES, VAR, CARBON 10K (VOLUME)	
R824	1-249-438-11	CARBON	56K 5% 1/4W				< TRANSFORMER >
R825	△1-217-151-00	RES, METAL PLATE 0.22	2W F	T401	1-450-460-11	TRANSFORMER, DC-DC CONVERTER	
R826	1-249-417-11	CARBON	1K 5% 1/4W	T402	1-450-461-11	TRANSFORMER, DC-DC CONVERTER	
R827	1-249-431-11	CARBON	15K 5% 1/4W				*****
R828	1-249-441-11	CARBON	100K 5% 1/4W				MISCELLANEOUS
R829	△1-212-958-00	FUSIBLE	10 5% 1/2W F				*****
R830	1-249-437-11	CARBON	47K 5% 1/4W				
R831	1-249-429-11	CARBON	10K 5% 1/4W				
R851	1-249-417-11	CARBON	1K 5% 1/4W				
R852	1-249-437-11	CARBON	47K 5% 1/4W				
R853	1-249-420-11	CARBON	1.8K 5% 1/4W	11	1-541-860-11	MOTOR, DC FAN	
R854	1-249-437-11	CARBON	47K 5% 1/4W	F901	△1-532-286-00	FUSE (T2.5A)	
R855	△1-217-151-00	RES, METAL PLATE 0.22	2W F	FL501	1-519-654-11	INDICATOR TUBE, FLUORESCENT	
R856	1-249-417-11	CARBON	1K 5% 1/4W	PT101	△1-450-355-11	TRANSFORMER, POWER (UK)	
R857	1-249-431-11	CARBON	15K 5% 1/4W	PT101	△1-450-356-11	TRANSFORMER, POWER (AEP, G, IT)	
R858	1-249-441-11	CARBON	100K 5% 1/4W				*****
R859	△1-212-958-00	FUSIBLE	10 5% 1/2W F				ACCESSORIES & PACKING MATERIALS
R860	1-249-438-11	CARBON	56K 5% 1/4W				*****
R861	1-249-429-11	CARBON	10K 5% 1/4W				
R871	1-249-417-11	CARBON	1K 5% 1/4W				
R872	1-249-437-11	CARBON	47K 5% 1/4W				* 4-945-075-01 CUSHION (RIGHT)
R873	1-249-420-11	CARBON	1.8K 5% 1/4W				* 4-945-076-01 CUSHION (LEFT)
R874	1-249-438-11	CARBON	56K 5% 1/4W				*****
R875	△1-217-151-00	RES, METAL PLATE 0.22	2W F				HARDWARE LIST
R876	1-249-417-11	CARBON	1K 5% 1/4W				*****
R877	1-249-431-11	CARBON	15K 5% 1/4W	#2	7-685-203-19	SCREW +KTP 2X5 TYPE2 NON-SLIT	
R878	1-249-441-11	CARBON	100K 5% 1/4W	#3	7-685-132-19	SCREW +BTP 2.6X5 TYPE2 N-S	
R879	△1-212-958-00	FUSIBLE	10 5% 1/2W F	#6	7-685-647-79	SCREW +BVTP 3X10 TYPE2 N-S	
R880	1-249-436-11	CARBON	39K 5% 1/4W	#7	7-685-870-09	SCREW +BVTT 3X5 (S)	
R881	1-249-429-11	CARBON	10K 5% 1/4W	#8	7-682-547-04	SCREW +BVTT 3X6 (S)	
				#9	7-685-645-79	SCREW +BVTP 3X6 TYPE2 IT-3	

The components identified by mark **△** or dotted line with mark **△** are critical for safety.
Replace only with part number specified.

www.manualscenter.com

English
91I1659-1Sony Corporation
Audio Group

©1991.9

Published by Customer Relations and Service Group




3772

CDP-H6600

SERVICE MANUAL

*AEP Model
UK Model
E Model*

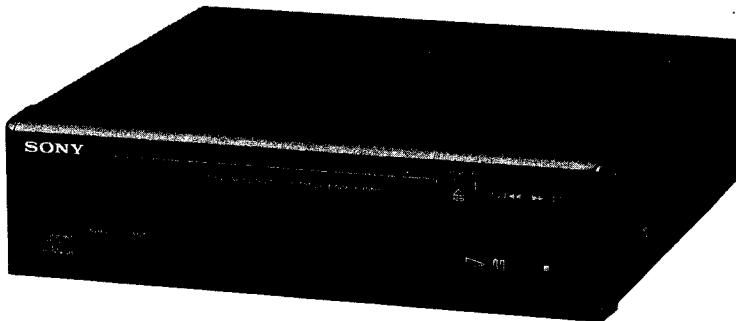

This set is the
CD player section in
MHC-5600/6600 and
FH-E939CD.

Model Name Using Similar Mechanism	CDP-H300
CD Mechanism Type	CDM13B-5BD5
Base Unit Name	BU-5BD5

TABLE OF CONTENTS

Section	Title	Page
1. GENERAL		
	Location of Controls	3
2. ELECTRICAL BLOCK CHECKING	4
3. DIAGRAMS		
3-1.	Block Diagram	7
3-2.	Semiconductor Lead Layouts	10
3-3.	Printed Wiring Boards	10
3-4.	Schematic Diagram - BD Section -	13
3-5.	Schematic Diagram - Main Section -	16
3-6.	IC Block Diagrams	19
3-7.	Pin Function of IC202 and IC401	21
4. EXPLODED VIEWS		
(1)	Chassis Section	23
(2)	CD Mechanism Section	24
(3)	Optical Pick-Up Block	25
5. ELECTRICAL PARTS LIST	26

SPECIFICATIONS


System	Compact disc digital audio system
Laser	Semiconductor laser ($\lambda = 780 \text{ nm}$)
Laser output	Emission duration: continuous Max. $44.6 \mu\text{W}$ * This output is the value measured at a distance of about 200 mm from the objective lens surface on the Optical Pick-up Block.
Signal to noise ratio	More than 90 dB
Dynamic range	More than 90 dB
Harmonic distortion	Less than 0.05% (at 1 kHz)
Channel separation	More than 90 dB
Output level	2 V (at 50 kilohms)
Load impedance	More than 10 kilohms
Outputs	DIGITAL OUT OPTICAL (optical output connector): wave length 660 nm, output level -18 dBm

CLASS 1 LASER PRODUCT
LUOKAN 1 LASERLAITE
KLASS 1 LASERAPPARAT

This appliance is classified as a CLASS 1 LASER product. The CLASS 1 LASER PRODUCT label is located on the rear exterior.



LASER DIODE AND FOCUS SEARCH OPERATION CHECK

1. Make POWER switch on with no disc inserted and disc table closed.
2. Confirm that the following operation is performed while observing the objective lens.

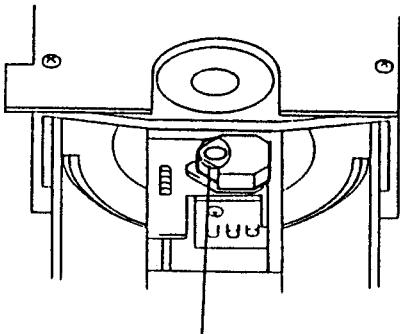

- ① Confirm that laser beam is spread.
- ② Up and down motion of the objective lens. (3 times)

HOW TO OPEN THE DISC TRAY WHEN POWER SWITCH TURNS OFF

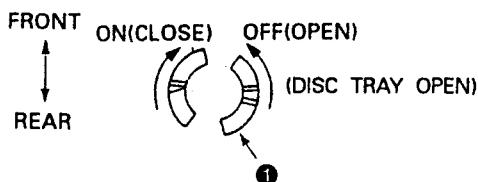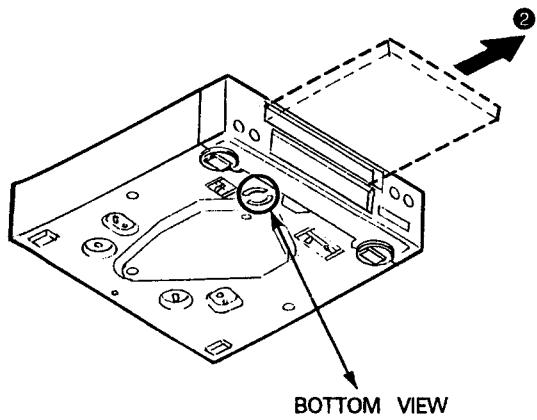

- (1) Insert to ① for tapering driver, etc., and turn in the direction of arrow OFF. (Disc tray open)
- (2) Tray as come out little of front panel, pull out in the direction of arrow ② by hand.

NOTES ON HANDLING THE OPTICAL PICK-UP BLOCK OR BASE UNIT

The laser diode in the optical pick-up block may suffer electrostatic break-down because of the potential difference generated by the charged electrostatic load, etc. on clothing and the human body. During repair, pay attention to electrostatic break-down and also use the procedure in the printed matter which is included in the repair parts.

The flexible board is easily damaged and should be handled with care.

NOTES ON LASER DIODE EMISSION CHECK

The laser beam on this model is concentrated so as to be focused on the disc reflective surface by the objective lens in the optical pick-up block. Therefore, when checking the laser diode emission, observe from more than 30 cm away from the objective lens.

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK Δ OR DOTTED LINE WITH MARK Δ ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

SECTION 1


GENERAL

LOCATION OF CONTROLS

This section is extracted from instruction manual.

CD Player Section

- ① Disc tray
- ② CHECK button
- ③ EDIT/TIME FADE button
- ④ CD operation buttons
 - △ : OPEN/CLOSE
 - ▷II : Play/pause
 - ◀◀◀▶▶▶ : Manual search (when kept depressed)/Automatic Music
 - Sensor (when pressed)
- ⑤ Display window

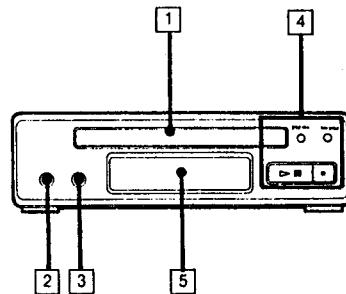


www.manualscenter.com

SECTION 2


ELECTRICAL BLOCK CHECKING

Note :

1. CD Block basically constructed to operate without adjustment. Therefore, check each item in order given.
2. Use YEDS-18 disc (3-702-101-01) unless otherwise indicated.
3. Use the oscilloscope with more than $10M\Omega$ impedance.
4. Clean an object lens by an applicator with neutral detergent when the signal level is low than specified value with the following checks.

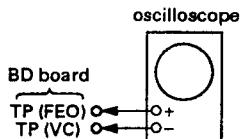S Curve Check**Procedure :**

1. Connect oscilloscope to test point TP (FEO) on BD board.
2. Connect between test point TP (FES) and TP (VC) by lead wire.
3. Turned Power switch on and actuate the focus serch. (actuate the focus serch when disc table is moving in and out.)
4. Check the oscilloscope waveform (S curve) is symmetrical between A and B. And confirm peak to peak level within $3 \pm 1 V_{p-p}$.

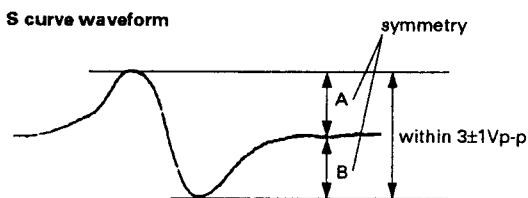


5. After check, remove the lead wire connected in step 2.

Note :

- Try to measure several times to make sure that the ratio of A : B or B : A is more than 10 : 7.
- Take sweep time as long as possible and light up the brightness to obtain best waveform.



www.manualscenter.com

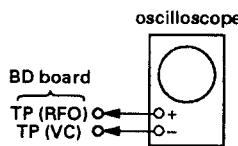RF Level Check**Procedure :**


1. Connect oscilloscope to test point TP (RFO) on BD board.
2. Turn Power switch on.
3. Put disc (YEDS-18) in and playback.
4. Confirm that oscilloscope waveform is clear and check RF signal level is correct or not.

Note :

Clear RF signal waveform means that the shape "◊" can be clearly distinguished at the center of the waveform.

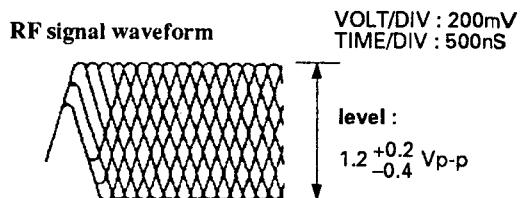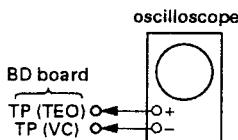**E-F Balance Check****Procedure :**

1. Connect test point TP (ADJ) to ground and TP (TES) to TP (VC) with lead wire.
2. Connect oscilloscope to test point TP (TEO) on BD board.
3. Turn Power switch on.
4. Put disc (YEDS-18) in and playback.
5. Confirm that the oscilloscope waveform is symmetrical on the top and bottom in relation to 0V, and check this level.

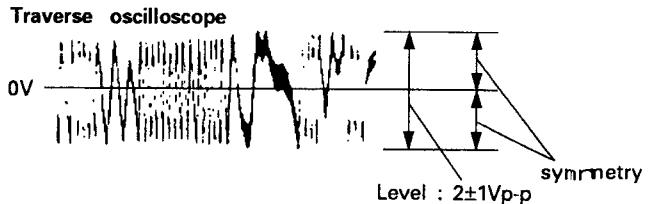


6. Remove the lead wire connected in step 1.

RF PLL FREE-RUN FREQUENCY CHECK

Procedure :

1. Connect frequency counter to test point (PCK) with lead wire.

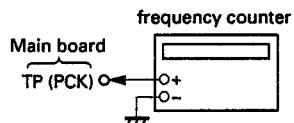

2. Turn Power switch on.
3. Confirm that reading on frequency counter is 4.3218MHz.

Focus/Tracking Gain

This gain has a margin, so even if it is slightly off.

There is no problem.


Therefore, do not perform, this adjustment.

Please note that it should be fixed to mechanical center position when you moved and do not know original position.

Checking for Location

www.manualscenter.com

[BD BOARD] - Conductor Side -

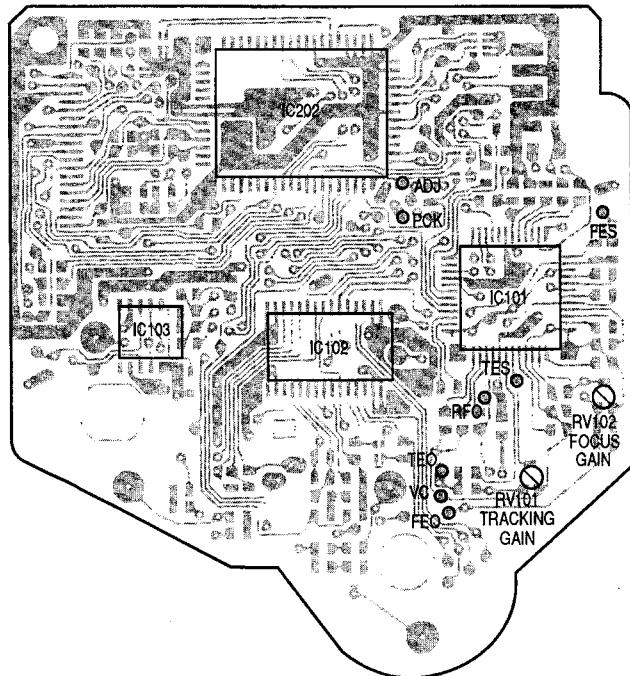

[TEST MODES]

1. Test mode of display micon (IC401)


Ground Pin ⑩ of IC401 to GND and turn ON the POWER switch, thus you can test the following 3 tests.

(1) All FL tube lamps

This mode is actuated immediately after turning ON the POWER switch.

(2) FL tube segment check


This mode is actuated by pressing the **Ⓐ** key in the state of (1). Every time the **Ⓐ** key is pressed, the segments are indicated sequentially from the segment a. When the last 1 segment is displayed, keying in is no longer accepted while continuing the lighting-up state of the last segment. Conditions are normal provided all lamps light up in the following order.

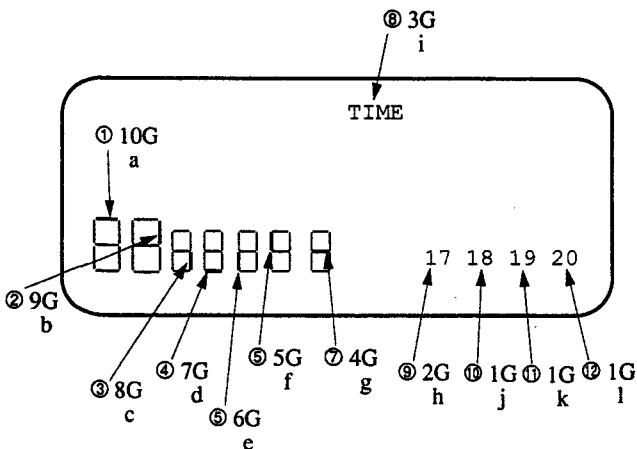

(3) KEY check

This mode is effected by pressing the **Ⓐ** key in the state of (1), while indicating "1." Every time a new key is pressed subsequently, the indicated number is incremented. Conditions are normal provided "7" is indicated when all types of keys are pressed. Even if a key is pressed again, it is not counted.

* To leave the mode (2) or (3), press the **Ⓐ** and **Ⓑ** keys in duplication, thereby the mode returning to all ON mode.

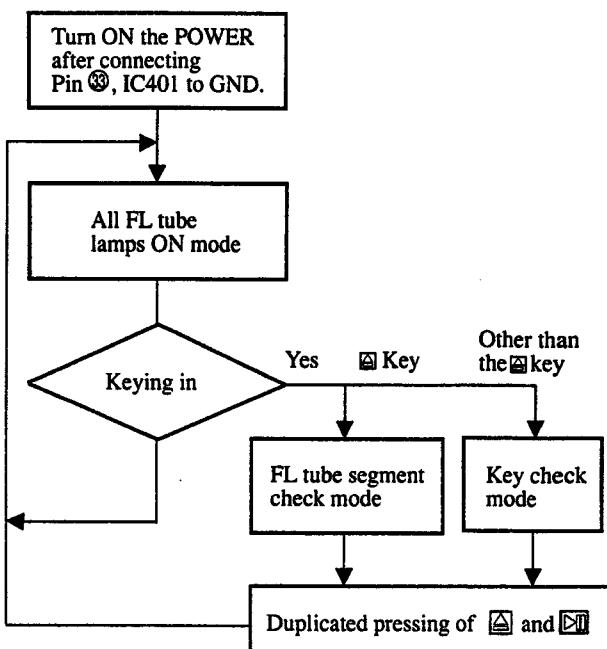

2. Test Modes of CD Syscon (IC202)

(1) ADJUST mode

When this mode is effected, the machine is operated normally except for the following.

- When pin ⑩, IC202 (ADJ) is set to "L" after turning ON the POWER switch:
 1. GFS is no longer monitored during PLAY, PAUSE or SEARCH, while not stopping even with GFS remaining still at "L" (NG).
 2. No high-speed feeding is activated during SEARCH.
 3. Focus gain is reset to normal gain during PLAY (normally, the gain is lowered to reduce noise when FOCUS is locked).
- When Pin ⑩, IC202 (AFADJ) is set to "L" after turning ON the POWER switch:
 1. Regardless of Pin ⑩ (ADJ) of the CLV-S fixed function, the CLV mode during PLAY becomes CLV-S (rough servo) only while Pin ⑩ remains "L".


(2) AFADJUST mode


In this mode, it is possible to check the interface between the display micon (IC401) and CD syscon (IC202).

- Set Pin ⑩, IC202 (AFADJ) to "L" before turning ON the POWER switch.
 1. Every time the **Ⓐ** key is pressed after turning On the POWER switch, indication on the FL tube is switched correspondingly. Conditions are normal provided the indication repeats the 4 patterns including all lamp ON.

**SECTION 3
DIAGRAMS**


3-1. BLOCK DIAGRAM

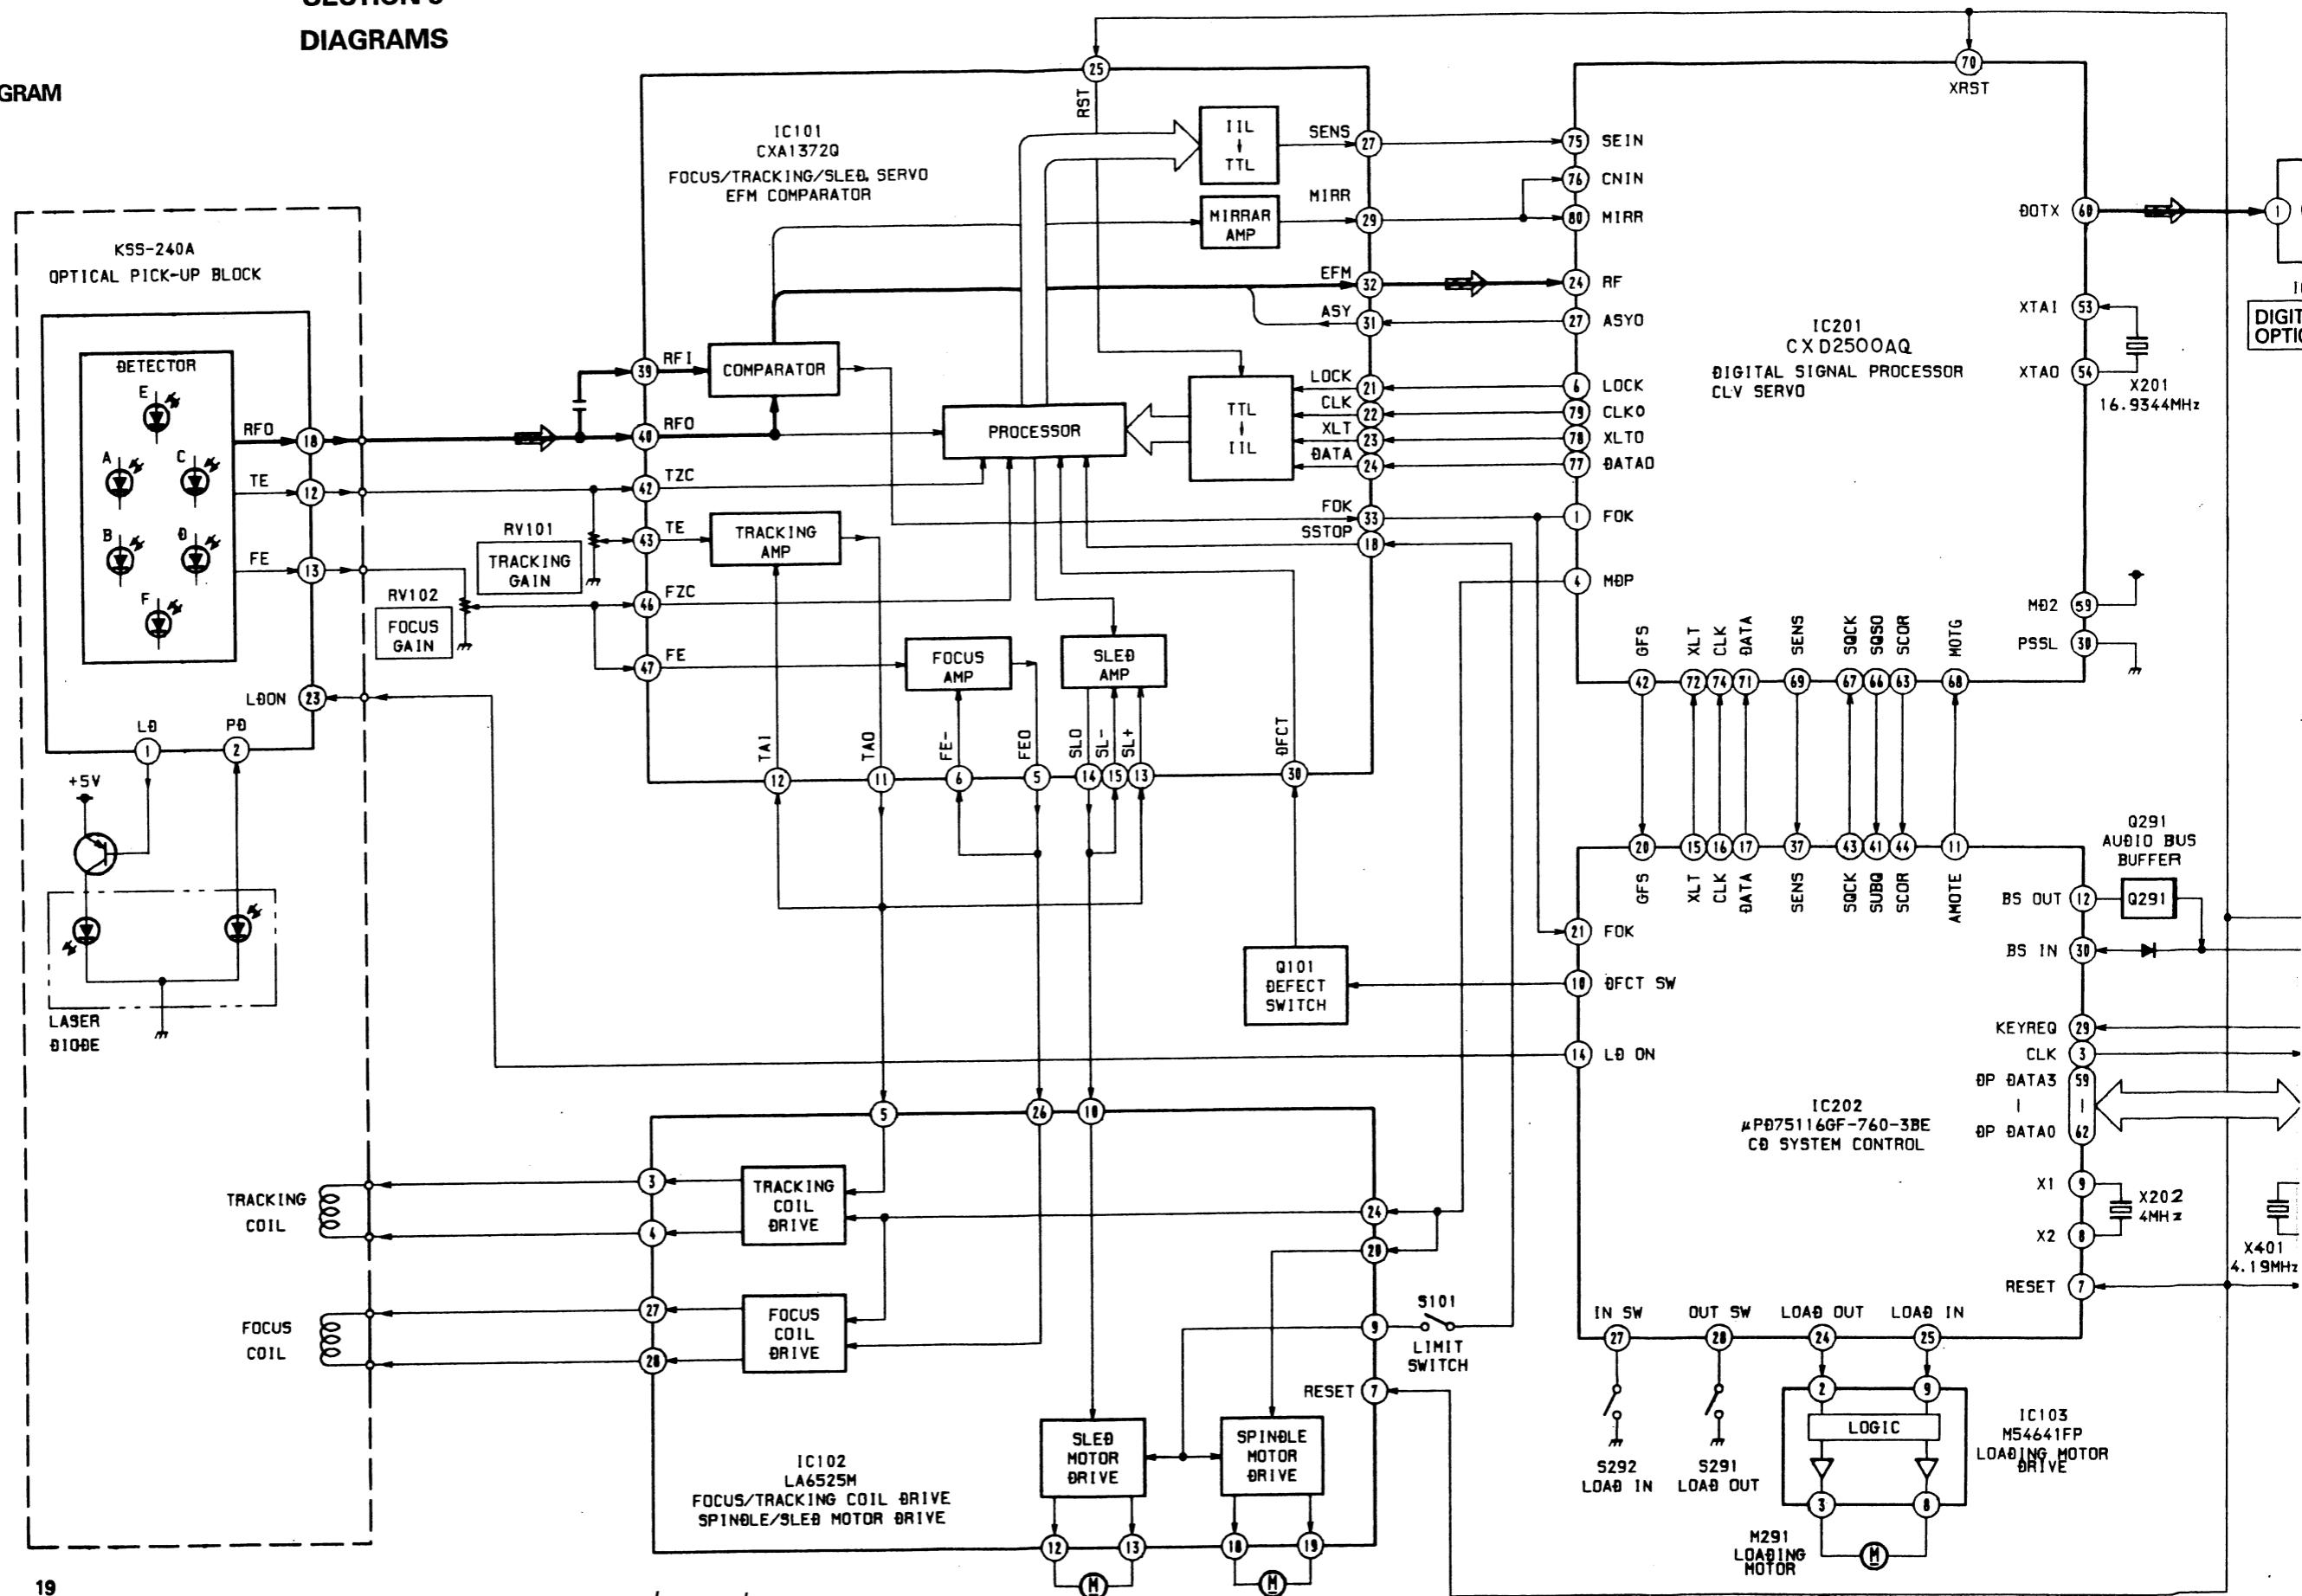

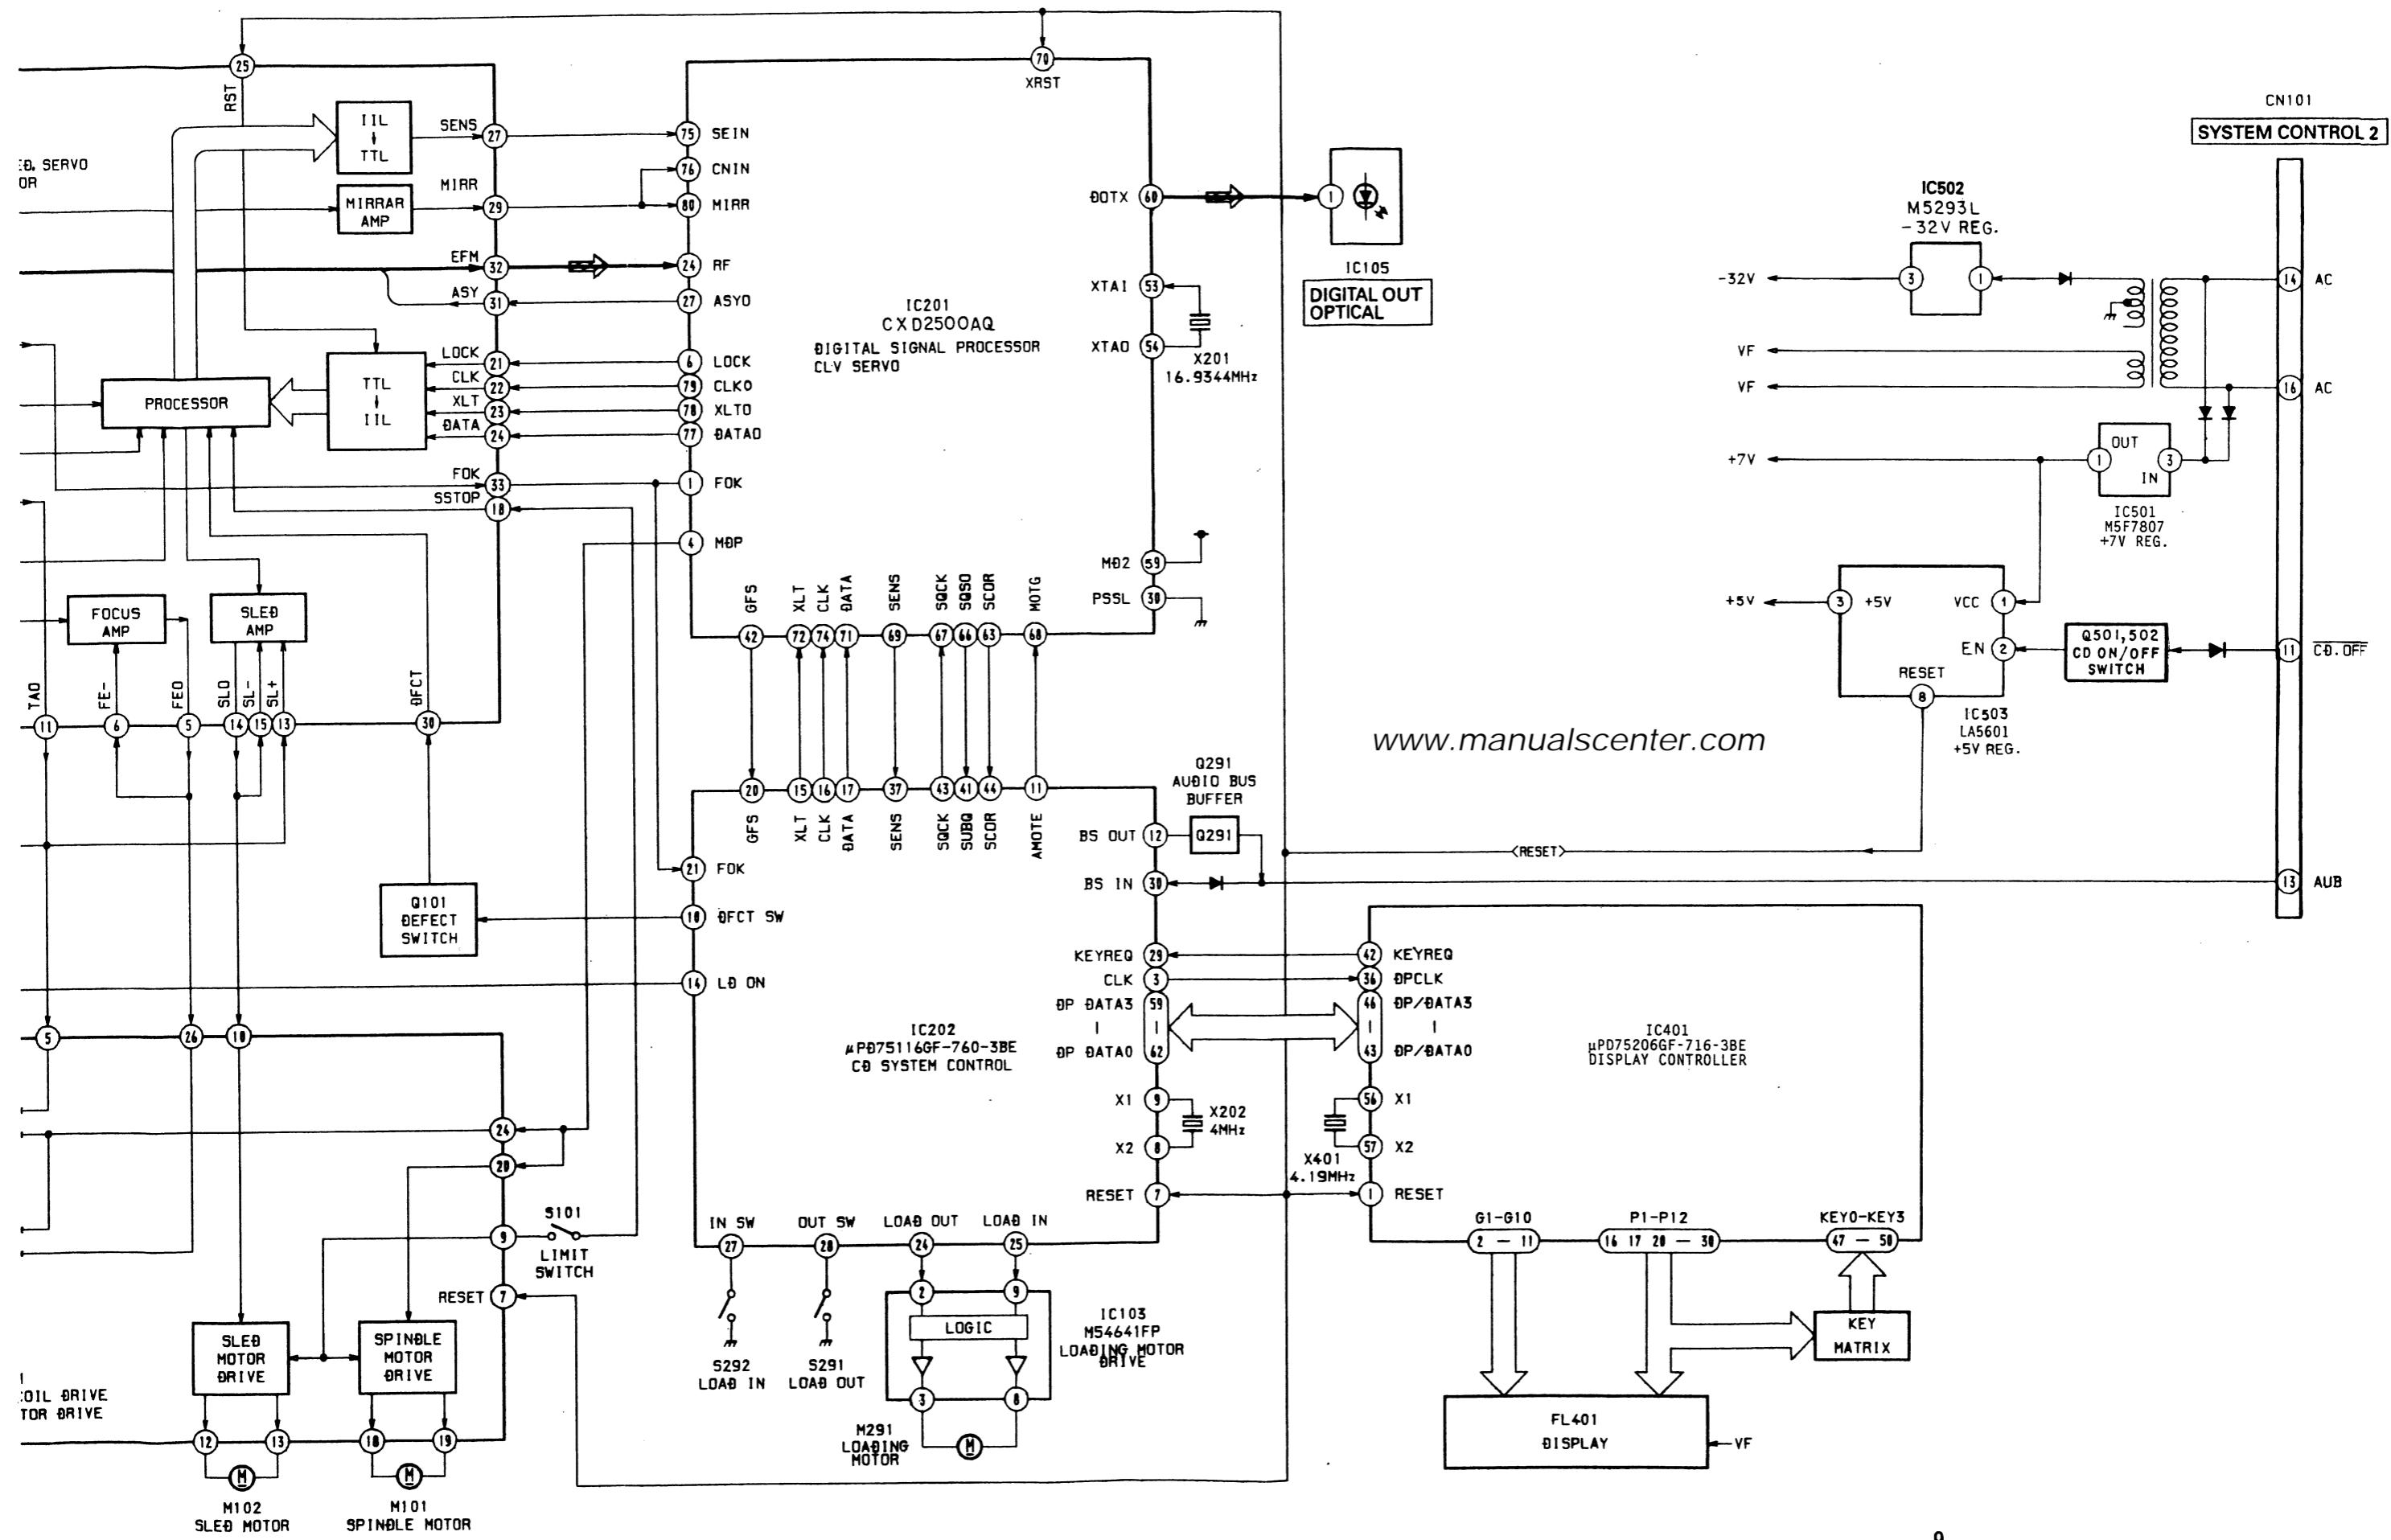

www.manualscenter.com

3-2. SEMICONDUCTOR LEAD LAYOUTS

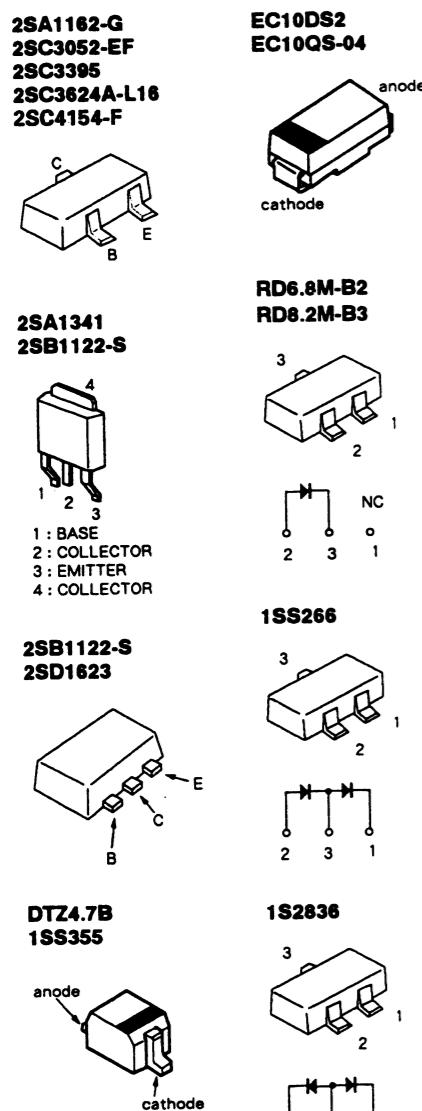


• SEMICONDUCTOR LOCATION

Ref. No.	Location
IC101	D-1
IC101	G-7
IC102	B-5
IC102	H-6
IC103	B-2
IC103	H-5
IC105	B-3
IC201	G-11
IC202	F-6
IC301	G-12
IC302	F-12
IC304	F-1
IC401	D-12
Q101	C-1
Q101	F-7
Q102	B-1
Q103	B-1
Q201	F-12
Q201	G-13
Q301	G-1
Q302	E-1
Q303	G-1
Q304	E-1
Q305	E-1
Q306	E-1
D101	B-3
D101	H-5
D102	B-3
D103	B-3
D104	B-6
D106	B-6
D113	B-3
D131	B-3
D201	F-12
D301	E-1
D302	E-1
D305	E-1
D306	E-1
D401	D-14
D402	D-15
D403	D-11

Note:








- : indicated a lead wire mounted on the component side.
- : Part mounted on the conductor side.
- : Through hole.
- ▨ : Pattern from the side which enables seeing.
- ▨▨ : Pattern of the rear side.

3-3. PRINTED WIRING BOARDS

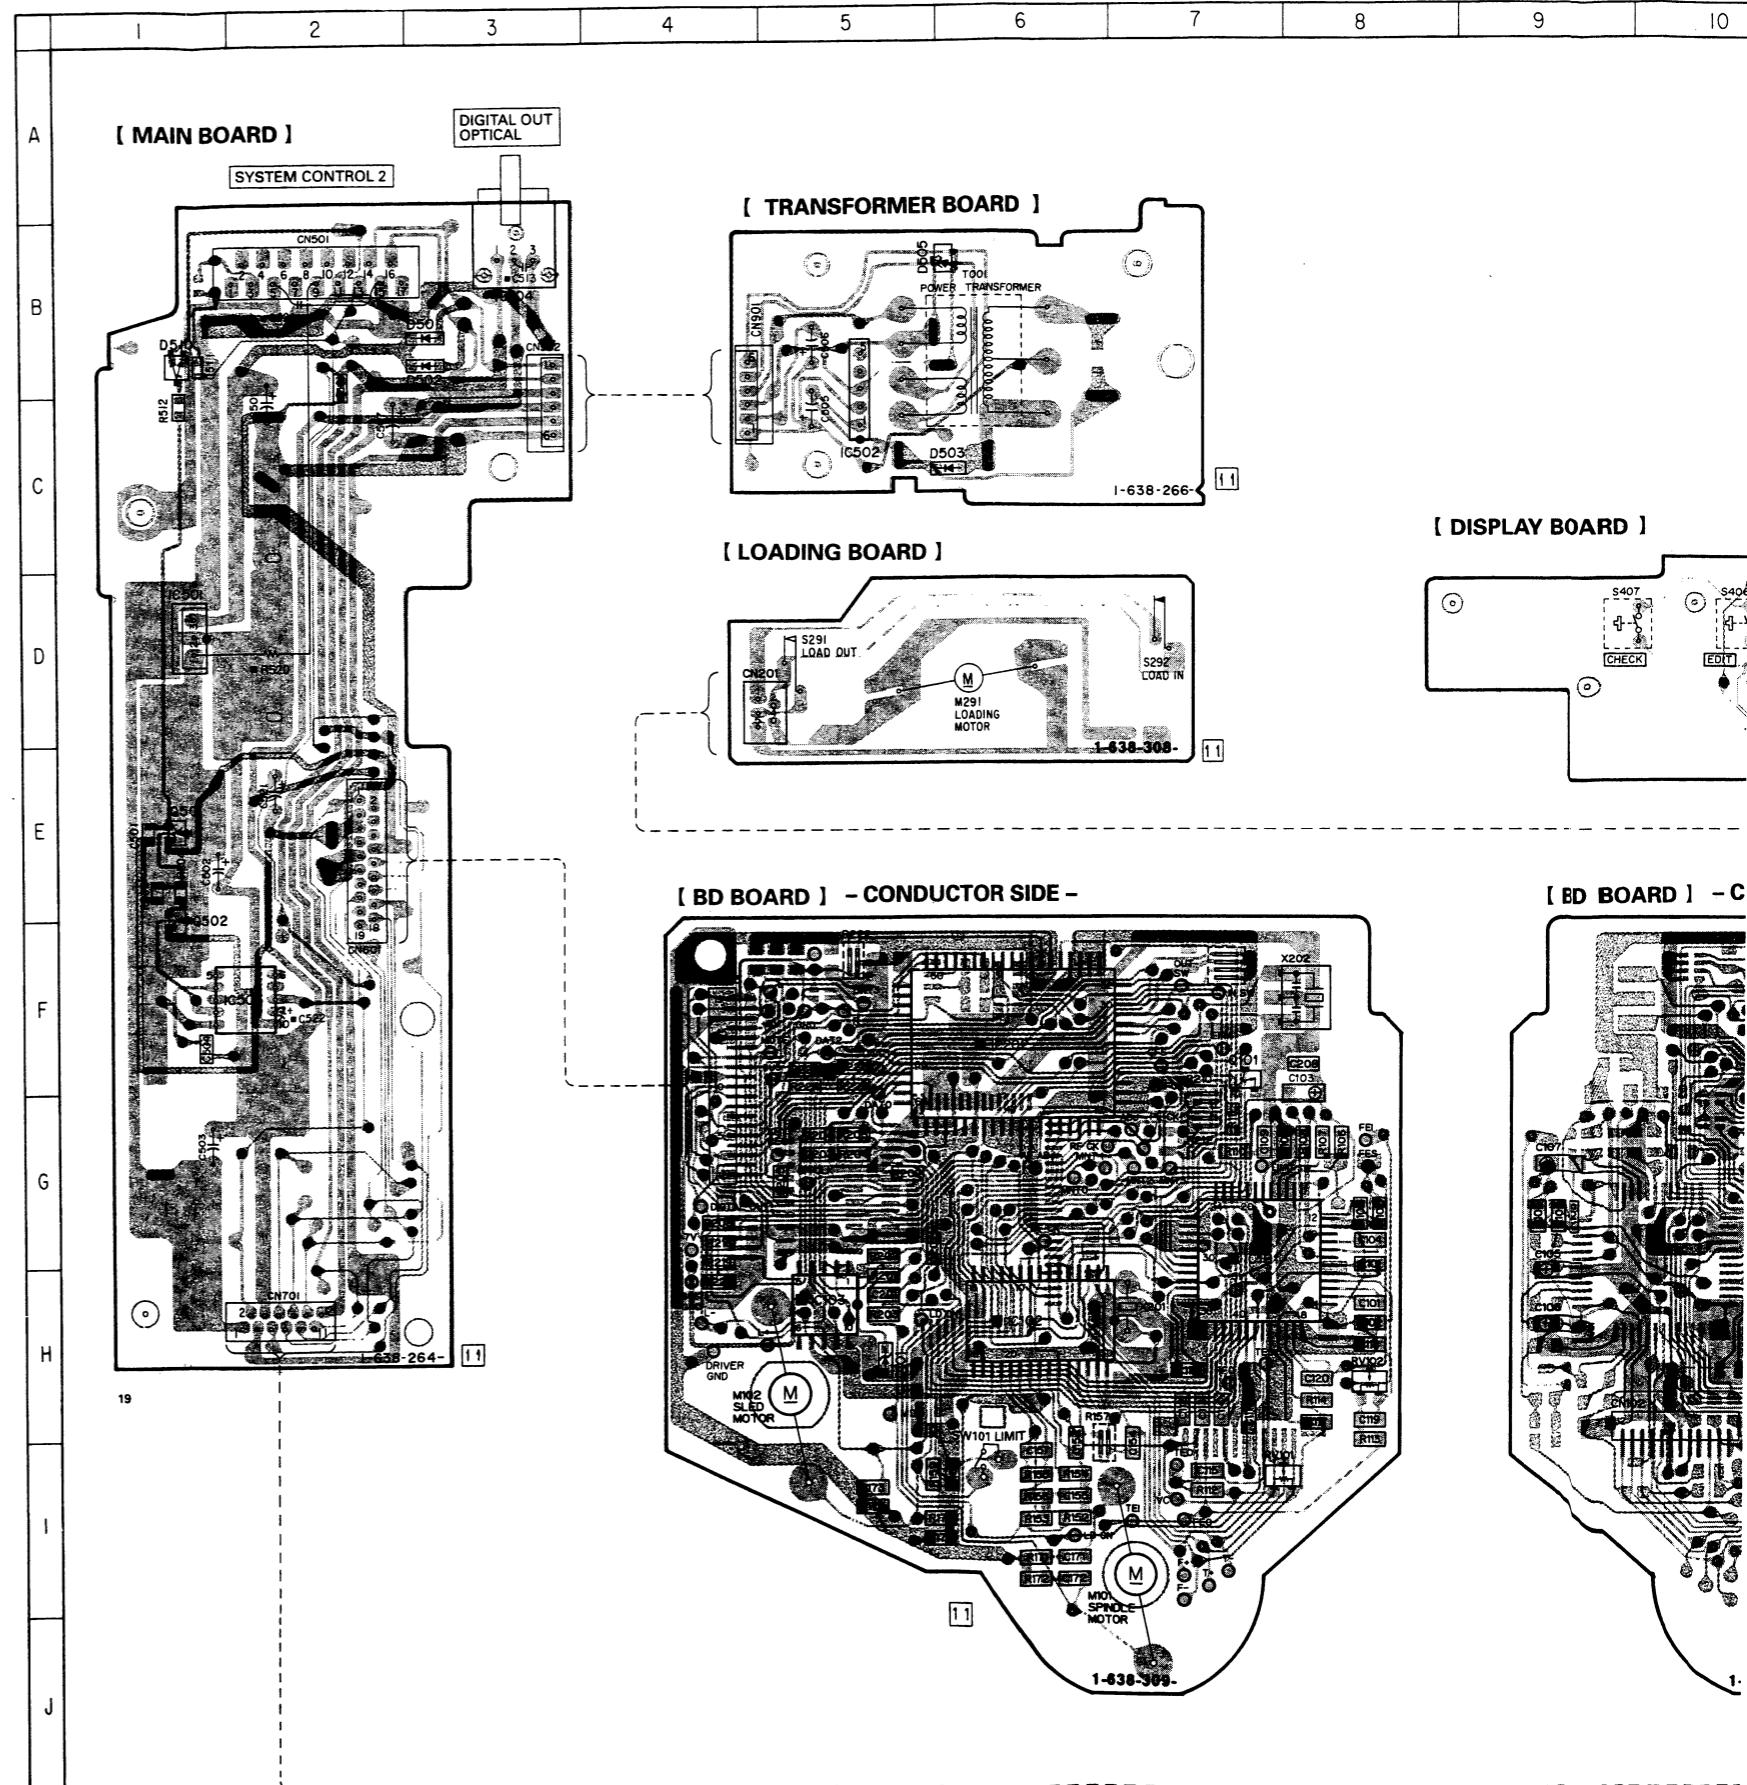


PRINTED WIRING BOARDS

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16

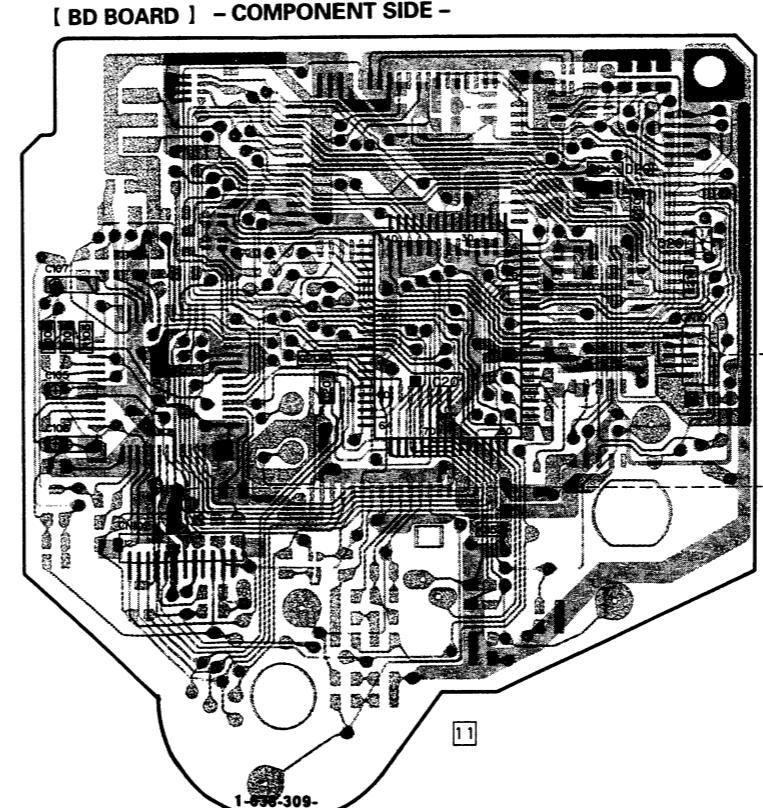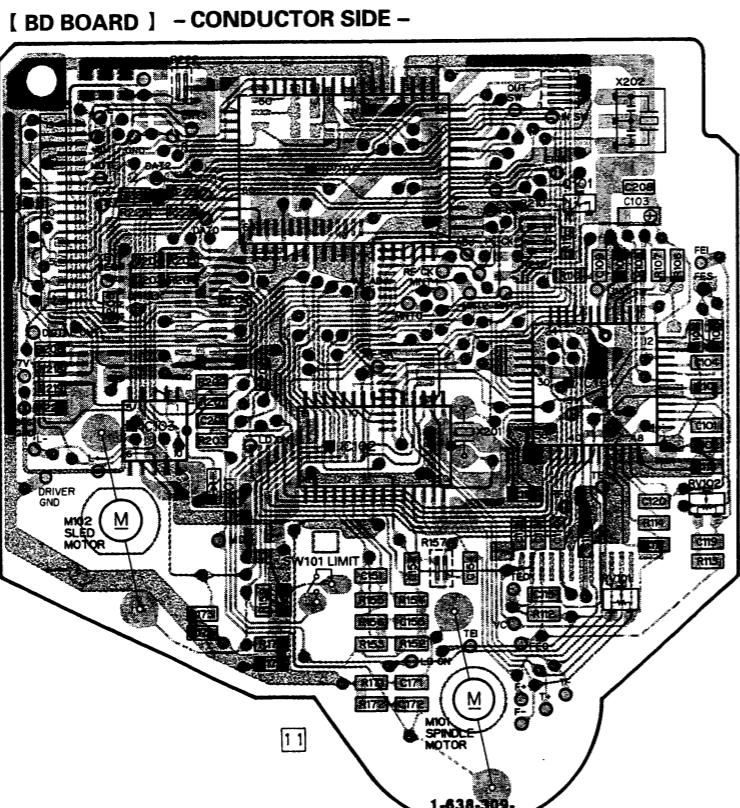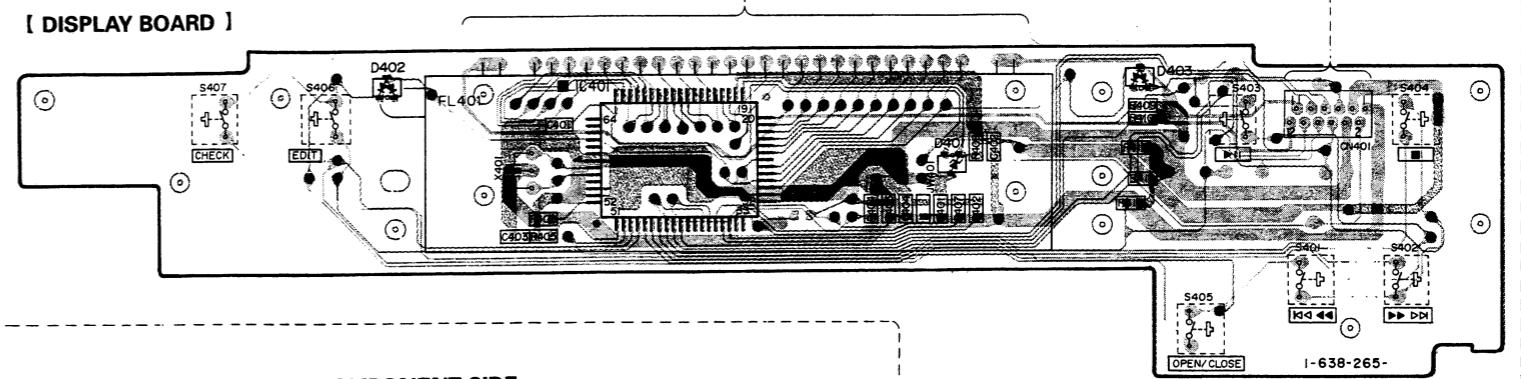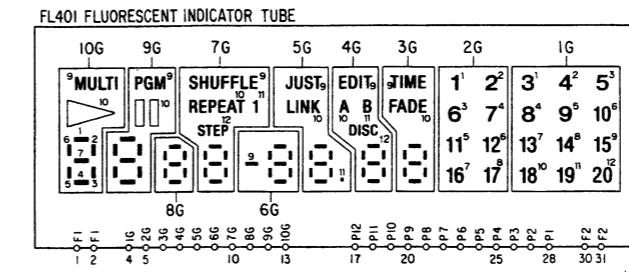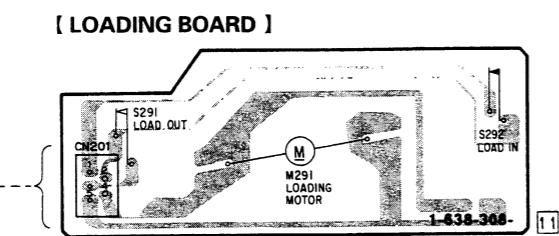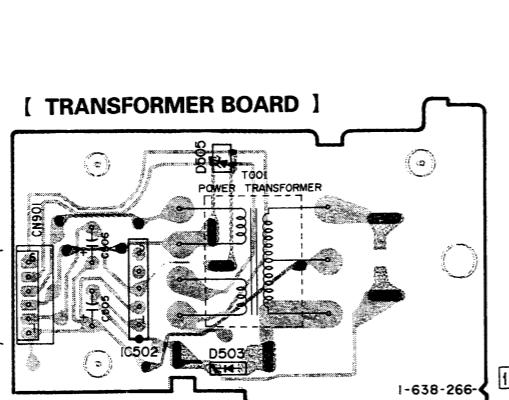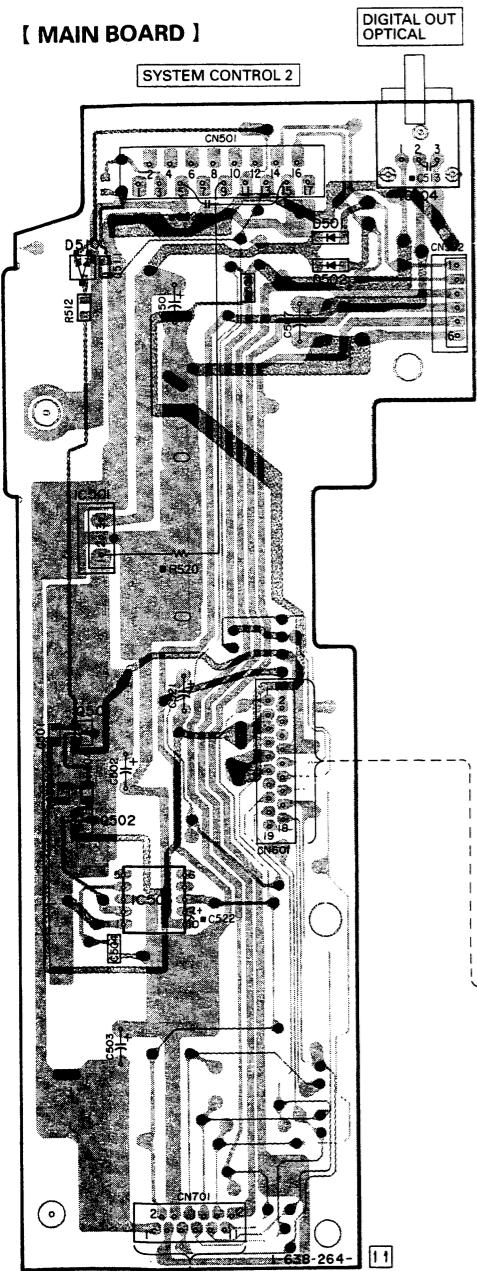


www.manualscenter.com

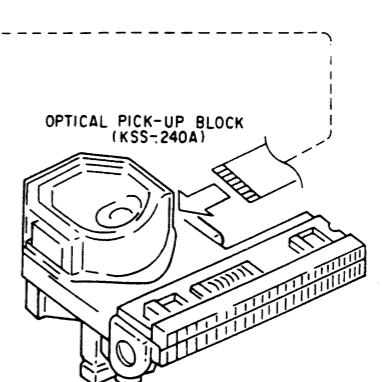


3-4. SCHEMATIC DIAGRAM - BD SECTION -

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15

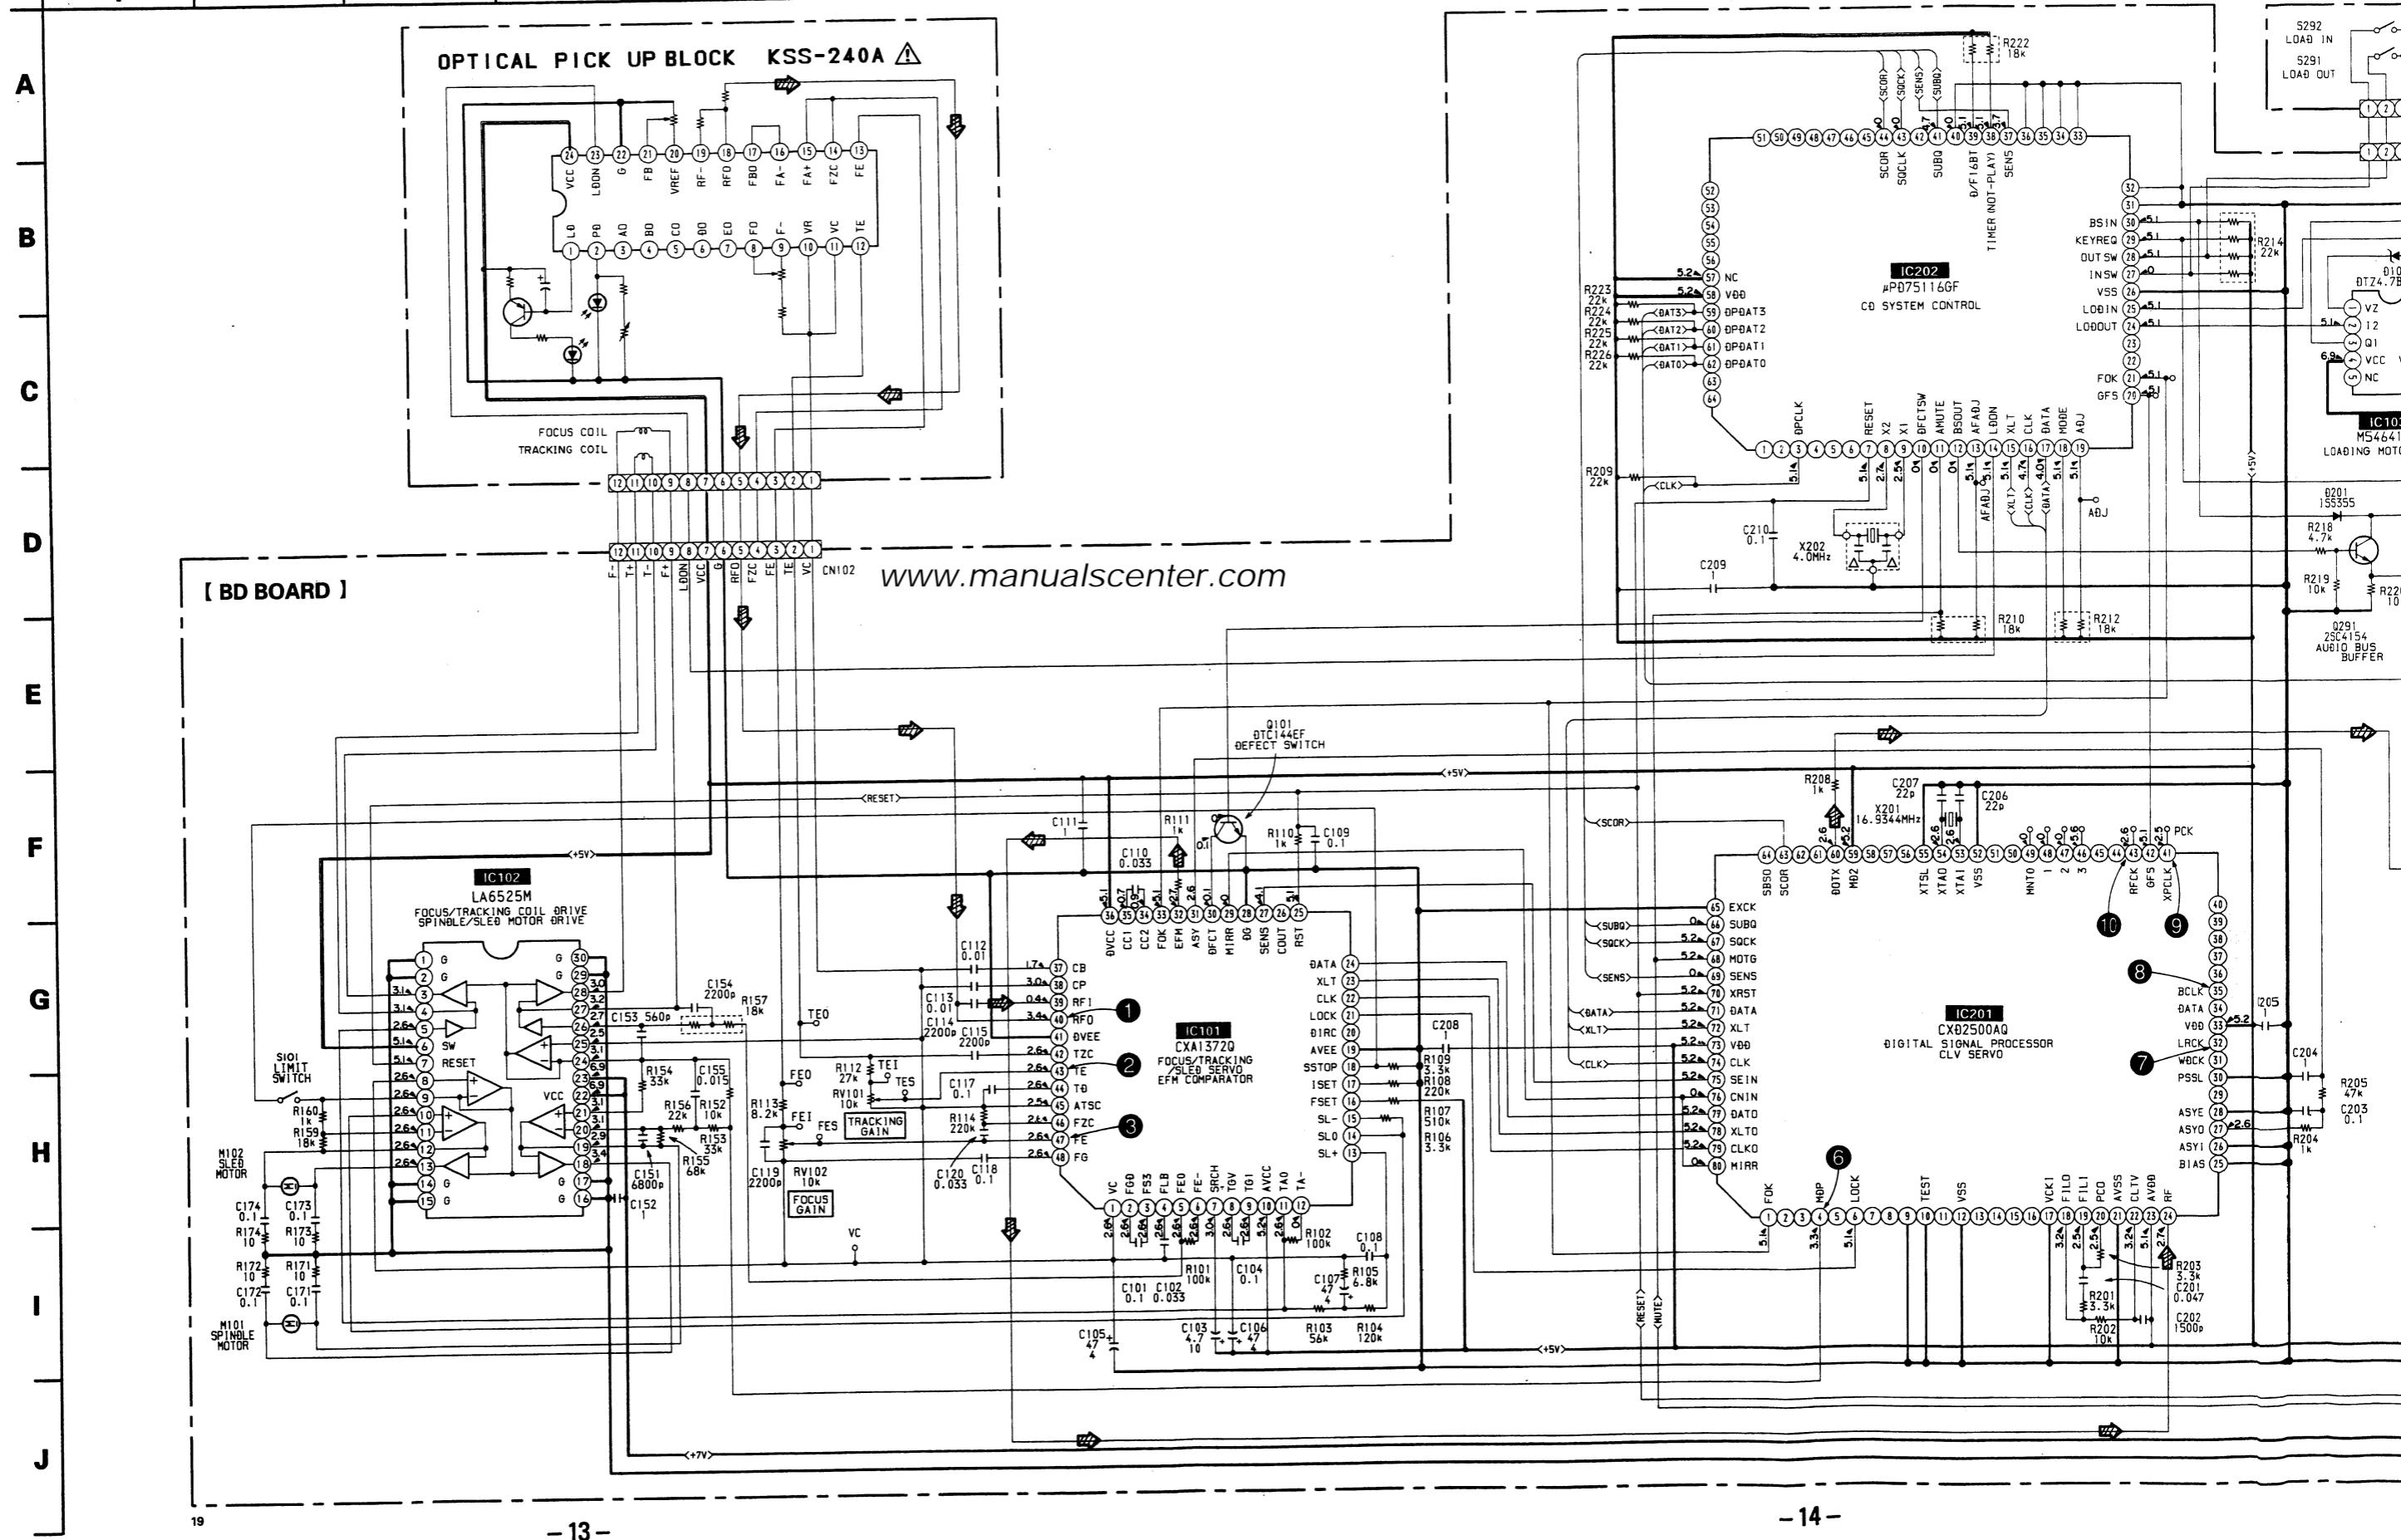


7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19

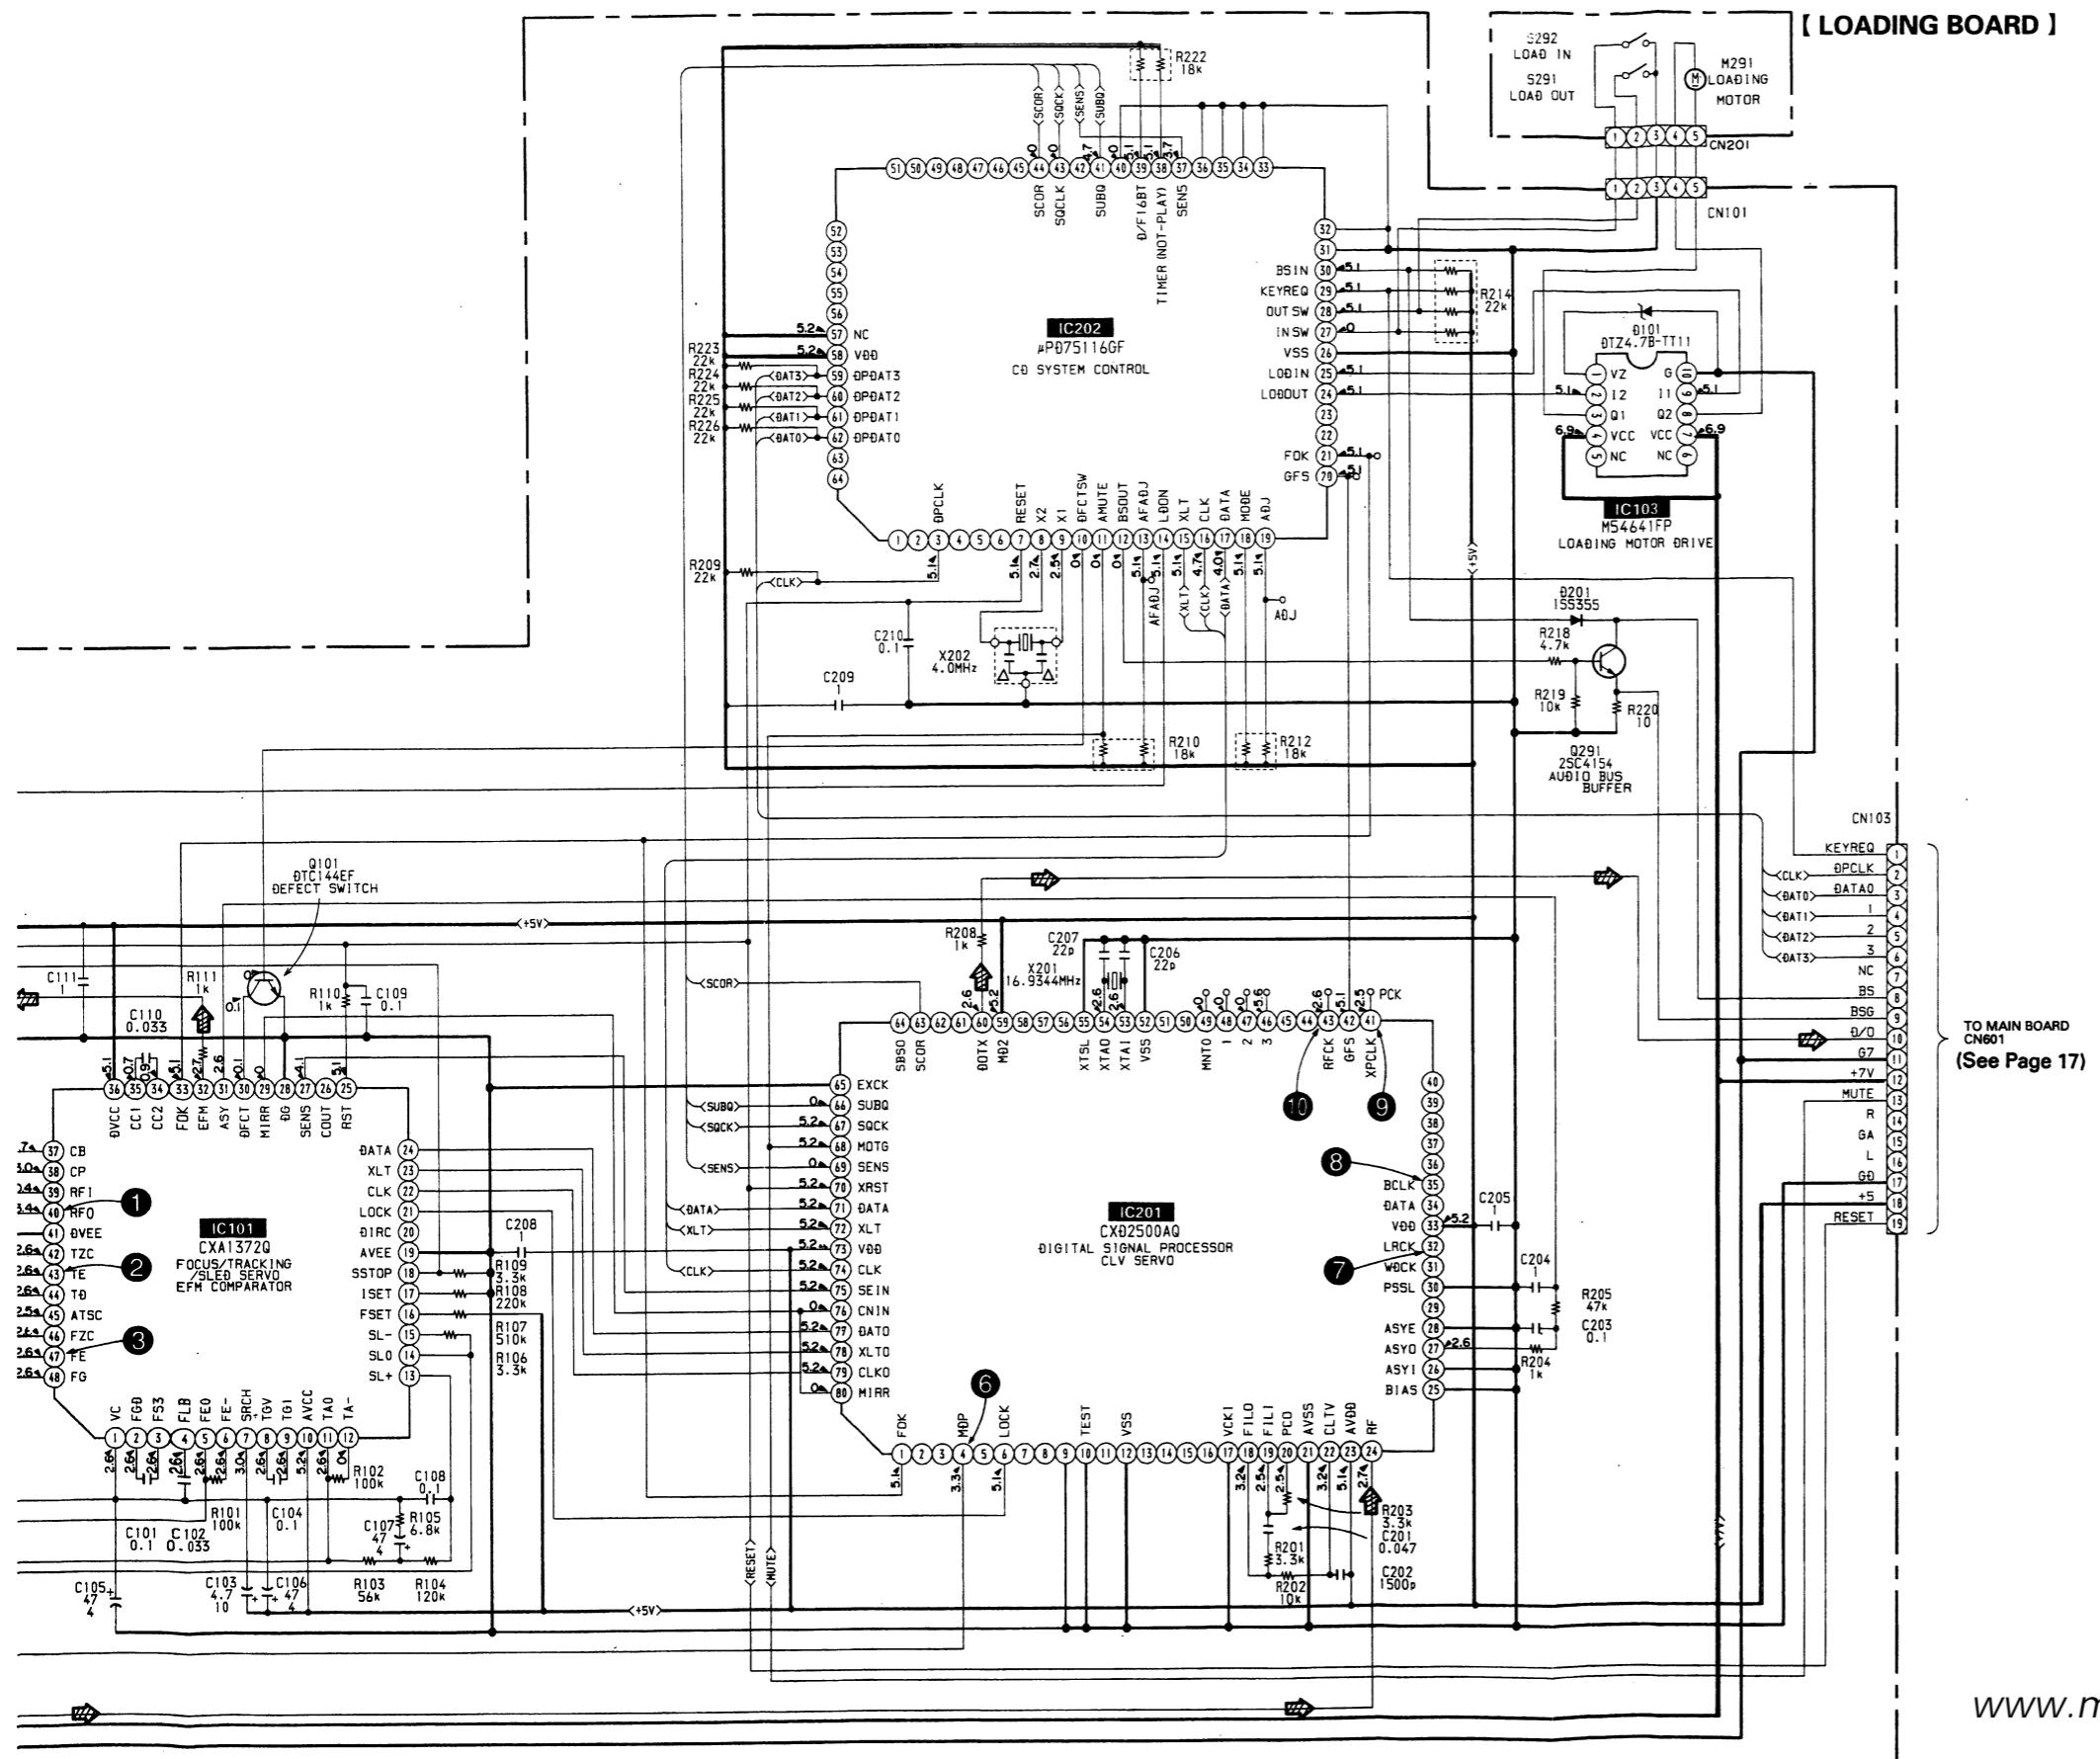

[LOADING BOARD]

- **WAVEFORMS**

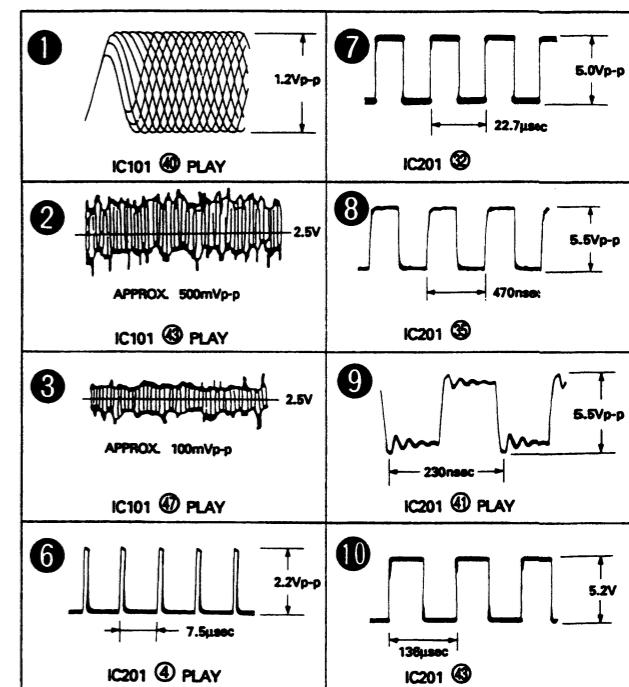

Note:

- All capacitors are in μF unless otherwise noted. $\text{pF}:\mu\text{F}$ 50WV or less are not indicated except for electrolytics and tantalums.
 - All resistors are in ohms, 1/4W or less unless otherwise noted.
 - △ internal component


The components identified by mark  or dotted line with mark  are critical for safety.

- Replace Only with part number specified.


 - **—**: B + Line.
 - **— —**: B - Line.
 - **[]**: adjustment for repair.
 - Voltages are DC between measurement points and ground.
 - no mark : PLAY
 - Voltages are taken with a VOM (input impedance **1MΩ**).
Voltage variations may be noted due to normal production tolerances.
 - Waveforms are taken with a oscilloscope.
 - Circled numbers refer to waveforms.
 - Signal path

3-5. SCHEMATIC DIAGRAM - MAIN SECTION - • See page 15 for note

• See page 15 for notes

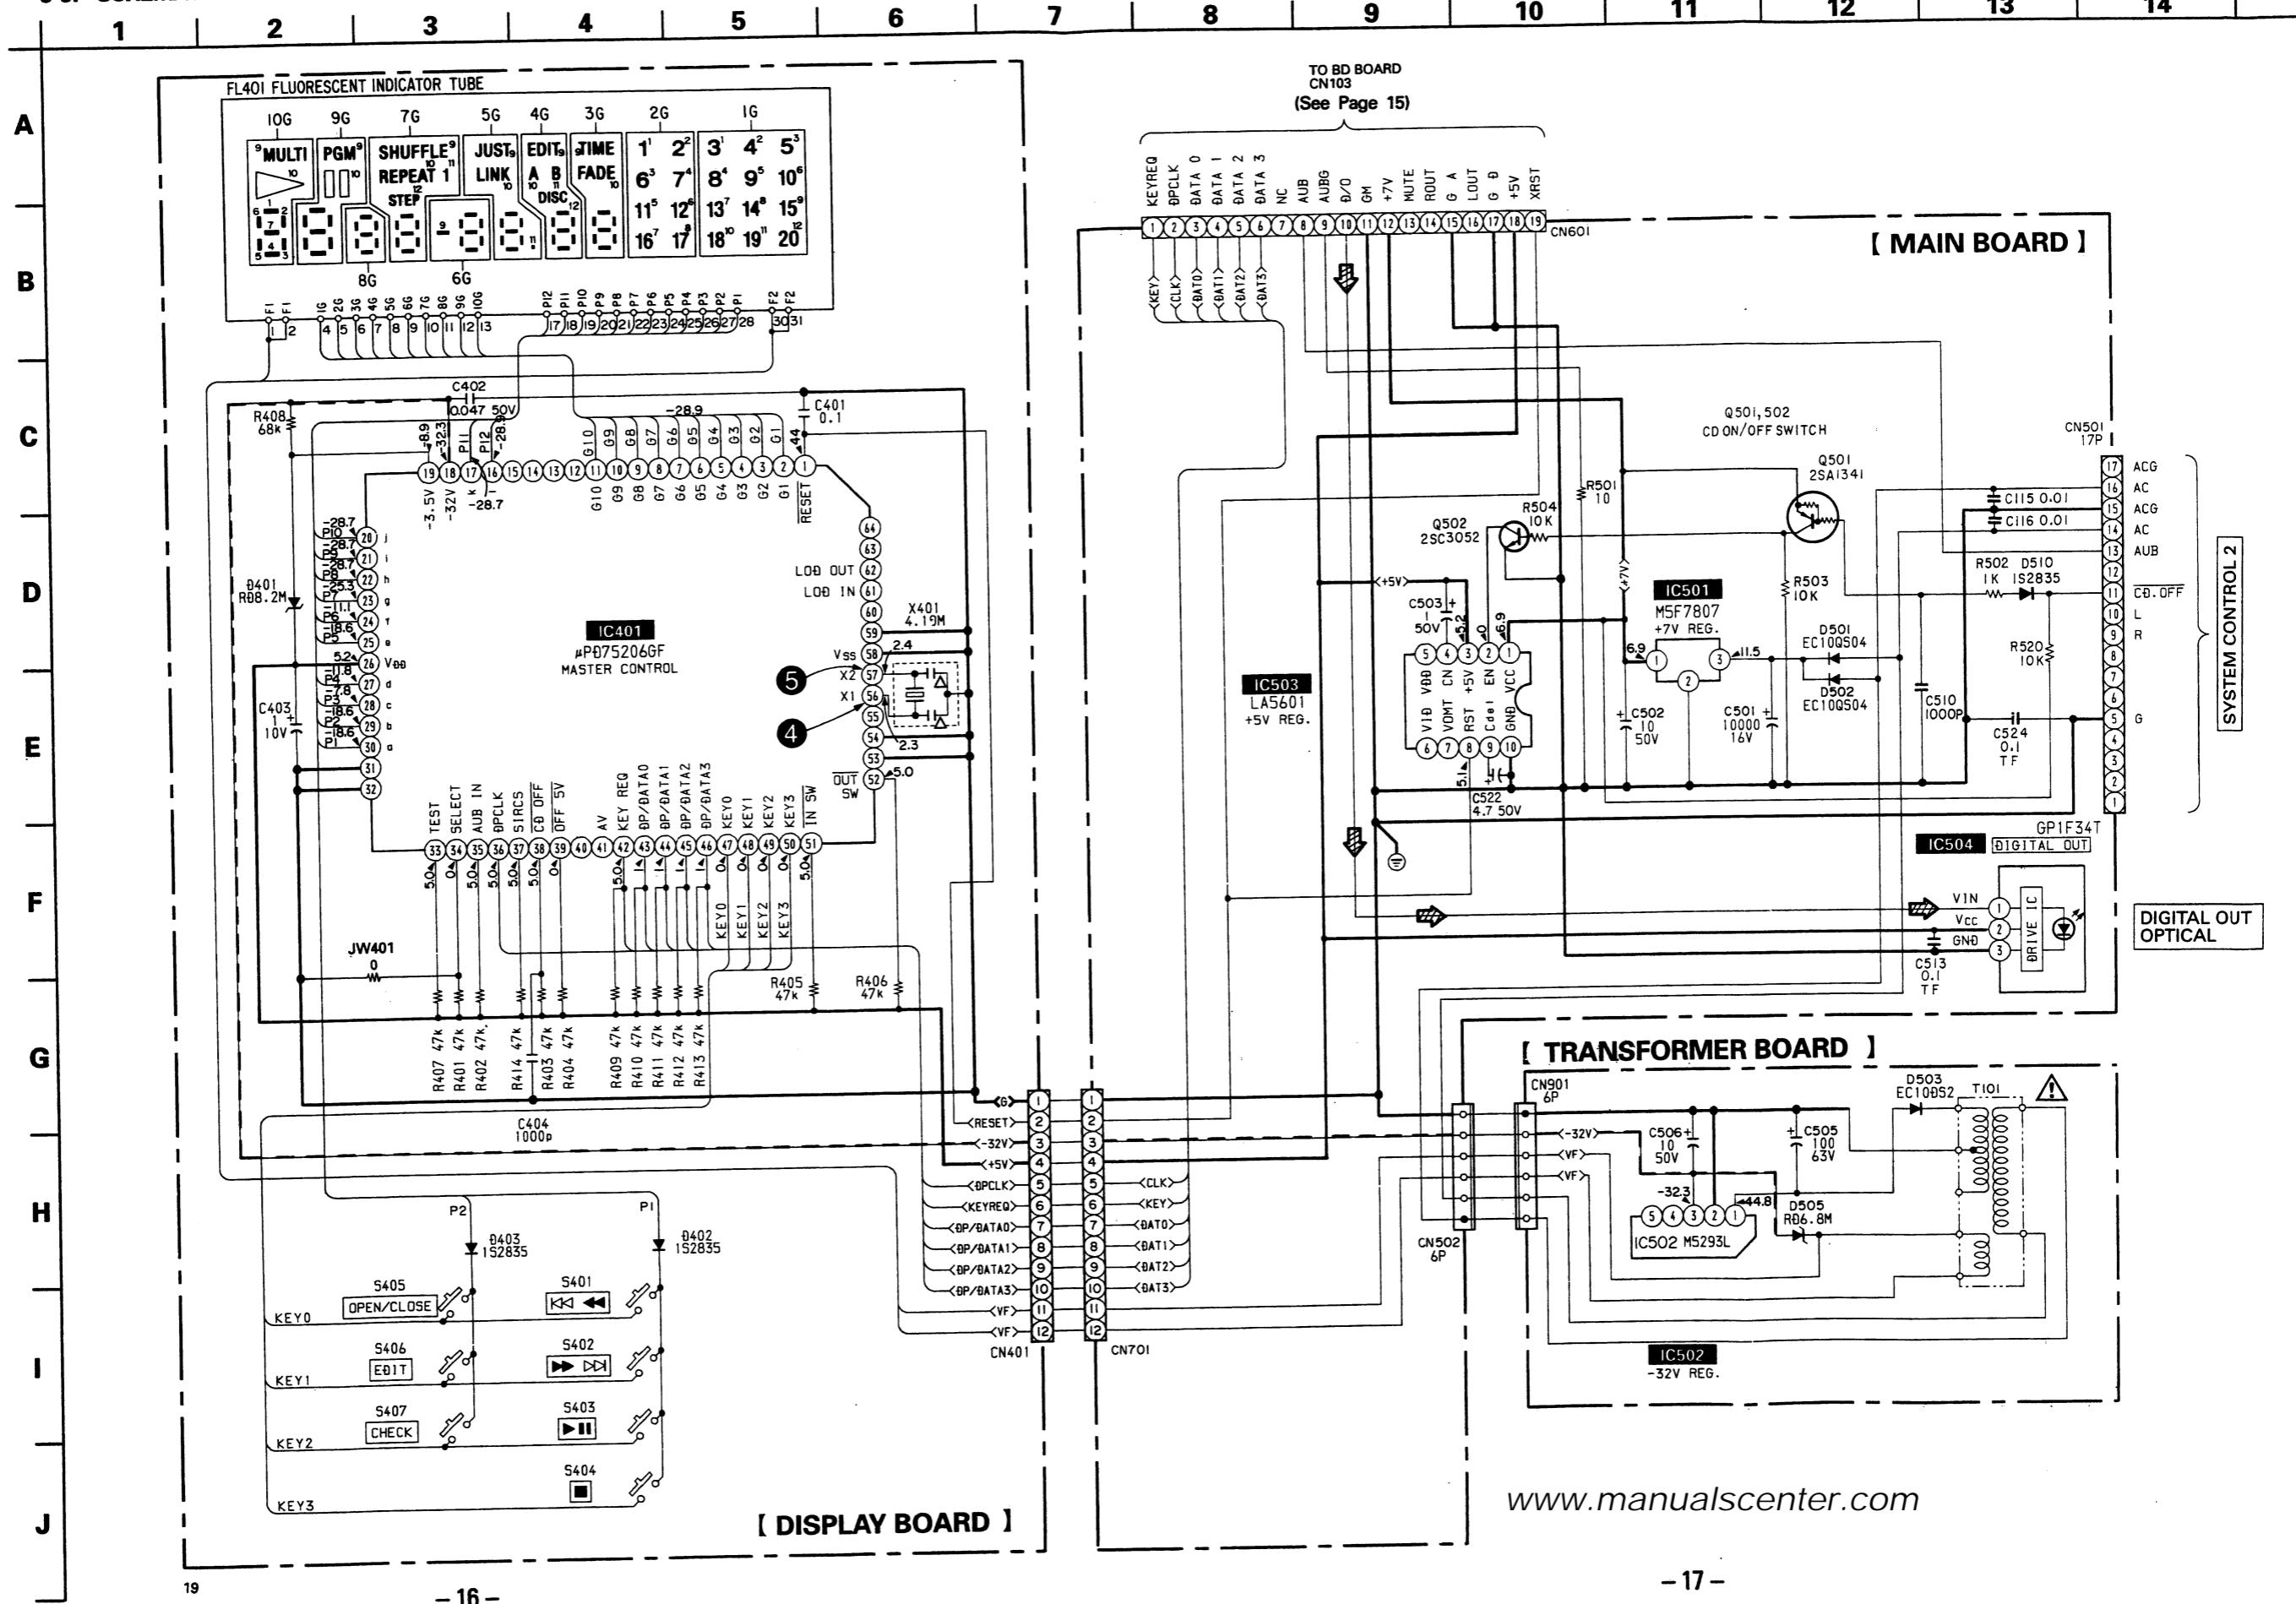


7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15

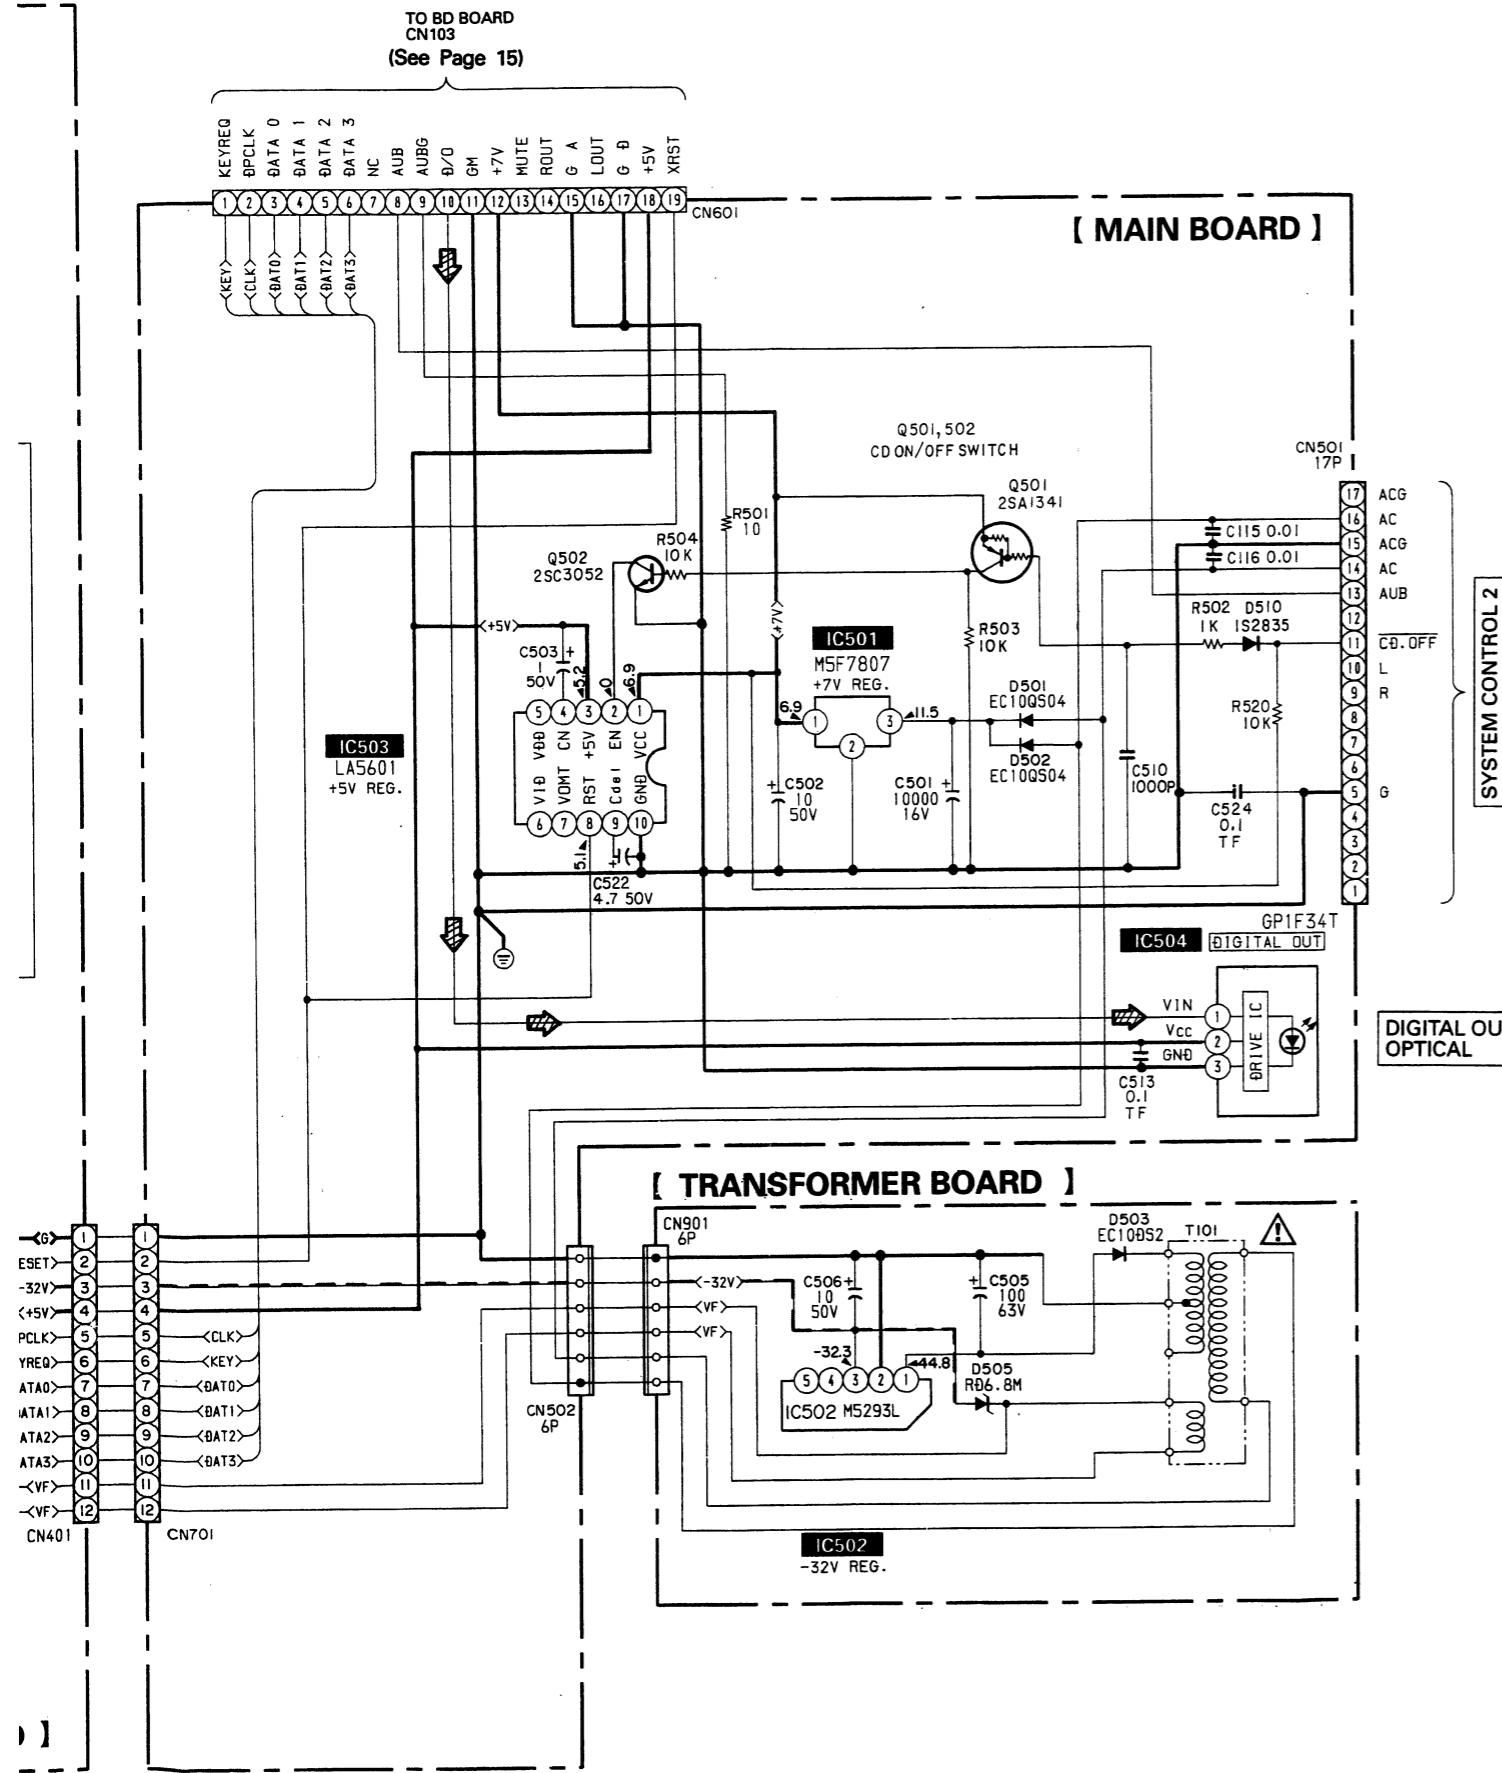


3-6. IC BLOCK DIAGRAMS

IC101 CXA1372Q

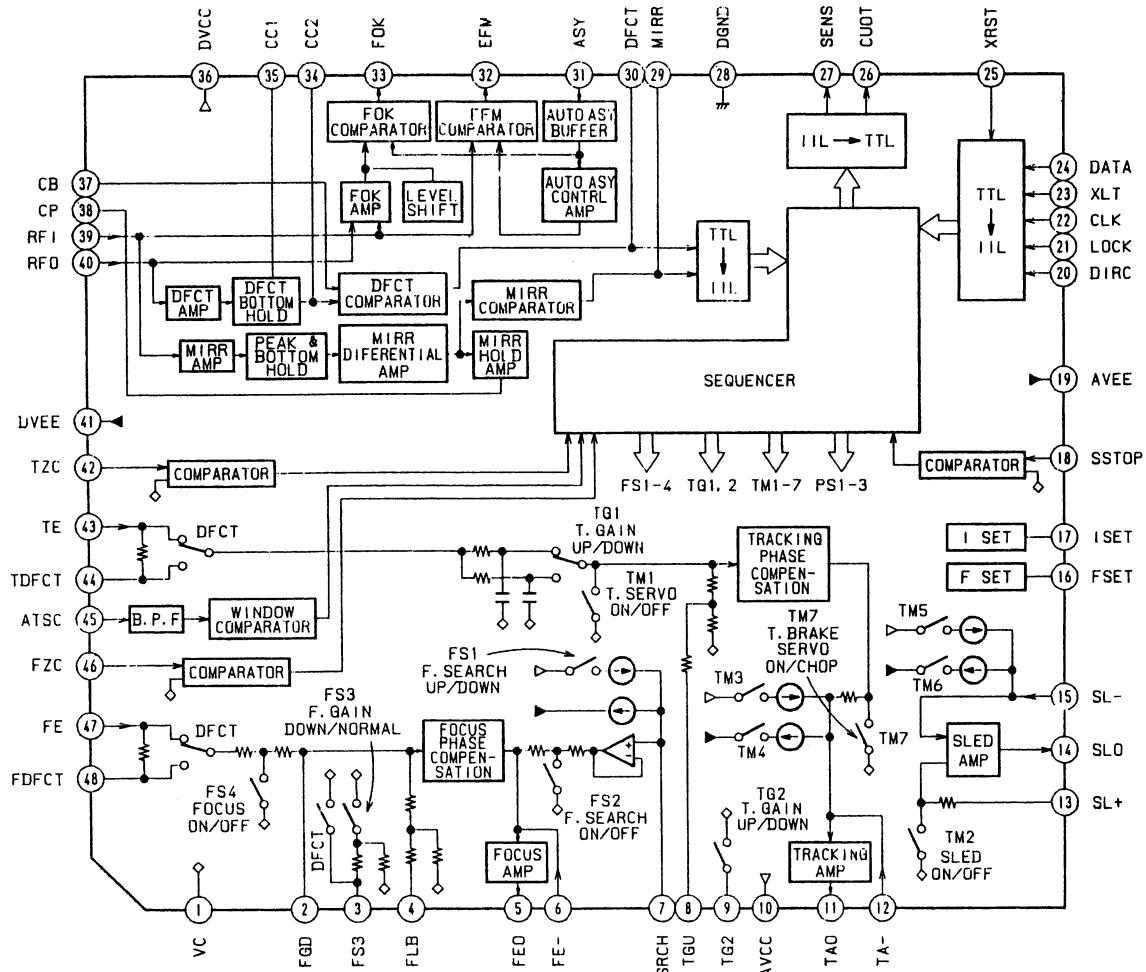


www.manualscenter.com

IC103 M54641FP

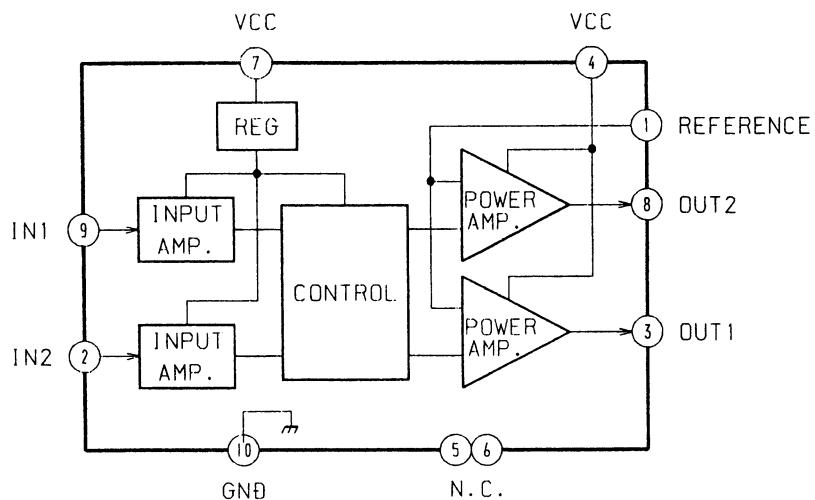


CDP-H6600

IC201 CXD2500AQ

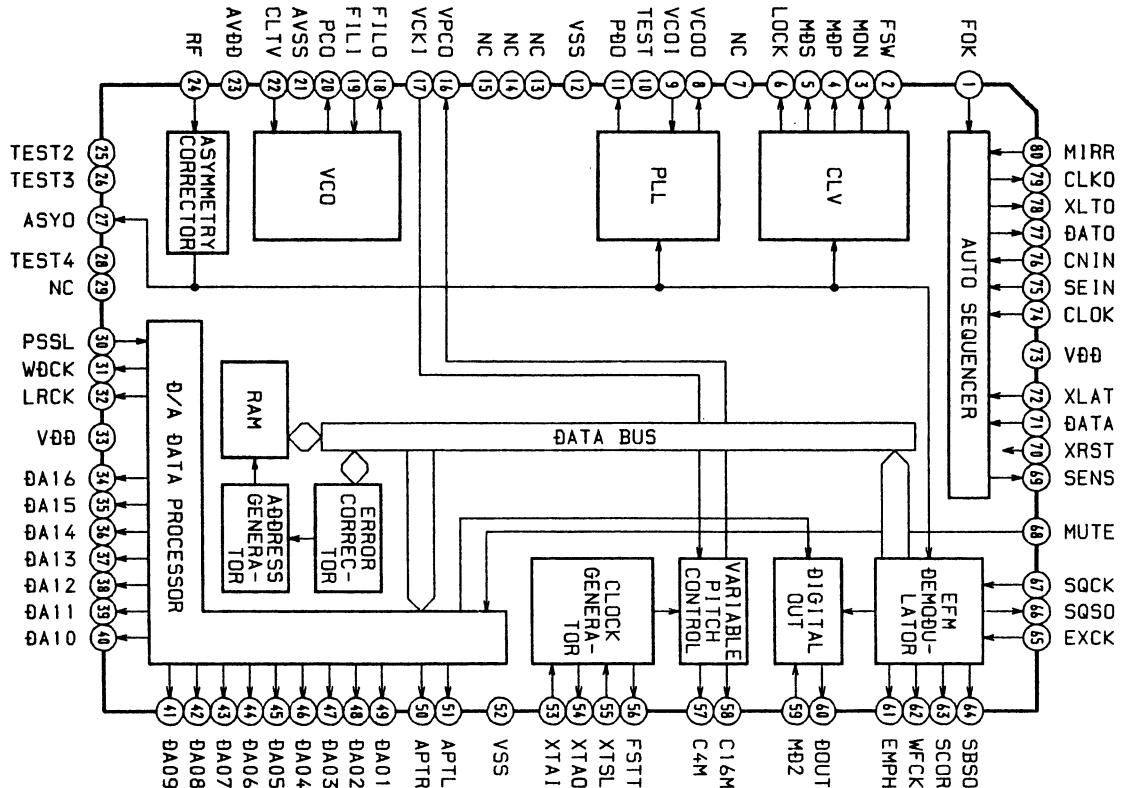


IC502 M5293L

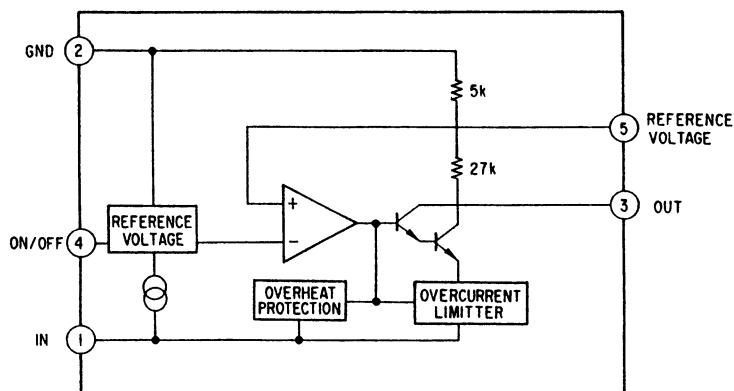

www.manualscenter.com

IC503 LA5601

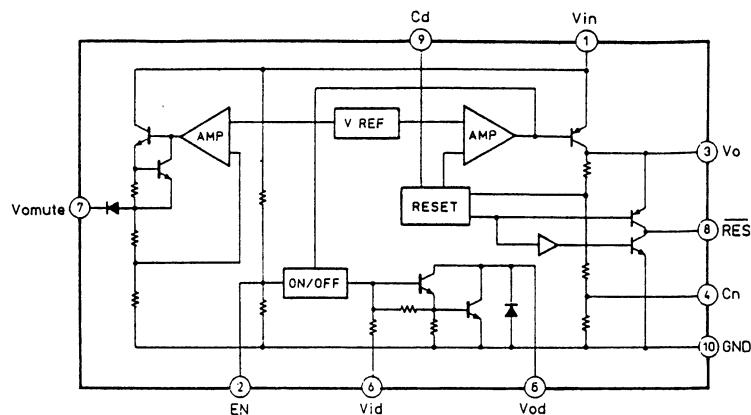

3-7. PIN FUNCTION OF IC202 AND IC401

- **IC202 CD System Controller (μPD75116GF-760-3BE)**

Functions effected by the captioned controller include IC101 (RF signal processing servo) and IC201 (DSP digital filter) loading control in the CD unit, data exchange with IC401 (master controller), audio bus entry, etc.

Pin No.	Pin Name	I/O	Description
1-2 3 4-6	DPCLK	O O O	Not in use with the model (open). Display data transfer clock output to IC401 (display micon) Not in use with the model (open)
7 8 9 10	RESET X2 X1 DPCF SW	I I I O	System reset input. "L": Reset Clock input Clock input (4 MHz) DEFECT circuit ON/OFF switching output of IC101 (CXA1372Q). It is turned OFF ("H") to focus-search the DISK flaw detection circuit.
11 12 13 14 15	AMUTE BSOUT AFADJ LDON XLT	O O I O O	Muting control output. "H": Mute Audio bus output Test mode input. Various test operations are effected upon "L" after turning ON the POWER. Optical pickup laser diode ON/OFF switching output. "H": ON Serial data latch output to IC201 (CXD2500AQ)
16 17 18 19 20	CLK DATA MODE ADJ GFS	O O I I I	Serial data transfer clock output to IC201 (CXD2500AQ) Serial data output to IC201 (CXD2500AQ) Not in use with the model (GND) Test mode input. Upon "L," GFS checking is disabled while continuously rotating the spindle no matter whether frame synch is issued during PLAY, PAUSE or SEARCH. GFS signal input from IC201 (CXD2500AQ). "L": NG "H": OK
21 22 - 23 24 25	FOK LODOUT LODIN	I O O O	Focus OK signal input from IC101 (CXA1372Q). "H": OK Not in use with the model (open) Output to rotate M291 (loading motor) in the loading out direction. *1 Output to rotate M291 (loading motor) in the loading in direction. *1
26 27 28 29 30	Vss IN SW OUT SW KEY REQ BS IN	- I I I I	Power terminal (GND) S292 (Loading in switch) input S291 (Loading out switch) input Key data request input from IC401 (display micon) Audio bus input
31 - 36 37 38 39 40	SENS TIMER D/F 16BIT	I I I I	Not in use with the model (GND) SENS input from IC101 (CXA1372Q) and IC201 (CXD2500AQ) Not in use with the model (pull up) IC201 (CXD2500AQ) digital filter mode setting input. It is fixed at 16 bit, 4F's with the model (pull up). Not in use with the model (GND)
41 42 43 44 45 - 56	SUBQ SQCLK SCOR	I O O I O	Subcode Q data input from IC201 (CXD2500AQ) Not in use with the model (open) Subcode Q data reading clock output to IC201 (CXD2500AQ) Subcode synch S0 + S1 detection input from IC201 (CXD2500AQ) Not in use with the model (open)
57 58 59 - 62 63 - 64	N.C. VDD DPDATA3-0	I - I/O O	Not in use with the model (+5V) Power terminal (+5V) Key data input and display data output with IC401 (display micon) Not in use with the model (open)

*1 Loading motor control

	IN	OUT	BRAKE
LODOUT ②	L	H	H
LODIN ②	H	L	H

- IC401 Display controller (μ PD75206GF-716-3BE)

In charge of displaying the FL tube and keying in, it exchanges data with the IC202 (CD syscon) in 4-bit parallel mode.

Pin No.	Pin Name	I/O	Description
1	<u>RESET</u>	I	System reset input. "L": Reset
2 - 11	G1-I0	O	Digital output to the FL tube
12 - 15		O	Not in use with the model (open)
16, 17	l, k	O	FL tube segment output
18	VLOAD	-	Power supply for the FL tube controller (builtin) (-32V)
19	VPRE	-	Power supply for the FL tube predriver (-3.5V)
20 - 25	j - e	O	FL tube segment output
26	VDD	-	Power terminal (+5V)
27, 28	d, c	O	FL tube segment output
29, 30	b, a	O	FL tube segment, key scan output
31, 32		I	Not in use with the model (GND)
33	<u>TEST</u>	I	Test mode input. "L": Test mode
34	<u>SELECT</u>	I	Not in use with the model (pull up)
35	BSIN	I	Not in use with the model (pull up)
36	DPCLK	I	Display data transfer clock input from IC202 (CD syscon)
37, 38		I	Not in use with the model (pull up)
39		O	Not in use with the model (pull up)
40, 41		O	Not in use with the model (open)
42	KEY REQ	O	Key data request output to IC202 (CD syscon)
43 - 46	DPDATA0-3	I/O	Key data output and display data input with IC202 (CD syscon)
47 - 50	KEY0-3	I	Key data input
51, 52		I	Not in use with the model (pull up)
53, 54		I	Not in use with the model (GND)
55		O	Not in use with the model (open)
56	X1	I	System clock input (4.19 MHz)
57	X2	I	System clock input
58	Vss	-	Power supply terminal (GND)
59		I	Not in use with the model (GND)
60 - 64		O	Not in use with the model (open)

SECTION 4

EXPLODED VIEWS


NOTE:

- -XX, -X mean standardized parts, so they may have some differences from the original one.
- Color Indication of Appearance Parts Example:
KNOB,BALANCE(WHITE)...(RED)
↑ ↑
Parts color Cabinet's color

- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.
- Hardware(# mark) list is given in the last of this parts list.

The components identified by mark \triangle or dotted line with mark \triangle are critical for safety.
Replace only with part number specified.


When indicating parts by reference number, please include the board name.

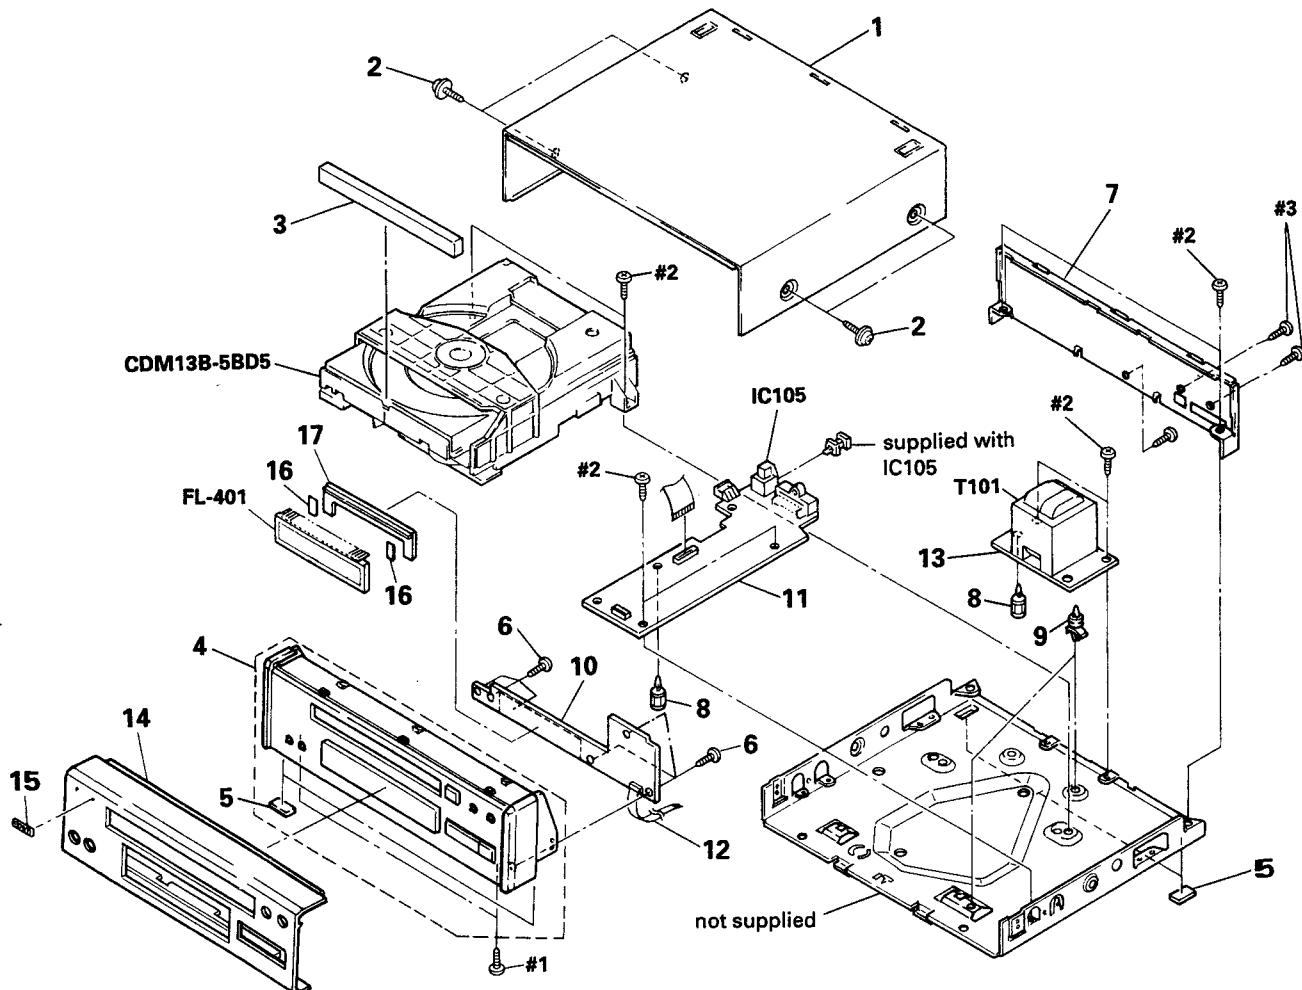(1) CHASSIS SECTION

www.manualscenter.com


Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
1	4-932-844-01	CASE		11	* 1-638-264-11	MAIN BOARD	
2	3-363-099-01	SCREW (CASE +3X8 TP2)		12	1-575-001-11	WIRE, FLAT TYPE (12 CORE)	
3	X-4941-527-1	LID (TRAY) ASSY		13	* 1-638-266-11	TRANSFORMER BOARD	
4	X-4941-525-1	PANEL ASSY, FRONT		14	4-944-445-01	PANEL, FRONT	
5	4-930-336-01	FOOT (FELT)		15	4-942-636-01	EMBLEM (NO. 3, 5), SONY	
6	4-928-635-01	SCREW, +BV (2.6X8) TAPPING		16	* 4-932-810-11	CUSHION (FL)	
7	* 4-943-175-11	PAENL, BACK		17	* 4-944-444-01	HOLDER (FL TUBE)	
8	* 3-669-610-00	SPACER		T101	\triangle 1-450-341-11	TRANSFORMER, POWER	
9	* 4-924-098-11	HOLDER, PC BOARD					
10	* A-4617-802-A	DISPLAY BOARD, COMPLETE					

(2) CD MECHANISM SECTION (CDM13B-5BD5)

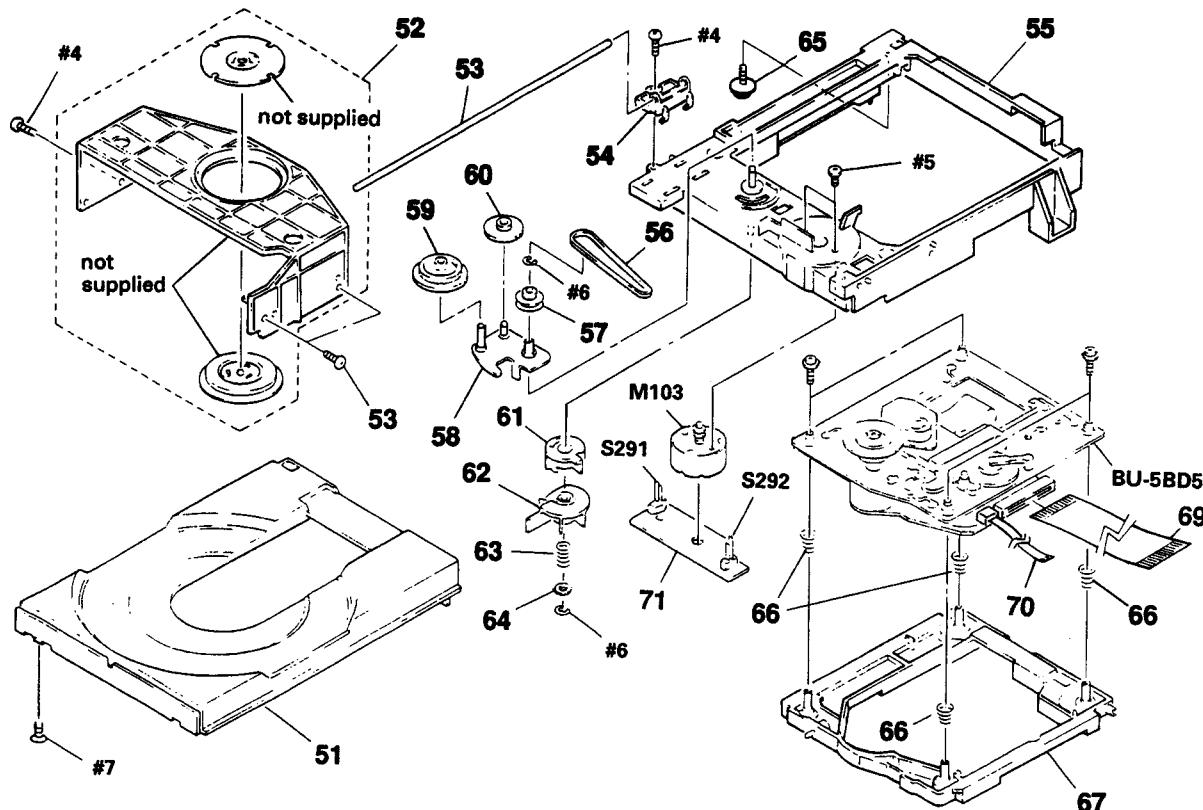

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
51	4-944-012-01	TABLE, DISC		62	4-929-729-01	CAM (B)	
52	A-4604-752-A	HOLDER (MG) ASSY		63	3-659-338-00	SPRING, COMPRESSION	
53	4-929-764-01	SHAFT (TABLE GUIDE)		64	4-927-654-01	WASHER (LIMITER)	
54	4-944-006-01	BEARING		65	* 4-917-583-21	BRACKET, YOKE	
55	X-4941-462-1	CHASSIS (MD) ASSY		66	4-917-541-01	SPRING (B)	
56	4-927-649-01	BELT		67	4-929-747-01	HOLDER (BU)	
57	4-929-724-01	PULLEY (B)		68	4-933-134-01	SCREW (+PTPWH M2.6X6)	
58	X-4929-703-1	ARM ASSY, SWING		69	1-590-909-21	WIRE, FLAT TYPE (19 CORE)	
59	4-927-620-11	GEAR (P)		70	1-590-530-11	WIRE, FLAT TYPE	
60	4-927-628-01	GEAR (C)		71	* 1-638-308-11	LOADING BOARD	
61	4-929-727-01	CAM (A)		M103	A-4608-362-A	MOTOR (L) ASSY	

(3) OPTICAL PICK-UP BLOCK (BU-5BD5)

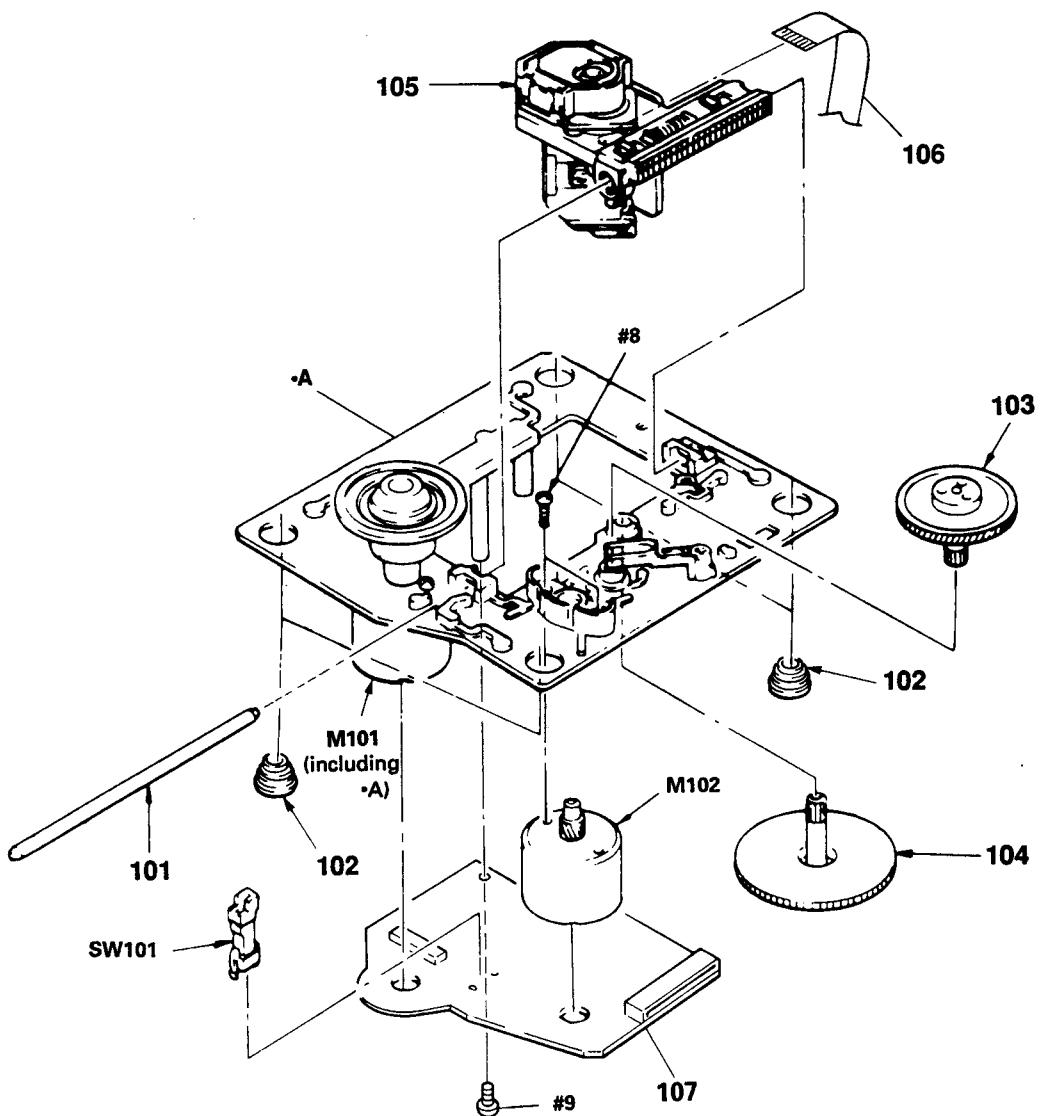

Ref. No.	Part No.	Description	Remarks
101	4-917-565-01	SHAFT, SLED	
102	4-933-126-01	INSULATOR (A)	
103	4-917-567-01	GEAR (M)	
104	4-917-564-01	GEAR (P), FLATNESS	

105 △ 8-848-144-11 DEVICE, OPTICAL KSS-240A
 106 1-575-001-11 WIRE, FLAT TYPE (12 CORE)
 107 * A-4617-762-A BD BOARD, COMPLETE

M101 X-4917-523-3 ASSY, MOTOR (SPINDLE)
 M102 X-4917-504-1 ASSY, MOTOR (SLED)
 SW101 1-572-085-11 SWITCH, LEAF (LIMIT)

www.manualscenter.com

The components identified by mark △ or dotted line with mark △ are critical for safety.
 Replace only with part number specified.

BD

NOTE:

The components identified by mark Δ or dotted line with mark Δ are critical for safety.
Replace only with part number specified.

When indicating parts by reference number, please include the board name.

SECTION 5

ELECTRICAL PARTS LIST

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX, -X mean standardized parts, so they may have some difference from the original one.
- RESISTORS
All resistors are in ohms
METAL : Metal-film resistor
METAL OXIDE : Metal Oxide-film resistor
F : nonflammable
- SEMICONDUCTORS
In each case, u : μ , for example:
uA...: μ A..., uPA...: μ PA...,
uPB...: μ PB..., uPC...: μ PC...,
uPD...: μ PD...
- CAPACITORS
uF: μ F
- COILS
uH: μ H

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
				C205	1-164-346-11	CERAMIC CHIP	1uF 16V
		* A-4617-762-A BD BOARD, COMPLETE		C206	1-163-101-00	CERAMIC CHIP	22PF 5% 50V
		*****		C207	1-163-101-00	CERAMIC CHIP	22PF 5% 50V
				C208	1-164-346-11	CERAMIC CHIP	1uF 16V
		< CAPACITOR >		C209	1-164-346-11	CERAMIC CHIP	1uF 16V
				C210	1-163-038-00	CERAMIC CHIP	0.1uF 25V
C101	1-163-038-00	CERAMIC CHIP	0.1uF 25V				
C102	1-163-989-11	CERAMIC CHIP	0.033uF 10% 25V				
C103	1-135-155-21	TANTALUM CHIP	4.7uF 10% 10V				
C104	1-163-038-00	CERAMIC CHIP	0.1uF 25V	CN101	1-580-858-11	SOCKET, CONNECTOR (SMT)	5P
C105	1-126-607-11	ELECT CHIP	47uF 20% 4V	CN102	1-580-866-11	SOCKET, CONNECTOR (SMT)	12P
C106	1-126-607-11	ELECT CHIP	47uF 20% 4V	CN103	1-580-872-41	SOCKET, CONNECTOR (SMT)	19P
C107	1-126-607-11	ELECT CHIP	47uF 20% 4V				
C108	1-163-038-00	CERAMIC CHIP	0.1uF 25V				
C109	1-163-038-00	CERAMIC CHIP	0.1uF 25V	D101	8-719-976-96	DIODE DTZ4.7B	
C110	1-163-989-11	CERAMIC CHIP	0.033uF 10% 25V	D201	8-719-988-62	DIODE 1SS355	
C111	1-164-346-11	CERAMIC CHIP	1uF 16V				
C112	1-164-232-11	CERAMIC CHIP	0.01uF 50V				
C113	1-164-232-11	CERAMIC CHIP	0.01uF 50V	IC101	8-752-050-82	IC CXA1372Q	
C114	1-164-695-11	CERAMIC CHIP	0.0022uF 5% 50V	IC102	8-759-823-48	IC LA6525M	
C115	1-164-695-11	CERAMIC CHIP	0.0022uF 5% 50V	IC103	8-759-636-20	IC M54641FP	
C117	1-163-038-00	CERAMIC CHIP	0.1uF 25V	IC201	8-752-337-26	IC CXD2500AQ	
C118	1-163-038-00	CERAMIC CHIP	0.1uF 25V	IC202	8-759-153-16	IC uPD75116GF-760-3BE	
C119	1-164-695-11	CERAMIC CHIP	0.0022uF 5% 50V				
C120	1-163-989-11	CERAMIC CHIP	0.033uF 10% 25V				
C151	1-163-019-00	CERAMIC CHIP	0.0068uF 10% 50V	Q101	8-729-805-45	TRANSISTOR 2SC3395	
C152	1-164-346-11	CERAMIC CHIP	1uF 16V	Q201	8-729-602-21	TRANSISTOR 2SC4154-F	
C153	1-163-135-00	CERAMIC CHIP	560PF 5% 50V				
C154	1-164-695-11	CERAMIC CHIP	0.0022uF 5% 50V				
C155	1-163-023-00	CERAMIC CHIP	0.015uF 5% 50V	R101	1-216-097-00	METAL CHIP 100K 5% 1/10W	
C171	1-163-038-00	CERAMIC CHIP	0.1uF 25V	R102	1-216-097-00	METAL CHIP 100K 5% 1/10W	
C172	1-163-038-00	CERAMIC CHIP	0.1uF 25V	R103	1-216-091-00	METAL CHIP 56K 5% 1/10W	
C173	1-163-038-00	CERAMIC CHIP	0.1uF 25V	R104	1-216-099-00	METAL CHIP 120K 5% 1/10W	
C174	1-163-038-00	CERAMIC CHIP	0.1uF 25V	R105	1-216-069-00	METAL CHIP 6.8K 5% 1/10W	
C201	1-163-809-11	CERAMIC CHIP	0.047uF 10% 25V	R106	1-216-061-00	METAL CHIP 3.3K 5% 1/10W	
C202	1-163-145-00	CERAMIC CHIP	0.0015uF 5% 50V	R107	1-216-114-00	METAL GLAZE 510K 5% 1/10W	
C203	1-163-038-00	CERAMIC CHIP	0.1uF 25V	R108	1-216-105-00	METAL CHIP 220K 5% 1/10W	
C204	1-164-346-11	CERAMIC CHIP	1uF 16V	R109	1-216-061-00	METAL CHIP 3.3K 5% 1/10W	
				R110	1-216-049-00	METAL CHIP 1K 5% 1/10W	

DISPLAY

MAIN

TRANSFORMER

LOADING

Ref. No.	Part No.	Description			Remarks	Ref. No.	Part No.	Description			Remarks		
< IC >													
IC401	8-759-154-14	IC	uPD75206GF-716-3BE					*****					
IC501	8-759-604-86	IC	MSF7807L					* 1-638-308-11 LOADING BOARD			*****		
IC502	8-759-633-42	IC	MS293L					*****					
IC503	8-759-821-93	IC	LA5601					< CONNECTOR >					
IC504	8-749-922-39	IC	GP1F34T										
< JUMPER >													
JW401	1-216-295-00	METAL CHIP	0	5%	1/10W		CN201	1-580-918-11	HOUSING, CONNECTOR 5P				
< TRANSISTOR >													
Q501	8-729-805-69	TRANSISTOR	2SA1341				S291	1-571-924-11	SWITCH, LEAF (LOAD OUT)				
Q502	8-729-620-06	TRANSISTOR	2SC3052EF				S292	1-571-924-11	SWITCH, LEAF (LOAD IN)				
< RESISTOR >													
R401	1-216-089-00	METAL CHIP	47K	5%	1/10W		*****			MISCELLANEOUS			
R402	1-216-089-00	METAL CHIP	47K	5%	1/10W		12	1-575-001-11	WIRE, FLAT TYPE (12 CORE)				
R403	1-216-089-00	METAL CHIP	47K	5%	1/10W		69	1-590-909-21	WIRE, FLAT TYPE (19 CORE)				
R404	1-216-089-00	METAL CHIP	47K	5%	1/10W		70	1-590-530-11	WIRE, FLAT TYPE				
R405	1-216-089-00	METAL CHIP	47K	5%	1/10W		105	△ 8-848-144-11	DEVICE, OPTICAL KSS-240A				
							106	1-575-001-11	WIRE, FLAT TYPE (12 CORE)				
R406	1-216-089-00	METAL CHIP	47K	5%	1/10W								
R407	1-216-089-00	METAL CHIP	47K	5%	1/10W		M101	X-4917-523-3	ASSY, MOTOR (SPINDLE)				
R408	1-216-093-00	METAL CHIP	68K	5%	1/10W		M102	X-4917-504-1	ASSY, MOTOR (SLED)				
R409	1-216-089-00	METAL CHIP	47K	5%	1/10W		M291	A-4608-362-A	MOTOR (L) ASSY (LOADING)				
R410	1-216-089-00	METAL CHIP	47K	5%	1/10W								
R411	1-216-089-00	METAL CHIP	47K	5%	1/10W		*****			*****			
R412	1-216-089-00	METAL CHIP	47K	5%	1/10W		*****			ACCESORY & PACKING MATERIAL			
R413	1-216-089-00	METAL CHIP	47K	5%	1/10W								
R501	1-216-001-00	METAL CHIP	10	5%	1/10W								
R502	1-216-049-00	METAL CHIP	1K	5%	1/10W								
R503	1-216-073-00	METAL CHIP	10K	5%	1/10W								
R504	1-216-073-00	METAL CHIP	10K	5%	1/10W								
R520	1-249-429-11	CARBON	10K	5%	1/4W								
< SWITCH >													
S401	1-572-184-11	SWITCH, KEYBOARD (◀◀ ◀◀)						*****			HARDWARE LIST		
S402	1-572-184-11	SWITCH, KEYBOARD (▶▶ ▶▶)					# 1	7-682-547-09	SCREW +BVTT	3X6	(S)		
S403	1-572-184-11	SWITCH, KEYBOARD (▶▶)					# 2	7-682-547-04	SCREW +BVTT	3X6	(S)		
S404	1-572-184-11	SWITCH, KEYBOARD (■)					# 3	7-685-647-79	SCREW +BVTP	3X10	TYPE2 N-S		
S405	1-572-184-11	SWITCH, KEYBOARD (OPEN/CLOSE □)					# 4	7-685-646-79	SCREW +BVTP	3X8	TYPE2 N-S		
S406	1-572-184-11	SWITCH, KEYBOARD (EDIT)					# 5	7-621-775-10	SCREW +B 2.6X4				
S407	1-572-184-11	SWITCH, KEYBOARD (CHECK)					# 6	7-624-105-04	STOP RING 2.3		TYPE -E		
< TRANSFORMER >													
T101	△ 1-450-341-11	TRANSFORMER, POWER					# 7	7-685-234-19	SCREW +KTP 2.6X8		TYPE2NON-SLIT		
< CRYSTAL >													
X401	1-577-359-21	VIBRATOR, CERAMIC (4.19MHz)					# 8	7-621-255-15	SCREW +P	2X3			
							# 9	7-685-134-19	SCREW +BTP 2.6X8		TYPE2 N-S		
							# 10	7-682-548-04	SCREW +BVTT	3X8	(S)		

The components identified by mark △ or dotted line with mark △ are critical for safety.
Replace only with part number specified.

When indicating parts by reference number, please include the board name.


BD	DISPLAY	MAIN	TRANSFORMER
-----------	----------------	-------------	--------------------

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
R111	1-216-049-00	METAL CHIP	1K 5% 1/10W				
R112	1-216-083-00	METAL CHIP	27K 5% 1/10W			* A-4617-802-A DISPLAY BOARD, COMPLETE	*****
R113	1-216-071-00	METAL CHIP	8.2K 5% 1/10W			* 1-638-264-11 MAIN BOARD	*****
R114	1-216-105-00	METAL CHIP	220K 5% 1/10W			* 1-638-266-11 TRANSFORMER BOARD	*****
R152	1-216-073-00	METAL CHIP	10K 5% 1/10W				
R153	1-216-085-00	METAL CHIP	33K 5% 1/10W				
R154	1-216-085-00	METAL CHIP	33K 5% 1/10W			* 1-573-099-11 HOUSING, CONNECTOR 12P	
R155	1-216-093-00	METAL CHIP	68K 5% 1/10W			* 4-880-403-11 HEAT SINK	
R156	1-216-081-00	METAL CHIP	22K 5% 1/10W			* 4-932-810-11 CUSHION (FL)	
R157	1-236-427-11	NETWORK, RES	18K				
R159	1-216-079-00	METAL CHIP	18K 5% 1/10W				< CAPACITOR >
R160	1-216-049-00	METAL CHIP	1K 5% 1/10W				
R171	1-216-001-00	METAL CHIP	10 5% 1/10W	C115	1-164-232-11	CERAMIC CHIP	0.01uF 50V
R172	1-216-001-00	METAL CHIP	10 5% 1/10W	C116	1-164-232-11	CERAMIC CHIP	0.01uF 50V
R173	1-216-001-00	METAL CHIP	10 5% 1/10W	C401	1-163-038-00	CERAMIC CHIP	0.1uF 25V
R174	1-216-001-00	METAL CHIP	10 5% 1/10W	C402	1-163-035-00	CERAMIC CHIP	0.047uF 50V
R201	1-216-061-00	METAL CHIP	3.3K 5% 1/10W	C403	1-164-346-11	CERAMIC CHIP	1uF 16V
R202	1-216-073-00	METAL CHIP	10K 5% 1/10W	C404	1-163-009-11	CERAMIC CHIP	0.001uF 10% 50V
R203	1-216-061-00	METAL CHIP	3.3K 5% 1/10W	C501	1-126-939-11	ELECT	10000uF 20% 16V
R204	1-216-049-00	METAL CHIP	1K 5% 1/10W	C502	1-124-907-11	ELECT	10uF 20% 50V
R205	1-216-089-00	METAL CHIP	47K 5% 1/10W	C503	1-124-903-11	ELECT	1uF 20% 50V
R208	1-216-049-00	METAL CHIP	1K 5% 1/10W	C504	1-164-346-11	CERAMIC CHIP	1uF 16V
R209	1-216-081-00	METAL CHIP	22K 5% 1/10W	C505	1-126-063-11	ELECT	100uF 20% 63V
R210	1-236-427-11	NETWORK, RES	18K	C506	1-124-907-11	ELECT	10uF 20% 50V
R212	1-236-427-11	NETWORK, RES	18K	C507	1-124-903-11	ELECT	1uF 20% 50V
R214	1-239-039-11	NETWORK, RES	22K	C510	1-163-009-11	CERAMIC CHIP	0.001uF 10% 50V
R218	1-216-065-00	METAL CHIP	4.7K 5% 1/10W	C513	1-136-165-00	FILM	0.1uF 5% 50V
R219	1-216-073-00	METAL CHIP	10K 5% 1/10W	C521	1-126-176-11	ELECT	220uF 20% 10V
R220	1-216-001-00	METAL CHIP	10 5% 1/10W	C522	1-124-927-11	ELECT	4.7uF 20% 50V
R222	1-236-427-11	NETWORK, RES	18K	C524	1-136-165-00	FILM	0.1uF 5% 50V
R223	1-216-081-00	METAL CHIP	22K 5% 1/10W				< CONNECTOR >
R224	1-216-081-00	METAL CHIP	22K 5% 1/10W	CN401	* 1-573-098-11	HOUSING, CONNECTOR 12P	
R225	1-216-081-00	METAL CHIP	22K 5% 1/10W	CN501	* 1-569-624-11	SOCKET, CONNECTOR 17P	
R226	1-216-081-00	METAL CHIP	22K 5% 1/10W	CN502	1-568-662-11	CONNECTOR, BOARD TO BOARD 6P	
				CN601	* 1-573-149-11	SOCKET, CONNECTOR 19P	
				CN901	1-568-668-11	CONNECTOR, BOARD TO BOARD 6P	
							< DIODE >
RV101	1-241-395-11	RES, ADJ, METAL GLAZE	10K	D401	8-719-106-36	DIODE	RD8.2M-B3
RV102	1-241-395-11	RES, ADJ, METAL GLAZE	10K	D402	8-719-104-34	DIODE	1S2836
				D403	8-719-104-34	DIODE	1S2836
				D501	8-719-210-39	DIODE	EC10QS-04
				D502	8-719-210-39	DIODE	EC10QS-04
X201	1-579-280-11	VIBRATOR, CRYSTAL (16.934MHz)		D503	8-719-210-33	DIODE	EC10DS2
X202	1-579-216-11	VIBRATOR, CERAMIC (4MHz)		D505	8-719-106-17	DIODE	RD6.8M-B2
				D510	8-719-104-34	DIODE	1S2836
							< FLUORESCENT TUBE >
				FL401	1-519-652-11	INDICATOR TUBE, FLUORESCENT	

ST-H3600/H6600

SERVICE MANUAL

AEP Model
UK Model

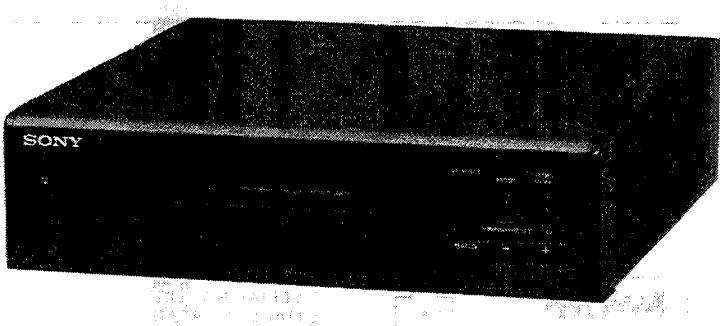

ST-H3600 and ST-H6600 are the tuner section in MHC-2600/3600 and MHC-5600/6600 respectively.

Photo : ST-H6600

SPECIFICATIONS

System	FM stereo, FM/AM superheterodyne tuner
FM tuner section	
Tuning range	87.5 — 108 MHz
Antenna terminals	75 ohm unbalanced
Intermediate frequency	10.7 MHz
AM tuner section	
Tuning range	For AEP, UK models MW: 531 — 1,602 kHz LW: 153 — 279 kHz For Italian model MW: 522 — 1,611 kHz LW: 144 — 288 kHz
Antenna	AM loop antenna. External antenna terminals
Intermediate frequency	450 kHz

Note :
G : Germany model
IT : Italian model


TABLE OF CONTENTS

Section	Title	Page
1. SERVICING NOTES	3	
2. GENERAL		
Parts Identification	5	
Clock Setting	6	
Radio	6	
3. ELECTRICAL ADJUSTMENTS	8	
4. DIAGRAMS		
4-1. Block Diagram	10	
4-2. Semiconductor Lead Layouts	13	
4-3. Printing Wiring Board - tuner section -	14	
4-4. Schematic diagram - tuner section -	17	
4-5. Printing Wiring Board - display section	19	
4-6. Schematic diagram - display section -	21	
4-7. IC Block Diagrams	22	
4-8. Pin Function of IC701 System Controller	24	
5. EXPLODED VIEWS		
Chassis Section	25	
6. ELECTRICAL PARTS LIST	26	

MODEL IDENTIFICATION

- BACK PANEL -

ST-H3600
ST-H6600

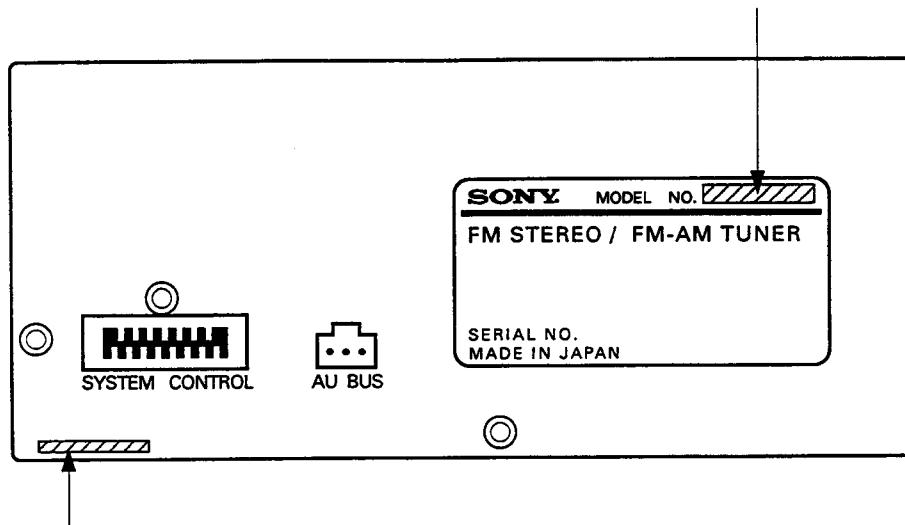

- 4-942-893-51. AE ST-H3600 AEP,UK model
4-942-893-81. AE4 ST-H3600 G model
4-942-893-91. IT ST-H3600 IT model
- 4-942-893-01. AE ST-H6600 AEP model
4-942-893-31. AE4 ST-H6600 G model
4-942-893-41. IT ST-H6600 IT model

WWW.manualscenter.com

SECTION 1

SERVICING NOTES

SUPPLY OF POWER DURING SERVICES

Because the equipment is not provided with any power supply, it is operated with power supplied from the amplifier TA-H2600, H3600, H5600 or H6600 used in the series. The equipment requires the following 4 types of voltages. Therefore, connect the equipment to TA-H2600, H3600, H5600 or H6600 for services such as repairing with power supplied, because it will be too complicated to supply these voltages individually.


VOLTAGE	MAJOR CIRCUIT IN USE
AC 3.9V	FL tube filament voltage (VF)
DC -24V	Display controller IC701 grid voltage (VG)
DC -5.6V	Display controller IC701, Tuner PLL IC81 Vcc
DC 12V	Tuner RF, FM/AM DET IC21 Vcc

SERVICE MODE TO CHECK TIMER ON-OFF

It is possible to check whether the timer normally functions while being connected with an amplifier.

- (1) Connect the equipment to the amplifier TA-H2600, H3600, H5600 or H6600 and set the POWER switch to STANDBY state.
- (2) Set the time of the tuner to any time.
- (3) Press 3 switches "BAND", "-" and "MEMORY/NEXT" at the same time (while pressing "BAND" and "-" beforehand, finally press "MEMORY/NEXT")

(4) FL display tube

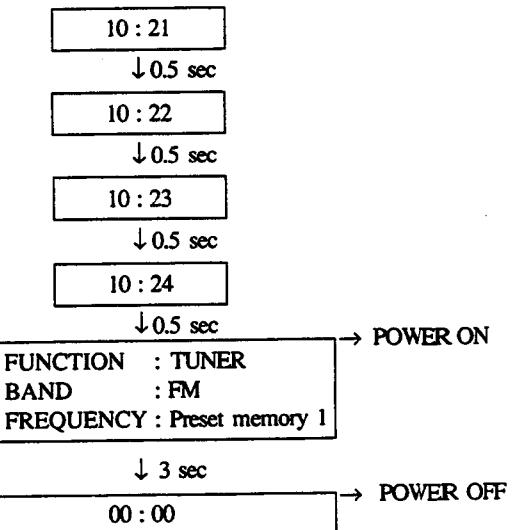

(5) Completion

Note : After completion of the checking above, data preset in the memory IC702 is erased while resetting the memory to the following state upon shipping from the works, so be sure to recover the same frequency as that before the repairing.

www.manualscenter.com

• Frequencies initially preset

	AEP/UK model			G/IT model		
	FM	MW	LW	FM	MW	LW
1	87.5MHz	531KHz	153KHz	87.5MHz	522KHz	144KHz
2	88.0MHz	603KHz	162KHz	88.0MHz	603KHz	162KHz
3	98.0MHz	999KHz	216KHz	98.0MHz	999KHz	216KHz
4	100.0MHz	1404KHz	270KHz	100.0MHz	1404KHz	270KHz
5	108.0MHz	1602KHz	279KHz	108.0MHz	1611KHz	288KHz
6 - 20	*1	*2	*2	*1	*2	*2

*1 The same frequency values are set for the preset memory No.6 - No.10, No.11 - No.15 and No.16 - No.20 as for No.1 - No.5 respectively.


*2 The same frequency values are set for the preset memory No.6 - No.10 as for No.1 - No.5.

SERVICE MODE TO CHECK FL TUBE AND KEY INPUT

It is possible to check FL tube all ON grid, segment and key input.

- (1) Connect the equipment to the amplifier TA-H2600, H3600, H5600 or H6600 and remove the AC cord of the amplifier out of the AC receptacle.
- (2) While pressing 3 switches "BAND", "-" and "MEMORY/NEXT" at the same time, insert the AC cord of the amplifier into the receptacle.
- (3) Thus, all FL display tubes light up. By pressing "+" or "TIMER CONTROL" in this state, partial lighting or key input checking, respectively, is effected.

Partial lighting: Indicates the mode to check complete connection between the grid and segment of the FL tube. The condition is normal when the following indication is effected. By pressing "+" or "-" in the partial lighting mode, the status returns to key input checking or all ON in (3), respectively.

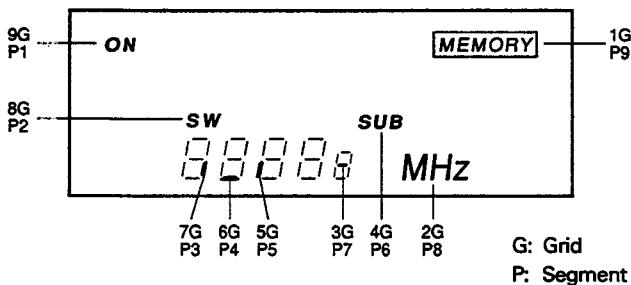

Key input checking: Shows the mode to check key input into 9 keys on the front panel. "0" is indicated at first and, every time a different key is pressed, indicated number is increased. After completion of pressing all 9 keys, "PASS" is indicated.
(Once a key is pressed, pressing it again is rejected.)

- (4) After the completion of the checking, the equipment recovers normal operation by once removing the AC cord and inserting it again into the AC receptacle.

HOW TO FORCEFULLY TURN POWER ON

The equipment is not provided with any power switch. Therefore, power ON/OFF is controlled in the amplifier side. However, even without an amplifier, power is supplyable to the equipment according to the following methods provided any type of power is available, e.g. using a special jig or supplying the 4 types of voltages individually.

(When power is supplied from the amplifier, power is turned ON only for the tuner.)

- (1) Supply power.
- (2) Press 3 switches "STEREO/MONO", "-" and "MEMORY/NEXT" at the same time.
(Press "STEREO/MONO" and "-" beforehand, and finally press "MEMORY/NEXT".)

However, when the equipment is started up by the methods above, service modes TIMER ON/OFF and FL tube and key input checking are not operable.

Clock Setting






Setting the Clock

Example: Set to 9:25 in the morning.

- 1 Press CLOCK SET.
- 2 Set the hour with the - or + button.
- 3 Press MEMORY/NEXT.
- 4 Set the minute with the - or + button.
- 5 Press MEMORY/NEXT.
The clock starts operating.

Information on the time

The European and U.K. model shows the time in 24-hour cycle.
The model for other countries shows the time in 12-hour cycle.
AM 12:00 = midnight
PM 12:00 = noon

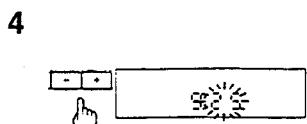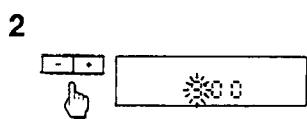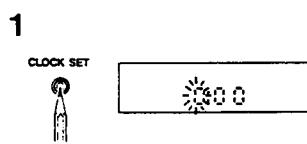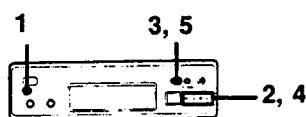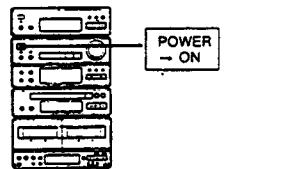


When a power interruption occurs
If the power is recovered within several hours, there is no need to reset the clock, timer, and Wake Up Volume settings. If the power interruption is long, all the above settings are erased, and "0:00" ("AM 12:00") will flash on the display.

To change the frequency display to the time display
Press CLOCK DISP. on the remote commander. Press it again to change to the frequency display.

Radio





The automatic tuning allows you to receive stations whose signal is strong enough. When the signal is too weak, use the manual tuning.

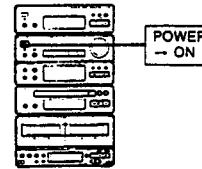

Tuning in Automatically

- 1 Press BAND repeatedly until the desired band appears.
As you press BAND, the band changes as follows:
European and U.K. model:
FM → MW → LW
Model for other countries:
FM → SW → MW
- 2 Press MODE so that the TUNING indicator lights up.
- 3 Keep - or + depressed for more than 1 second.
"AUTO" appears on the display and the unit tunes in a station automatically.

Repeat step 3 until the desired station appears.

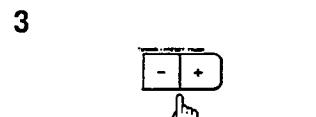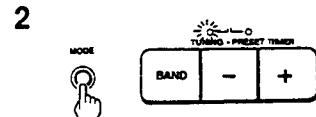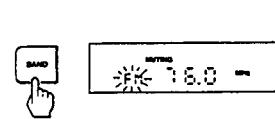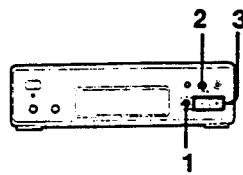

Tuning in Manually


- 1 Press BAND repeatedly until the desired band appears.
- 2 Press MODE so that the TUNING indicator lights up.
- 3 Press - or + repeatedly until the desired station appears.

Indicator on the display

TUNED: Appears when a station of sufficient signal strength is tuned in.
STEREO: Appears when an FM stereo program of sufficient signal strength is received.

Antenna adjustment A

For MW and LW (SW) reception, find the best location for the supplied AM loop antenna.

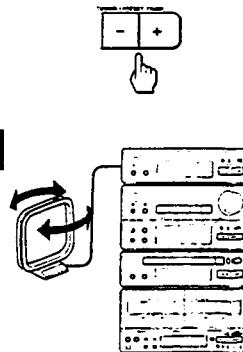

SECTION 2**GENERAL**


This section is extracted from
instruction manual.

Parts Identification

Refer to the pages indicated in ● for use
of the buttons.

Tuner Section A

- 1 Display window
- 2 CLOCK SET button 24
- 3 TIMER SELECT button 11
- 4 TIMER SET button 11
- 5 MEMORY/NEXT button 24 60 111
- 6 MODE button 68 62
- 7 STEREO/MONO (stereo/monaural)
button
- 8 TUNING PRESET/TIMER -/+ buttons
- 9 BAND selector 68

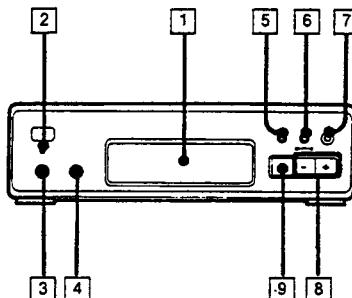A

www.manualscenter.com

Radio


Storing Stations

You can store up to 20 FM stations and 10 MW stations and 10 LW (SW) stations in a desired sequence, so that you can tune in the stored station directly by entering the preset station number.

This operation is not possible with the remote commander.

- 1 Tune in the desired station.
- 2 Press MEMORY/NEXT. "MEMORY" and the preset station numbers appear on the display.
- 3 While "MEMORY" is on (for several seconds), press - or + to select a desired preset number.
- 4 Press MEMORY/NEXT. "MEMORY" disappears, and the station is stored.

Repeat step 1 to 4 for each station to be stored.

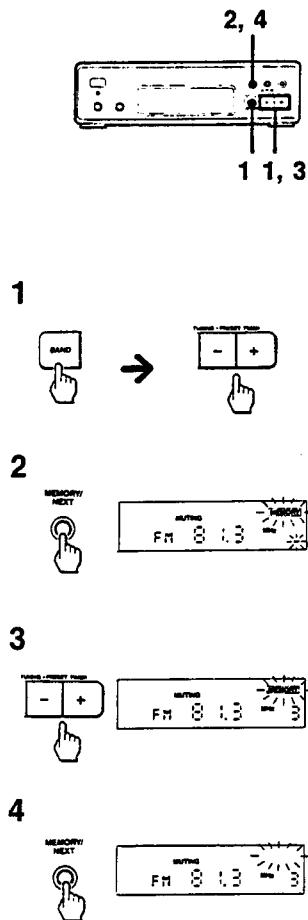

If you cannot store a station successfully
Press MEMORY/NEXT again so that
"MEMORY" appears, and then proceed
with steps 3 and 4 above.
Be sure to operate while "MEMORY" is on
(about 4 seconds).

**When you have selected the wrong preset
station number**
Press MEMORY/NEXT again and then
proceed with the steps 3 and 4.

To change the preset station
Store a desired station at the desired
preset number by proceeding with the
above steps.
The station previously preset will be
erased.
Erasing only is not possible.

Radio

To Tune in a Preset Station

Notes:



- When you use the remote commander for the following operations make sure that the display of the remote commander shows "TUNER". If not, press TUNER on the remote commander.
- You cannot operate the buttons on the lid if the lid is open.

- 1 Press BAND to select a desired band.
- 2 Press MODE so that the PRESET indicator lights up.
- 3 Press - or + (< or > on the remote commander) to select the desired preset station number.

To tune in a preset station directly

Possible only with the remote commander.

- 1 Press BAND to select a desired band.
- 2 Press the numeric buttons to select the desired preset station number.

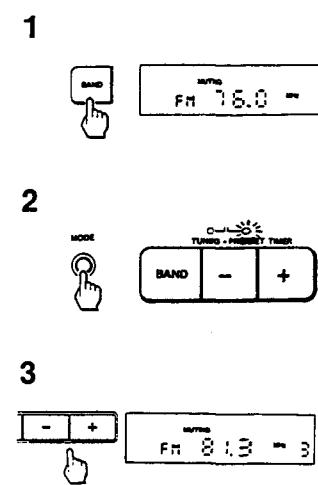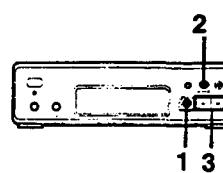

SECTION 3

ELECTRICAL ADJUSTMENTS


PRECAUTIONS IN REPAIRING

If the front end unit fails, it is difficult to repair the inner circuits, so replace the entire front end unit.

FM SECTION

FM DISCRIMINATOR ALIGNMENT (NULL CHECK)

Setting :

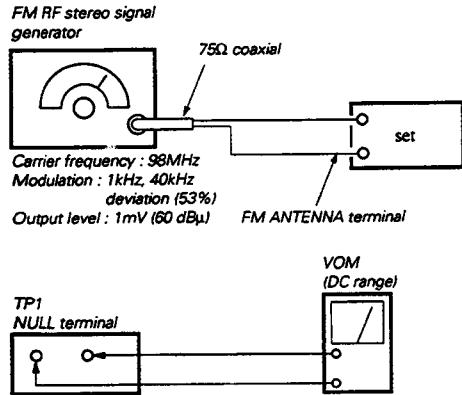


Procedure :

1. Tune the set to 98MHz.
2. Adjust T21 for 0V reading on the VOM.

Note : FM TUNING LEVEL adjustment should be made after FM discriminator alignment.

FM TUNING LEVEL ADJUSTMENT

Setting :

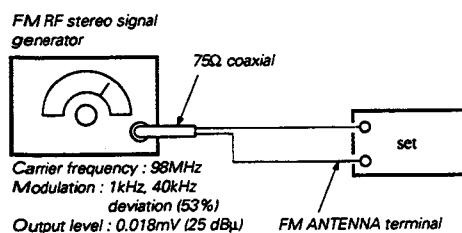

Procedure :

1. Tune the set to 98MHz.
2. Adjust T24 so that the TUNED LED goes on.

FM STEREO SEPARATION ADJUSTMENT

Setting :

FM RF stereo signal generator



Carrier frequency : 98MHz

Output level : 1mV (60 dBμ)

Modulation : L+R 33.75kHz deviation

L-R 33.75kHz deviation

Pilot Signal 19kHz 7.5kHz deviation

Procedure :
Tune the set to 98MHz.

FM stereo Signal generator Output channel	VTVM connection	VTVM reading (dB)
L-CH	L-CH	Ⓐ
R-CH	L-CH	Adjust RV21 for minimum reading.
R-CH	R-CH	Ⓑ
L-CH	R-CH	Adjust RV21 for minimum reading.

L-CH Stereo separation : Ⓐ – Ⓑ

R-CH Stereo separation : Ⓑ – Ⓒ

The separations of both channels should be equal.

www.manualscenter.com


SECTION 4

DIAGRAMS

AM SECTION

AM TUNING LEVEL ADJUSTMENT

Setting :

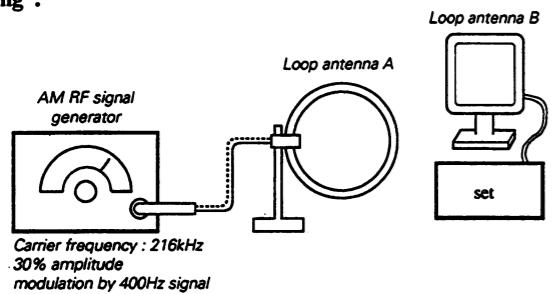


Procedure :

1. Set loop antenna A so that the loop antenna B input level becomes 2.5mV (68dB/m).
 2. Tune the set to 216kHz.
 3. Adjust the RV22 so that the TUNED LED goes on.

[PARTS ARRANGEMENT DIAGRAM FOR ADJUSTMENT]

RV24 : Tuned Level Adjustment (FM)

BOTTOM VIEW

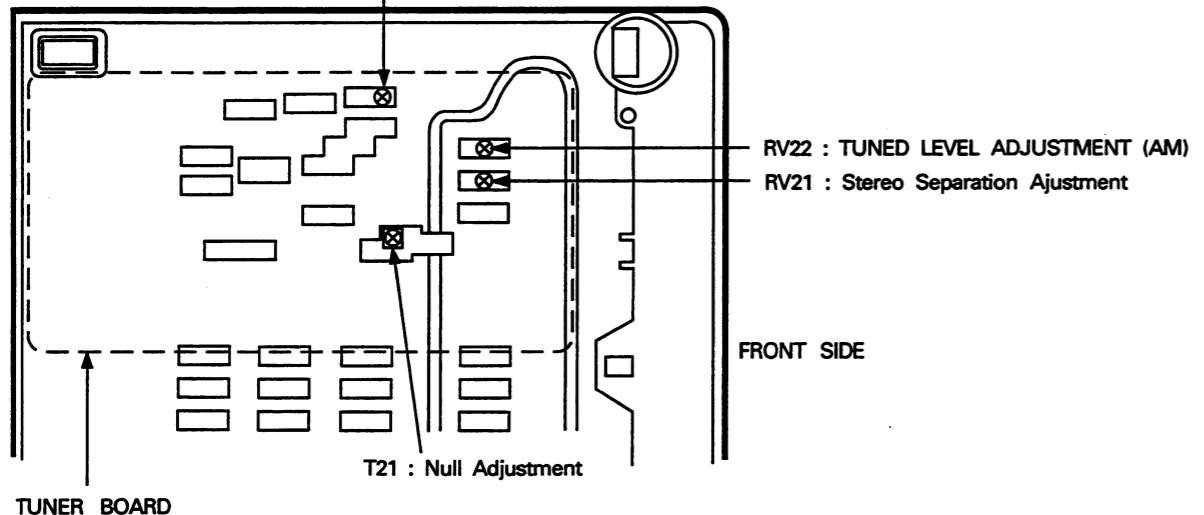

[TUNER BOARD] FM RF/IF MPX
AM RF/IF DET

FE I FM FRONT END

ANT IN → RF AMP → MIX → IF OUT → Q1,2 → G IT MODEL (Q3,4)

ANT IN → LOSC → F AMP → F OUT → B+

GND → VT

FE62 LW RF BLOCK

ANT → Q60 → Q61 (MW:ON) → Q62 (MW:OFF) → FE61 MW RF BLOCK

ANT → Q63 (MW:ON) → Q64 (LW:ON) → FE62 LW RF BLOCK

FE61 MW RF BLOCK

ANT → Q65 (MW:ON) → Q66 (BAND SWITCH) → AM. OSC → AM MIX → V REF → AM RF

FM RF/IF MPX

IF OUT → Q1,2 → IF AMP → G IT MODEL (Q3,4)

IF AMP → FM IF → FM DET → FM LEVEL DEY → AGC

FM DISCRIMINATOR → T21

AM RF/IF DET

AM IFT → CFT21 → AM IF

Control and Oscillators

TP1 → 29 → ALC → 30 → AM. OSC → AM MIX

28 → 27 → V REF → AM RF

RV24 → FM TUNED

Q81,82 → FM BAND SWITCH → +12V

Q83,84 → LPF → Q85,86 → LPF

19 → FM OSC → 1/2 → SWALLOW COUNTER → PROG DIVIDE



6 → REF DIVIDER → 21 → PHASE DETECTOR CHARGE PUMP → 22 → LPF

XT81 7.2 MHz → 24 → 1 → 6

VDD → 20 → 13


+5.6V → 13

CNJ 1


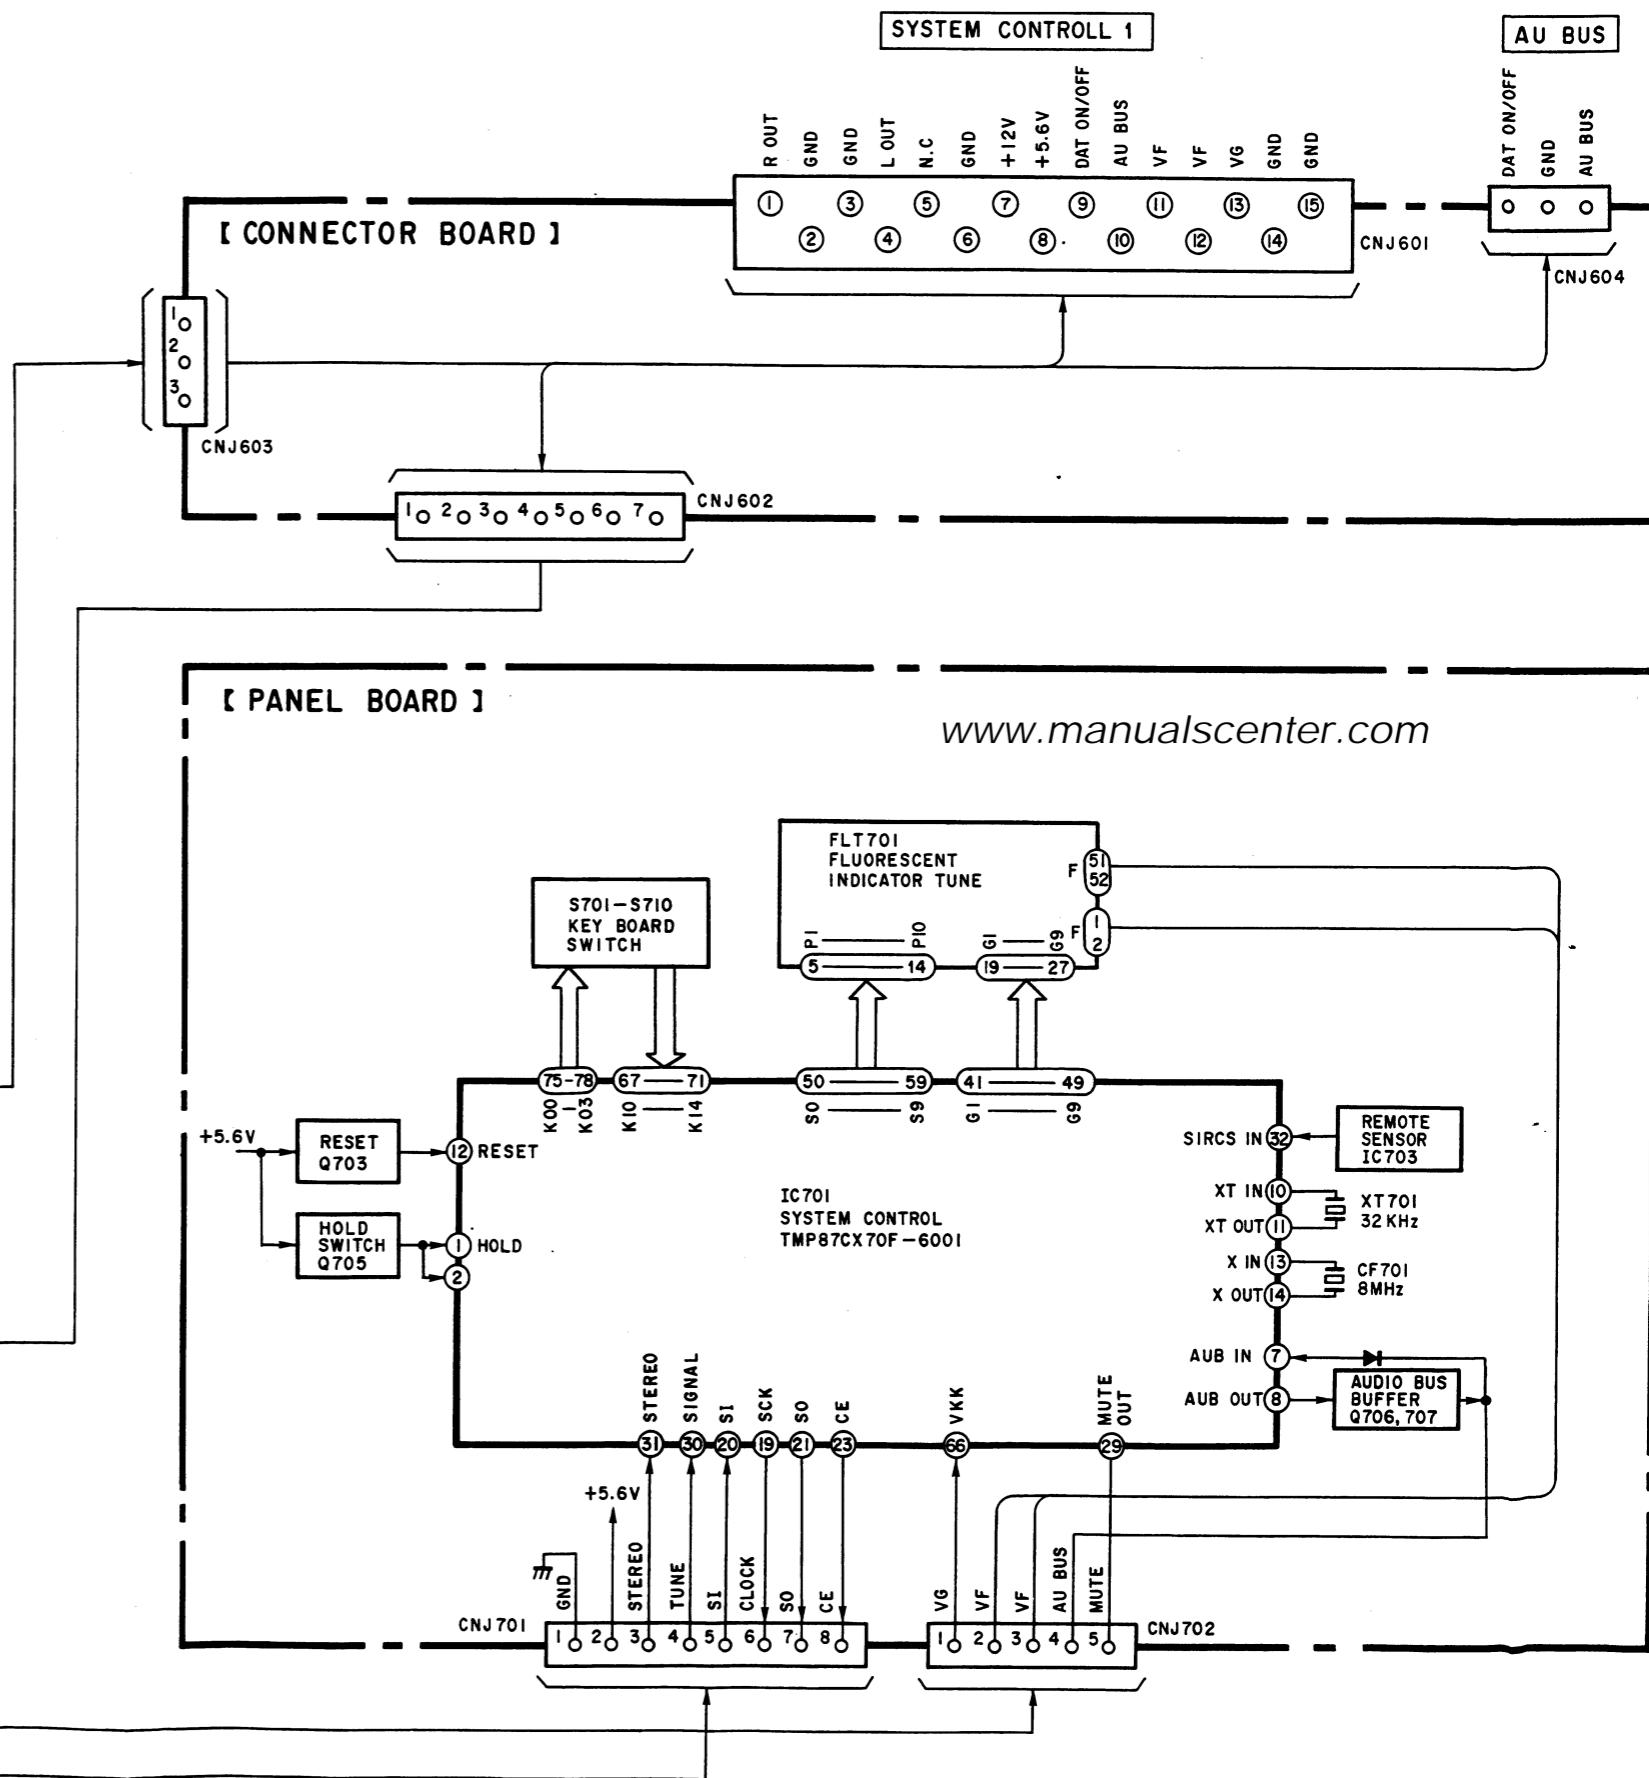
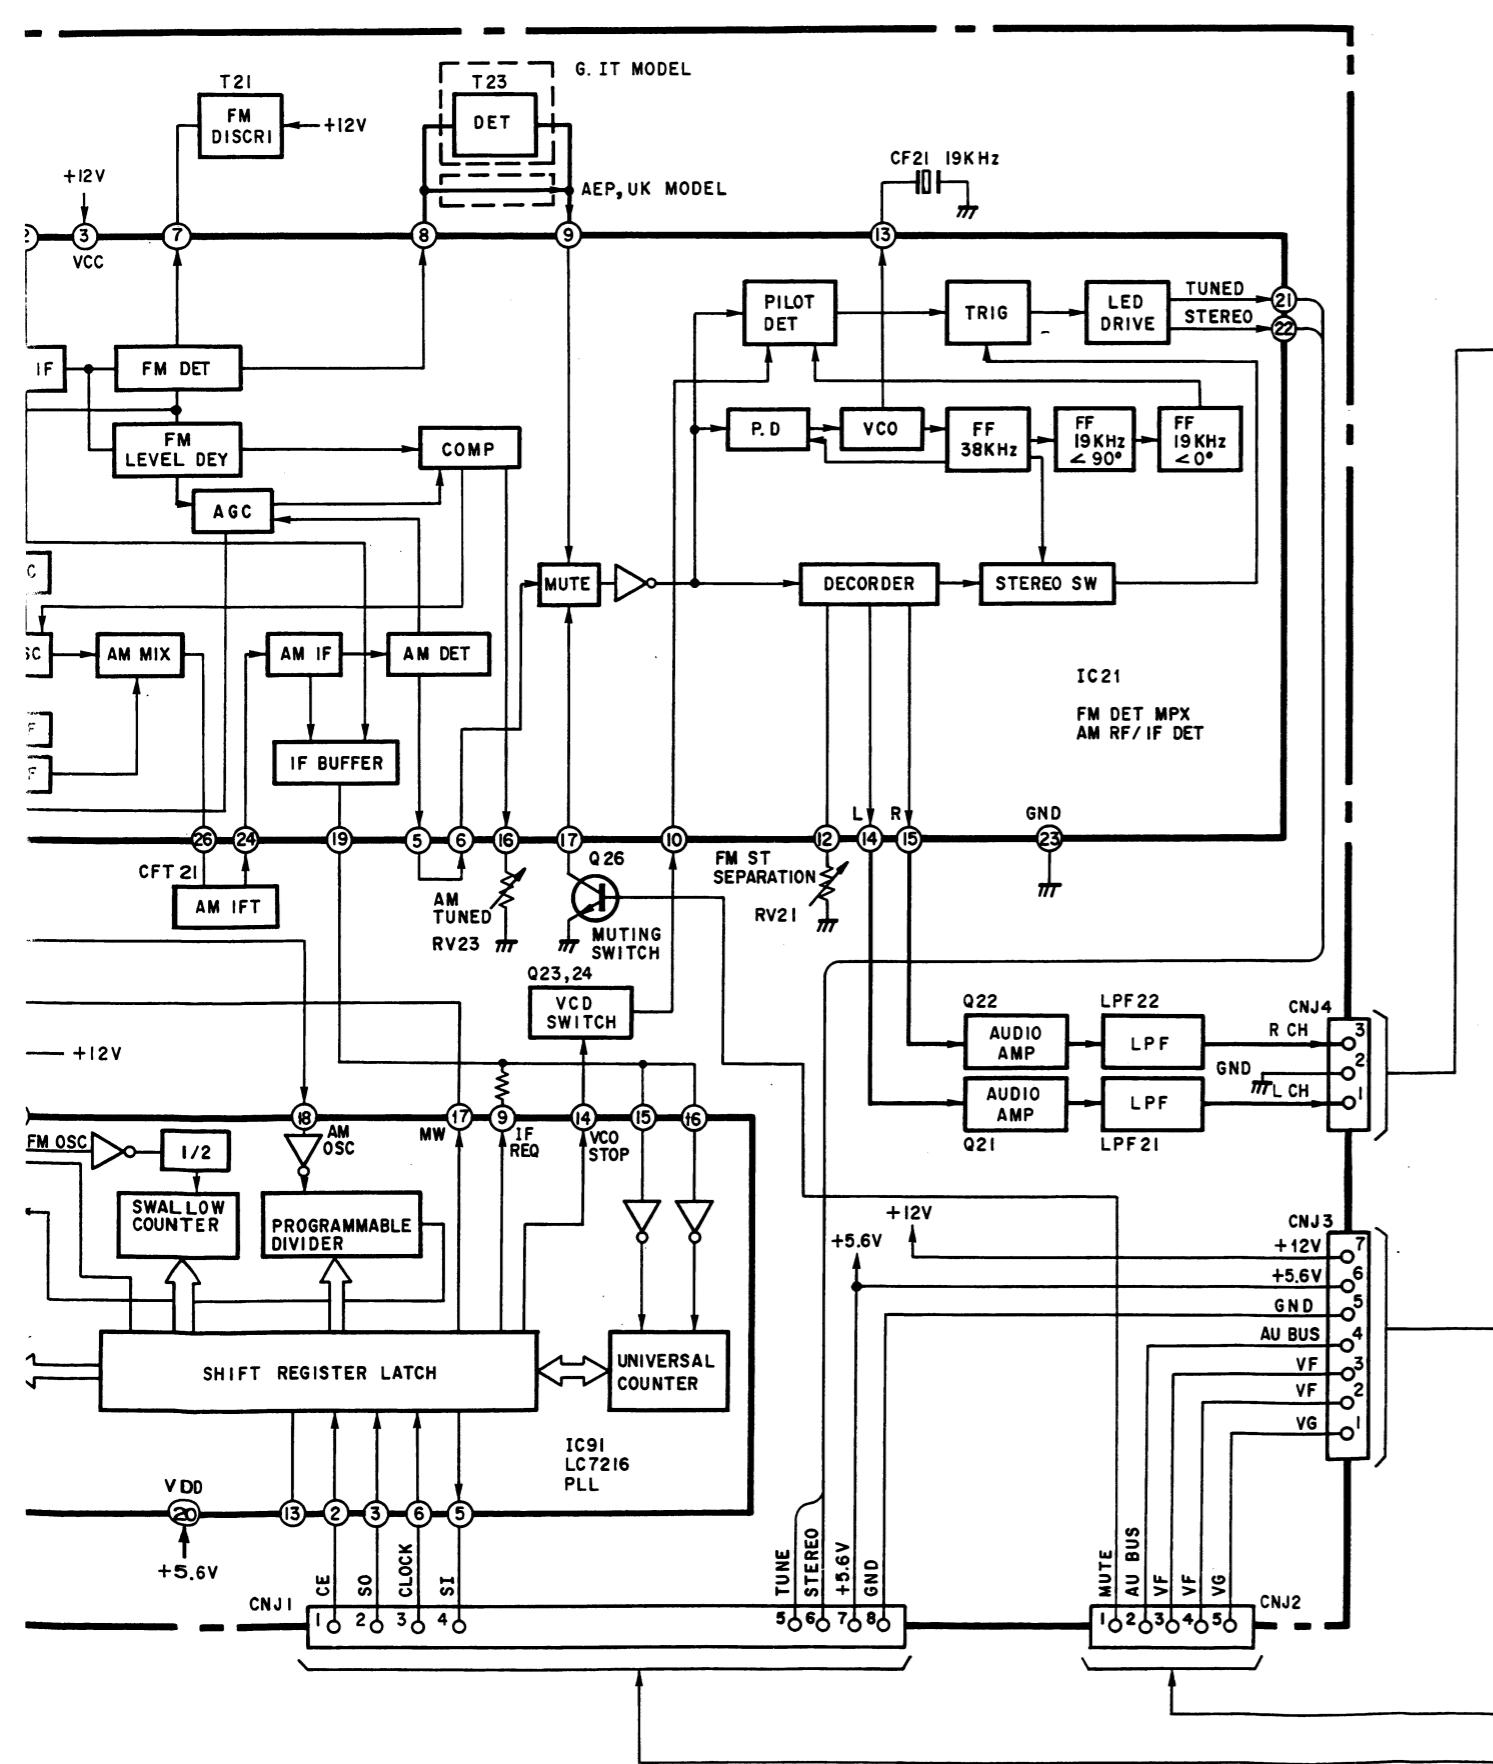


4-2. SEMICONDUCTOR LEAD LAYOUTS



DTA114ES
DTC114ES
2SC2603-EF
2SC2669-OY
2SC3113-AB

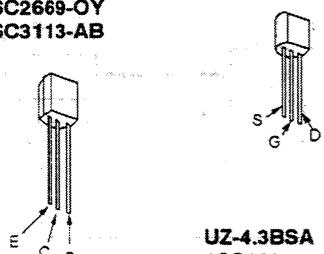

2SK246-GR3

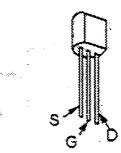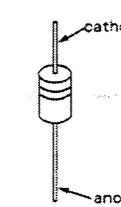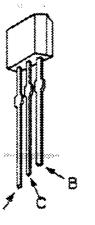UZ-4.3BSA
1SS1202SA1175-HFE
2SC2785-HFE


SEL2210S-D

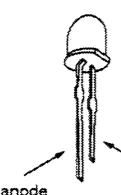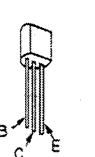2SA1317-SU
2SC3330-T


● SEMICONDUCTOR LOCATION

Ref. No	Location	
	H3600	H6600
D61	D - 4	D - 4
D701	G - 4	B - 5
D702	G - 4	B - 2
D707	H - 4	B - 3
D710	G - 2	B - 2
D711	G - 3	B - 3
D712	G - 7	A - 9
D714	G - 9	B - 5
D715	G - 10	B - 9
D716	G - 9	B - 9
D717	G - 8	A - 9
D718	G - 8	B - 2
IC21	C - 5	C - 5
IC81	C - 5	C - 5
IC701	G - 6	B - 6
IC702	G - 9	B - 9
IC703	G - 7	B - 9
Q1	C - 3	C - 3
Q2	C - 4	C - 4
Q3	C - 4	C - 4
Q4	C - 4	C - 4
Q21	C - 7	C - 7
Q22	C - 7	C - 7
Q23	C - 4	C - 4
Q24	C - 4	C - 4
Q26	E - 7	E - 7
Q61	D - 4	D - 4
Q62	D - 4	D - 4
Q63	D - 4	D - 4
Q64	D - 3	D - 3
Q65	D - 5	D - 5
Q66	D - 4	D - 4
Q81	C - 5	C - 5
Q82	C - 5	C - 5
Q701	G - 3	A - 2
Q702	F - 3	A - 2
Q703	G - 8	B - 8
Q705	H - 9	B - 8
Q706	G - 8	B - 9
Q707	G - 9	B - 9

4-3. PRINTED WIRING BOARD - TUNER SECTION -

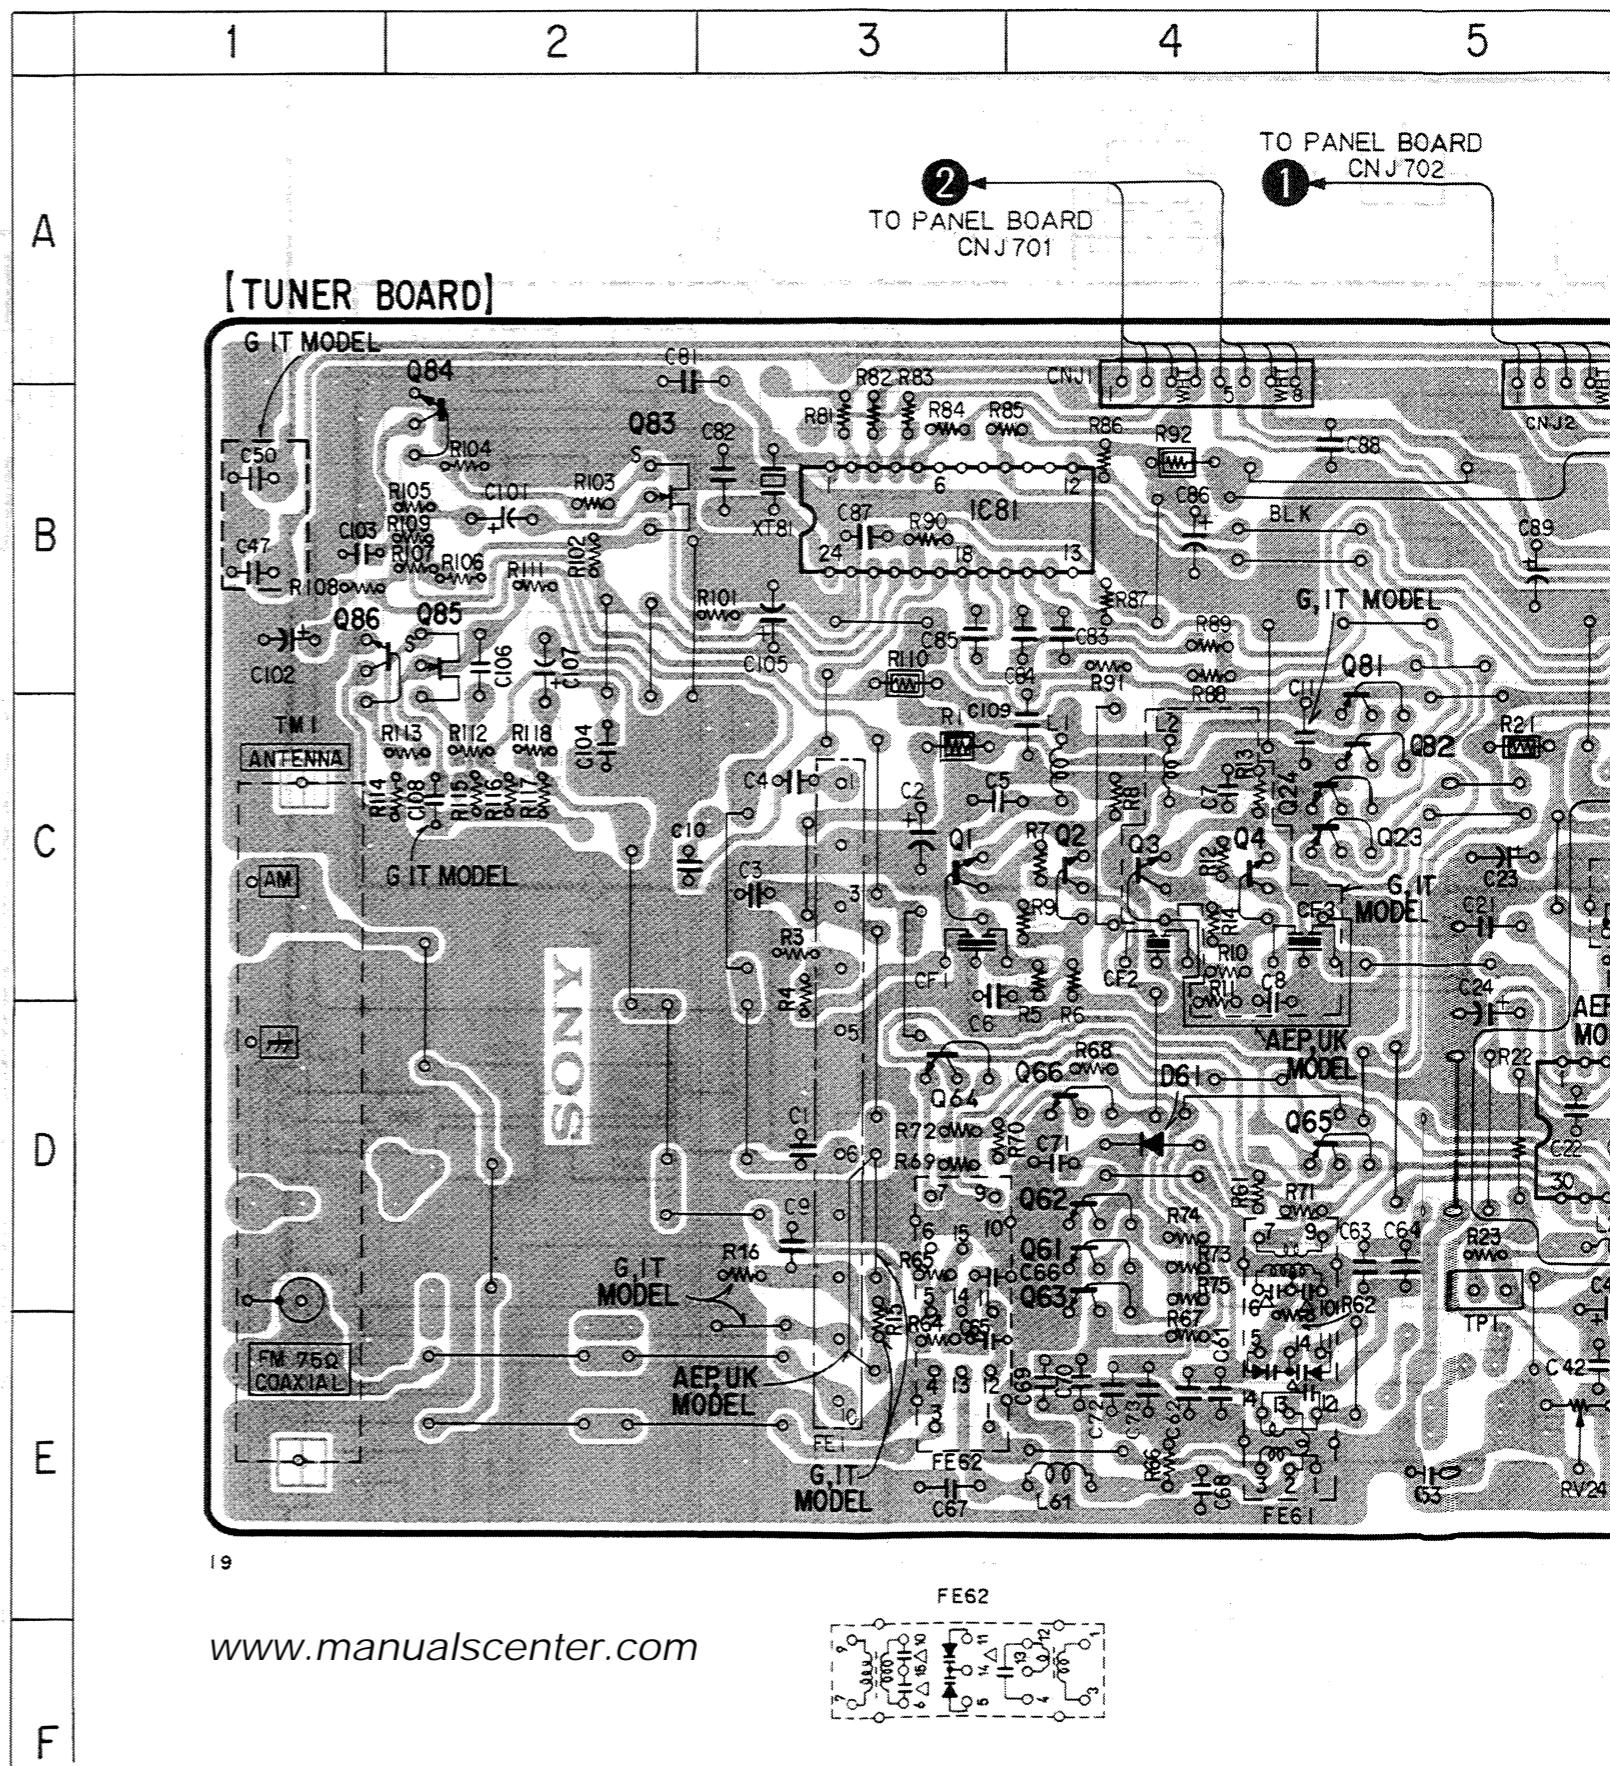


ANEL BOARD
CN J702

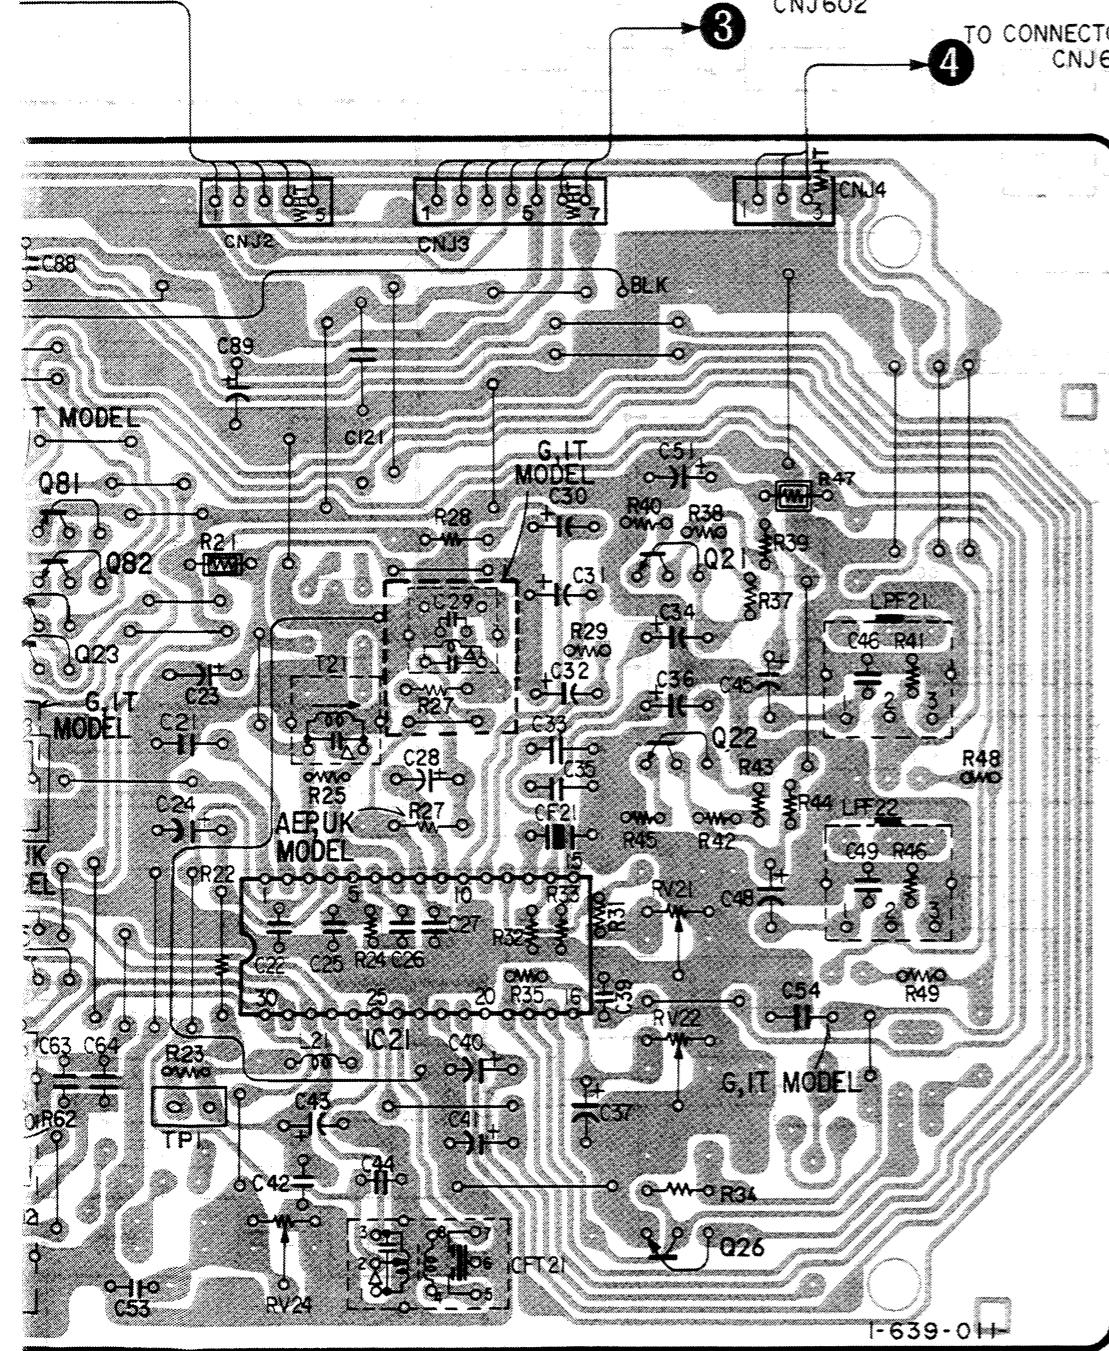

(TCB007 - 3IJFH / 3HJFH)

CONNECTOR BOARD

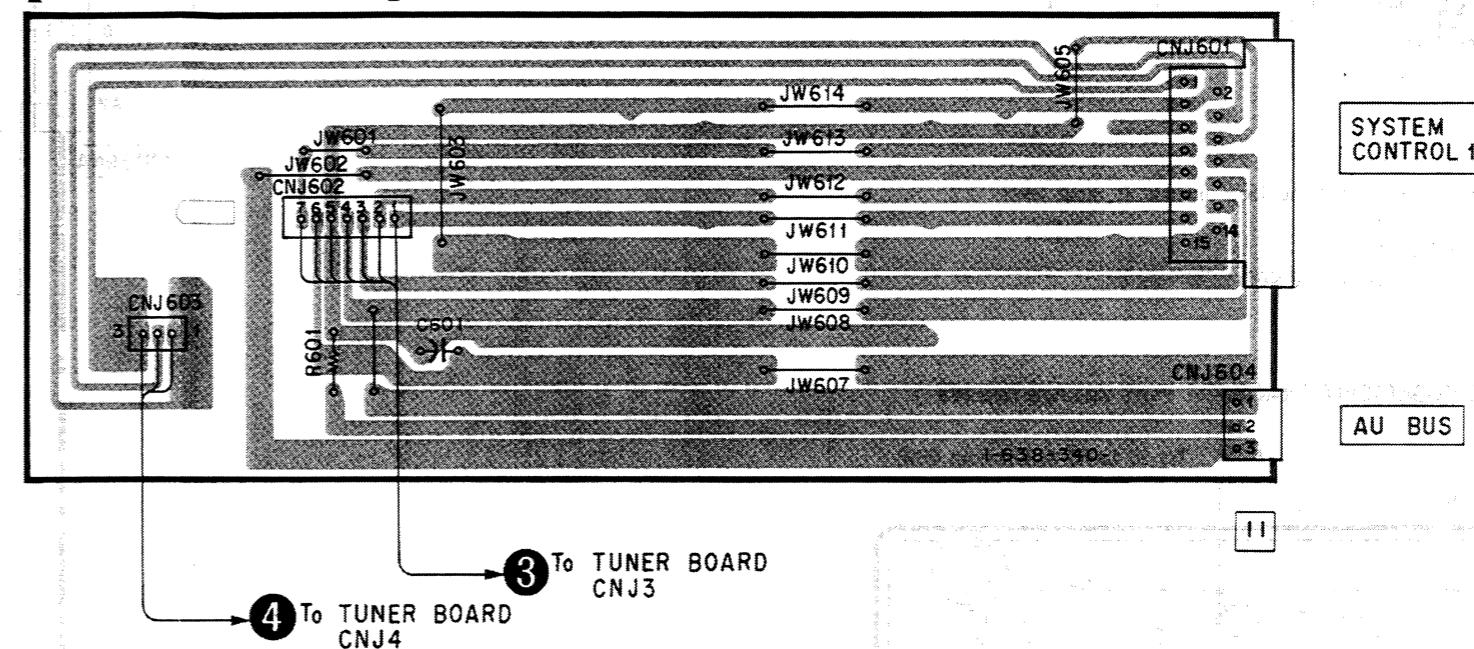

www.manualscenter.com

Note for schematic diagram:


- : indicated a lead wire mounted on the component side.
 - : indicates side identified with part number.
 - All capacitors are in μF unless otherwise noted. pF: μF 50MV or less are not indicated except for electrolytics and tantalums.
 - All resistors are in ohms, 1/4W or less unless otherwise noted.
 - : internal component.
 - : nonflammable resistor

The components identified by mark Δ or dotted line with mark Δ are critical for safety.
Replace only with part number specified.


- : adjustment for repair.
 - Voltage and waveforms are dc with respect to ground under no -signal (detuned) conditions.
 - no mark : FM
 - () : MW
 - < > : LW
 - Voltages are taken with a VOM (input impedance 10MΩ). Voltage variations may be noted due to normal productora tolerances.
 - Signal path
➡ : FM
 - G : Germany Model
 - IT : Italian Model

4-4. SCHEMATIC DIAGRAM - TUNER SECTION -

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15

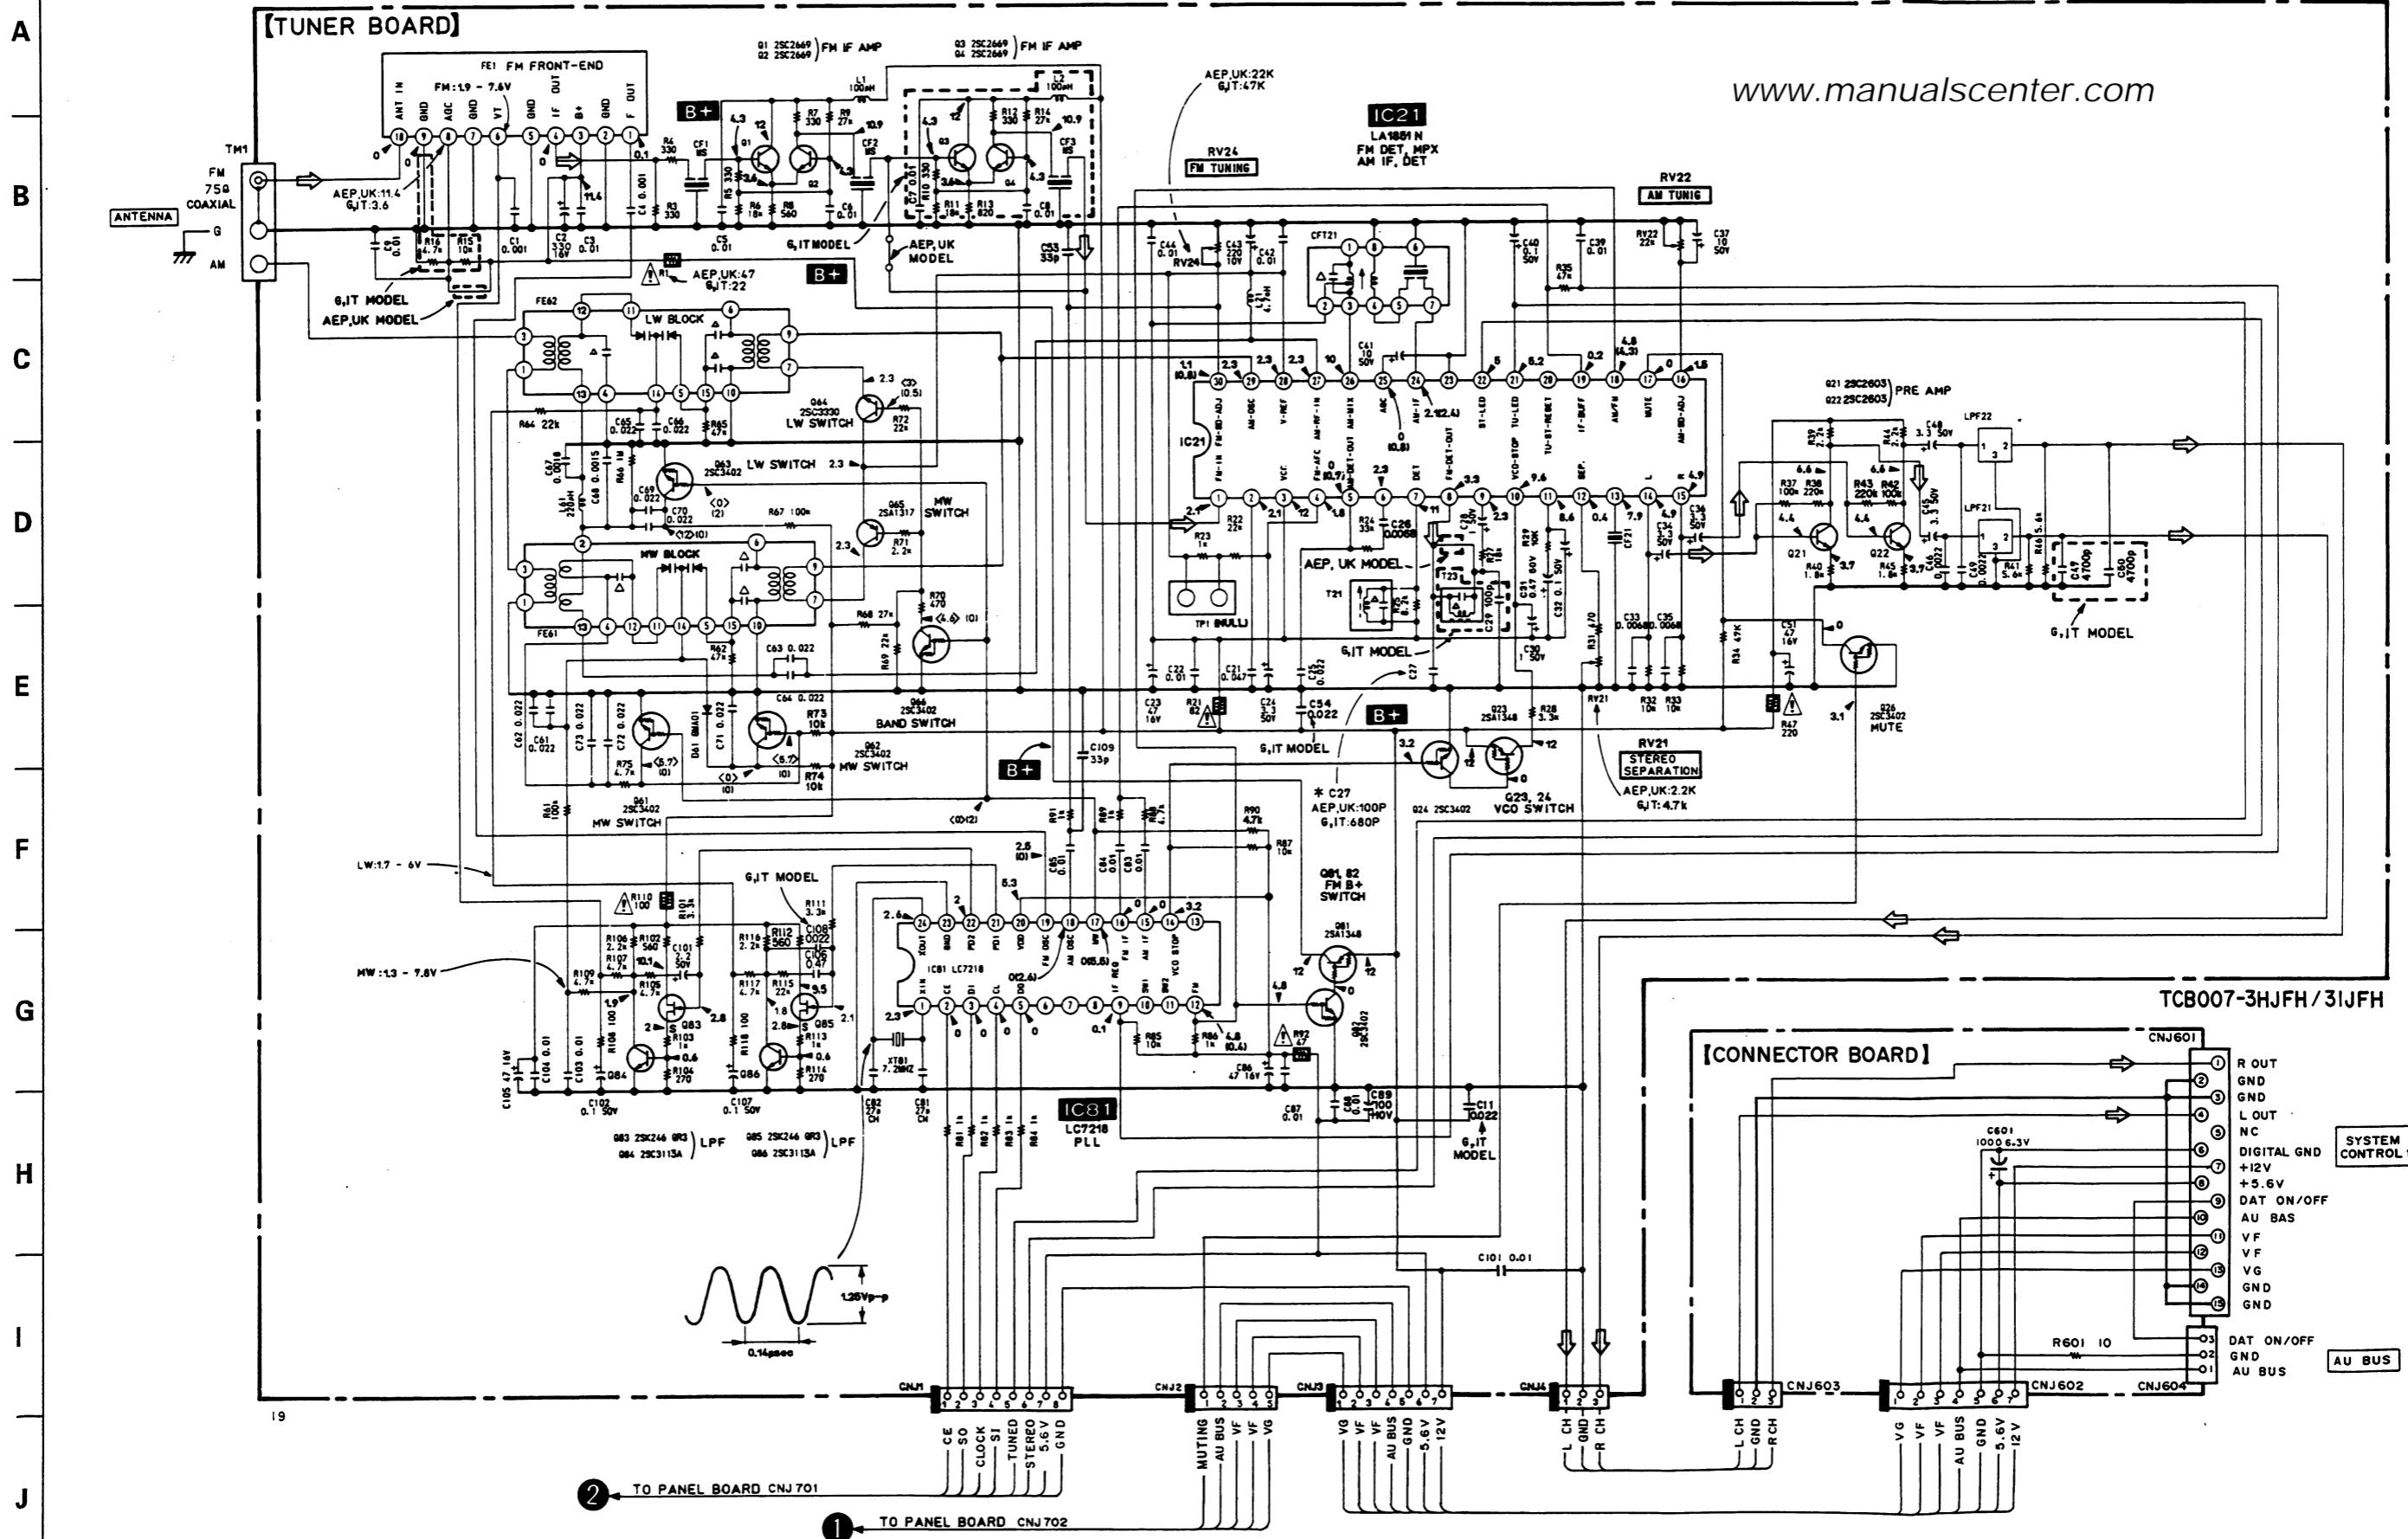


4-5. PRINTED WIRING BOARD - DISPLAY SECTION - • See page 13 for semiconductor Location.

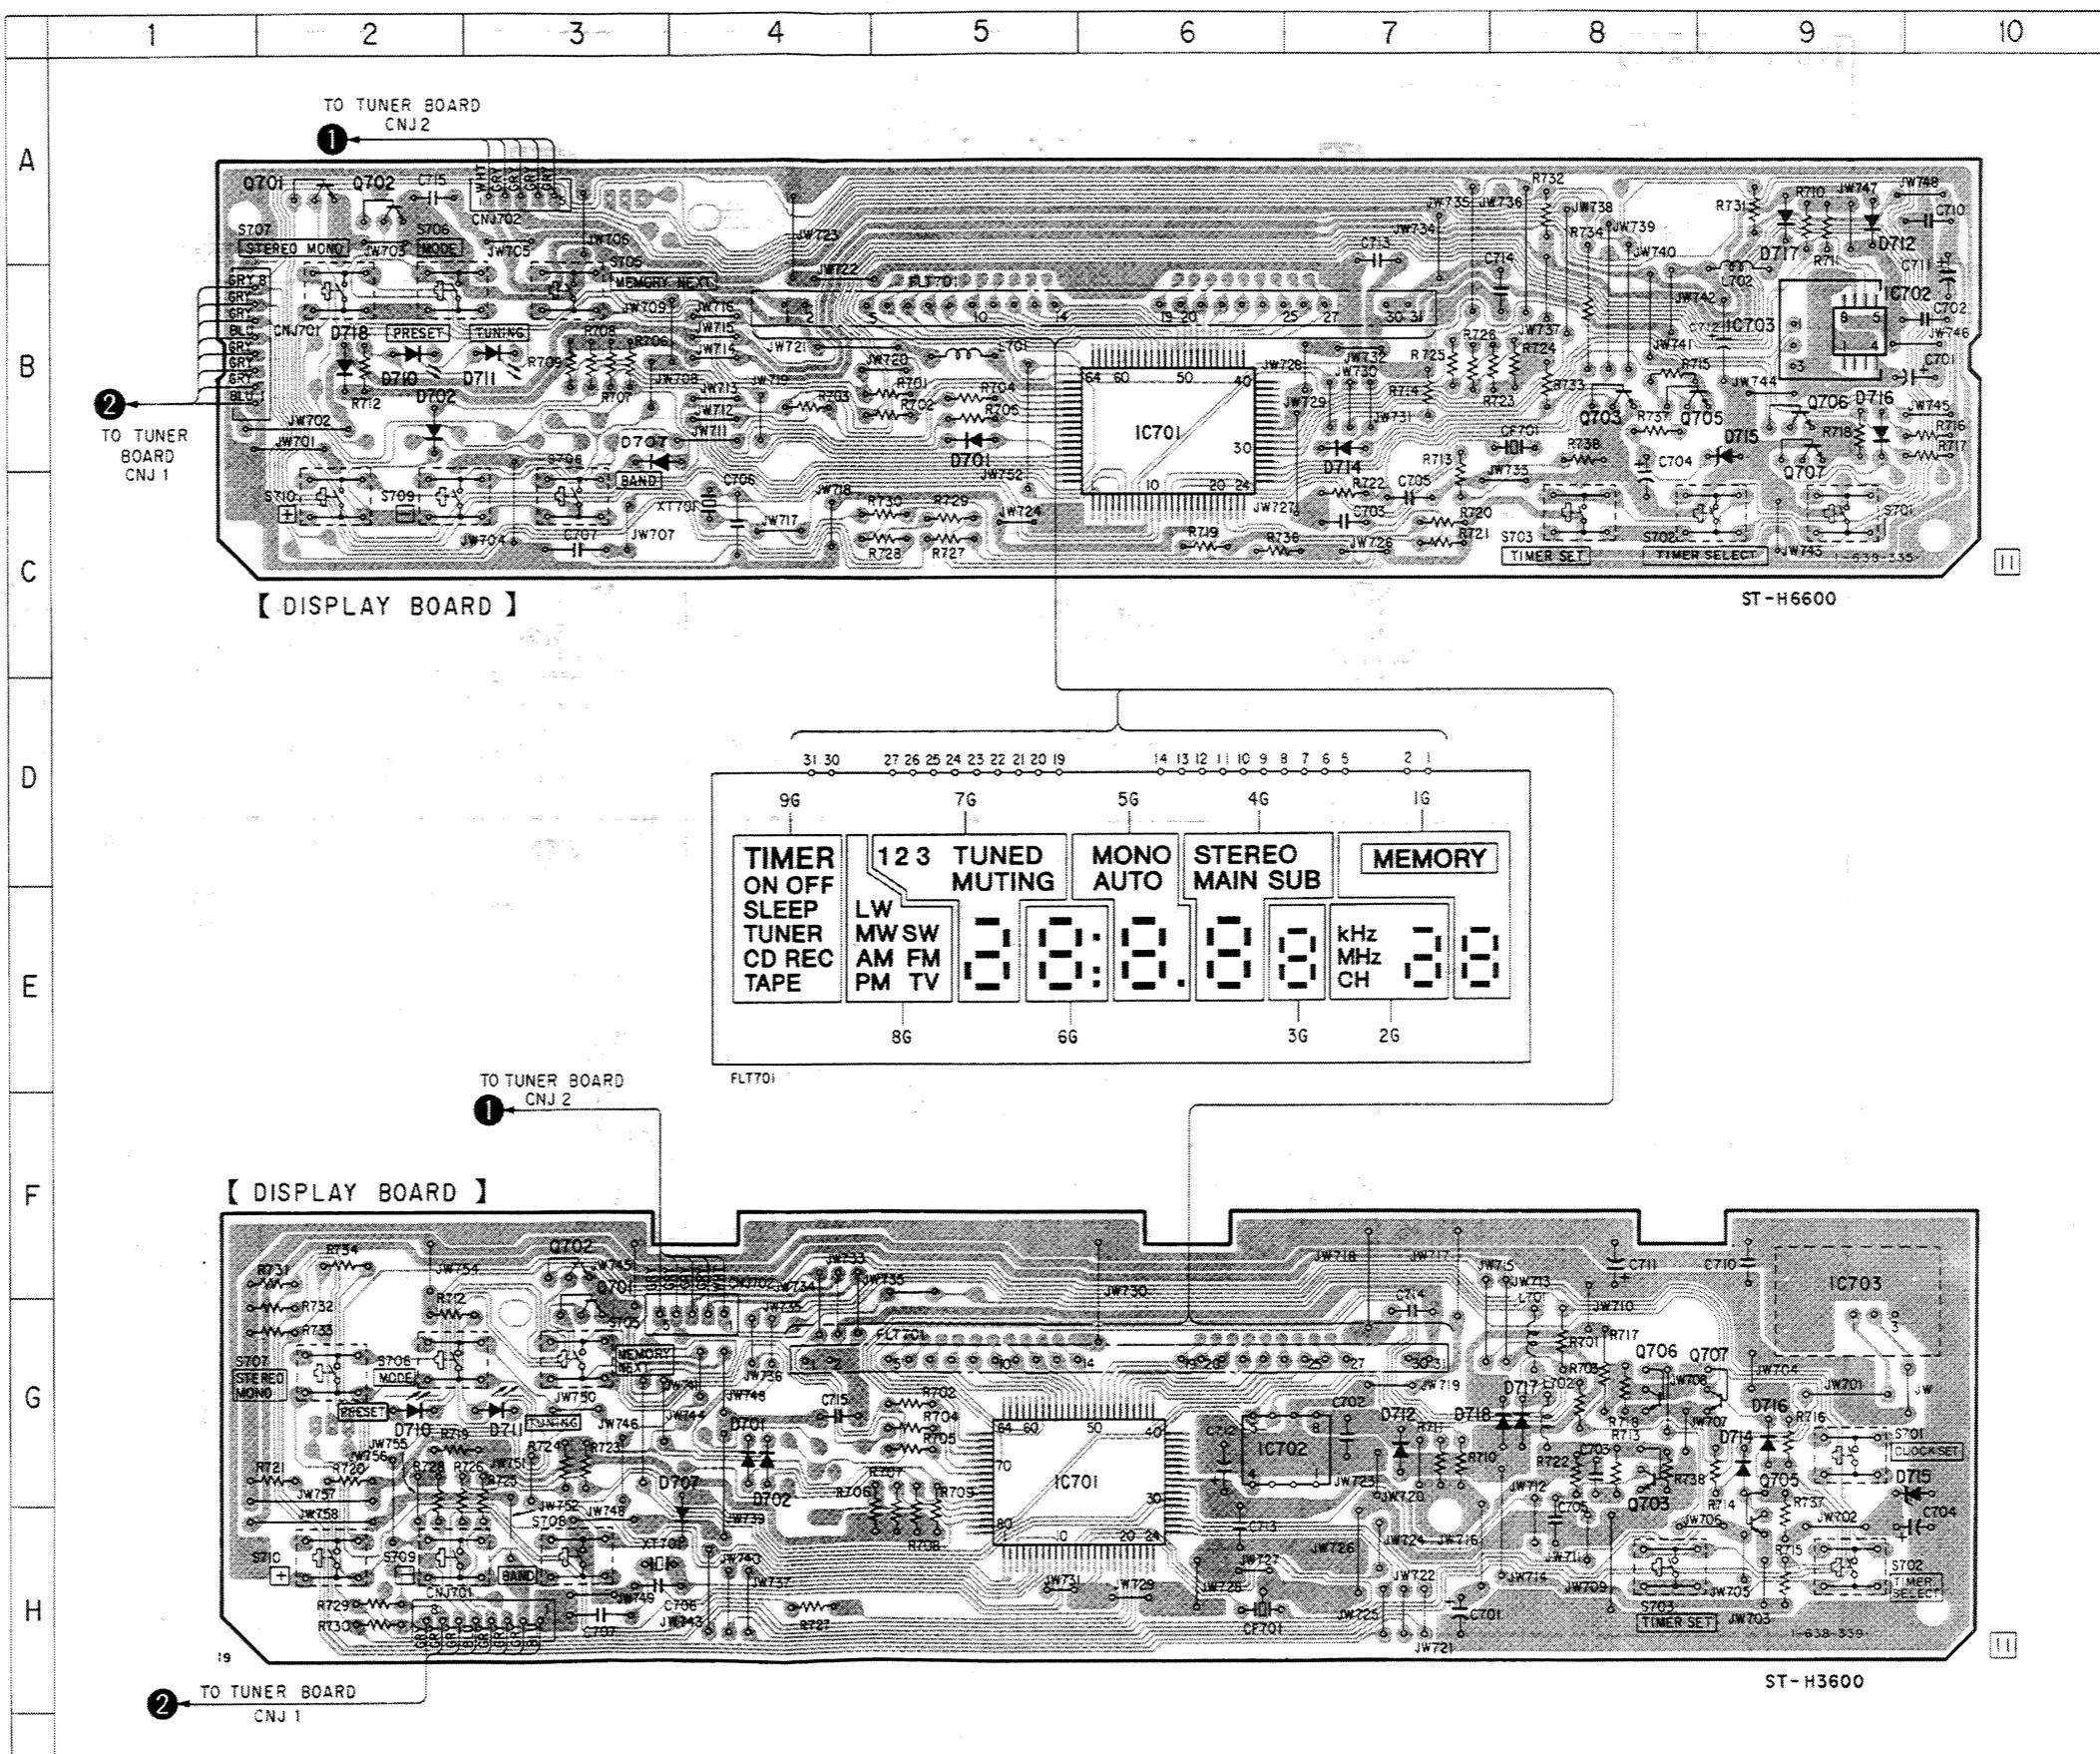


4-6. SCHEMATIC DIAGRAM - DISPLAY SECTION - • See page 16 for note.

1 2 3 4 5 6 7 8 9 10 11 12 13 14

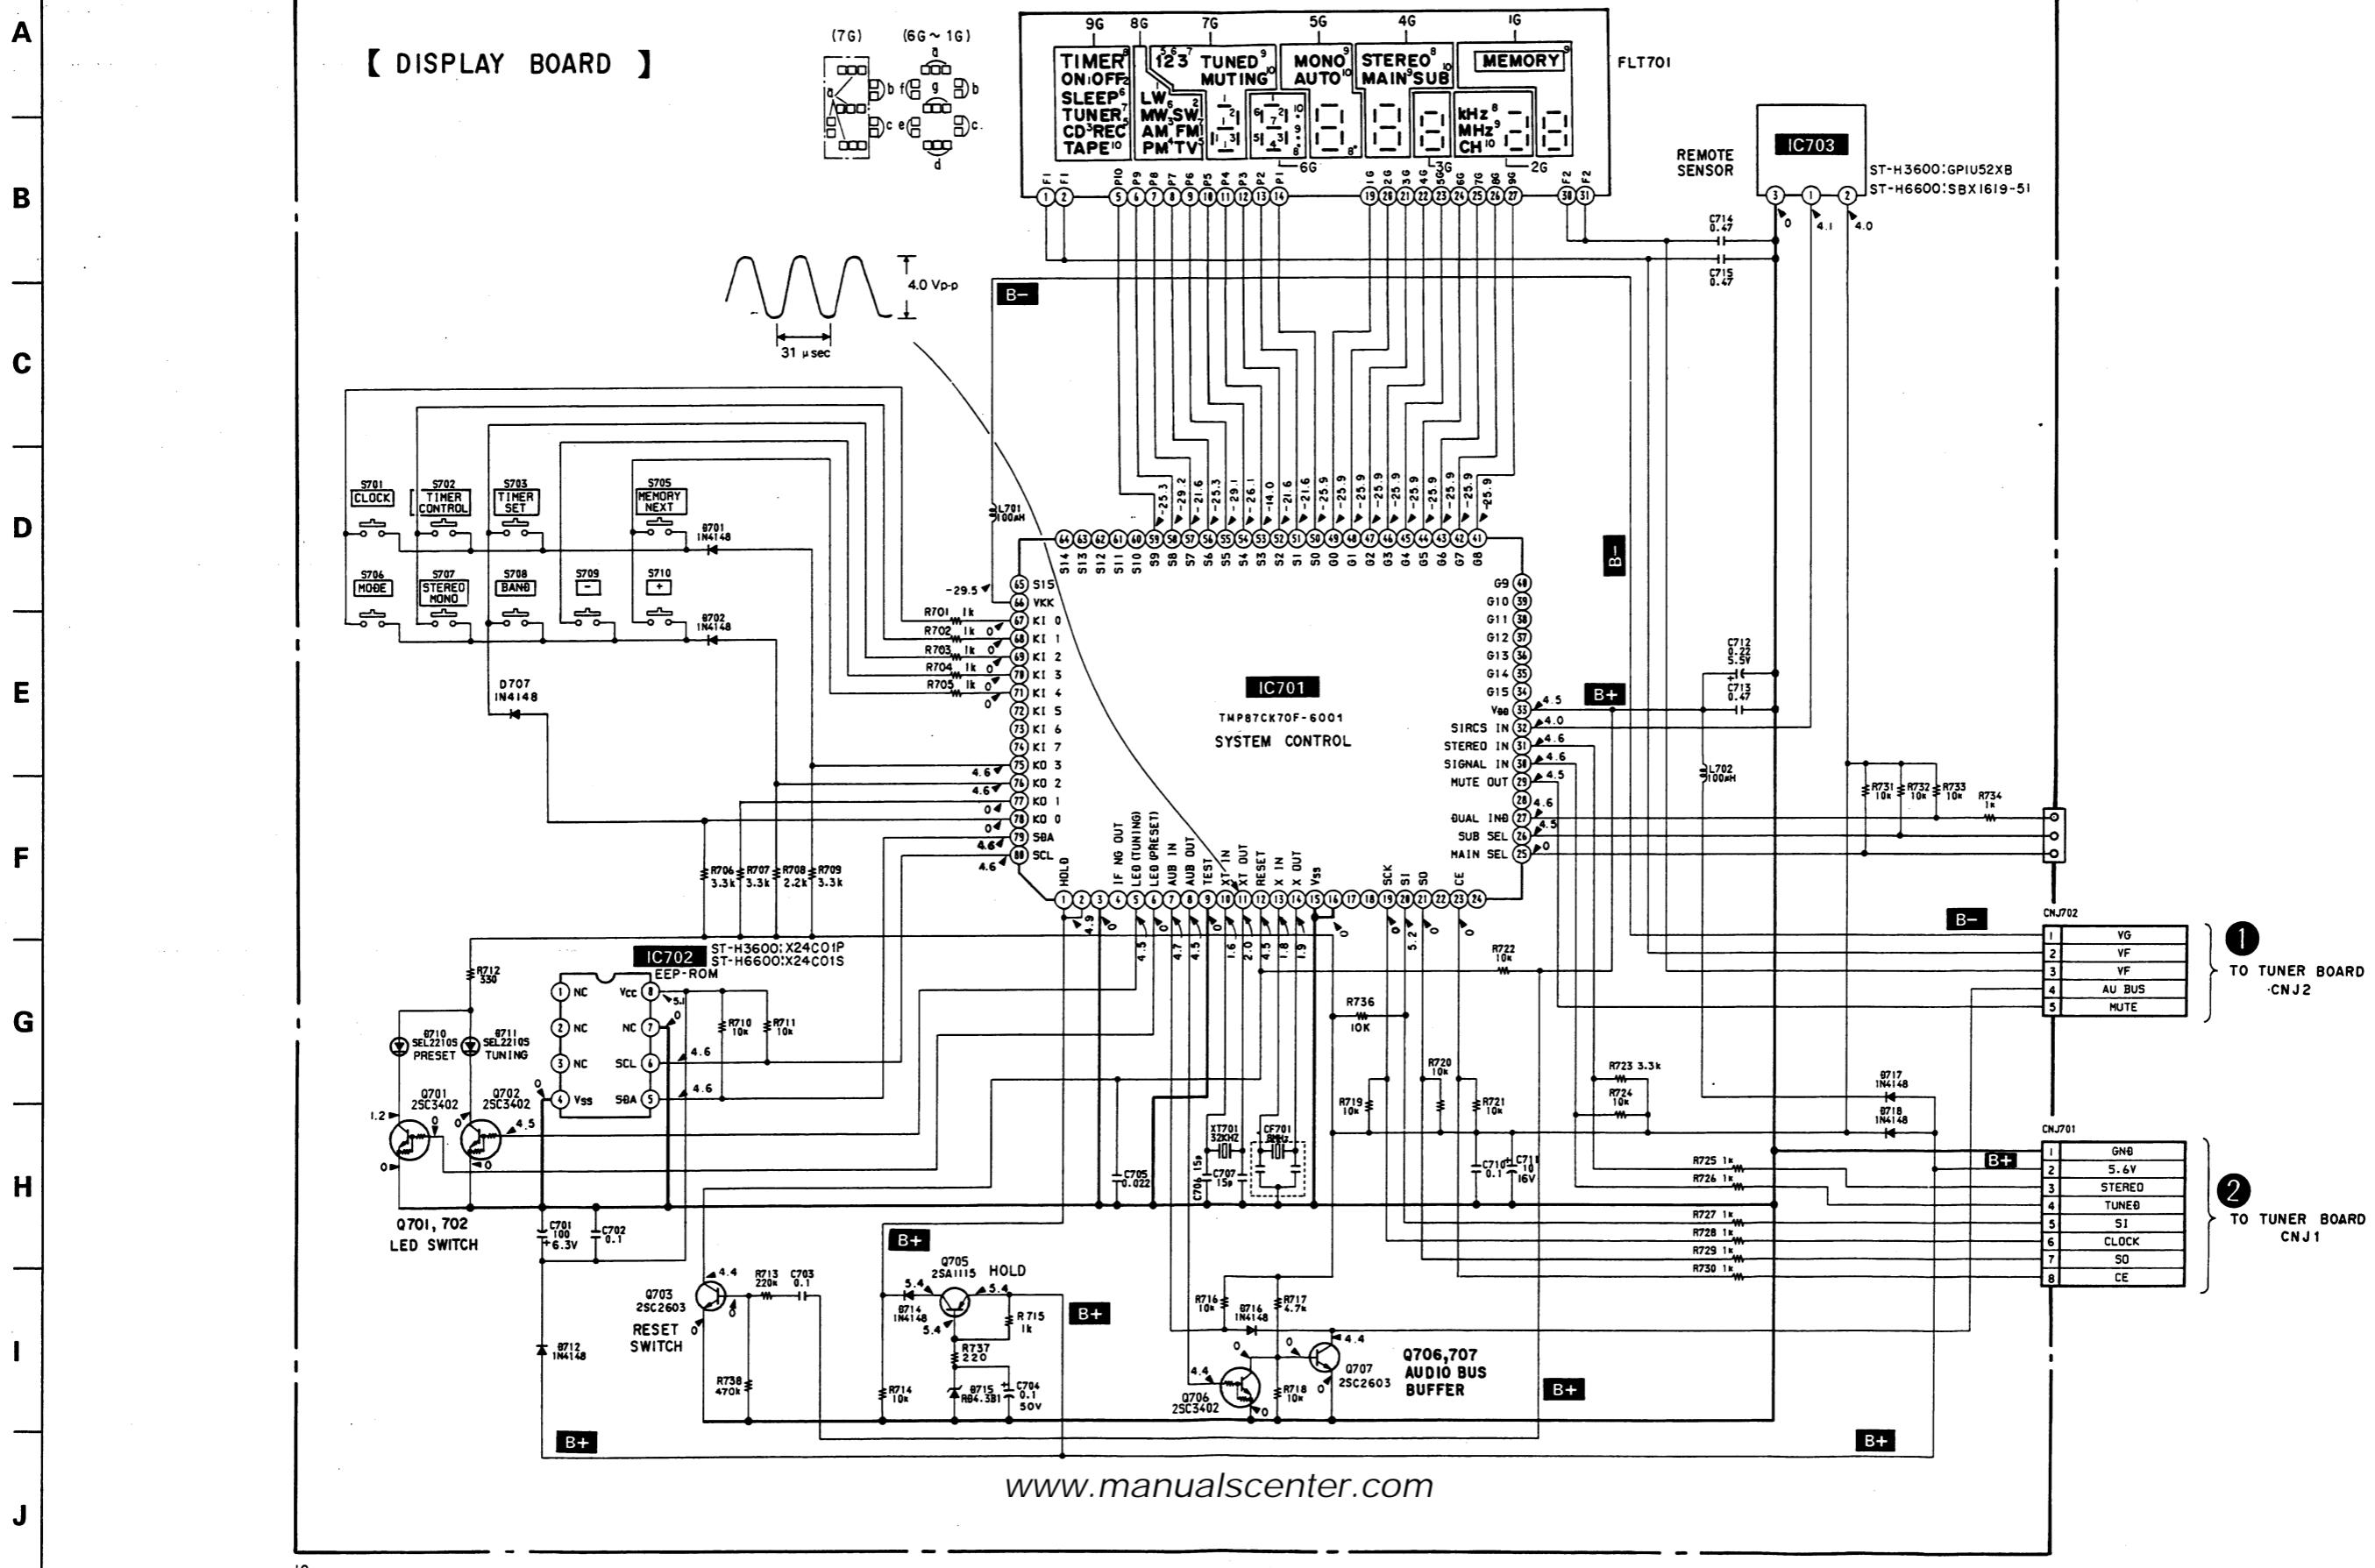


4-7. IC BLOCK DIAGRAMS

IC21 LA1851N

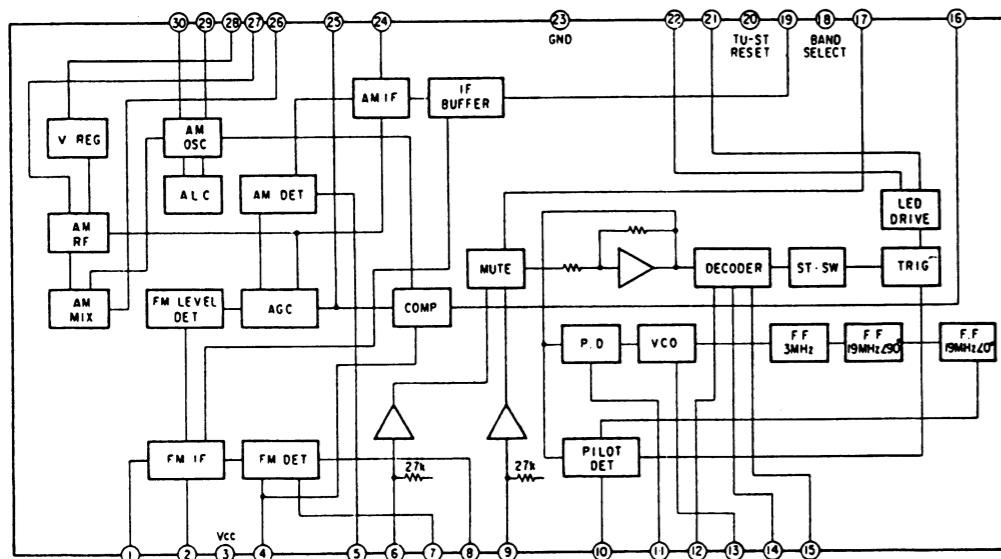

IC81 LC7218

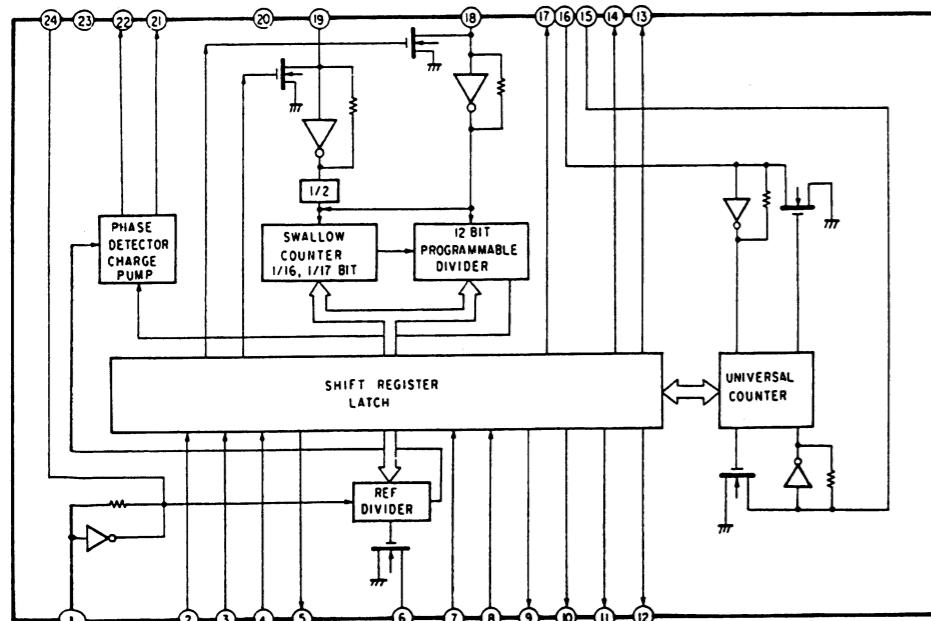

www.manualscenter.com

4-8. PIN FUNCTION OF IC701 SYSTEM CONTROLLER (TMP87CK70F-6001)

The terminals work to control tuner section (IC21, 81), FL tube display and reading and writing of IC702 (preset data), etc. according to key input and signal from the remote controller.

PIN No.	PIN NAME	I/O	ACTIVE	PIN FUNCTION
1	HOLD	I	↓	HOLD detecting interrupt terminal
2	HOLD RESET	I	↑	HOLD resetting interrupt terminal
3		I		Not in use
4	IF NGOUT	O	H	IF count NG output
5	LED1	O	H	TUNING LED ON
6	LED2	O	H	PRESET LED ON
7	AUB IN	I	L	AUDIO BUS input
8	AUB OUT	O	L	AUDIO BUS output
9	TEST	I	H	Test terminal
10	XT IN	I		Low frequency oscillator connection terminal (32KHz)
11	XT OUT	O		Low frequency oscillator connection terminal (32KHz)
12	RESET	I		Reset signal input
13	X IN	I		High frequency oscillator connection terminal (8MHz)
14	X OUT	O		High frequency oscillator connection terminal (8MHz)
15	VSS			GND
16		I		Not in use
17, 18		O		Not in use
19	SCK	O		PLL serial clock output
20	SI	I		PLL serial data input
21	SO	O		PLL serial data output
22		O		Not in use
23	CE	O	H	PLL chip enable
24				Not in use
25	MAIN SEL	O	L	Main sound selection terminal (Not in use)
26	SUB SEL	O	L	Sub sound selection terminal (Not in use)
27	DUAL IND	I	L	Sound dual signal detection terminal (Not in use)
28				Not in use
29	MUTE OUT	O	L	MUTING output
30	SIGNAL IN	I	L	TUNED input
31	STEREO IN	I	L	STEREO input
32	SIRCS IN	I	L	SIRCS input
33	VDD			+5V
34 - 40		O		Not in use
41 - 49	G0 - G8	O	H	FL tube digit output
50 - 59	S0 - S9	O	H	FL tube segment output
60 - 65		O		Not in use
66	VKK			FL tube driving power supply
67 - 71	KI0 - KI4	I	H	Key input
72		I		Not in use
73, 74				Not in use
75 - 78	KO0 - KO3	O	H	Key output
79	SDA	I/O		Data input/output for EEPROM
80	SCL	O		Clock output for EEPROM

SECTION 5

EXPLODED VIEW


NOTE:

- XX, -X mean standardized parts, so they may have some differences from the original one.
- Color Indication of Appearance Parts Example: KNOB,BALANCE(WHITE)...(RED)

↑ ↑
Parts color Cabinet's color

- Items marked ** are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.

The components identified by mark Δ or dotted line with mark Δ are critical for safety.
Replace only with part number specified.

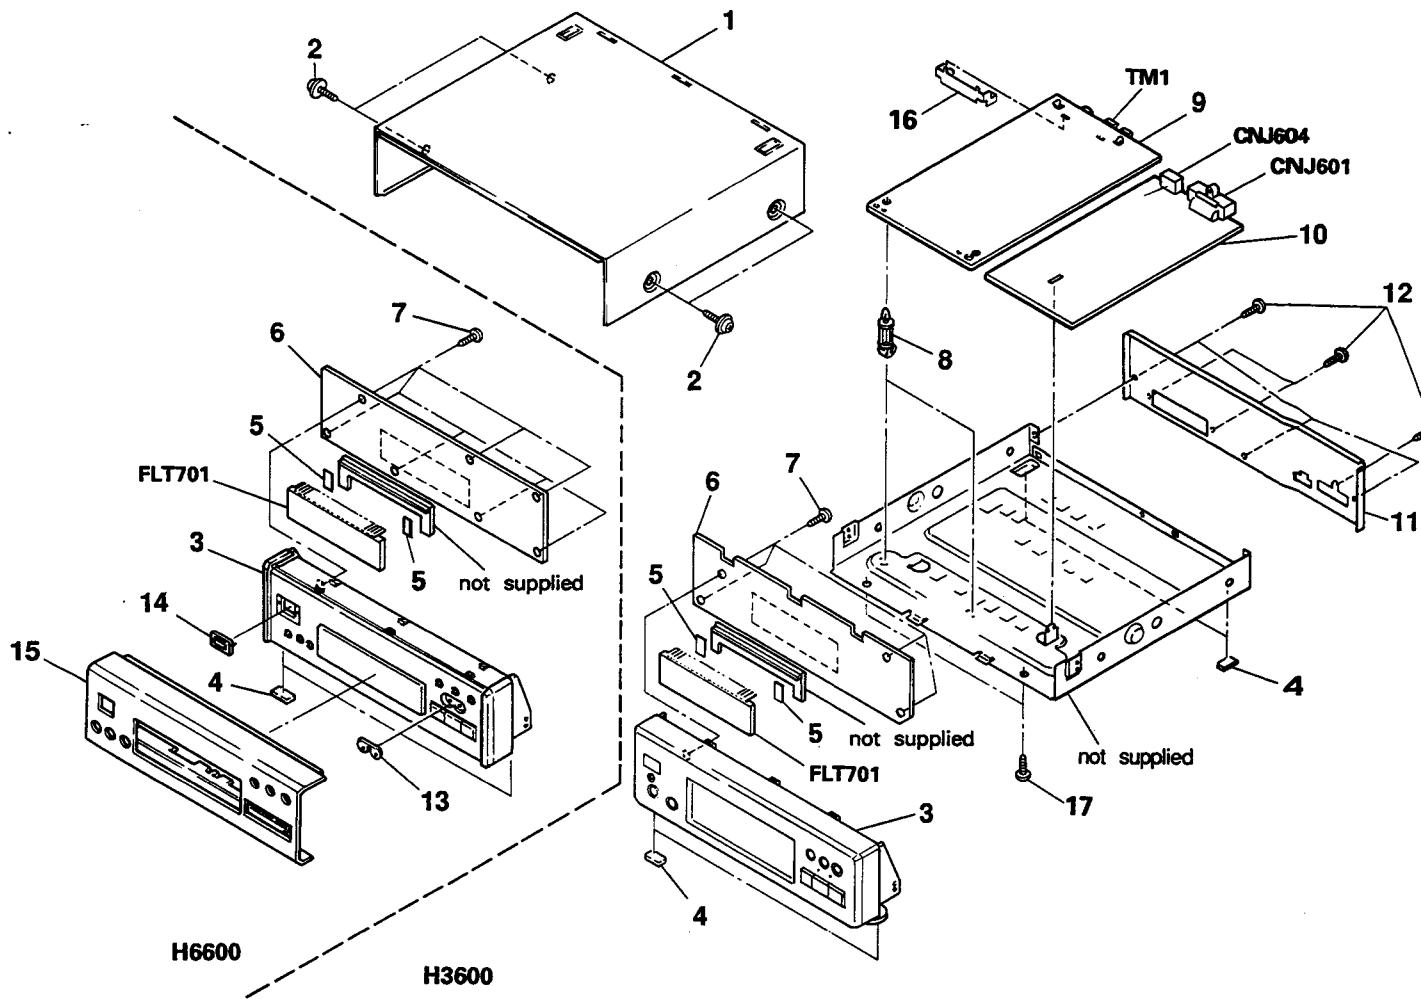(1) CHASSIS SECTION

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
1	4-944-423-11	CASE (K206522) (H3600)		10	1-638-340-11	CONNECTOR BOARD (H3600)	
	4-932-844-01	CASE (H6600)			1-638-336-11	CONNECTOR BOARD (H6600)	
2	3-363-099-01	SCREW (CASE +3X8 TP2)					
3	X-4941-544-1	PANEL ASSY, ASSY (H3600)		11	* 4-942-893-51	PANEL, BACK (H3600: AEP, UK)	
	X-4942-523-1	PANEL ASSY, ASSY (H6600)			* 4-942-893-81	PANEL, BACK (H3600: G)	
4	4-930-336-01	FOOT (FELT)			* 4-942-893-91	PANEL, BACK (H3600: IT)	
5	* 4-932-810-11	CUSHION (FL)			* 4-942-893-01	PANEL, BACK (H6600: AEP, UK)	
6	* A-4341-562-A	DISPLAY BOARD, COMPLETE (H3600: AEP, UK)			* 4-942-893-31	PANEL, BACK (H6600: G)	
	* A-4341-563-A	DISPLAY BOARD, COMPLETE (H3600: G, IT)			* 4-942-893-41	PANEL, BACK (H6600: IT)	
	* A-4341-554-A	DISPLAY BOARD, COMPLETE (H6600: AEP, UK)		12	7-685-647-79	SCREW +BVTP 3X10 TYPE2 N-S	
	* A-4341-556-A	DISPLAY BOARD, COMPLETE (H6600: G, IT)		13	4-944-427-01	INDICATOR (H6600)	
7	7-685-534-19	SCREW +BTP 2.6X8 TYPE2 N-S		14	4-944-425-01	FILTER (H6600)	
8	* 4-914-008-01	HOLDER, PCB		15	4-944-429-11	PANEL (ST), FRONT (H6600)	
9	A-4303-367-A	TUNER BOARD(TCB007-3HJFH), COMPLETE(AEP, UK)		16	* 4-924-988-11	PLATE (ST), GROUND	
	A-4303-368-A	TUNER BOARD(TCB007-3IJFH), COMPLETE(G, IT)		17	7-682-547-09	SCREW +BVTT 3X6(S) (H6600)	

TUNER

SECTION 6

ELECTRICAL PARTS LIST

NOTE:

The components identified by mark Δ or dotted line with mark Δ are critical for safety.
Replace only with part number specified.

When indicating parts by reference number, please include the board name.

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- XX, -X mean standardized parts, so they may have some difference from the original one.
- RESISTORS**
All resistors are in ohms
METAL : Metal-film resistor
METAL OXIDE : Metal Oxide-film resistor
F : nonflammable
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- SEMICONDUCTORS**
In each case, u : μ , for example:
uA...: μ A..., uPA...: μ PA...,
uPB...: μ PB..., uPC...: μ PC...,
uPD...: μ PD...
- CAPACITORS**
uF : μ F
- COILS**
uH : μ H

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
				C36	1-123-382-00	ELECT	3.3uF 20% 100V
				C37	1-124-907-11	ELECT	10uF 20% 50V
				C39	1-163-059-00	CERAMIC MELF	0.01uF 20% 16V
				C40	1-124-463-00	ELECT	0.1uF 20% 50V
				C41	1-124-907-11	ELECT	10uF 20% 50V
				C42	1-163-059-00	CERAMIC MELF	0.01uF 20% 16V
				C43	1-126-176-11	ELECT	220uF 20% 10V
				C44	1-163-059-00	CERAMIC MELF	0.01uF 20% 16V
				C45	1-123-382-00	ELECT	3.3uF 20% 100V
				C46	1-161-375-00	CERAMIC CHIP	0.0022uF 20% 25V
				C47	1-163-170-00	CERAMIC CHIP	0.0047uF 20% 25V (G, IT)
				C48	1-123-382-00	ELECT	3.3uF 20% 100V
				C49	1-161-375-00	CERAMIC CHIP	0.0022uF 20% 25V
				C50	1-163-170-00	CERAMIC CHIP	0.0047uF 20% 25V (G, IT)
				C51	1-124-477-11	ELECT	47uF 20% 25V
				C53	1-163-105-00	CERAMIC CHIP	33pF 5% 50V
				C54	1-101-005-00	CERAMIC	0.022uF 50V (G, IT)
				C61	1-163-063-00	CERAMIC MELF	0.022uF 25V
				C62	1-163-063-00	CERAMIC MELF	0.022uF 25V
				C63	1-163-063-00	CERAMIC MELF	0.022uF 25V
				C64	1-163-063-00	CERAMIC MELF	0.022uF 25V
				C65	1-163-063-00	CERAMIC MELF	0.022uF 25V
				C66	1-163-063-00	CERAMIC MELF	0.022uF 25V
				C67	1-102-120-00	CERAMIC	0.0018uF 10% 50V
				C68	1-163-111-11	CERAMIC CHIP	0.0015uF 20% 25V
				C69	1-163-063-00	CERAMIC MELF	0.022uF 25V
				C70	1-163-063-00	CERAMIC MELF	0.022uF 25V
				C71	1-163-063-00	CERAMIC MELF	0.022uF 25V
				C72	1-163-063-00	CERAMIC MELF	0.022uF 25V
				C73	1-163-063-00	CERAMIC MELF	0.022uF 25V
				C81	1-102-961-00	CERAMIC	27pF 5% 50V
				C82	1-102-961-00	CERAMIC	27pF 5% 50V
				C83	1-163-059-00	CERAMIC MELF	0.01uF 20% 16V
				C84	1-163-059-00	CERAMIC MELF	0.01uF 20% 16V

TUNER

Ref. No.	Part No.	Description				Remarks	Ref. No.	Part No.	Description				Remarks
C85	1-163-059-00	CERAMIC MELF				0.01uF 20% 16V			< INDUCTOR >				
C86	1-124-477-11	ELECT				47uF 20% 25V							
C87	1-163-059-00	CERAMIC MELF				0.01uF 20% 16V		L1	1-410-645-31	MICRO INDUCTOR 100uH			
C88	1-163-059-00	CERAMIC MELF				0.01uF 20% 16V		L2	1-410-645-31	MICRO INDUCTOR 100uH (G, IT)			
C89	1-124-443-00	ELECT				100uF 20% 10V		L21	1-407-500-00	MICRO INDUCTOR 4.7mH			
C101	1-124-925-11	ELECT				2.2uF 20% 100V		L61	1-410-525-11	MICRO INDUCTOR 220uH			
C102	1-124-463-00	ELECT				0.1uF 20% 50V			< LOW PASS FILTER >				
C103	1-163-059-00	CERAMIC MELF				0.01uF 20% 16V		LPF21	1-235-164-00	FILTER, LOW PASS			
C104	1-163-059-00	CERAMIC MELF				0.01uF 20% 16V		LPF22	1-235-164-00	FILTER, LOW PASS			
C105	1-124-477-11	ELECT				47uF 20% 25V			< TRANSISTOR >				
C106	1-136-173-00	FILM				0.47uF 5% 50V		Q1	8-729-230-99	TRANSISTOR 2SC2669-OY			
C107	1-124-463-00	ELECT				0.1uF 20% 50V		Q2	8-729-230-99	TRANSISTOR 2SC2669-OY			
C108	1-163-063-00	CERAMIC MELF				0.022uF 25V (G, IT)		Q3	8-129-230-99	TRANSISTOR 2SC2669-OY (G, IT)			
C109	1-162-211-31	CERAMIC				33pF 5% 50V		Q4	8-129-230-99	TRANSISTOR 2SC2669-OY (G, IT)			
C121	1-161-379-00	CERAMIC				0.01uF 30% 16V (G, IT)		Q21	8-729-119-78	TRANSISTOR 2SC2785-HFE			
	< FILTER >												
CF1	1-567-389-11	FILTER, CERAMIC						Q22	8-729-119-78	TRANSISTOR 2SC2785-HFE			
CF2	1-567-389-11	FILTER, CERAMIC						Q23	8-729-900-61	TRANSISTOR DTA114ES			
CF3	1-567-389-11	FILTER, CERAMIC (G, IT)						Q24	8-729-900-80	TRANSISTOR DTC114ES			
	< OSCILLATOR >												
CF21	1-577-075-11	OSCILLATOR, CERAMIC (19KHz)						Q26	8-729-900-80	TRANSISTOR DTC114ES			
	< IF TRANSFORMER >												
CFT21	1-404-853-11	TRANSFORMER, IF (CERAMIC FILTER)						Q61	8-729-900-80	TRANSISTOR DTC114ES			
	< CONNECTOR >												
CNJ1	* 1-564-342-11	SOCKET, CONNECTOR 8P						Q62	8-729-900-80	TRANSISTOR DTC114ES			
CNJ2	* 1-564-339-00	PIN, CONNECTOR 5P						Q63	8-729-900-80	TRANSISTOR DTC114ES			
CNJ3	* 1-564-341-11	PIN, CONNECTOR 7P						Q64	8-729-820-24	TRANSISTOR 2SC3330-T			
CNJ4	* 1-564-337-00	PIN, CONNECTOR 3P						Q65	8-729-119-76	TRANSISTOR 2SA1175-HFE			
	< DIODE >												
D61	8-719-912-20	DIODE ISS120						Q66	8-729-900-80	TRANSISTOR DTC114ES			
	< FM FRONT END >												
FE1	1-463-857-11	FRONT END, FM (G, IT)						R1	△ 1-249-397-11	CARBON (SMALL) 22 5% 1/4W F (G, IT)			
FE1	1-463-862-21	FRONT END, FM (AEP, UK)						R1	△ 1-249-401-11	CARBON (SMALL) 47 5% 1/4W F (AEP, UK)			
	< ENCAPSULATED COMPONENT >												
FE61	1-236-462-11	ENCAPSULATED COMPONENT (MW RF)						R3	1-249-329-11	CARBON MELF 330 5% 1/8W			
FE62	1-236-463-11	ENCAPSULATED COMPONENT (LW RF)						R4	1-249-329-11	CARBON MELF 330 5% 1/8W			
	< IC >												
IC21	8-759-821-45	IC LA1851N						R5	1-249-329-11	CARBON MELF 330 5% 1/8W			
IC81	8-759-820-91	IC LC7218						R6	1-249-350-11	CARBON MELF 18K 5% 1/8W			
	< RESISTOR >												
								R7	1-249-329-11	CARBON MELF 330 5% 1/8W			
								R8	1-249-332-11	CARBON MELF 560 5% 1/8W			
								R9	1-249-352-11	CARBON MELF 27K 5% 1/8W			
								R10	1-249-329-11	CARBON MELF 330 5% 1/8W (G, IT)			
								R11	1-249-350-11	CARBON MELF 18K 5% 1/8W (G, IT)			
								R12	1-249-329-11	CARBON MELF 330 5% 1/8W (G, IT)			
								R13	1-249-334-11	CARBON MELF 820 5% 1/8W (G, IT)			
								R14	1-249-352-11	CARBON MELF 27K 5% 1/8W (G, IT)			

The components identified by mark △ or dotted line with mark △ are critical for safety.
Replace only with part number specified.

When indicating parts by reference number, please include the board name.

TUNER **CONNECTOR** **DISPLAY**

Ref. No.	Part No.	Description				Remarks	Ref. No.	Part No.	Description				Remarks
R15	1-249-374-11	CARBON MELF	10K	5%	1/8W	(G, IT)	R88	1-249-343-11	CARBON MELF	4.7K	5%	1/8W	
R16	1-249-343-11	CARBON MELF	4.7K	5%	1/8W	(G, IT)	R89	1-249-335-11	CARBON MELF	1K	5%	1/8W	
R21	⚠ 1-249-404-00	CARBON (SMALL)	82	5%	1/4W	F	R90	1-249-343-11	CARBON MELF	4.7K	5%	1/8W	
R22	1-249-433-11	CARBON (SMALL)	22K	5%	1/4W		R91	1-249-335-11	CARBON MELF	1K	5%	1/8W	
R23	1-249-335-11	CARBON MELF	1K	5%	1/8W		R92	⚠ 1-249-401-11	CARBON (SMALL)	47	5%	1/4W	F
R24	1-249-353-11	CARBON MELF	33K	5%	1/8W		R101	1-249-341-11	CARBON MELF	3.3K	5%	1/8W	
R25	1-249-346-11	CARBON MELF	8.2K	5%	1/8W		R102	1-249-332-11	CARBON MELF	560	5%	1/8W	
R27	1-249-432-11	CARBON (SMALL)	18K	5%	1/4W		R103	1-249-335-11	CARBON MELF	1K	5%	1/8W	
R28	1-249-423-11	CARBON (SMALL)	3.3K	5%	1/4W		R104	1-249-328-11	CARBON MELF	270	5%	1/8W	
R29	1-249-347-11	CARBON MELF	10K	5%	1/8W		R105	1-249-343-11	CARBON MELF	4.7K	5%	1/8W	
R31	1-249-331-11	CARBON MELF	470	5%	1/8W		R106	1-249-339-11	CARBON MELF	2.2K	5%	1/8W	
R32	1-249-347-11	CARBON MELF	10K	5%	1/8W		R107	1-249-343-11	CARBON MELF	4.7K	5%	1/8W	
R33	1-249-347-11	CARBON MELF	10K	5%	1/8W		R108	1-249-323-11	CARBON MELF	100	5%	1/8W	
R34	1-249-437-11	CARBON (SMALL)	47K	5%	1/4W		R109	1-249-343-11	CARBON MELF	4.7K	5%	1/8W	
R35	1-249-355-11	CARBON MELF	47K	5%	1/8W		R110	⚠ 1-249-405-11	CARBON (SMALL)	100	5%	1/4W	F
R37	1-249-359-11	CARBON MELF	100K	5%	1/8W		R111	1-249-341-11	CARBON MELF	3.3K	5%	1/8W	
R38	1-249-363-11	CARBON MELF	220K	5%	1/8W		R112	1-249-332-11	CARBON MELF	560	5%	1/8W	
R39	1-249-339-11	CARBON MELF	2.2K	5%	1/8W		R113	1-249-335-11	CARBON MELF	1K	5%	1/8W	
R40	1-249-338-11	CARBON MELF	1.8K	5%	1/8W		R114	1-249-328-11	CARBON MELF	270	5%	1/8W	
R41	1-249-344-11	CARBON MELF	5.6K	5%	1/8W		R115	1-249-351-11	CARBON MELF	22K	5%	1/8W	
R42	1-249-359-11	CARBON MELF	100K	5%	1/8W		R116	1-249-339-11	CARBON MELF	2.2K	5%	1/8W	
R43	1-249-363-11	CARBON MELF	220K	5%	1/8W		R117	1-249-343-11	CARBON MELF	4.7K	5%	1/8W	
R44	1-249-339-11	CARBON MELF	2.2K	5%	1/8W		R118	1-249-323-11	CARBON MELF	100	5%	1/8W	
R45	1-249-338-11	CARBON MELF	1.8K	5%	1/8W		(VARIABLE RESISTOR)						
R46	1-249-344-11	CARBON MELF	5.6K	5%	1/8W		R47	⚠ 1-249-409-11	CARBON (SMALL)	220	5%	1/4W	F
R48	1-249-359-11	CARBON MELF	100K	5%	1/8W		RV21	1-238-598-11	RES, ADJ, CARBON	2.2K	(AEP, UK)		
R49	1-249-359-11	CARBON MELF	100K	5%	1/8W		RV21	1-238-599-11	RES, ADJ, CARBON	4.7K	(G, IT)		
R61	1-249-359-11	CARBON MELF	100K	5%	1/8W		RV22	1-238-601-11	RES, ADJ, CARBON	22K			
R62	1-249-355-11	CARBON MELF	47K	5%	1/8W		RV24	1-238-601-11	RES, ADJ, CARBON	22K	(AEP, UK)		
R64	1-249-351-11	CARBON MELF	22K	5%	1/8W		RV24	1-238-602-11	RES, ADJ, CARBON	47K	(G, IT)		
R65	1-249-355-11	CARBON MELF	47K	5%	1/8W		(TRANSFORMER)						
R66	1-215-493-00	CARBON MELF	1M	5%	1/5W		T21	1-404-807-11	TRANSFORMER, DISCRIMINATOR				
R67	1-249-359-11	CARBON MELF	100K	5%	1/8W		T23	1-236-465-11	ENCAPSULATED COMPONENT	(G, IT)			
R68	1-249-352-11	CARBON MELF	27K	5%	1/8W		(TERMINAL)						
R69	1-249-351-11	CARBON MELF	22K	5%	1/8W		TM1	* 1-537-138-31	TERMINAL BOARD (ANTENNA)				
R70	1-249-331-11	CARBON MELF	470	5%	1/8W		(CONNECTOR PIN)						
R71	1-249-339-11	CARBON MELF	2.2K	5%	1/8W		TP1	* 1-560-060-00	PIN, CONNECTOR 2P				
R72	1-249-351-11	CARBON MELF	22K	5%	1/8W		(CRYSTAL VIBRATOR)						
R73	1-249-347-11	CARBON MELF	10K	5%	1/8W		XT81	1-577-126-11	VIBRATOR, CRYSTAL (7.2MHz)				
R74	1-249-347-11	CARBON MELF	10K	5%	1/8W		*****						
R75	1-249-343-11	CARBON MELF	4.7K	5%	1/8W		*****						
R81	1-249-335-11	CARBON MELF	1K	5%	1/8W		*****						
R82	1-249-335-11	CARBON MELF	1K	5%	1/8W		*****						
R83	1-249-335-11	CARBON MELF	1K	5%	1/8W		*****						
R84	1-249-335-11	CARBON MELF	1K	5%	1/8W		*****						
R85	1-249-347-11	CARBON MELF	10K	5%	1/8W		*****						
R86	1-249-335-11	CARBON MELF	1K	5%	1/8W		*****						
R87	1-249-347-11	CARBON MELF	10K	5%	1/8W		*****						

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

When indicating parts by reference number, please include the board name.

CONNECTOR

DISPLAY

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
* A-4341-562-A DISPLAY BOARD, COMPLETE (H3600: AEP, UK) * A-4341-563-A DISPLAY BOARD, COMPLETE (H3600: G, IT) * A-4341-554-A DISPLAY BOARD, COMPLETE (H6600: AEP, UK) * A-4341-556-A DISPLAY BOARD, COMPLETE (H6600: G, IT)							

* 4-932-810-11 CUSHION (FL)							
				(CAPACITOR)			
C601	1-124-471-00	ELECT	1000uF	20%	6. 3V		
C701	1-126-177-11	ELECT	100uF	20%	10V		
C702	1-164-159-11	CERAMIC	0.1uF		50V		
C703	1-164-159-11	CERAMIC	0.1uF		50V		
C704	1-124-463-00	ELECT	0.1uF	20%	50V		
C705	1-161-494-00	CERAMIC	0.022uF		25V		
C706	1-162-203-31	CERAMIC	15PF	5%	50V		
C707	1-162-203-31	CERAMIC	15PF	5%	50V		
C710	1-164-159-11	CERAMIC	0.1uF		50V		
C711	1-126-157-11	ELECT	10uF	20%	16V		
C712	1-125-624-11	DUBLE LAYERS	0.22F		5. 5V		
C713	1-136-173-00	FILM	0.47uF	5%	50V		
C714	1-136-173-00	FILM	0.47uF	5%	50V		
C715	1-136-173-00	FILM	0.47uF	5%	50V		
(CERAMIC VIBRATOR)							
CF701	1-579-125-11	VIBRATOR, CERAMIC (8MHz)					
(CONNECTOR)							
CNJ601	* 1-566-859-11	SOCKET, CONNECTOR 15P					
CNJ602	* 1-564-341-11	PIN, CONNECTOR 7P					
CNJ603	* 1-564-337-00	PIN, CONNECTOR 3P					
CNJ604	* 1-565-561-11	PIN, CONNECTOR 3P					
CNJ701	* 1-564-342-11	PIN, CONNECTOR 8P					
CNJ702	* 1-564-339-00	PIN, CONNECTOR 5P					
(DIODE)							
D701	8-719-912-20	DIODE	1SS120				
D702	8-719-912-20	DIODE	1SS120				
D707	8-719-912-20	DIODE	1SS120				
D710	8-719-301-39	DIODE	SEL2210S-D (PRESET)				
D711	8-719-301-39	DIODE	SEL2210S-D (TUNING)				
D712	8-719-912-20	DIODE	1SS120				
D714	8-719-912-20	DIODE	1SS120				
D715	8-719-010-28	DIODE	UZ-4. 3BSA				
D716	8-719-912-20	DIODE	1SS120				
D717	8-719-912-20	DIODE	1SS120				
D718	8-719-912-20	DIODE	1SS120				
(INDICATOR)							
FLT701	△ 1-519-651-11	INDICATOR TUBE, FLUORESCENT					
(IC)							
IC701	8-759-246-31	IC	TMP87CK70F-6001				
IC702	8-759-500-31	IC	X24C01P (H3600)				
IC702	8-759-504-12	IC	X24C01S (H6600)				
IC703	8-749-920-83	IC	GP1U52XB (H3600)				
IC703	8-741-100-63	IC	SBX1619-51 (H6600)				
(COIL)							
L701	1-410-521-11	INDUCTOR			100uH		
L702	1-410-521-11	INDUCTOR			100uH		
(TRANSISTOR)							
Q701	8-729-900-80	TRANSISTOR	DTC114ES				
Q702	8-729-900-80	TRANSISTOR	DTC114ES				
Q703	8-729-620-05	TRANSISTOR	2SC2603-EF				
Q705	8-729-119-76	TRANSISTOR	2SA1175-HFE				
(RESISTOR)							
R601	1-249-393-11	CARBON		10	5%	1/4W	
R701	1-249-417-11	CARBON		1K	5%	1/4W	
R702	1-249-417-11	CARBON		1K	5%	1/4W	
R703	1-249-417-11	CARBON		1K	5%	1/4W	
R704	1-249-417-11	CARBON		1K	5%	1/4W	
R705	1-249-417-11	CARBON		1K	5%	1/4W	
R706	1-249-423-11	CARBON		3. 3K	5%	1/4W	
R707	1-249-423-11	CARBON		3. 3K	5%	1/4W	
R708	1-249-421-11	CARBON		2. 2K	5%	1/4W	
R709	1-249-423-11	CARBON		3. 3K	5%	1/4W	
R710	1-249-429-11	CARBON		10K	5%	1/4W	
R711	1-249-429-11	CARBON		10K	5%	1/4W	
R712	1-249-411-11	CARBON		330	5%	1/4W	
R713	1-247-887-00	CARBON		220K	5%	1/4W	
R714	1-249-429-11	CARBON		10K	5%	1/4W	
R715	1-249-417-11	CARBON		1K	5%	1/4W	
R716	1-249-429-11	CARBON		10K	5%	1/4W	
R717	1-249-425-11	CARBON		4. 7K	5%	1/4W	
R718	1-249-429-11	CARBON		10K	5%	1/4W	
R719	1-249-429-11	CARBON		10K	5%	1/4W	
R720	1-249-429-11	CARBON		10K	5%	1/4W	
R721	1-249-429-11	CARBON		10K	5%	1/4W	
R722	1-249-429-11	CARBON		10K	5%	1/4W	
R723	1-249-423-11	CARBON		3. 3K	5%	1/4W	
R724	1-249-429-11	CARBON		10K	5%	1/4W	

The components identified by mark △ or dotted line with mark △ are critical for safety.
Replace only with part number specified.

When indicating parts by reference number, please include the board name.

CONNECTOR	DISPLAY
------------------	----------------

Ref. No.	Part No.	Description			Remarks
R725	1-249-417-11	CARBON	1K	5%	1/4W
R726	1-249-417-11	CARBON	1K	5%	1/4W
R727	1-249-417-11	CARBON	1K	5%	1/4W
R728	1-249-417-11	CARBON	1K	5%	1/4W
R729	1-249-417-11	CARBON	1K	5%	1/4W
R730	1-249-417-11	CARBON	1K	5%	1/4W
R731	1-249-429-11	CARBON	10K	5%	1/4W
R732	1-249-429-11	CARBON	10K	5%	1/4W
R733	1-249-429-11	CARBON	10K	5%	1/4W
R734	1-249-417-11	CARBON	1K	5%	1/4W
R736	1-249-429-11	CARBON	10K	5%	1/4W
R737	1-249-409-11	CARBON	220	5%	1/4W
R738	1-247-895-00	CARBON	470K	5%	1/4W

< SWITCH >

S701	1-554-303-21	SWITCH, TACTILE (CLOCK)
S702	1-554-303-21	SWITCH, TACTILE (TIMER CONTROL)
S703	1-554-303-21	SWITCH, TACTILE (TIMER SET)
S705	1-554-303-21	SWITCH, TACTILE (MEMORY NEXT)
S706	1-554-303-21	SWITCH, TACTILE (MODE)
S707	1-554-303-21	SWITCH, TACTILE (STEREO/MONO)
S708	1-554-303-21	SWITCH, TACTILE (BAND)
S709	1-554-303-21	SWITCH, TACTILE (TUNING -)
S710	1-554-303-21	SWITCH, TACTILE (TUNING +)

< CRYSTAL VIBRATOR >

XT701 1-527-997-22 VIBRATOR, CRYSTAL (32kHz)

ST-H3600/H6600

SONY.
SERVICE MANUAL

4/18
AEP Model
UK Model

CORRECTION-1

Correct your service manual as shown below.

 : indicates corrected portion.

Page	INCORRECT			CORRECT	
	No.	Part No.	Description	Part No.	Description
25	3	X-4941-544-1 X-4942-523-1	PANEL ASSY, ASSY (H3600) PANEL ASSY, ASSY (H6600)	X-4941-544-1 X-4941-523-1	PANEL ASSY, ASSY (H3600) PANEL ASSY, ASSY (H6600)

www.manualscenter.com

9-956-240-81

Sony Corporation
Audio Group

English

93E0958-1

Printed in Japan

© 1993.5

Published by Audio Sector Quality Assurance Dept.

TC-H5600

SERVICE MANUAL

AEP Model
UK Model
E Model



This unit is the cassette deck
for the MHC-5600 component system.

Model Name Using Similar Mechanism	TC-WR97ES/WR870
Tape Transport Mechanism Type	TCM-200R8

SPECIFICATIONS

Recording system	4-track 2-channel stereo
Frequency response (DOLBY NR OFF)	30 – 14,000 Hz (± 3 dB), using TYPE I cassette (Sony HF-S)
	30 – 15,000 Hz (± 3 dB) using TYPE II cassette
	30 – 16,000 Hz (± 3 dB) using TYPE IV cassette
Wow and flutter	0.06% WRMS $\pm 0.16\%$
Inputs	(DIN) PHONO (phono jacks): sensitivity 5 mV impedance 47 kohms VIDEO (phono jacks) sensitivity 300 mV impedance 47 kohms

Dolby noise reduction manufactured under license from Dolby Laboratories Licensing Corporation.
“DOLBY” and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.

Design and specifications subject to change without notice.

Notes on chip component replacement

- Never reuse a disconnected chip component.
- Notice that the minus side of a tantalum capacitor may be damaged by heat.

Flexible Circuit Board Repairing

- Keep the temperature of the soldering iron around 270°C during repairing.
- Do not touch the soldering iron on the same conductor of the circuit board (within 3 times).
- Be careful not to apply force on the conductor when soldering or unsoldering.



www.manualscenter.com

STEREO CASSETTE DECK
SONY®

TABLE OF CONTENTS

<u>Section</u>	<u>Title</u>	<u>Page</u>
1. GENERAL		3
2. DISASSEMBLY		4
3. MECHANICAL ADJUSTMENTS.....		7
4. ELECTRICAL ADJUSTMENTS.....		7
5. DIAGRAMS		
5-1. IC Pin Description		10
5-2. Semiconductor Lead Layouts.....		14
5-3. Circuit Boards Location		14
5-4. Block Diagram		15
5-5. Printed Wiring Boards		
- Main Section -		20
5-6. Schematic Diagram		
- Main Section -		23
5-7. Schematic Diagram		
- Pin Jack Section -		29
5-8. Printed Wiring Boards		
- Pin Jack Section -		33
5-9. Printed Wiring Boards		
- Panel Section -		37
5-10. Schematic Diagram		
- Panel Section -		39
6. EXPLODED VIEWS		
6-1. Front Panel Section-1.....		41
6-2. Mechanism section-1		42
6-3. Mechanism section-2		43
7. ELECTRICAL PARTS LIST		44

www.manualscenter.com

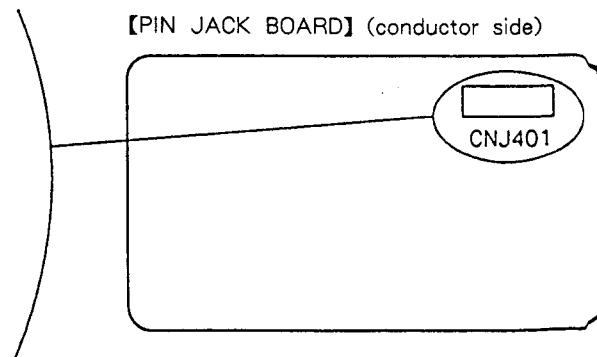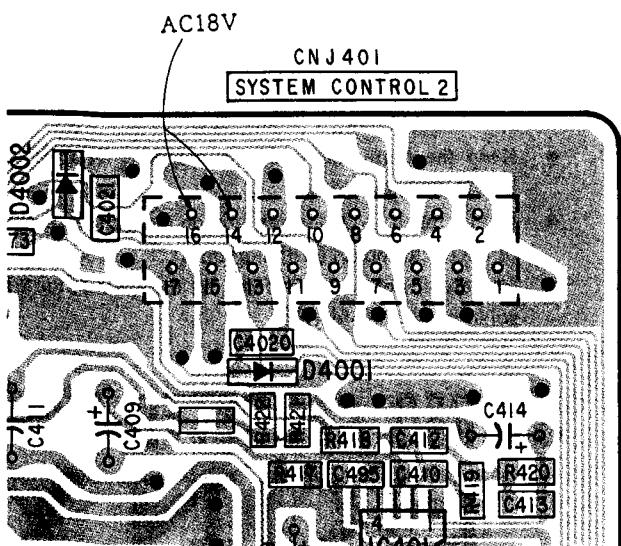


www.manualscenter.com

SECTION 1

GENERAL


This section is extracted from instruction manual.

LOCATION AND FUNCTION CONTROLS

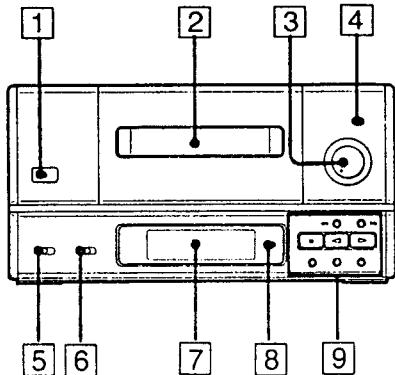

- 1**: OPEN/CLOSE button
- 2**: Cassette holder
- 3**: REC LEVEL (recording level) control
- 4**: AUTO REC LEVEL (automatic recording level) button ⁹⁶
- 5**: DOLBY NR (Dolby Noise Reduction) button ⁶⁴
- 6**: DIRECTION MODE button ⁶⁷
- 7**: Display window
- 8**: COUNTER RESET button
Resets the counter of the cassette deck to "0".
- 9**: Tape operation buttons
 - ◀▶ : Fast winding
 - : Stop
 - ▷ : Forward play
 - ◁ : Reverse play
 - II : PAUSE
 - : MUTE (Muting)
 - : REC (recording)

www.manualscenter.com

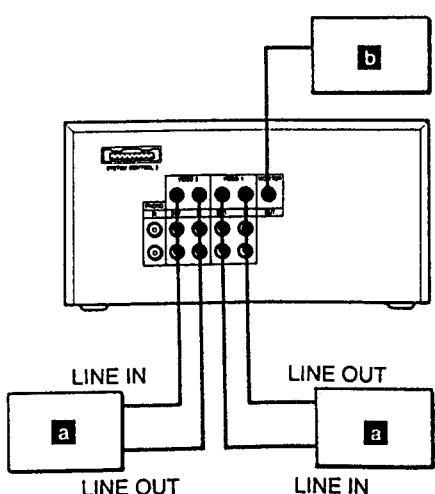

You can connect a VCR **a** to the VIDEO 1 or VIDEO 2 jacks. You can also connect a monitor TV **b** to MONITOR OUT. (TV with MONITOR IN jacks only.) To select VCR, press the VIDEO FUNCTION selector and light up the VIDEO 1 or VIDEO 2 indicator.


www.manualscenter.com

SECTION 2

DISASSEMBLY


NOTE: Follow the disassembly procedure in the numerical order given.

• FRONT PANEL
LEVER (LIFTER)

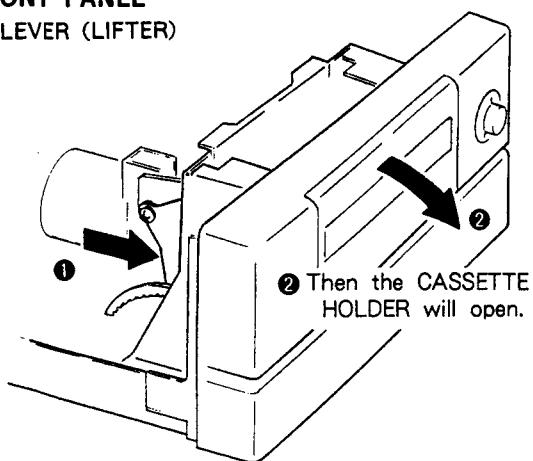


① Push LEVER (LIFTER) in the direction of arrow ①.
(Refer to the item of CASSETTE HOLDER on page 5.)


CASSETTE LID

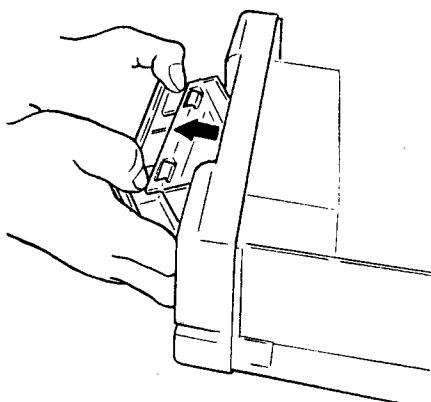

FRONT PANEL

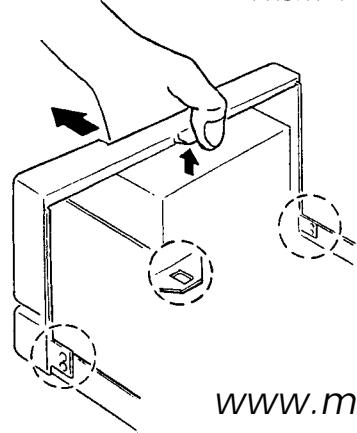


• MECHANISM DECK

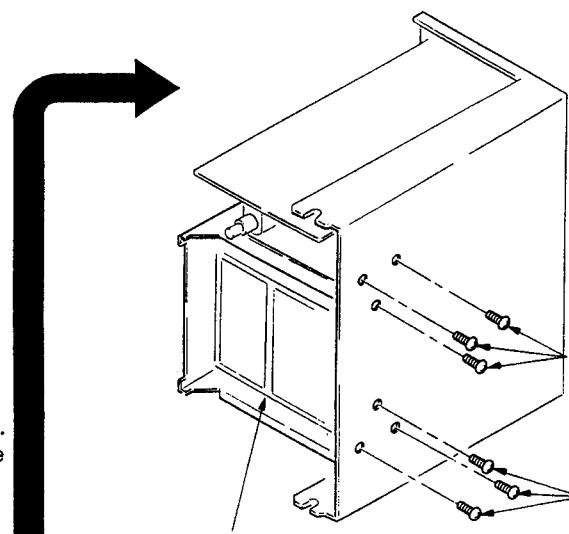


② MECHANISM DECK

• PIN JACK/POWER BOARD

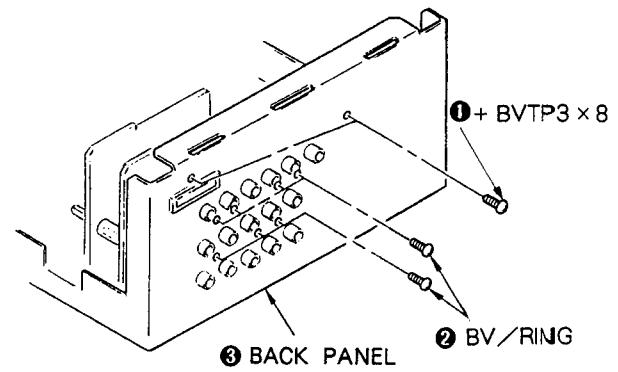


① POWER BOARD

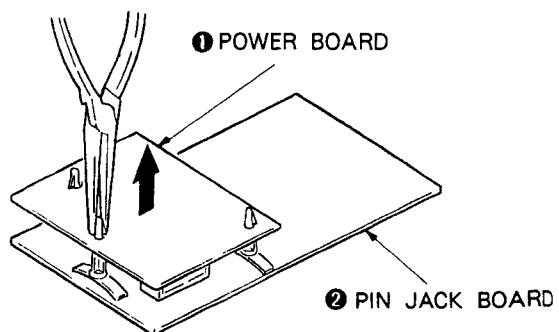

② PIN JACK BOARD


• CASSETTE HOLDER

- ③ Push LEVER (LIFTER) in the direction of arrow and remove CASSETTE HOLDER.

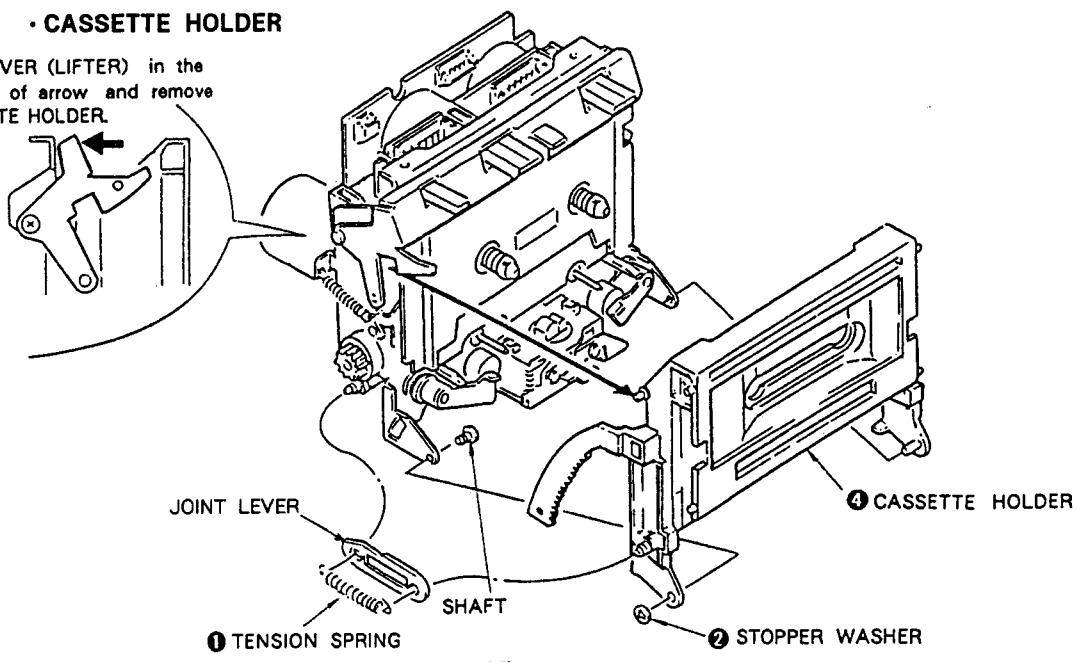


• ORNAMENTAL PLATE


- ② Push LEVER (LIFTER) in the direction of arrow and remove ORNAMENTAL PLATE.

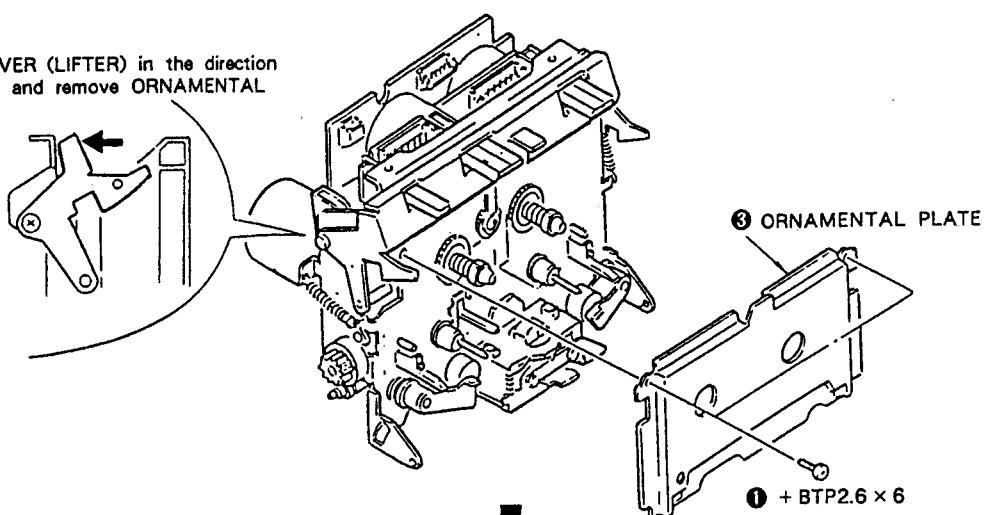

• PINCH LEVER/HEAD

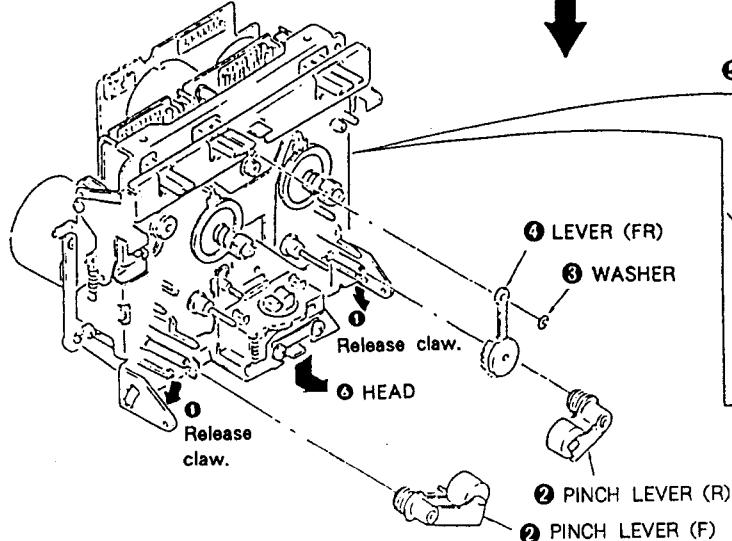


⑤ Removal of HEAD


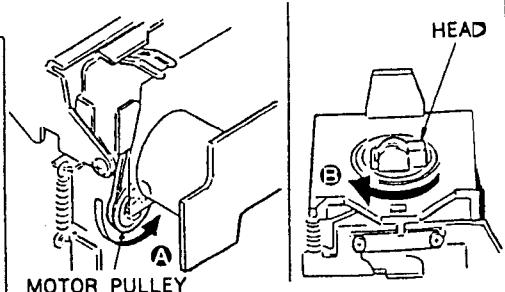


Turn MOTOR PULLEY by a finger in the direction of arrow A and confirm that HEAD has turned in the direction of arrow B.

CAPSTAN MOTOR/FLYWHEEL

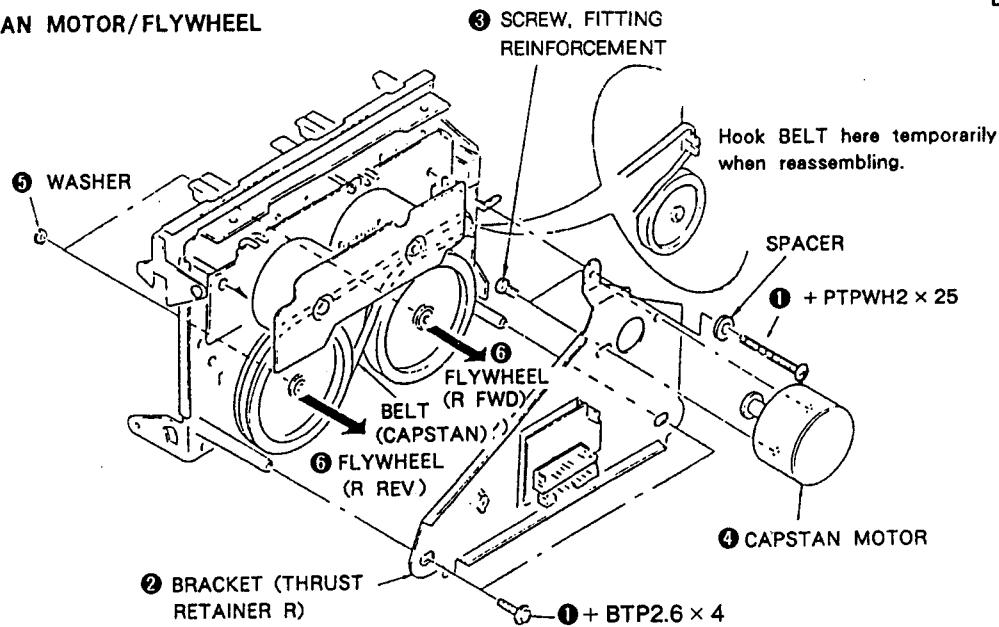

REEL and ASSIST MOTORS

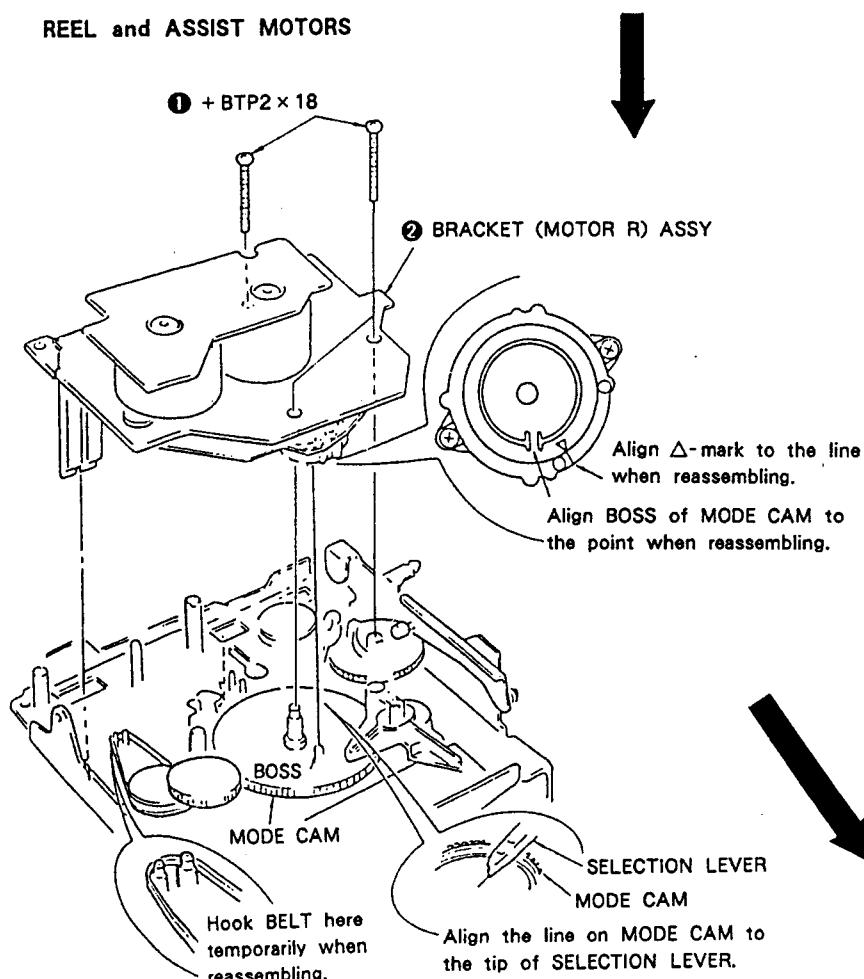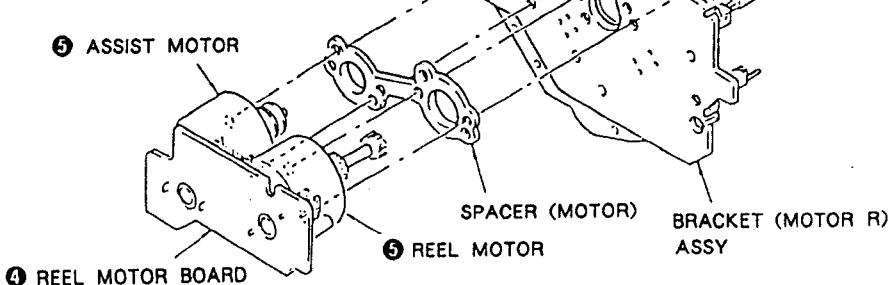
www.manualscenter.com


SECTION 3 MECHANICAL ADJUSTMENTS

PRECAUTION


1. Clean the following parts with a denatured alcohol-moistened swab:

record/playback head	pinch roller
erase head	rubber belts
capstan	idle
2. Demagnetize the record/playback head with a head demagnetizer.
(Head demagnetizer do not approach for the erase head.)
3. Do not use a magnetized screwdriver for the adjustment.
4. After the adjustments, apply suitable locking compound to the parts adjusted.
5. The adjustments should be performed with the rated power supply voltage unless otherwise noted.

Torque Measurement

Torque	Torque meter	Meter reading
Forward	CQ-102C	30 to 60g·cm (0.42 to 0.83 oz·inch)
Forward back tension	CQ-102C	1 to 5g·cm (0.014 to 0.069oz·inch)
Reverse	CQ-102RC	30 to 60g·cm (0.42 to 0.83oz·inch)
Reverse back tension	CQ-102RC	1 to 5g·cm (0.014 to 0.069oz·inch)
Forward, Reverse	CQ-201B	65 to 90g·cm (0.9 to 1.25 oz·inch)

LINE IN/OUT Terminal (CNJ401)

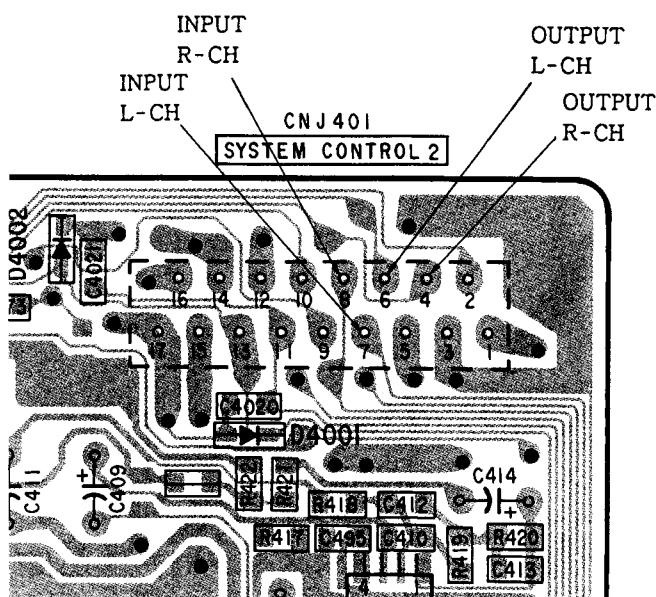

SECTION 4 ELECTRICAL ADJUSTMENTS

PRECAUTION

1. The adjustment should be performed in the publication. (Be sure to make playback adjustment at first.)
 2. The adjustment and measurement should be performed for both L-CH and R-CH.
- Switch position
DOLBY NR switch : OFF
DIR MODE switch : \approx


Test Tape

Tape	Contents	Use
P-4-A100	10kHz, -10dB	Azimuth Adjustment
P-4-L300	315Hz, 0dB	Level Adjustment
WS-48B	3kHz, 0dB	Tape Speed Adjustment


Record/Playback Head Azimuth Adjustment**Procedure:**

1. Forward Playback Mode


test tape
P-4-A100
(10kHz, -10dB)

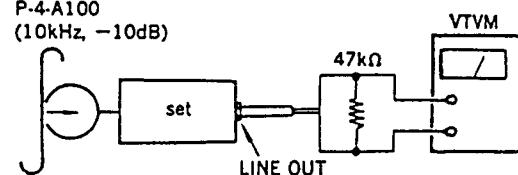

2. Turn the adjustment screw for the maximum output levels. If these levels do not match, turn the adjustment screw until both of output levels match together within 1dB.

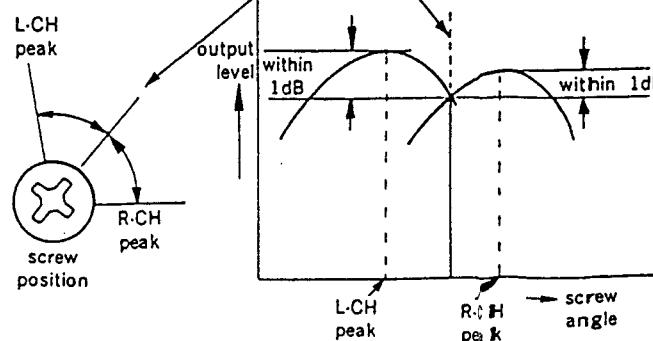


3. Playback Mode

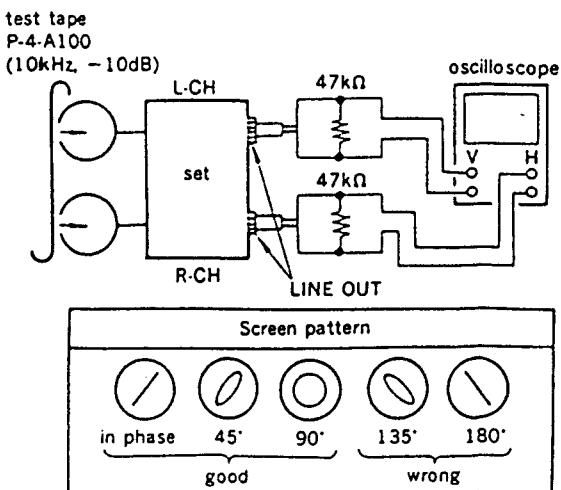

4. Change the reverse playback mode and repeat the steps 1 to 3.
5. After the adjustment, lock the adjustment screw with suitable locking compound.


Adjustment Location : — record/playback head —

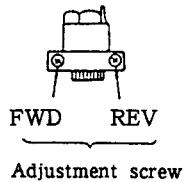

Tape Speed Adjustment


Procedure :

—Forward Playback Mode—

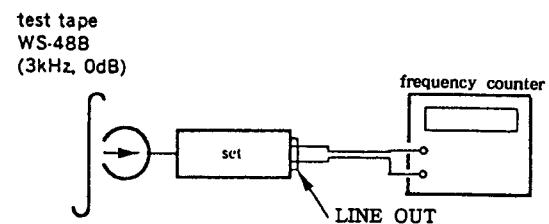


1. Set to FWD playback mode.
2. Adjust motor rear side (variable resistor) so that the frequency counter reading becomes $3,000 \pm 15\text{Hz}$.

Adjustment Location : — capstan motor —

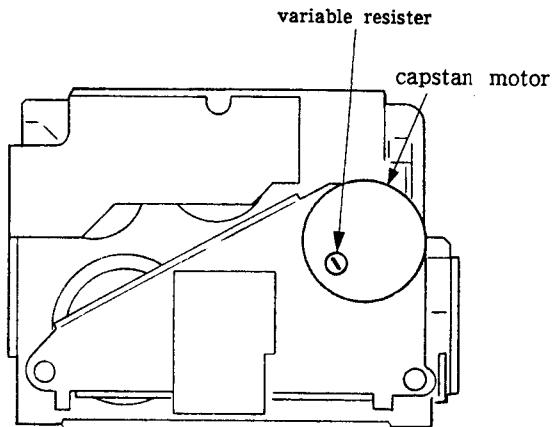

WWW.manualscenter.com

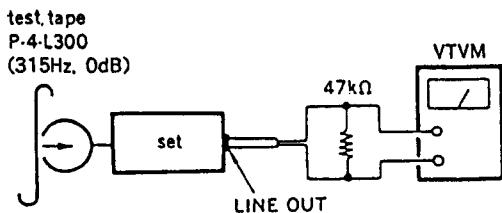Playback Level Adjustment**Procedure :****-Forward Playback Mode-**



Adjustment RV101 (L-ch) and RV201 (R-ch) so that the reading on VTVM meets the adjustment limits below.

Adjustment Limit :

LINE OUT level : $-10 \pm 0.5\text{dB}$ (0.23 to 0.26V)

Level Difference between Channels : within 0.5dB

Confirm the LINE OUT level does not change in playback mode while changing the mode from playback to stop several times.

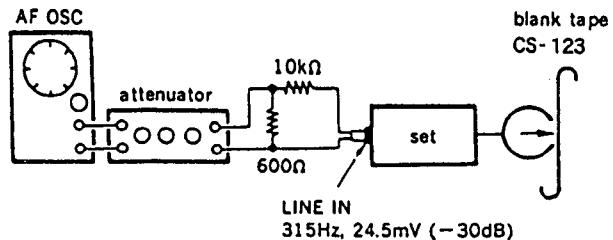
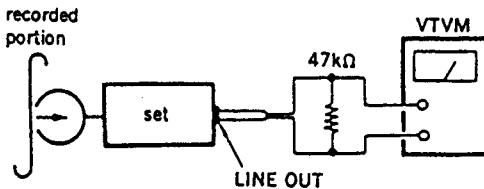
Record Level Adjustment**Procedure :****1. Record Mode****2. Playback Mode**

Confirm playback the tape recorded become adjustment level as follows.

If necessary, adjust RV102 (L-CH), RV202 (R-CH) and repeat steps 1 and 2.


Adjustment Limits :

LINE OUT level : $-30 \pm 0.5\text{dB}$ (23 to 26mV)

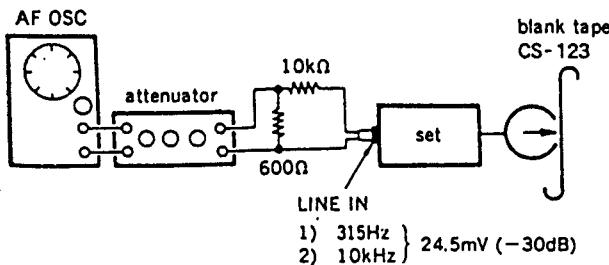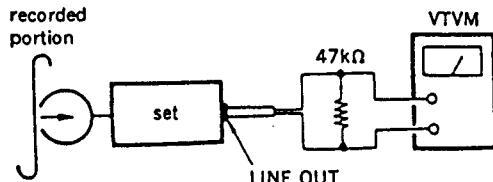Record Bias Adjustment**Procedure :****1. Record Mode****2. Playback Mode**

Playback the signal recorded in step 1.

Confirm that the 10kHz playback output is $0 \pm 0.5\text{dB}$ relative to the 315Hz output. If necessary, adjust RV103 (L-CH), RV203 (R-CH) and repeat the steps given above.

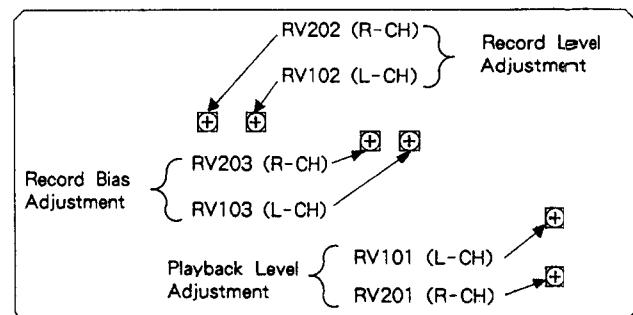Adjustment Location :**[MAIN (B) BOARD] - component side -**

SECTION 5 DIAGRAMS

5-1. IC PIN DESCRIPTION

IC601 display microprocessor HD614023FA89

Fluorescent lamp indicator is activated by receiving data from IC702 (system controller).

Pin	Pin Name	I/O	Description
1~11 12 13 14~25 26	k-a VDISP Vcc	O — I —	FL indicator tube(FL601)segment output. Not used(+5.6 V). Power supply for activating the FL indicator tube(-22 V). Not used(GND). Power supply terminal(+5.6 V).
27 28 29 30 31 32~35	CLK DATA SYNC SAF	I I I O O	Data transmission clock input from IC702(system controller). Serial data input from IC702(system controller). Sync signal input which indicates the first byte of data sent from IC702(system controller). Not used(GND). LED(D601)light output in the AUTO REL LEVEL. Not used.
36~42 43 44 45 46	RESET TEST OSC1 OSC2	I I I O	Not used(GND). Reset input from IC702(system controller). "L": Reset. Not used(+5.6V). Clock input(4.19MHz). Clock output.
47 48~50 51 52 53~57	GND 1G~5G	— O	Power supply terminal(GND). Not used(GND). Not used(Pull-up). Not used. FL indicator tube(FL601)grid output.
58~59 60~64	p-1	O O	Not used. FL indicator tube(FL601)segment output.

IC406 selector controller M50760-315FP

AV output is switched with the audio bus signal sent from the amplifier (TA-H5600).

Pin	Pin Name	I/O	Description
1 2 3 4 5	D3 A0 A1 CNVs	I O — O —	Model selection input port. Connected to GND. Audio IN switch(IC403 and IC404)control output port. Not used. Audio IN switch(IC403 and IC404)control output port. Power supply terminal(GND).
6 7 8 9 10	Vss A2 B0 B1	— O O O	Power supply terminal(GND). Audio IN switch(IC403 and IC404)control output port. Audio OUT switch(IC405)control output port. Audio OUT switch(IC405)control output port. Not used.
11 12 13~14 15	V0 V1	O O	Video IN/OUT switch(IC407)control output port. Video IN/OUT switch(IC407)control output port. Not used(GND). Not used.
16 17 18 19 20	RESET XOUT XIN S D0	I O I I I	Reset input. "L": Reset Clock output. Clock input. Serial data input(audio bus). Serial data input(audio bus).
21 22 23 24	D1 D2 V _{DD}	I I —	Model selection input port. Connected to +5 V(pull up). Not used. Model selection input port. Connected to GND. Power supply terminal(+5 V).

IC702 system controller M50944-155SP

The system is wholly controlled by communication between IC601 (display microprocessor) and IC701 (mechanism controller).

Pin No.	Pin Name	I/O	Description
1	VREF	I	A/D input port reference voltage input(+5.6 V).
2	MET - R	I	Level meter Rch input(analog) from the meter amplifier(IC305).
3	MET - L	I	Level meter Lch input(analog) from the meter amplifier(IC305).
4	VOL A/D	I	REC LEVEL VOLUME(RV301)position detect input(analog).
5	—	—	Not used.
6	KEY4	I	Key switch input(analog).
7	KEY3	I	Key switch input(analog).
8	KEY2	I	Key switch input(analog).
9	KEY1	I	Key switch input(analog).
10	SYNC	O	Sync signal output which indicates the first byte of data sent to IC601.
11	FL SK	O	Data transmission clock output to IC601.
12	FL SO	O	Serial data output to IC601.
13	AUB OUT	O	Audio bus output.
14	AUB IN	I	Audio bus output(negative edge).
15	POW IN	I	Not used(pull up).
16	PB SEL	O	Not used(open).
17	AMS SEL	O	Not used(open).
18	MD REQ	I	Data request input from IC701.
19	MD SCLK	O	Data transmission clock output to IC701.
20	MD SO	O	Serial data output to IC701.
21	MD SI	I	Serial data input from IC701.
22	RES OUT	O	Reset signal output to IC601.
23	—	—	Not used(open).
24	AUB IN	I	Audio bus input(positive edge).
25	—	—	Not used(open).
26	GND	—	Power supply terminal(GND).
27	RES	I	System reset input. "L": Reset.
28	XIN	I	Clock input(4 MHz).
29	XOUT	O	Clock output.
30,31	—	—	Not used(open).
32	Vss	—	Power supply terminal(GND).
33	φ	—	Not used(open).
34	TEST 2	I	Test mode setting input. This set enters into the test mode when the power is on and it is set to "L"(CNP703 is shortened)*1
35	TEST 1	I	Not used(GND).
36,37	VERSEL	I	Not used(+5.6 V).
38	—	—	Not used(open).
39	POW ON	I	Not used(GND).
40	VOL LED	O	Volume LED ON/OFF output. "L": light up.
41	VOL -	O	Volume motor(RV301)down control output for IC706.
42	VOL +	O	Volume motor(RV301)up control output for IC706.
43	VOL SPD	O	Volume motor speed control output. "H": SLOW, "L": FAST.
44~47	BIAS 4	O	Not used(open).
48	BIAS 2	O	Tape bias select output. "L": Metal.
49	—	O	Tape bias select output. "L": Cr02.
50	BIAS 1	O	Tape bias select output. "L": Normal.
51	RMUTE	O	REC mute control output.
52	—	O	Not used(open).
53	RELAY	O	Mechanism deck head switch control output. "L": Relay on.
54	—	O	Not used(open).

Pin No.	Pin Name	I/O	Description
55	B/C	O	Dolby B/C control output. "L": Dolby C, "H": Dolby B.
56	ON/OFF	O	Dolby ON/OFF control output. "C": ON, "H": OFF
57	REC/PB	O	Dolby amplifier REC/PB control output. "L": REC, "H": PB.
58	PB70μs	O	Playback equalizer characteristic switch output. "H": Normal, "L": CrO2 or Metal.
59	AMS IN	O	Signal input from the AMS amplifier(IC304). With music: "H", No music: "L".
60	AMS/BS	O	Not used.
61	PASS	O	Not used(connect to ④ pin).
62	L MUTE	O	Line mute control output. "H": MUTE.
63	AVcc	O	Power supply terminal(+5.6 V).
64	Vcc	O	Power supply terminal(+5.6 V).

***1 Test mode**

When the power is on and pin ~~④~~ is set to "L"(CNP703 is shortened.), the set enters the electrical adjustment test mode and the followings can be available.

(2) Recording memory

Recording memory is set to ON when the tape counter is reset at the record start point.

(1) Source monitor

Recording signals can be monitored through the LINE OUT terminal(see page 7) because the line short is removed in recording.

IC701 mechanism controller M50747-B83SP

The mechanism deck is controlled by receiving data from IC702 (system controller).

Pin No.	Pin Name	I/O	Description
1	Vcc	—	Power supply terminal(+5.6 V).
2	BCTRQ	O	Assist motor torque control output. { "H": Large torque "L": Small torque }
3	SPEED	O	Not used(open).
4	TYPE 1	O	REC EQ select output. NORMAL tape: "H"
5	TYPE 2	O	REC EQ select output. CrO2 tape: "H"
6~9		O	Not used.
10	REVTAB	I	REC switch(reverse:S1009) input. "H": When REC claw is broken.
11	70μs	I	70μs switch(S1008) input. "H": 70μs, "L": 120μs(time constant of playback EQ).
12	METAL	I	METAL switch(S1007) input. "H": METAL tape, "L": NORMAL or CrO2 tape.
13	HALF	I	HALF switch(S1006) input. "L": When a tape is mounted.
14	S REEL	I	Supply reel base sensor(IC1001) input.
15	T REEL	I	Take-up reel base sensor(IC1002) input.
16,17		I	Not used(GND).
18		—	Not used(open).
19	SCLK	I	Data transmission clock input from IC702.
20	SO	O	Serial data output to IC702.
21	SI	I	Serial data input from IC702.
22	REQ	O	Data request output to IC702.
23~25		—	Not used(open).
26	INT	I	Not used(+5.6 V).
27	CN Vss	—	Power supply terminal(GND).
28	RES	I	Reset input. "L": Reset.
29	XIN	I	Clock input(4 MHz).
30	XOUT	O	Clock output.
31	φ		Not used.
32	Vss	—	Power supply terminal(GND).
33~50			Not used.

Pin No.	Pin Name	I/O	Description
51	ASSIST1	O	Head base is "H" when turned to the FWD direction.) *1
52	ASSIST2	O	Head base is "H" when turned to the RVS direction.) *1
53	REEL 1	O	Reel motor rotation control output. Reverse: "H")*2
54	REEL 2	O	Reel motor rotation control output. Forward: "H")*2
55	TQ1	O	Reel motor torque control output. PLAY: "H")*3
56	TQ2	O	Reel motor torque control output. FF/REW: "H")*3
57~60	CAM1~4	I	Rotary encoder input to detect the position of the head base of the mechanical block. *4
61	OPEN	I	OPEN switch(S1004) input. "L": When the cassette holder completely opens.
62	CLOSE	I	CLOSE switch(S1003) input. "L": When the cassette holder completely closed.
63	DOOR	I	DOOR switch(S1002) input. "L": When the cassette holder is driven from open to close state.
64	FWDTAB	I	REC switch (forward : S1005) input. "H": When REC claw is broken.

*1

	STOP	Turn to FWD direction	Turn to RVS direction	STOP
ASSIST 1	L	H	L	H
ASSIST 2	L	L	H	H

*2

	STOP	FWD/CLOSE	REV/OPEN	BRAKE
REEL 1	L	L	H	H
REEL 2	L	H	L	H

www.manualscenter.com


*3

	OPEN/CLOSE (large torque)	FF/REW (medium torque)	PLAY (small torque)	INHIBIT
TQ 1	L	L	H	H
TQ 2	L	H	L	H


*4

	Forward					Reverse			
	FWD PLAY	AMS/PAUSE	STOP	FF/REW	EJECT	FF/REW	STOP	AMS/PAUSE	RVS PLAY
CAM1	H	H	L	H	L	H	L	H	H
CAM2	H	L	H	H	L	H	H	L	H
CAM3	H	H	H	H	H	L	L	L	L
CAM4	H	H	H	L	L	L	H	H	H


5-2. SEMICONDUCTOR LEAD LAYOUTS

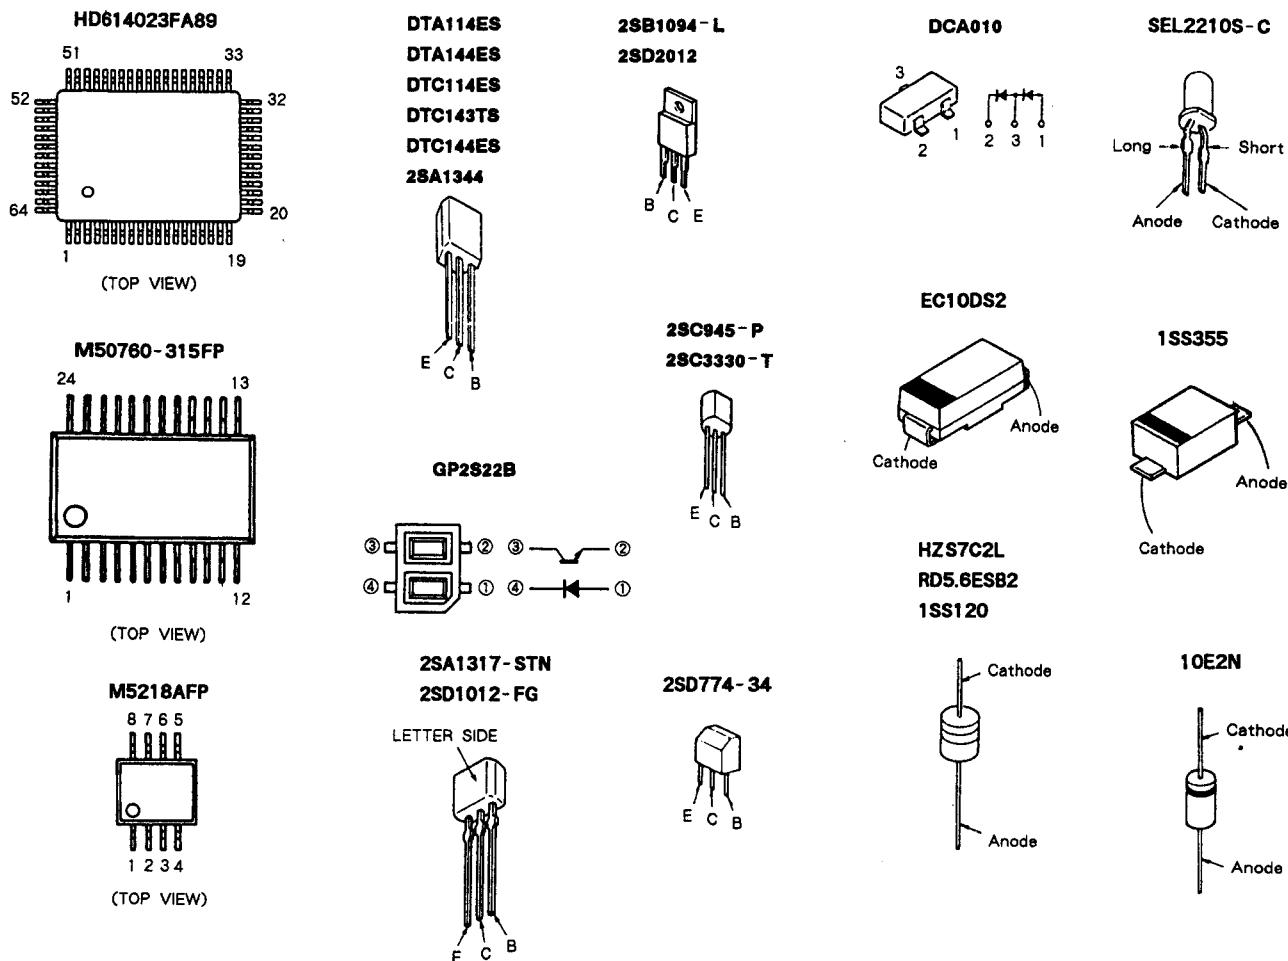


5-3. CRICUIT BOARDS LOCATION

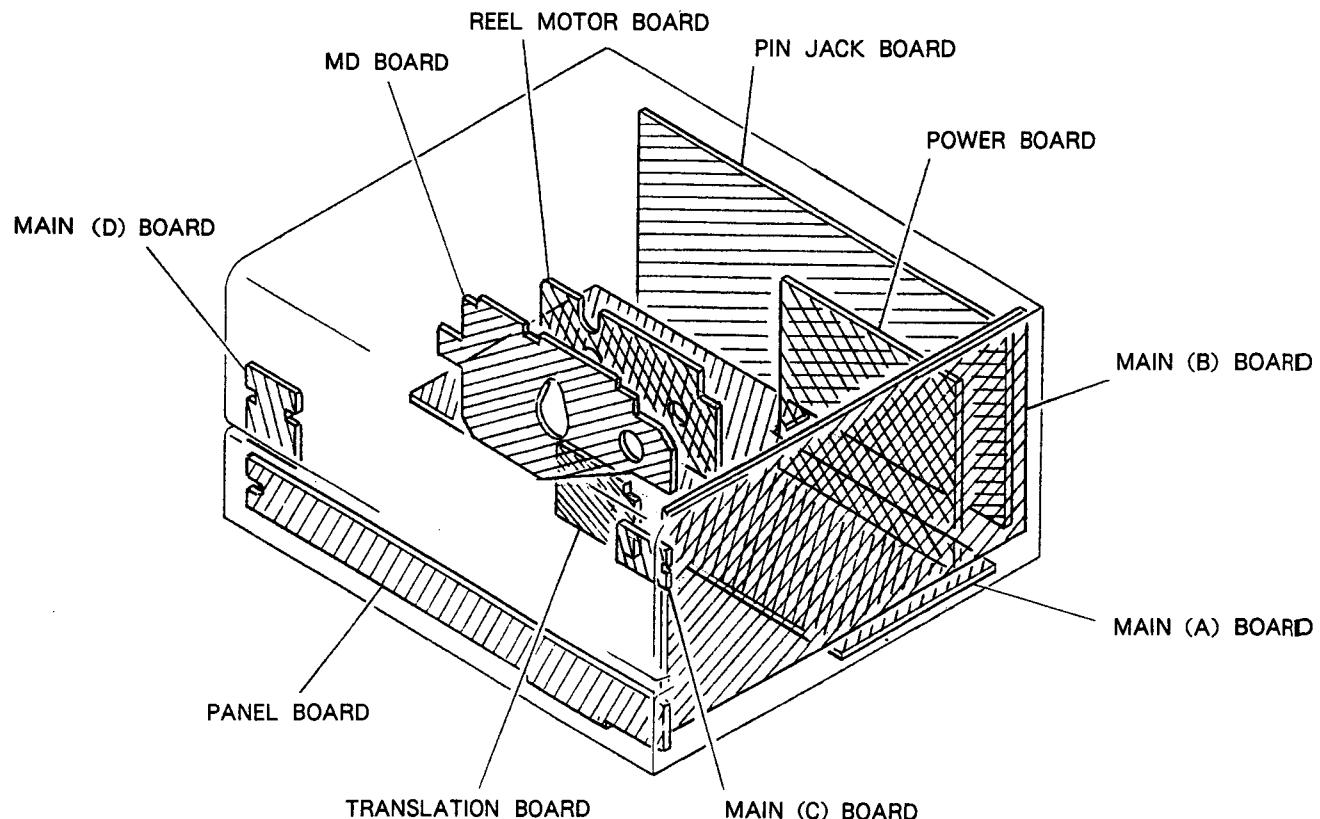

5-4. BLOCK DIAGRAM

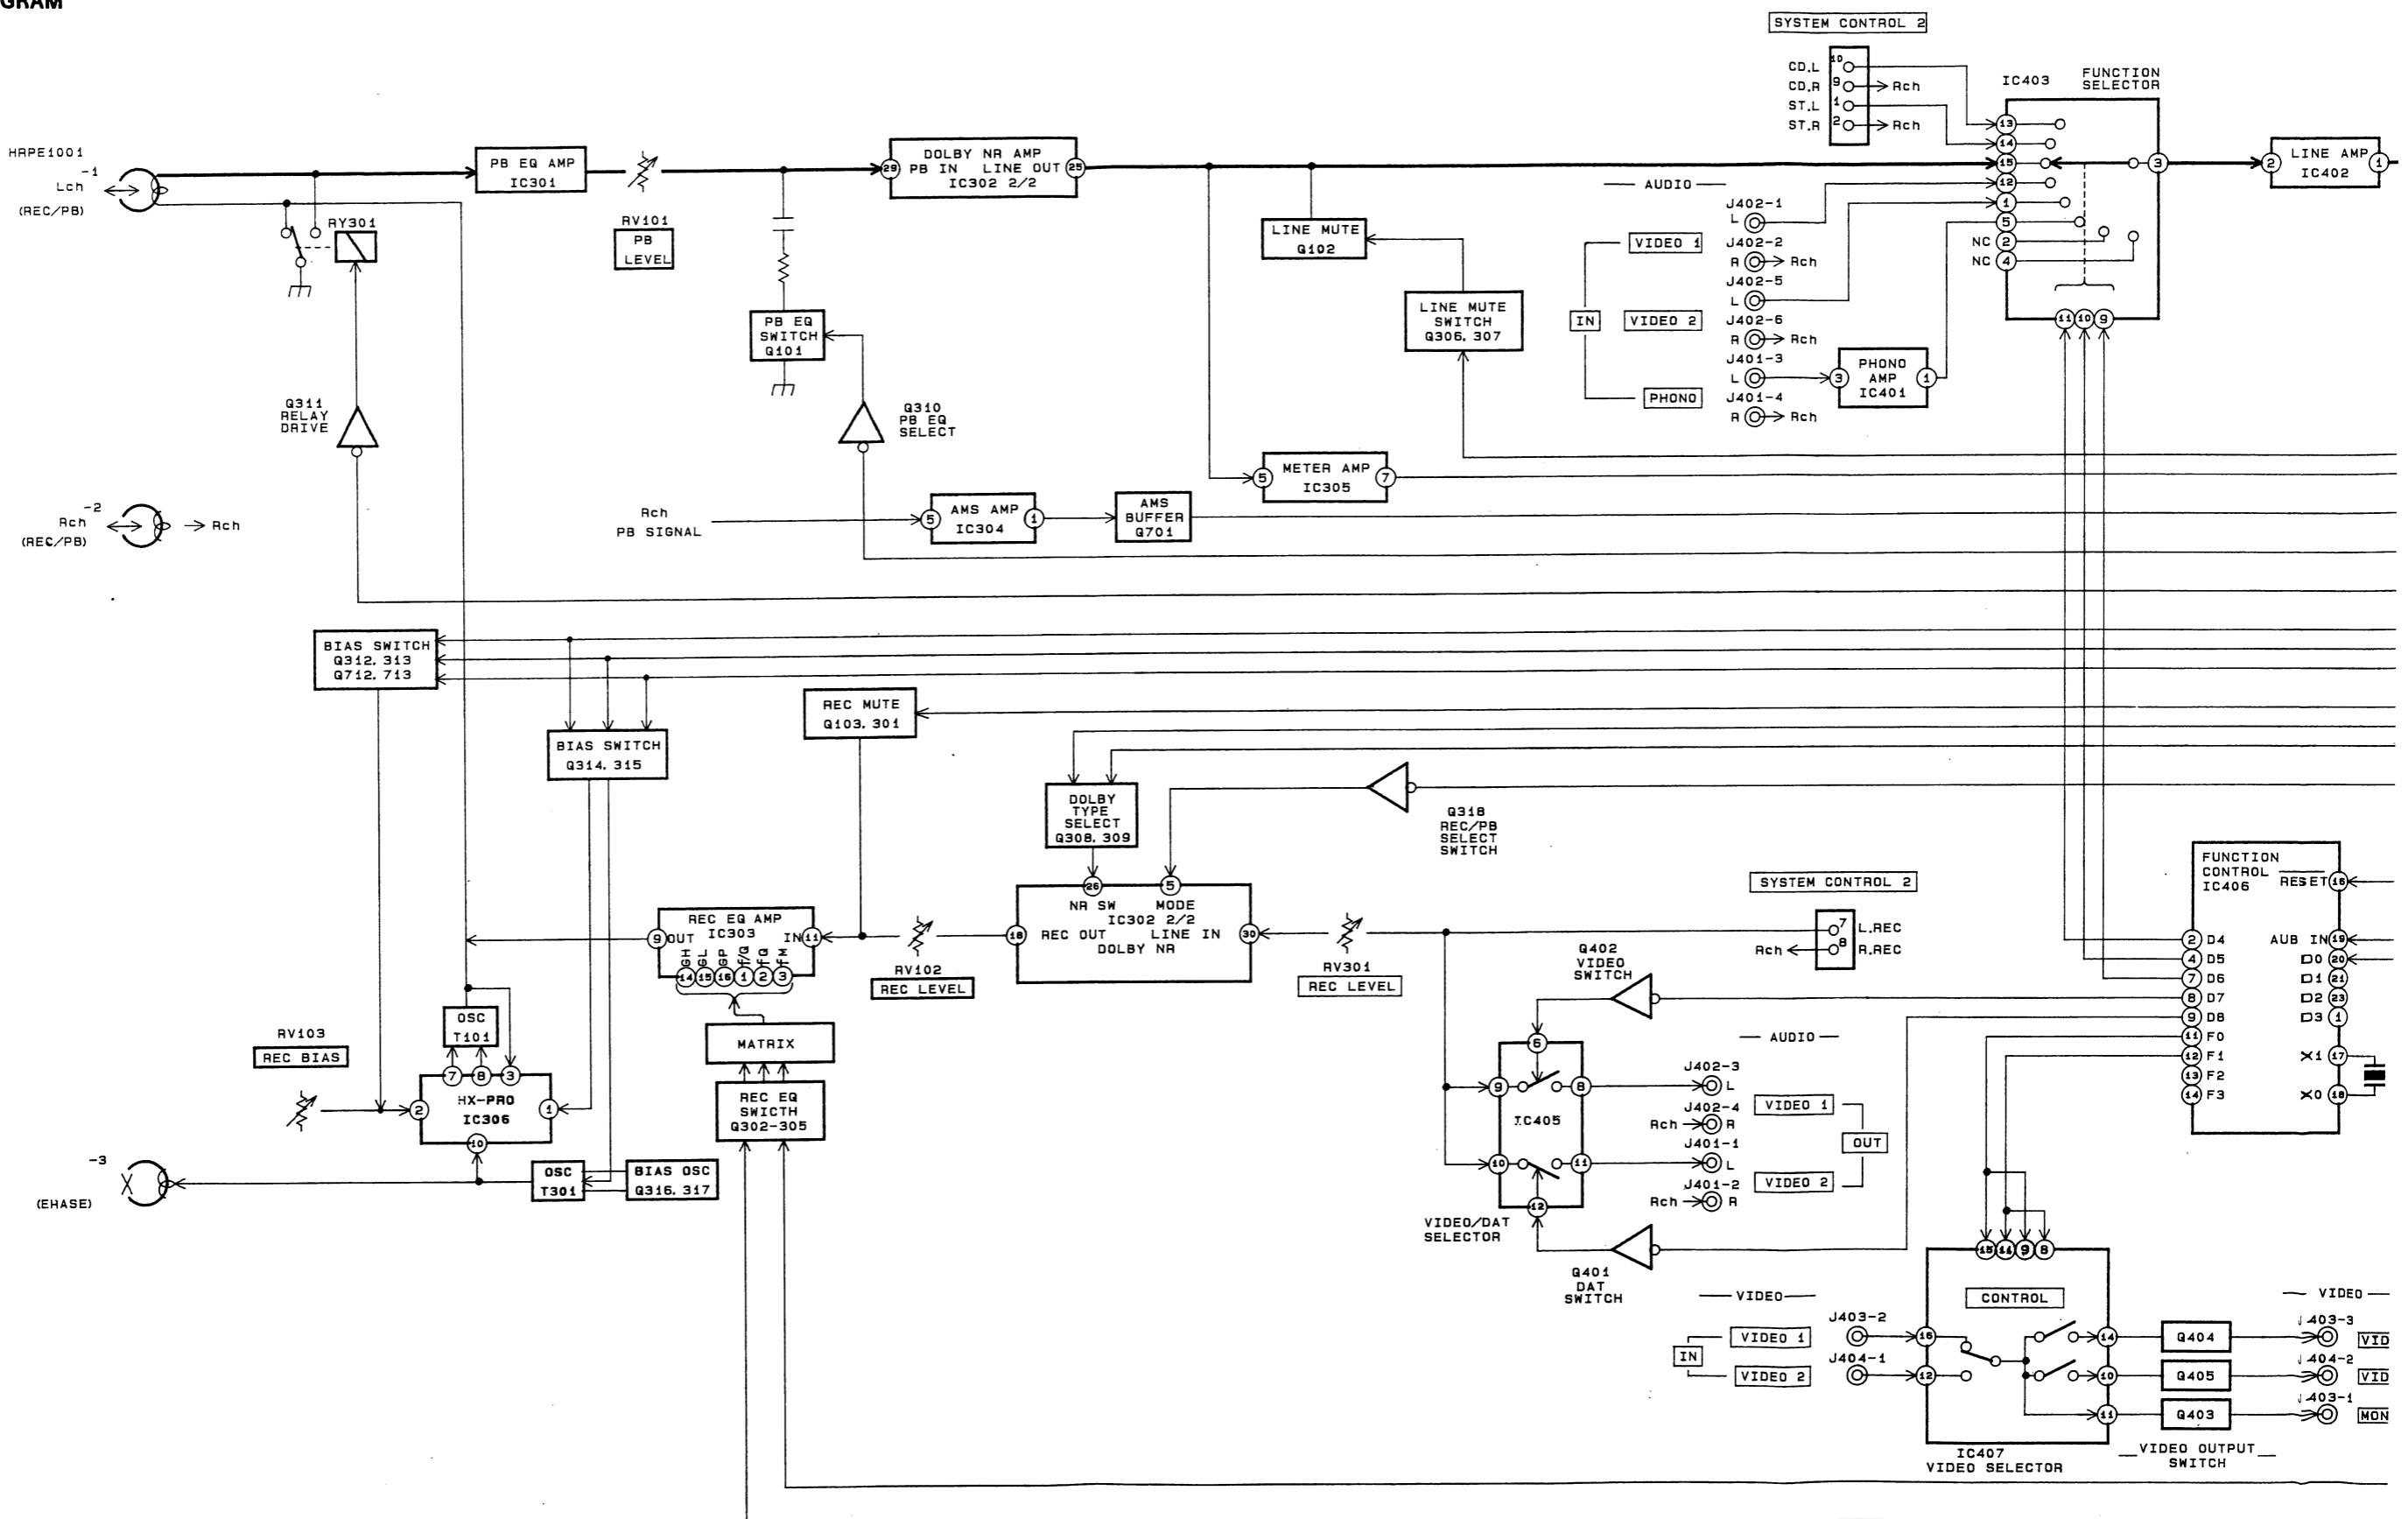


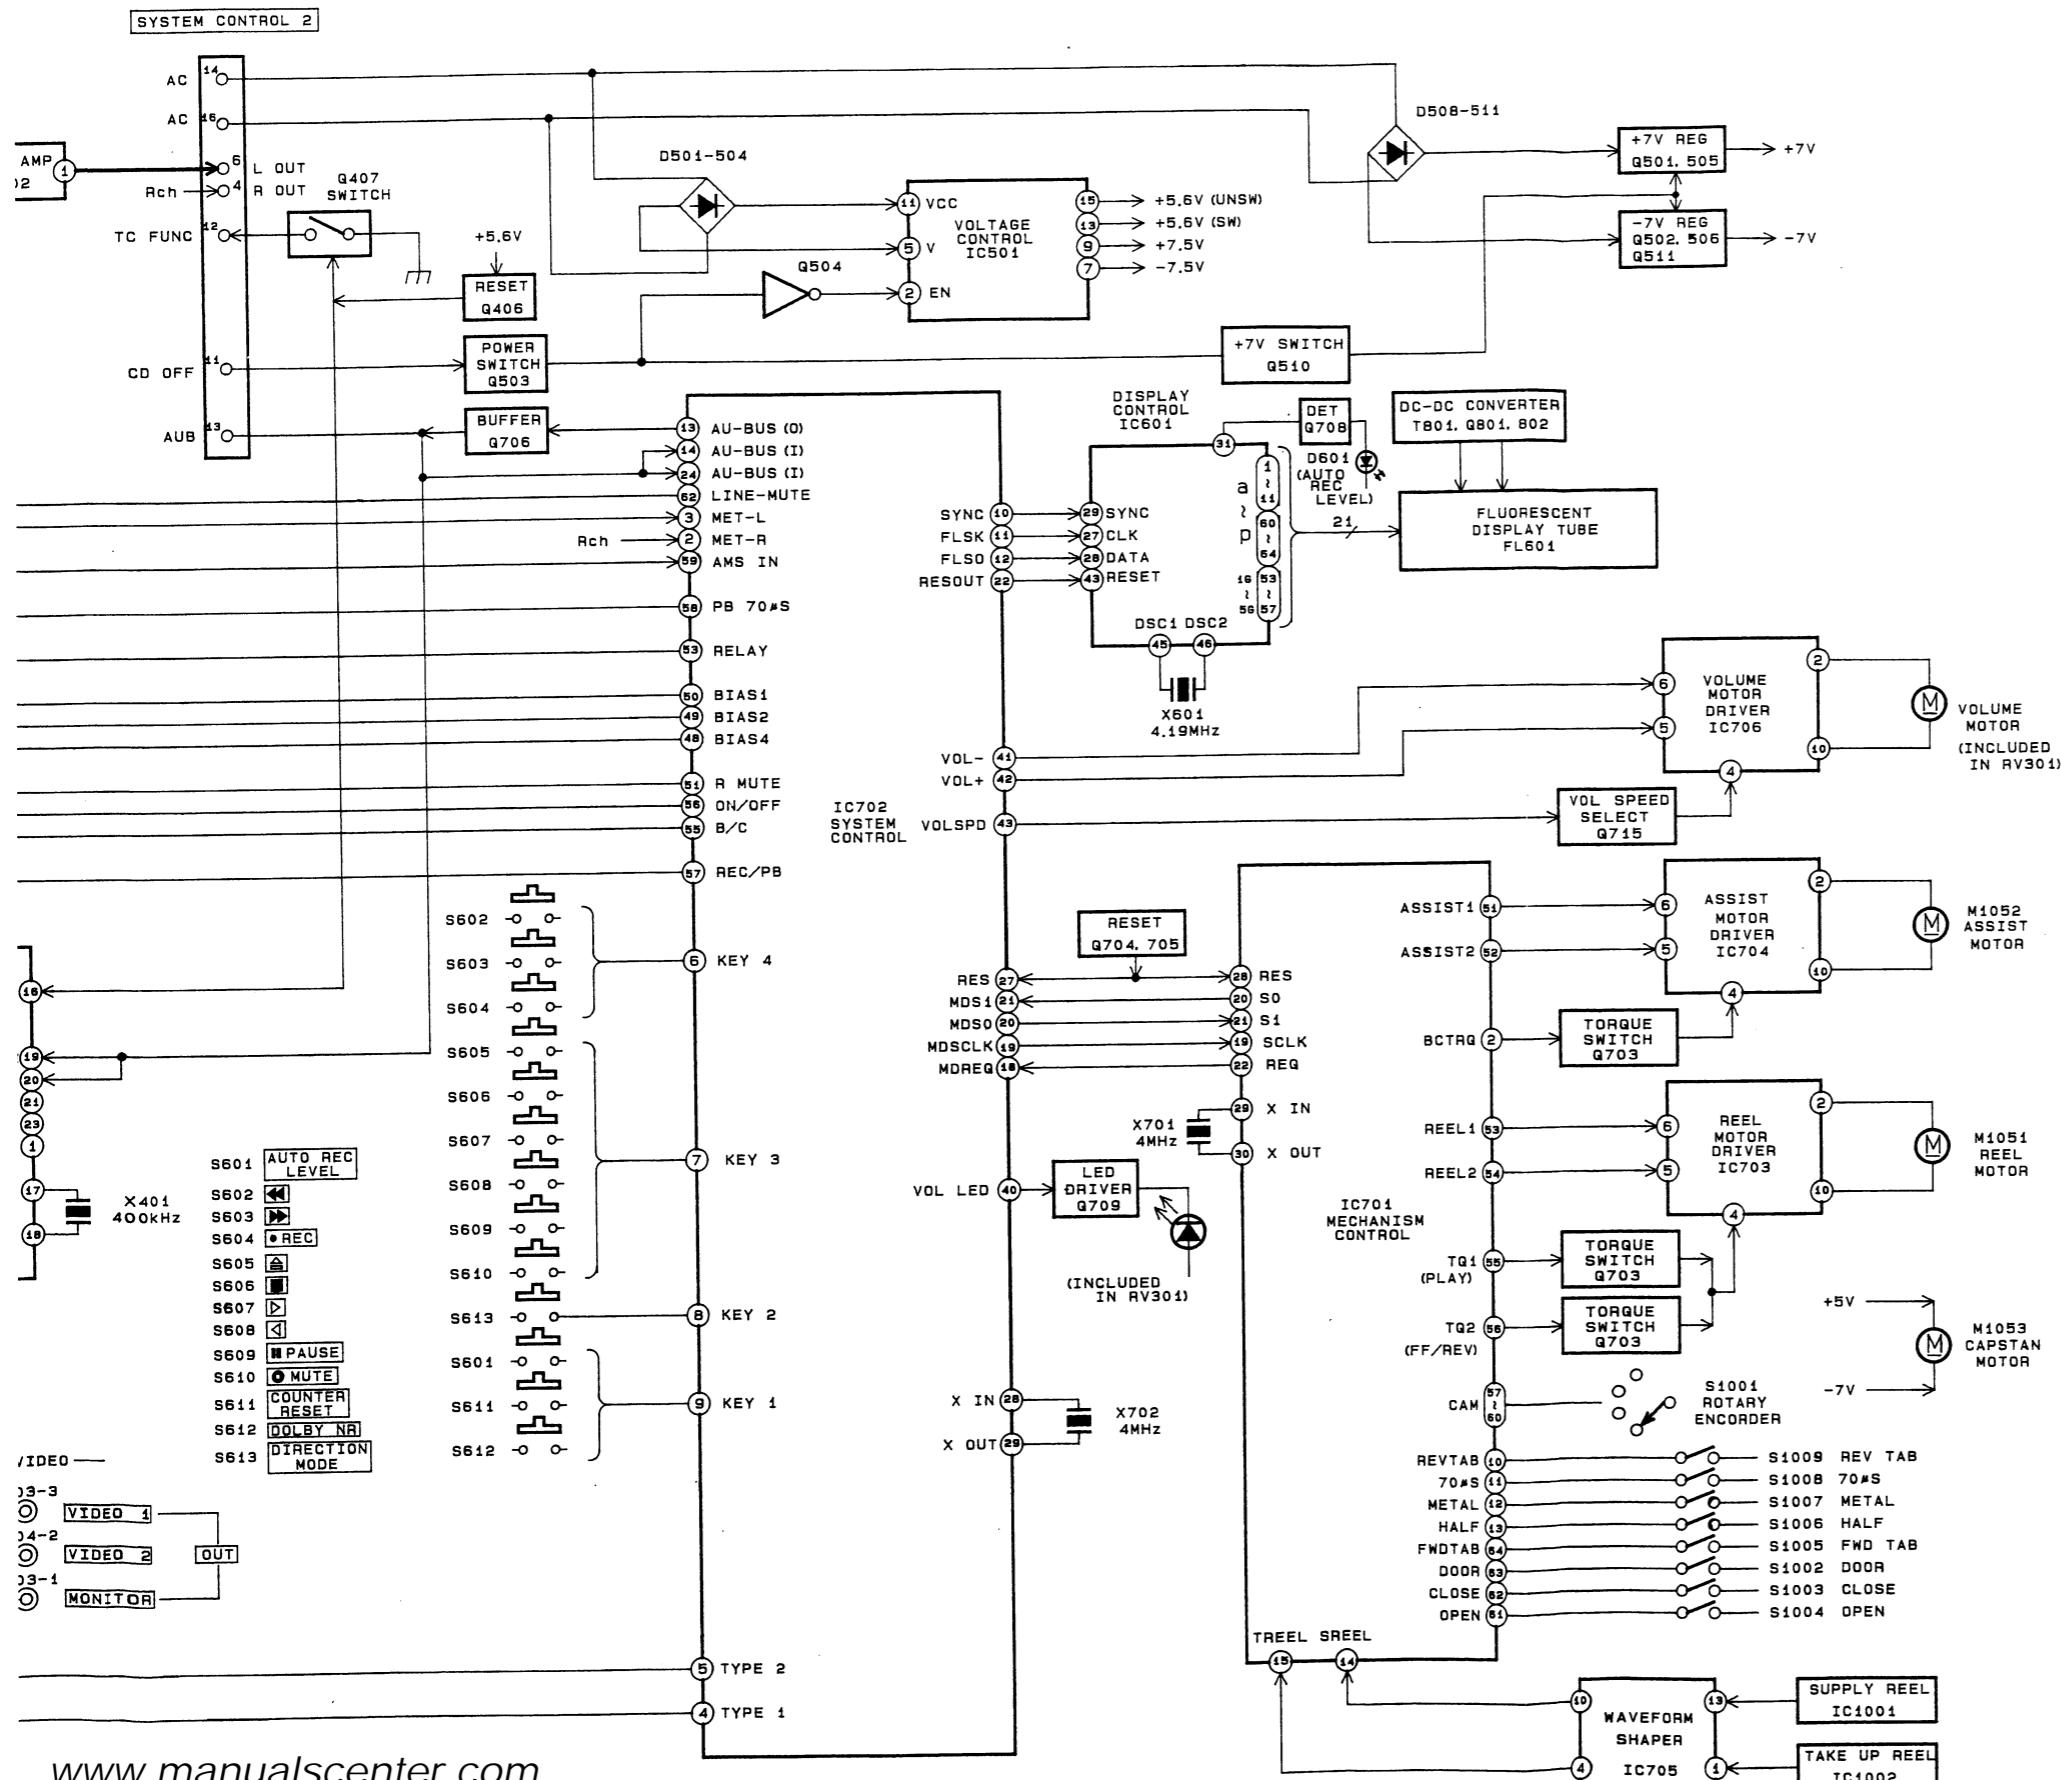


- IC BLOCK DIAGRAM

IC703,706 BA6219B


IC704 LB1641

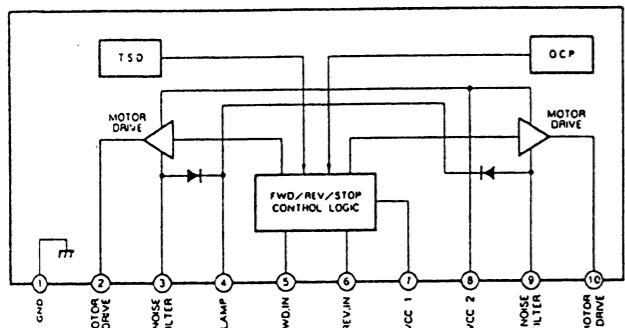

IC302 CXA1330S

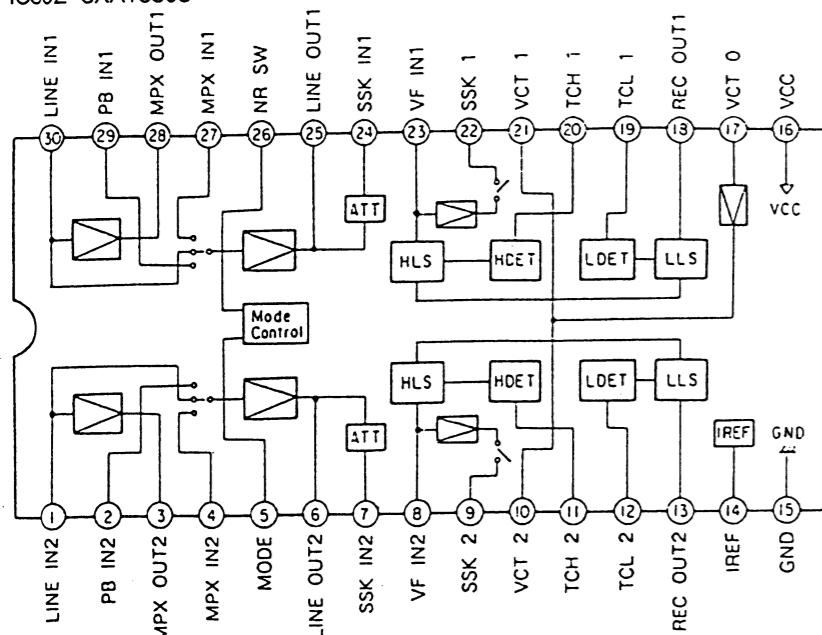

IC303 CXA1198AP

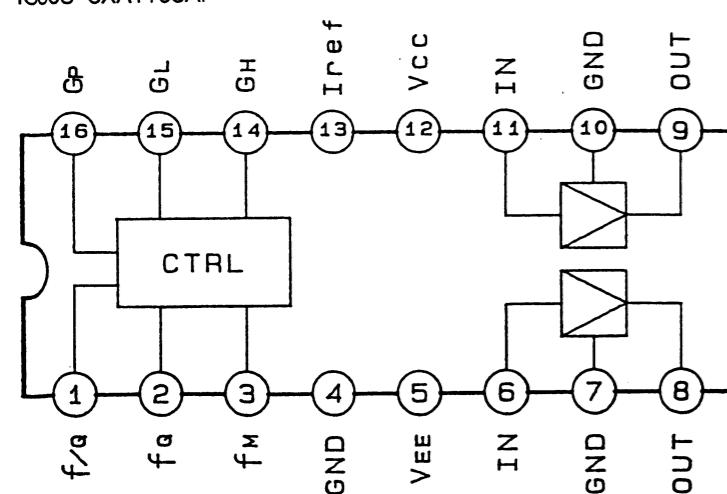



- Semiconductor Location

Ref. No.	Location	Ref. No.	Location
D101	C-12	Q306	D-11
D201	C-13	Q307	E-11
D301	I-5	Q308	F-11
D302	I-5	Q309	E-11
D303	E-11	Q310	E-11
D304	E-11	Q311	E-1
D305	E-1	Q312	B-4
D306	B-4	Q313	B-4
D307	C-4	Q314	B-5
D308	C-4	Q315	C-5
D309	C-4	Q316	F-2
D601	A-20	Q317	E-2
D701	C-17	Q318	F-11
D702	C-17	Q701	F-13
D703	E-12	Q702	F-13
D704	E-12	Q703	E-13
D705	F-12	Q704	D-17
D706	F-12	Q705	C-17
D707	E-14	Q706	C-15
D708	E-14	Q707	C-17
D709	E-13	Q708	B-19
D710	J-2	Q709	H-3
D711	J-2	Q712	B-5
D712	I-2	Q713	B-5
D713	C-15	Q715	I-1
D714	C-17	Q801	B-13
D720	C-10	Q802	B-11
D721	C-11		
D722	C-12		
D750	B-13		
D751	D-14		
D752	B-19		
D753	A-19		
D801	D-16		
D802	C-15		
D803	C-15		
D804	C-14		
D805	C-14		
IC301	C-2		
IC302	E-9		
IC303	I-4		
IC304	H-2		
IC305	D-13		
IC306	D-4		
IC701	E-16		
IC702	B-15		
IC703	E-13		
IC704	D-13		
IC705	D-15		
IC706	I-1		
IC1001	H-18		
IC1002	H-19		
Q101	D-10		
Q102	D-11		
Q103	H-5		
Q201	F-10		
Q202	D-11		
Q203	I-4		
Q301	G-5		
Q302	I-5		
Q303	I-5		
Q304	J-5		
Q305	I-5		



Note on Mounting Diagram:

- : parts extracted from the component side.
 - : parts mounted on the conductor side.

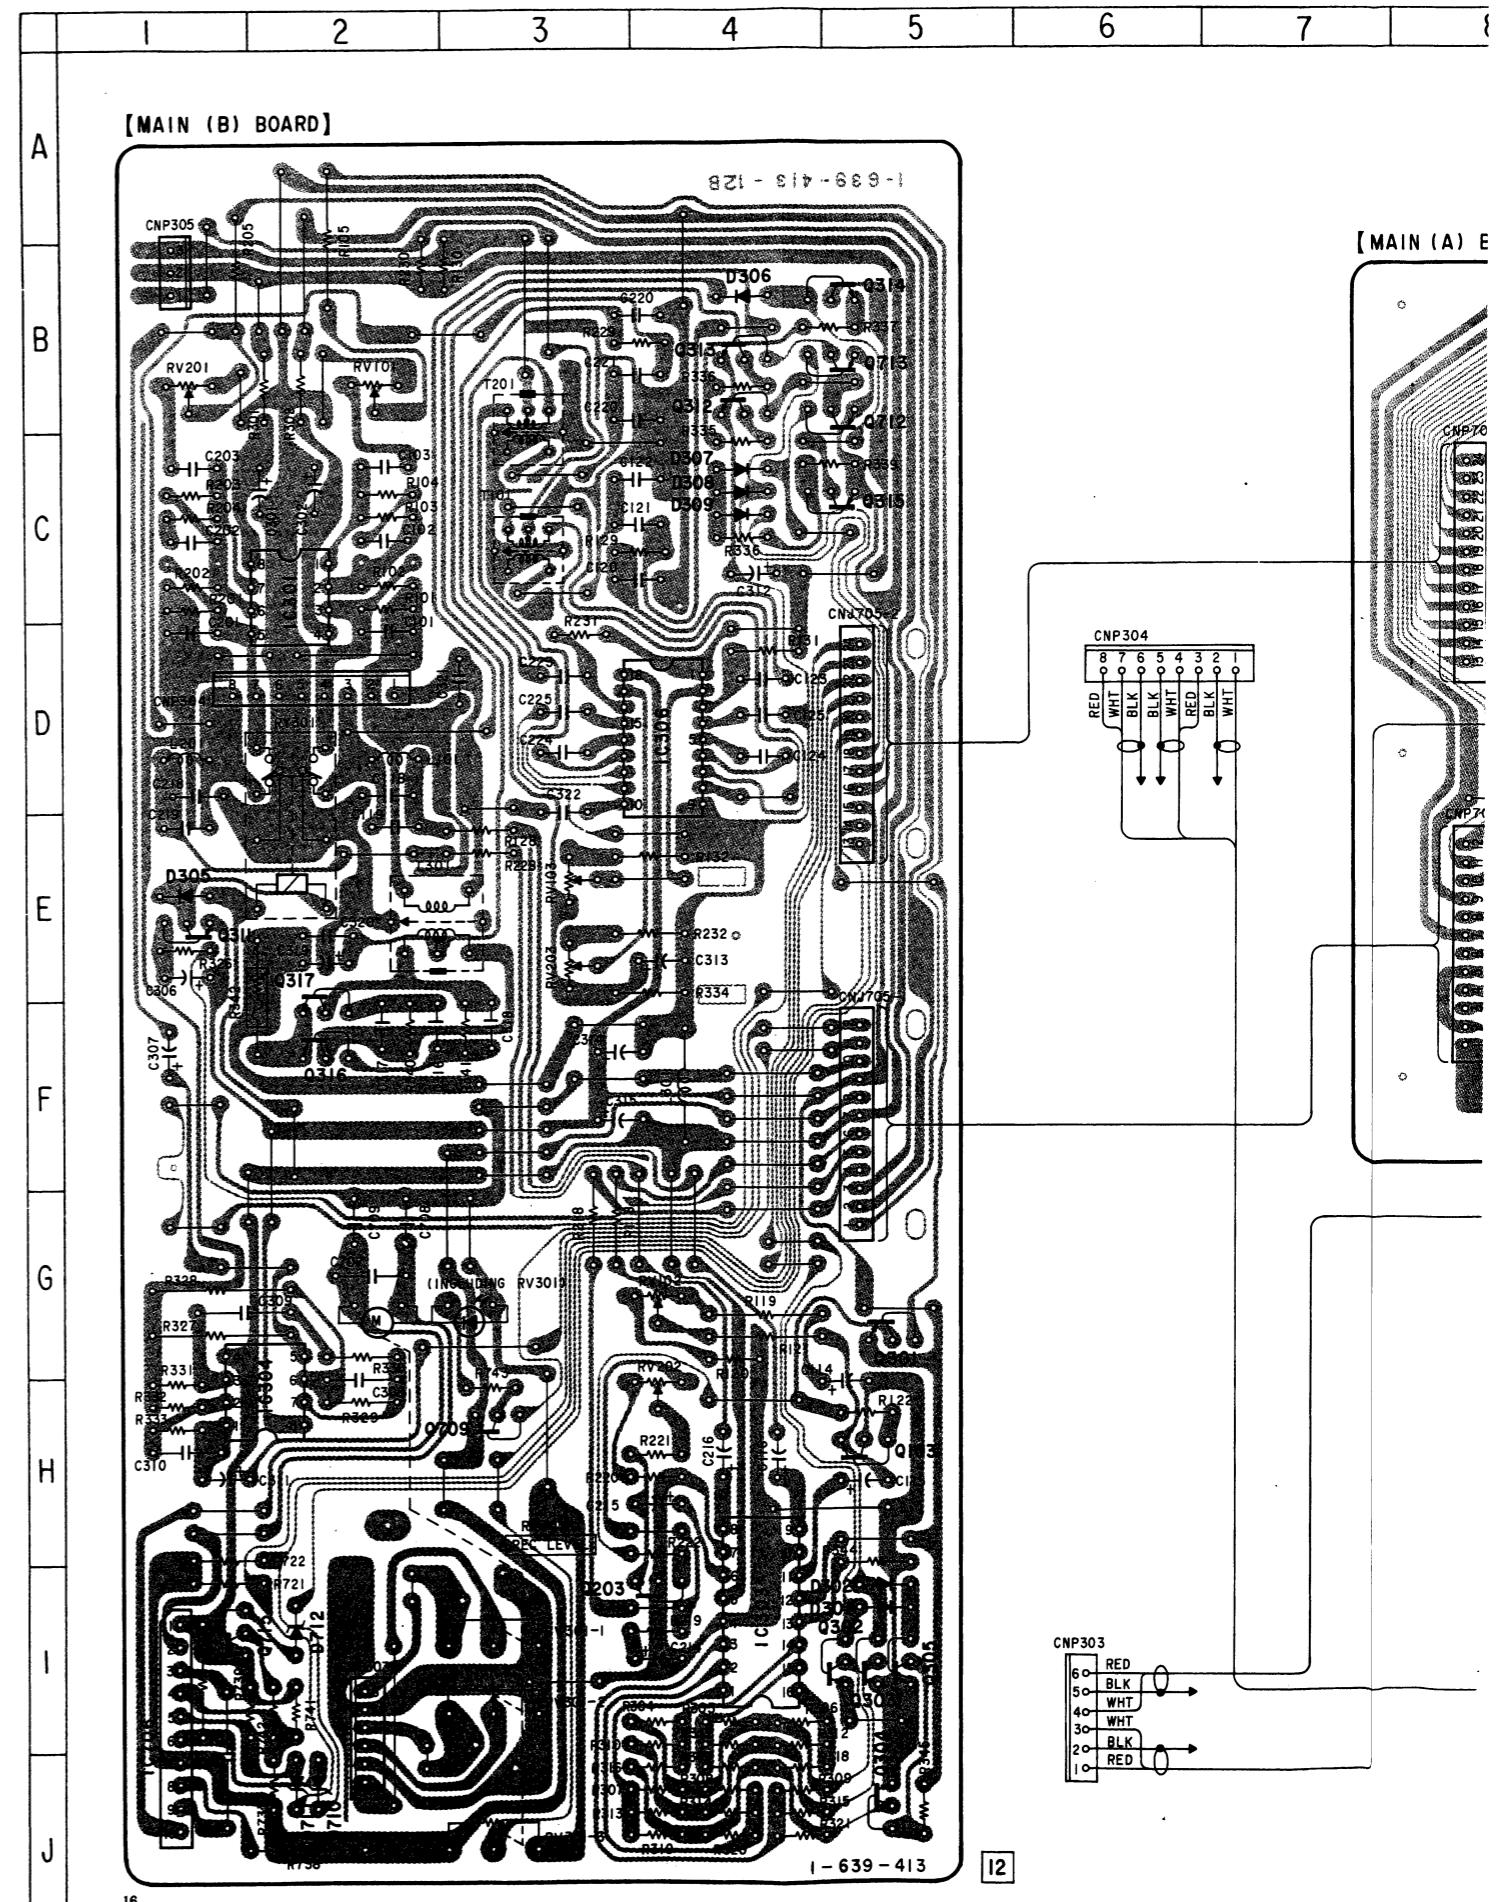

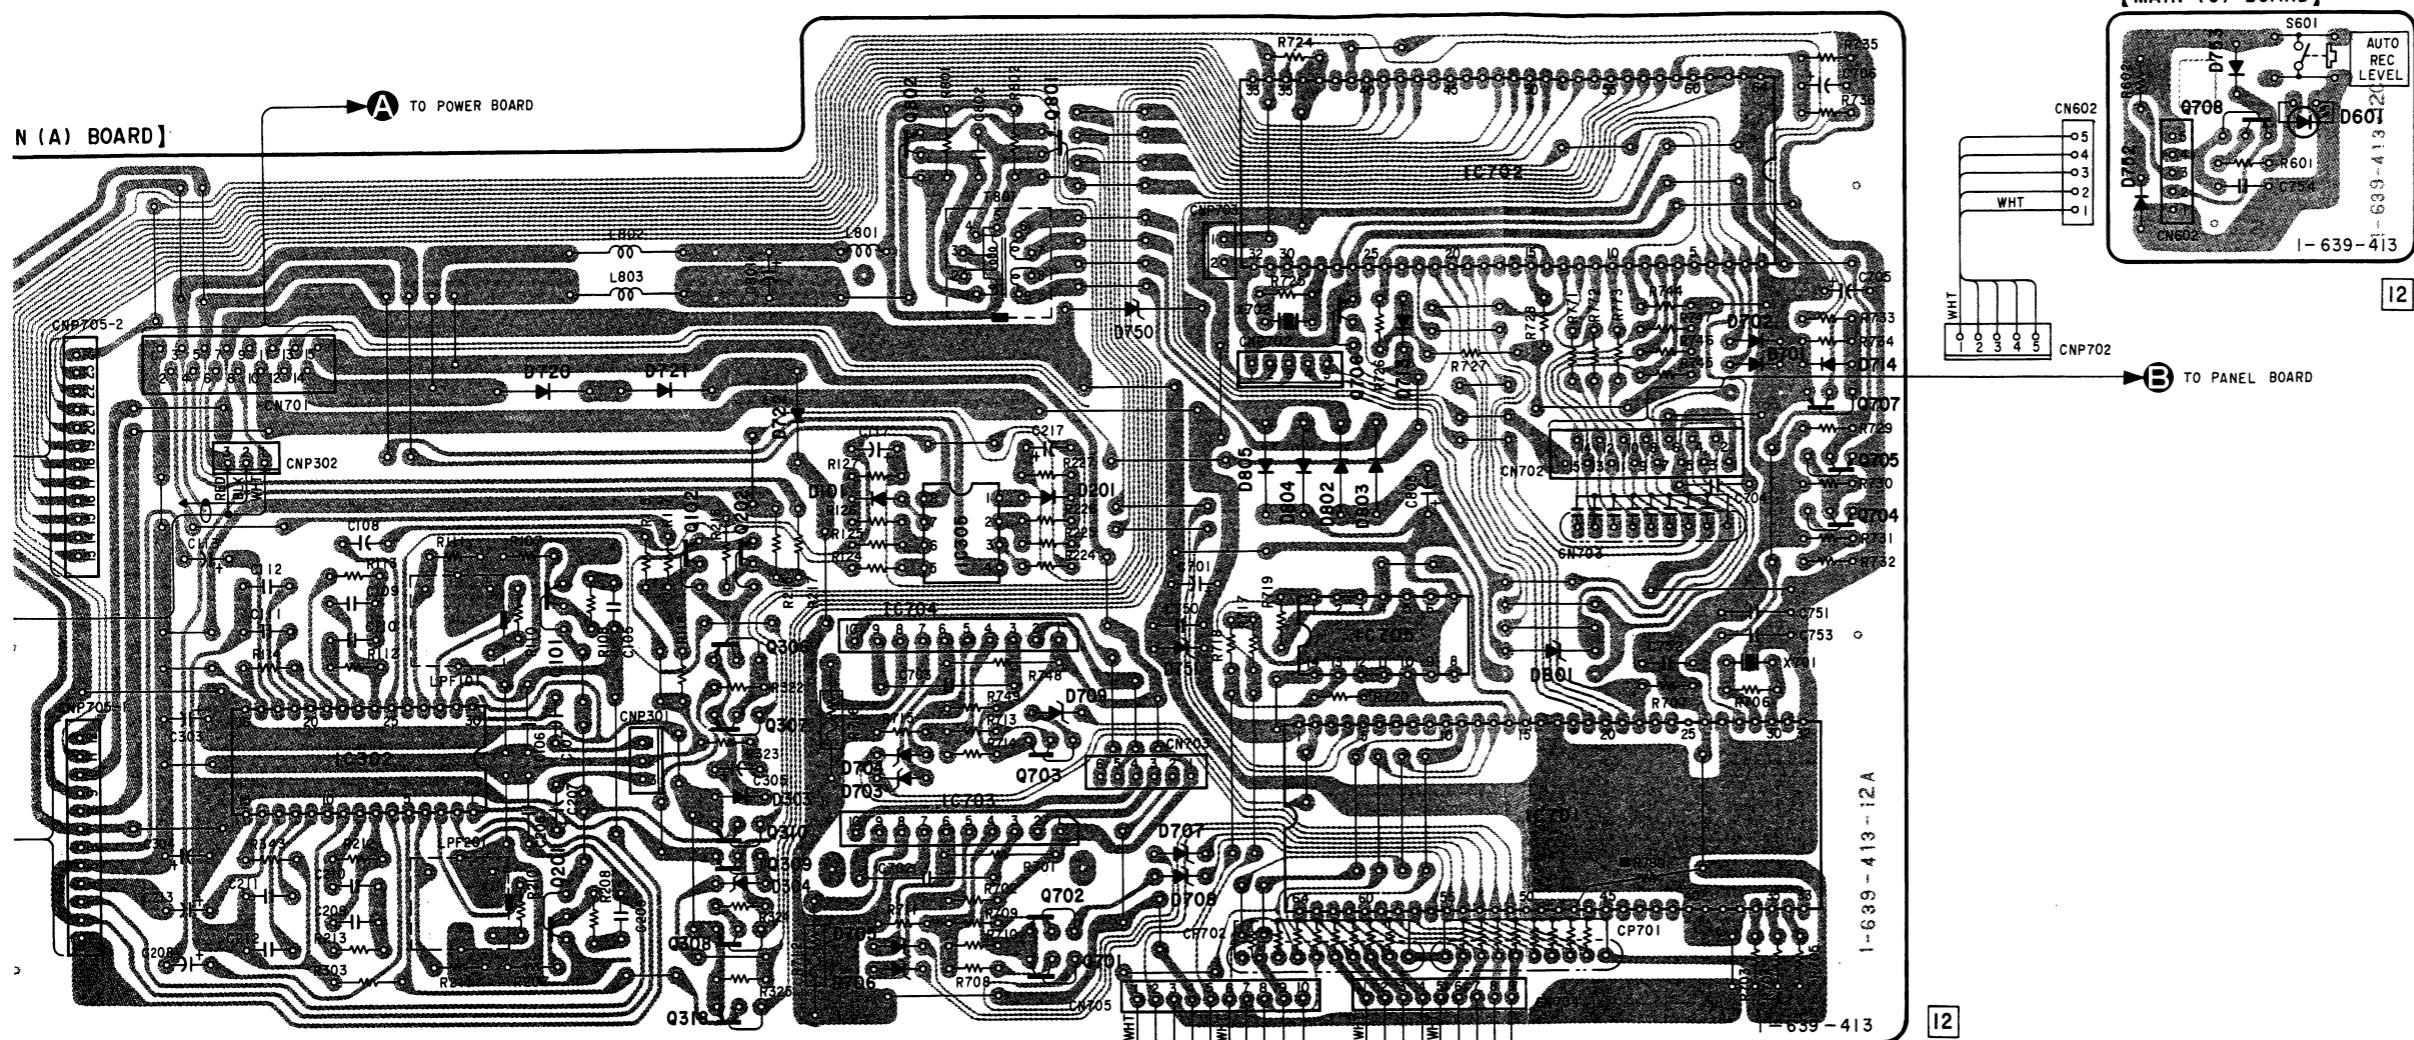


www.manualscenter.com

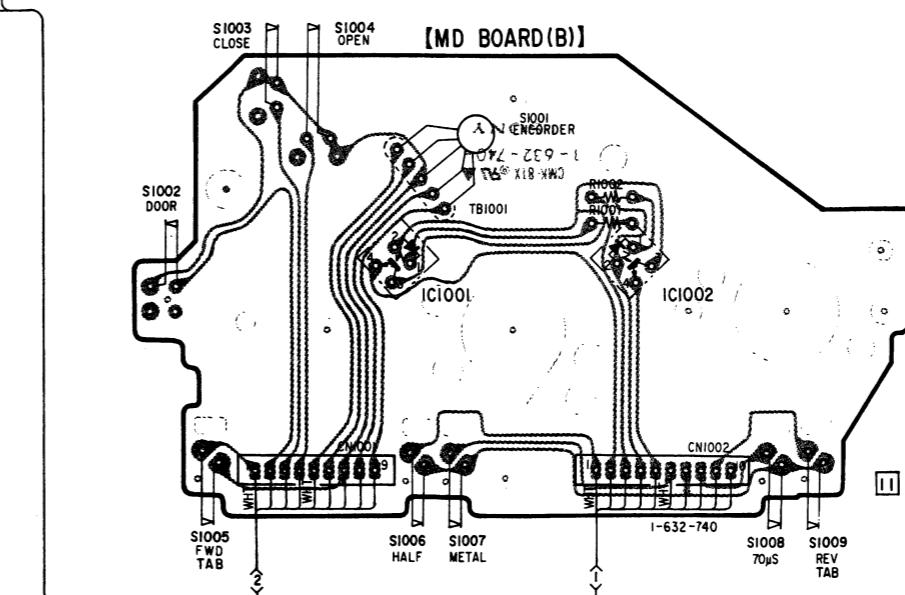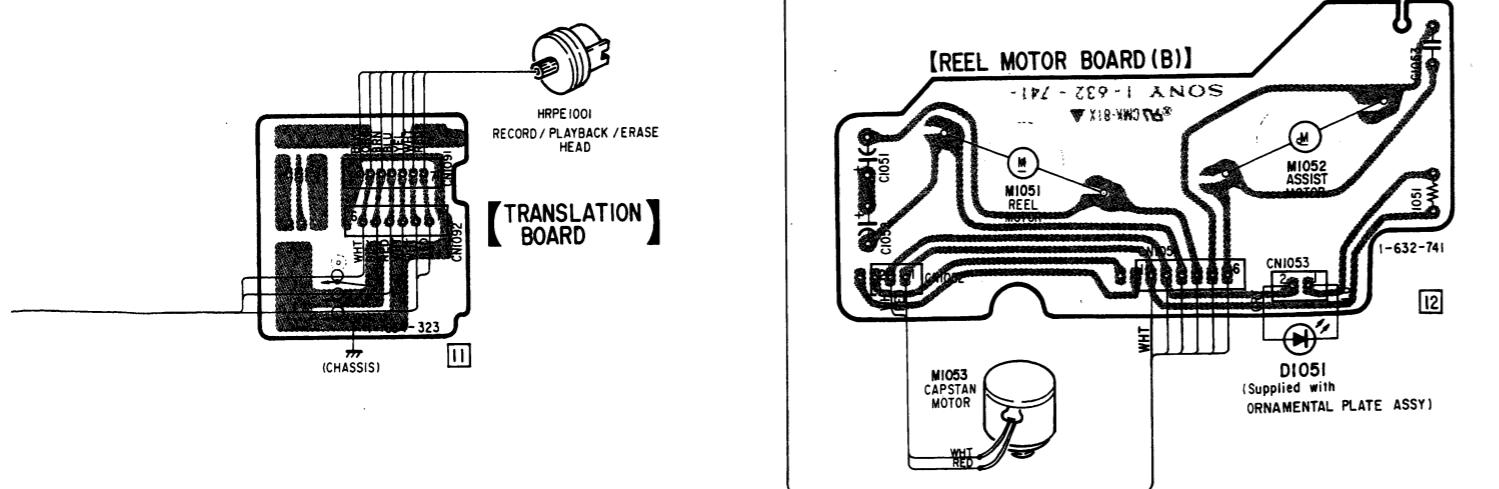


5-6. SCHEMATIC DIAGRAM - MAIN SECTION - See page 28 for Note on Schematic Diagram.


1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 1

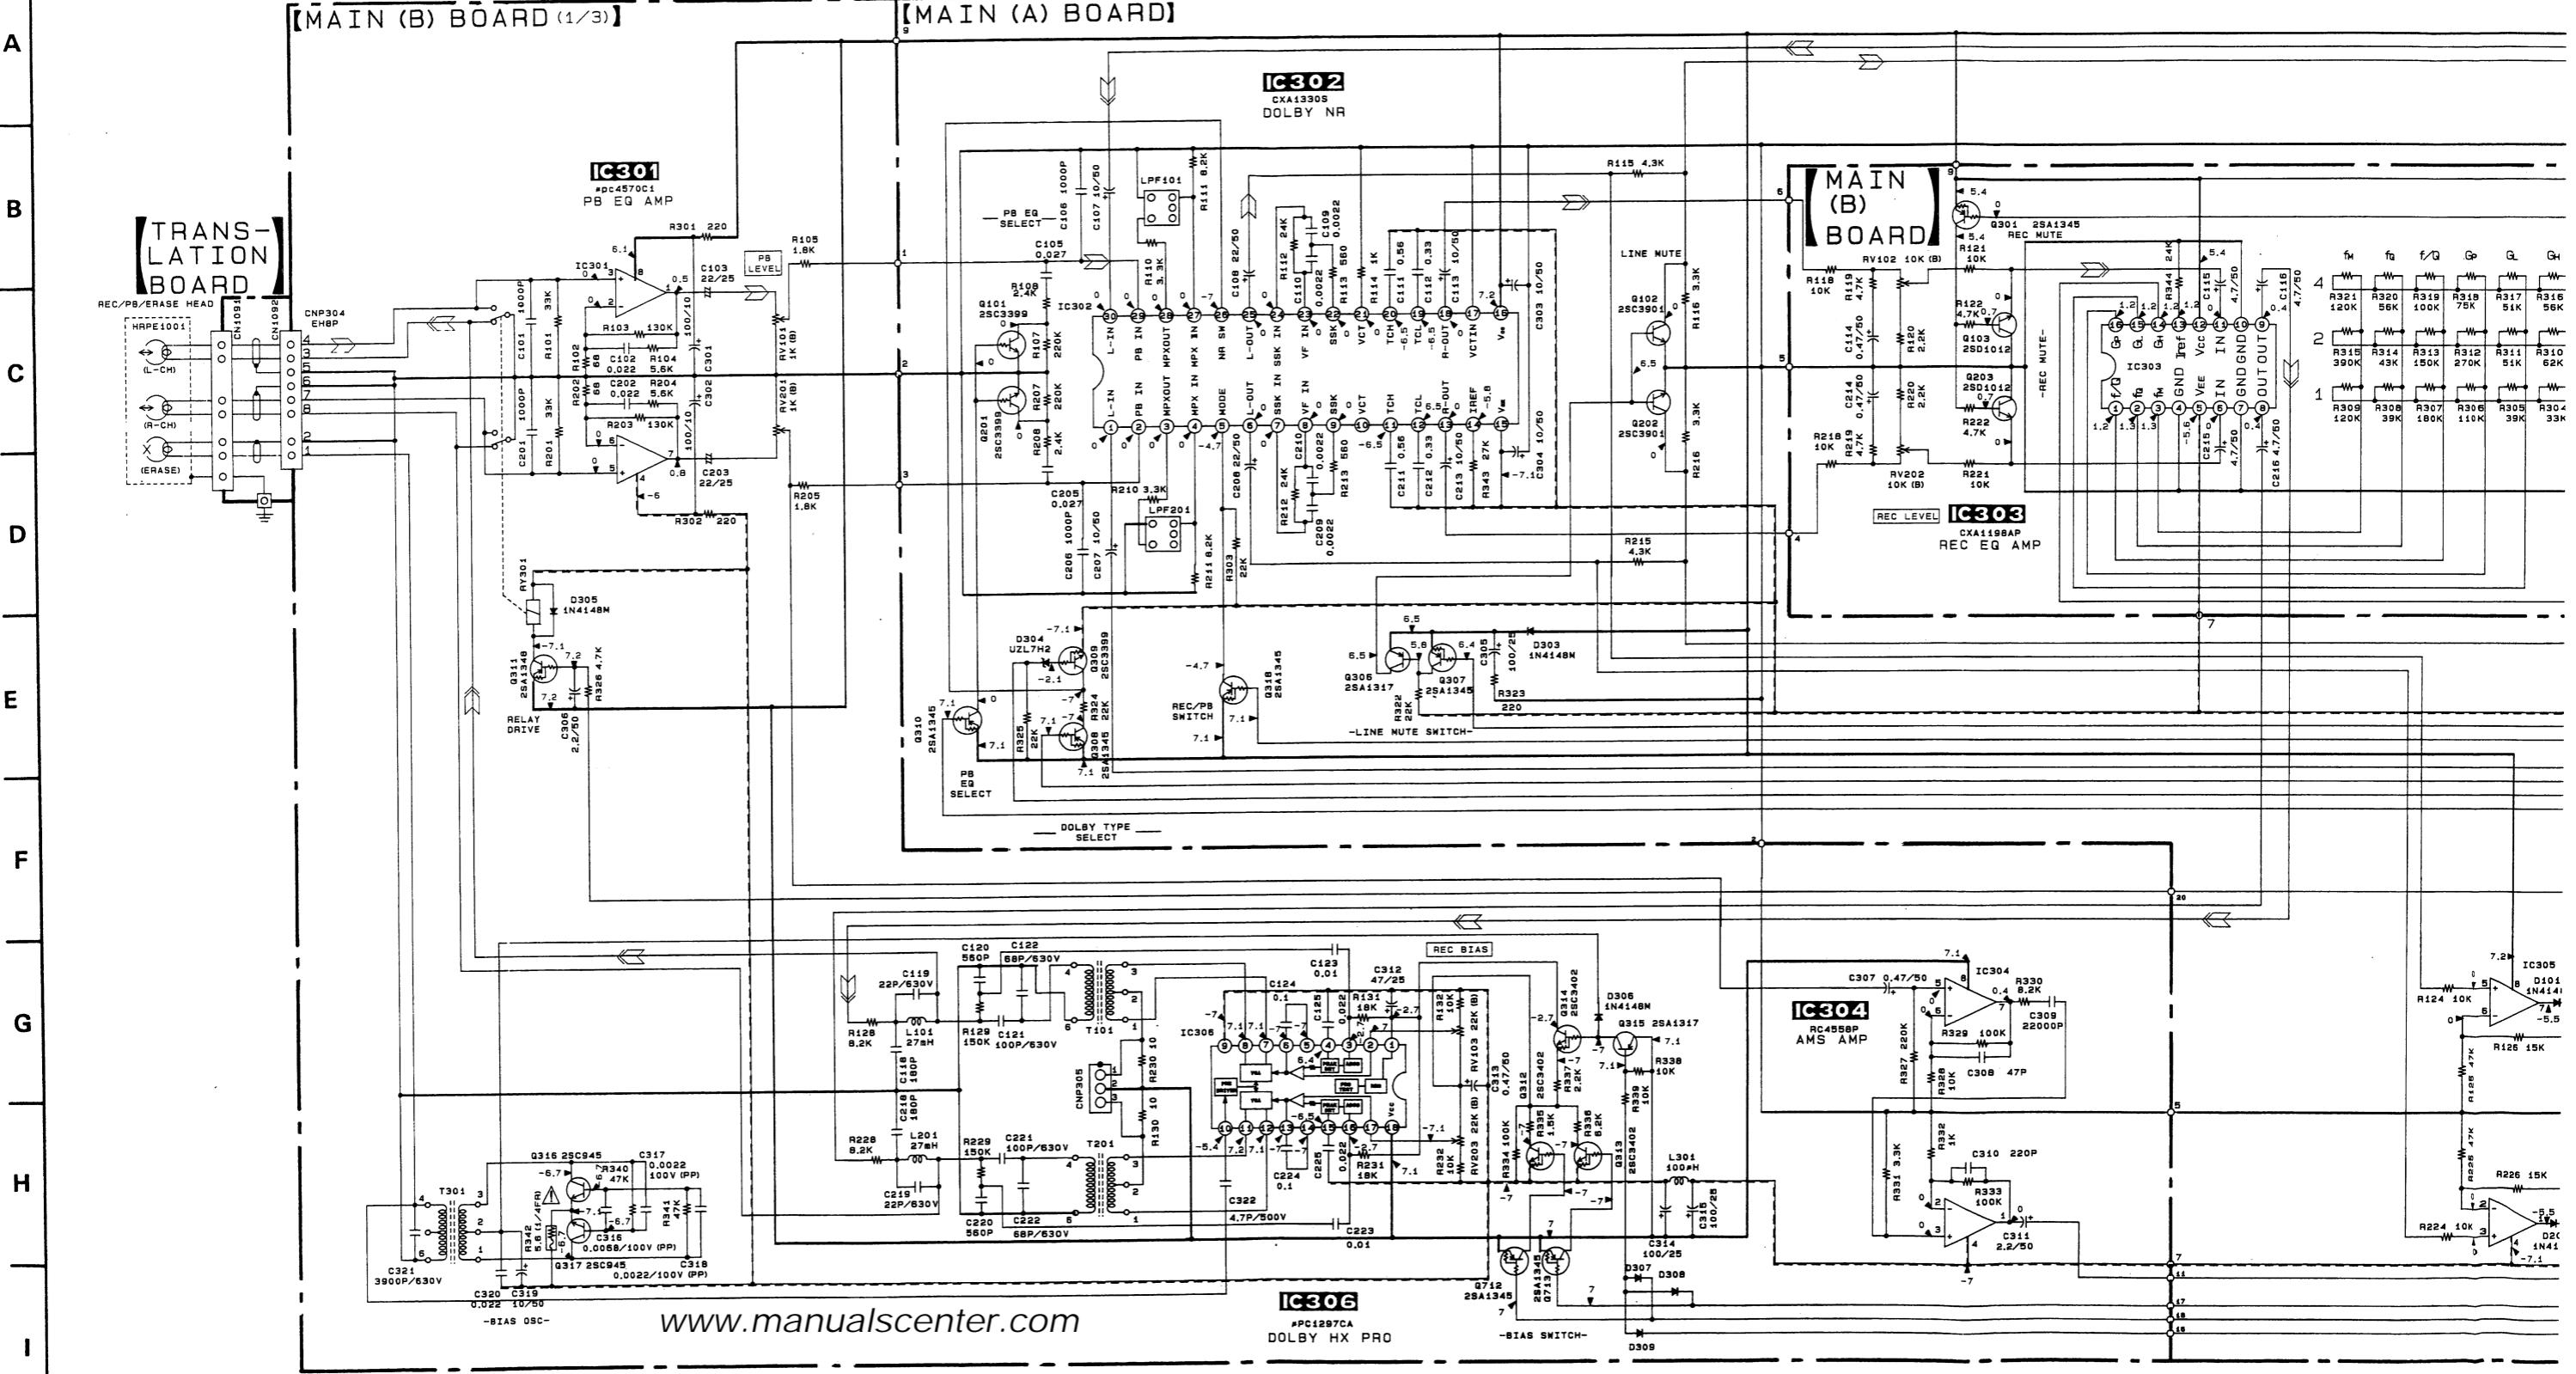

11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26

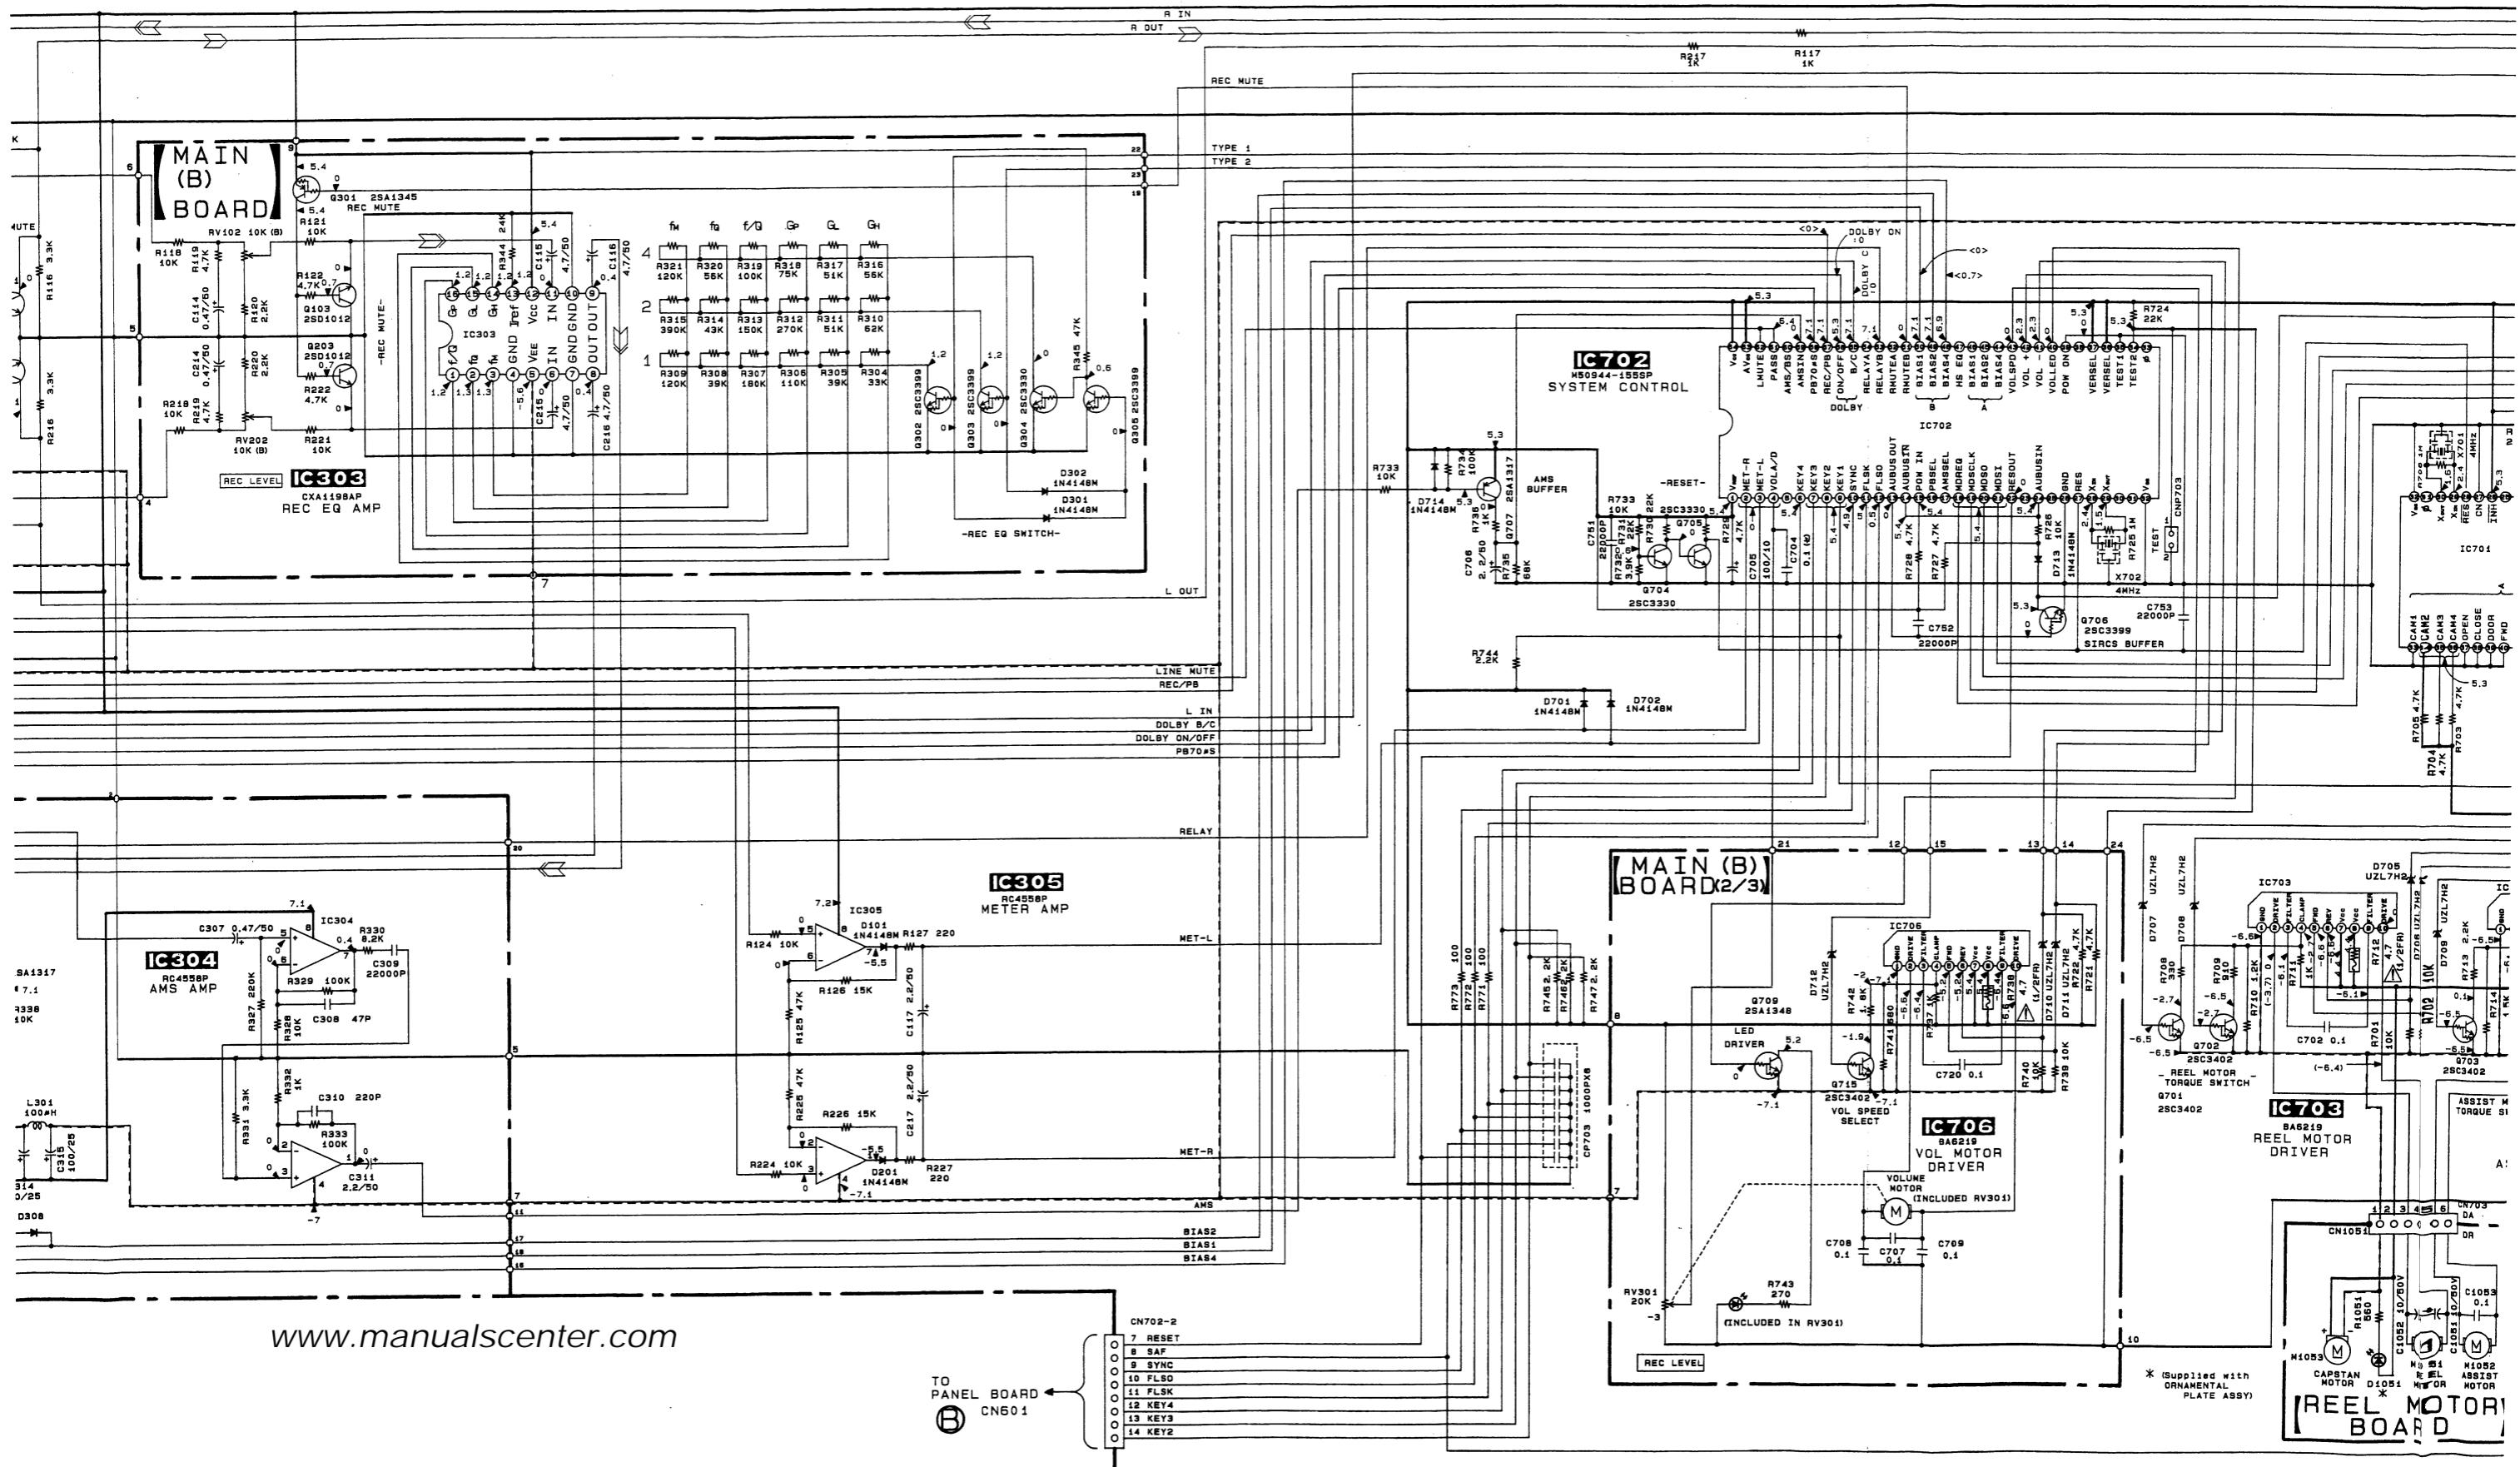


21 22 23 24 25 26 27 28 29 30 31 32 33 34

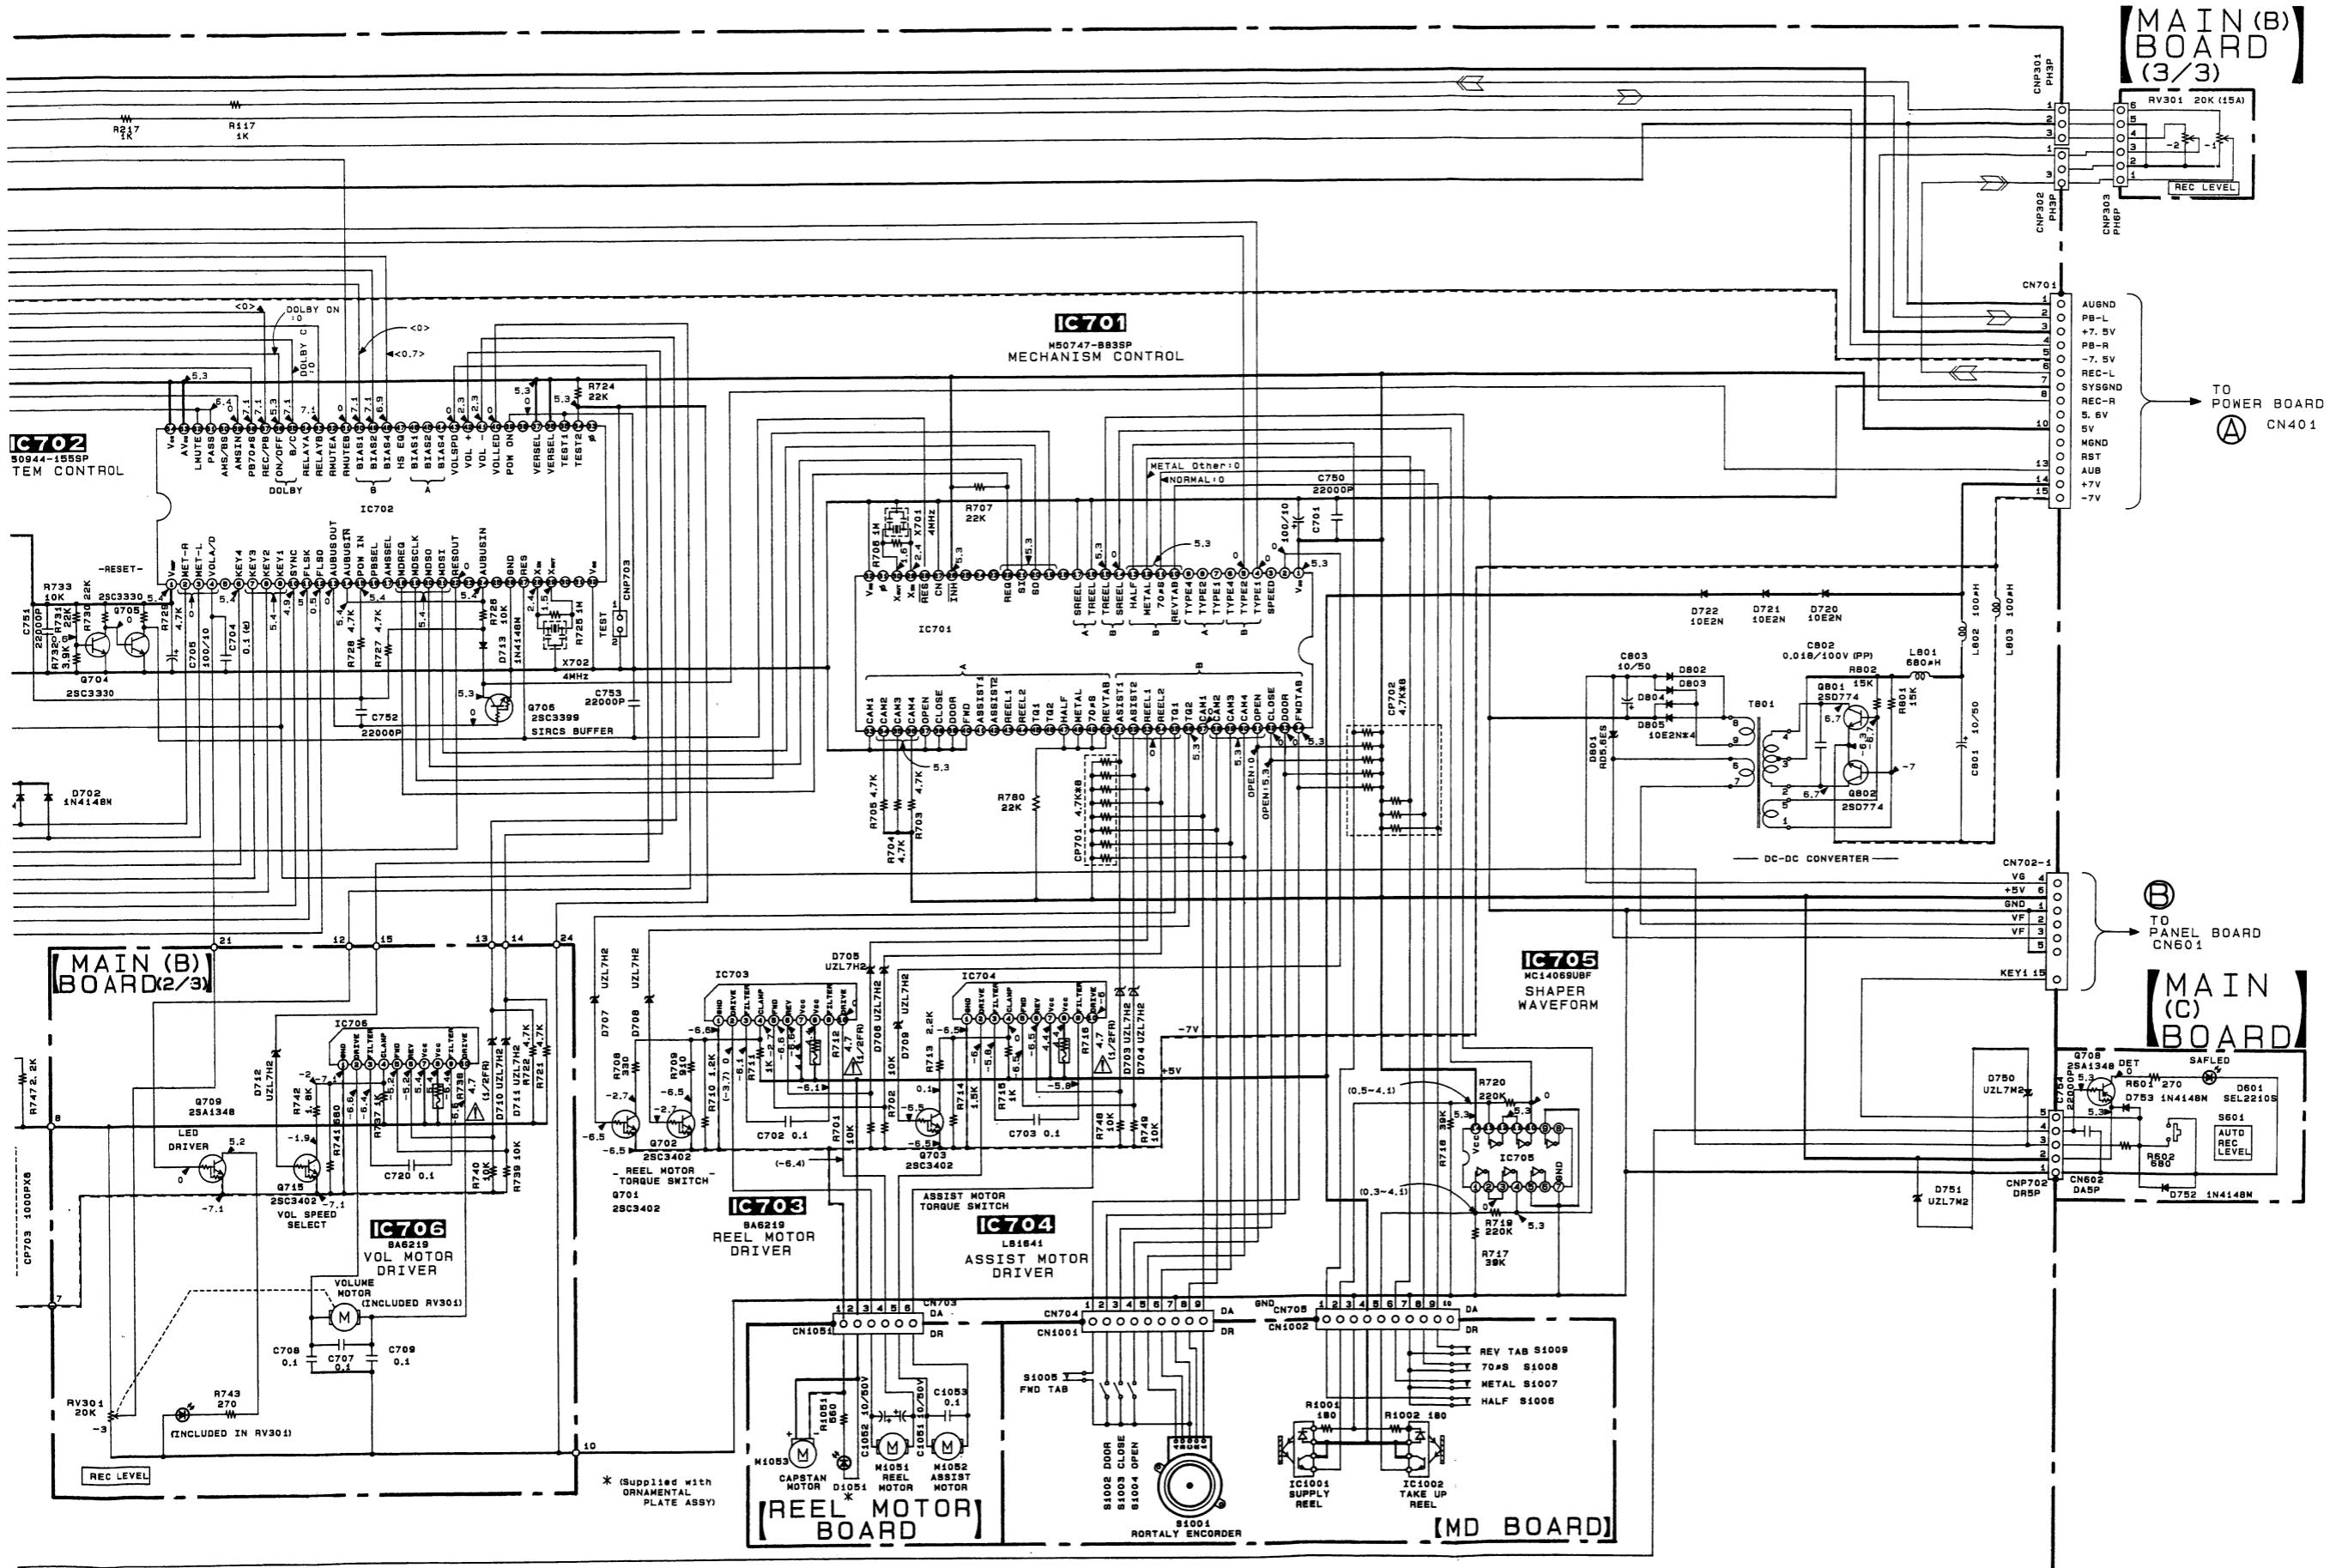


• IC BLOCK DIAGRAM

IC501 LA5603

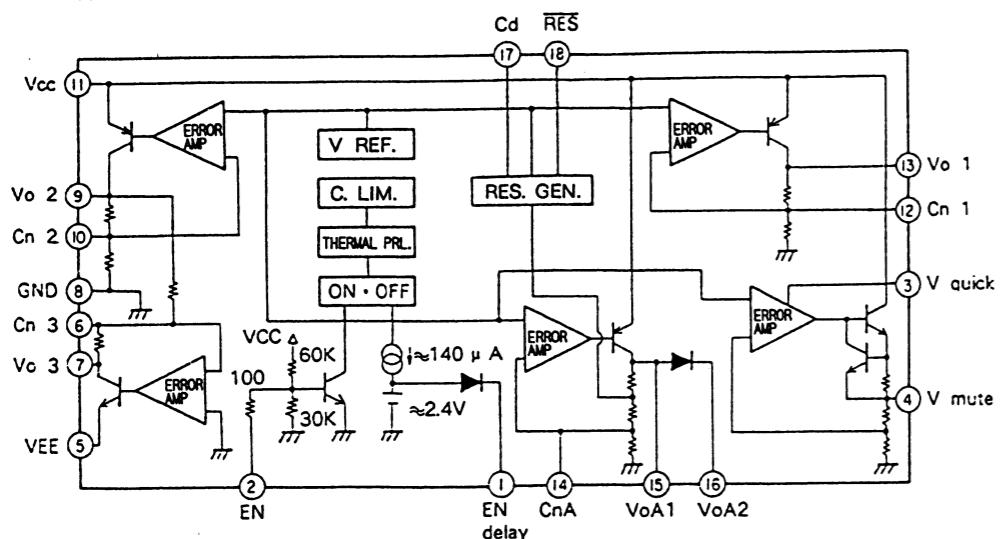

IC407 BA7625

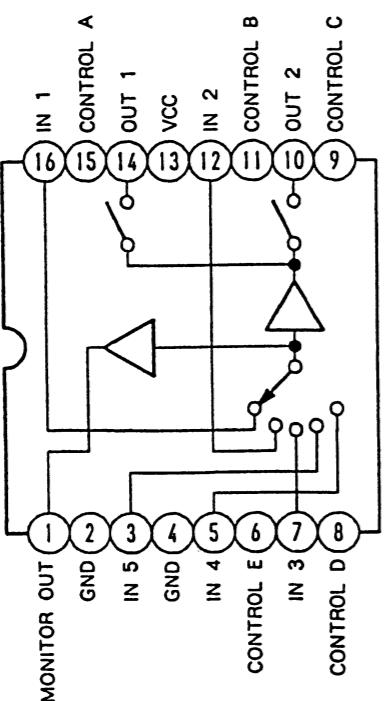

Note on Schematic Diagram:

- All capacitors are in μF unless otherwise noted. pF: $\mu\mu F$ 50WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and $1/4 W$ or less unless otherwise specified.
- : fusible resistor.

Note:
The components identified by mark or dotted line with mark are critical for safety. Replace only with part number specified.

- : B+ Line
- - : B- Line
- [] : adjustment for repair.

no mark: STOP
(): PB

< >: REC

• Voltages are taken with a VOM (50 $k\Omega/V$). Voltage variations may be noted due to normal production tolerances.

• Signal path.


: PB

: REC

5-7. SCHEMATIC DIAGRAM - PIN JACK SECTION -

1	2	3	4	5	6
---	---	---	---	---	---


[PINE JACK BOARD]

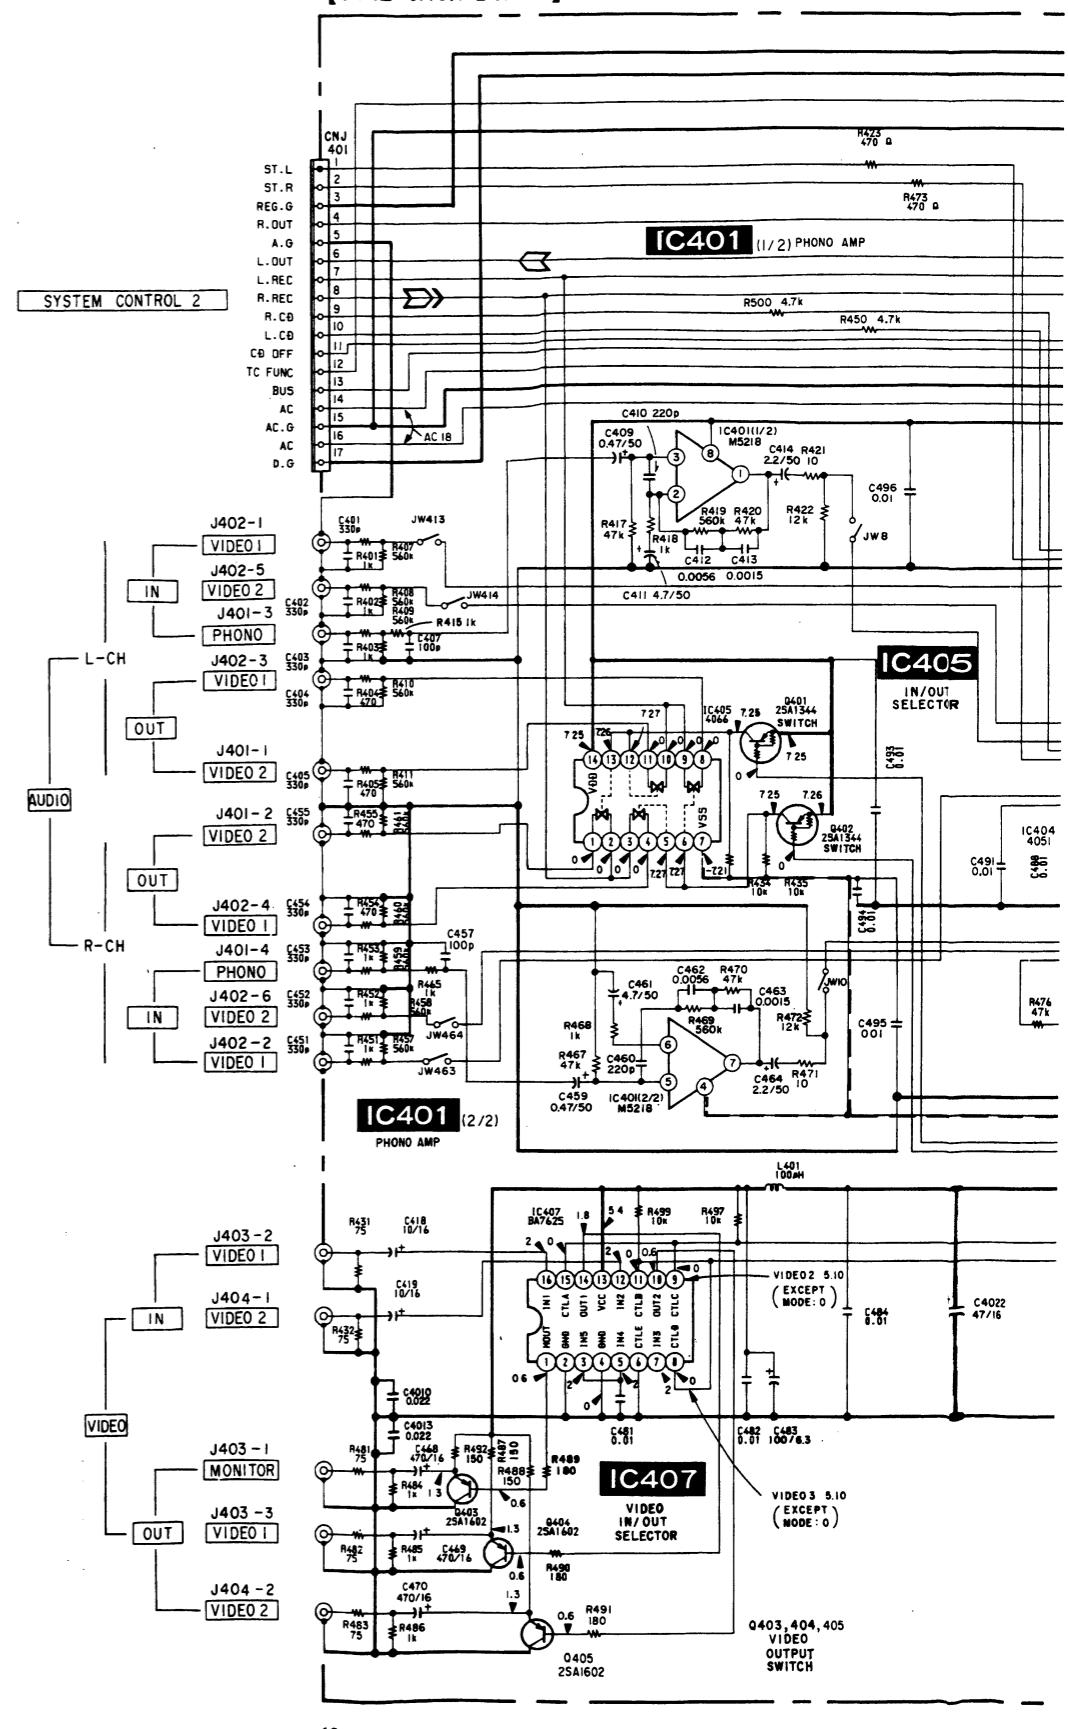


SCHEMATIC DIAGRAM - PIN JACK SECTION -

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16

[PINE JACK BOARD]

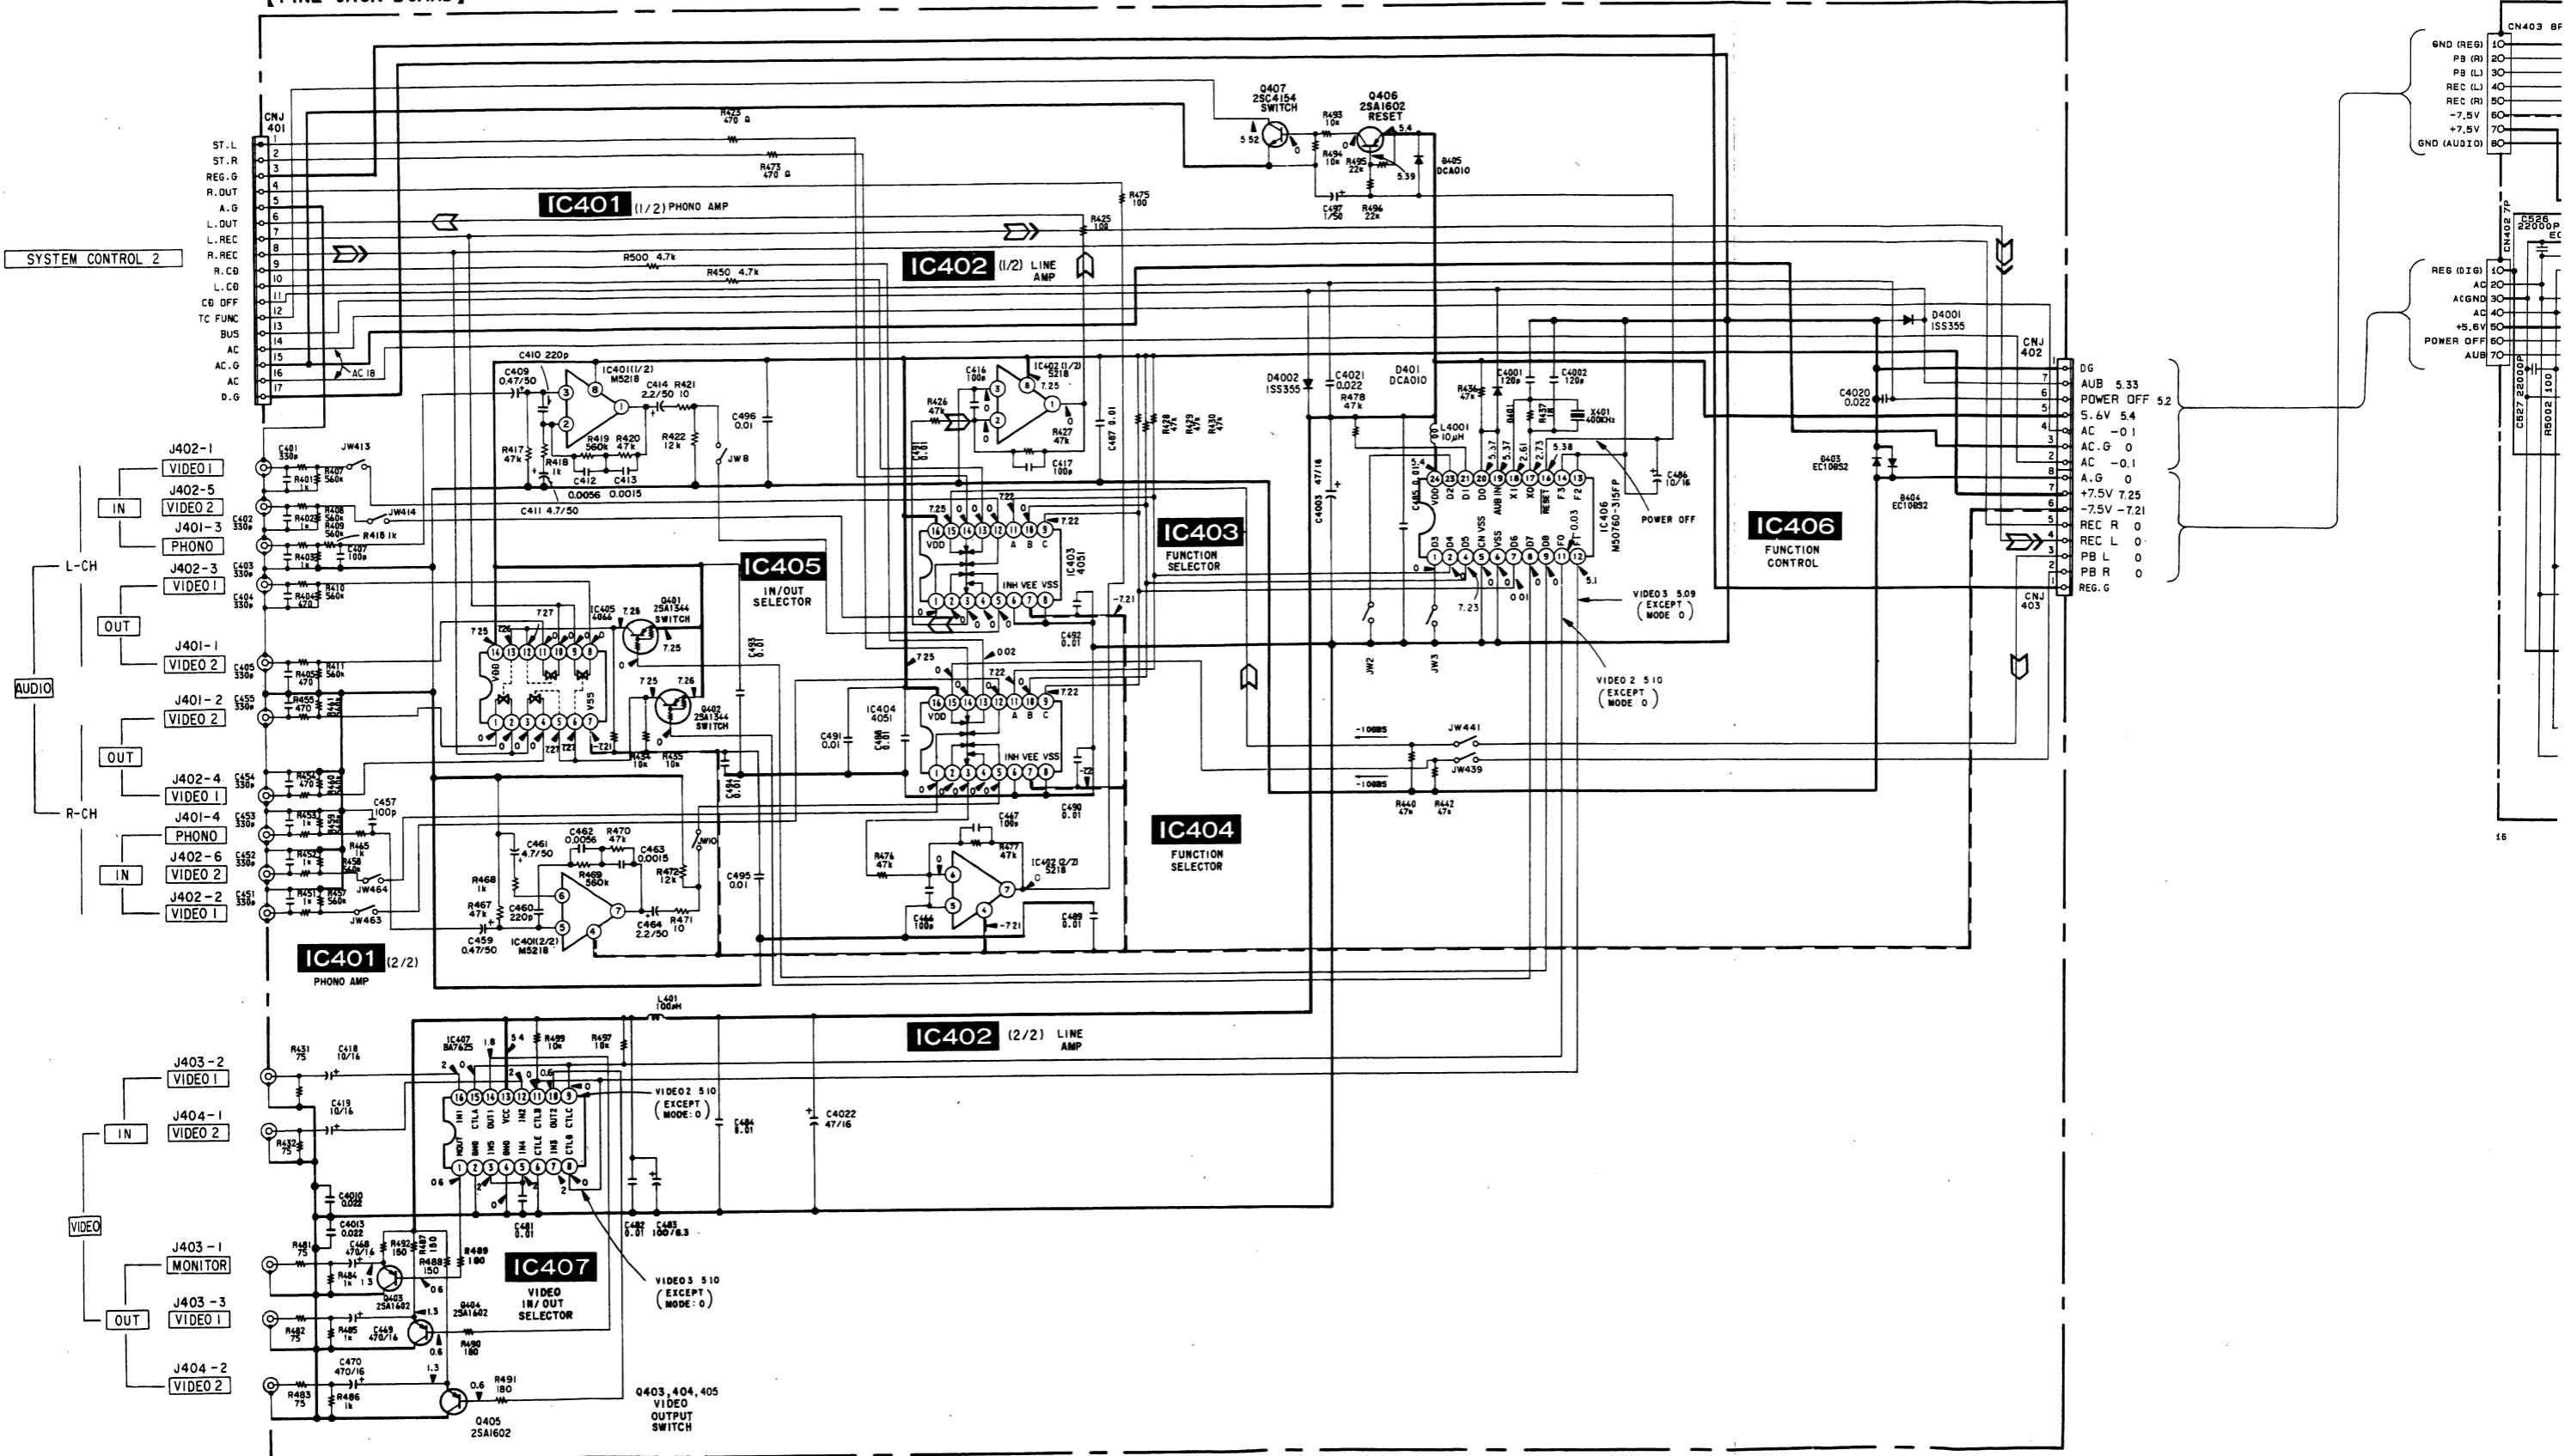


11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 | 21 | 22 | 23 | 24 | 25

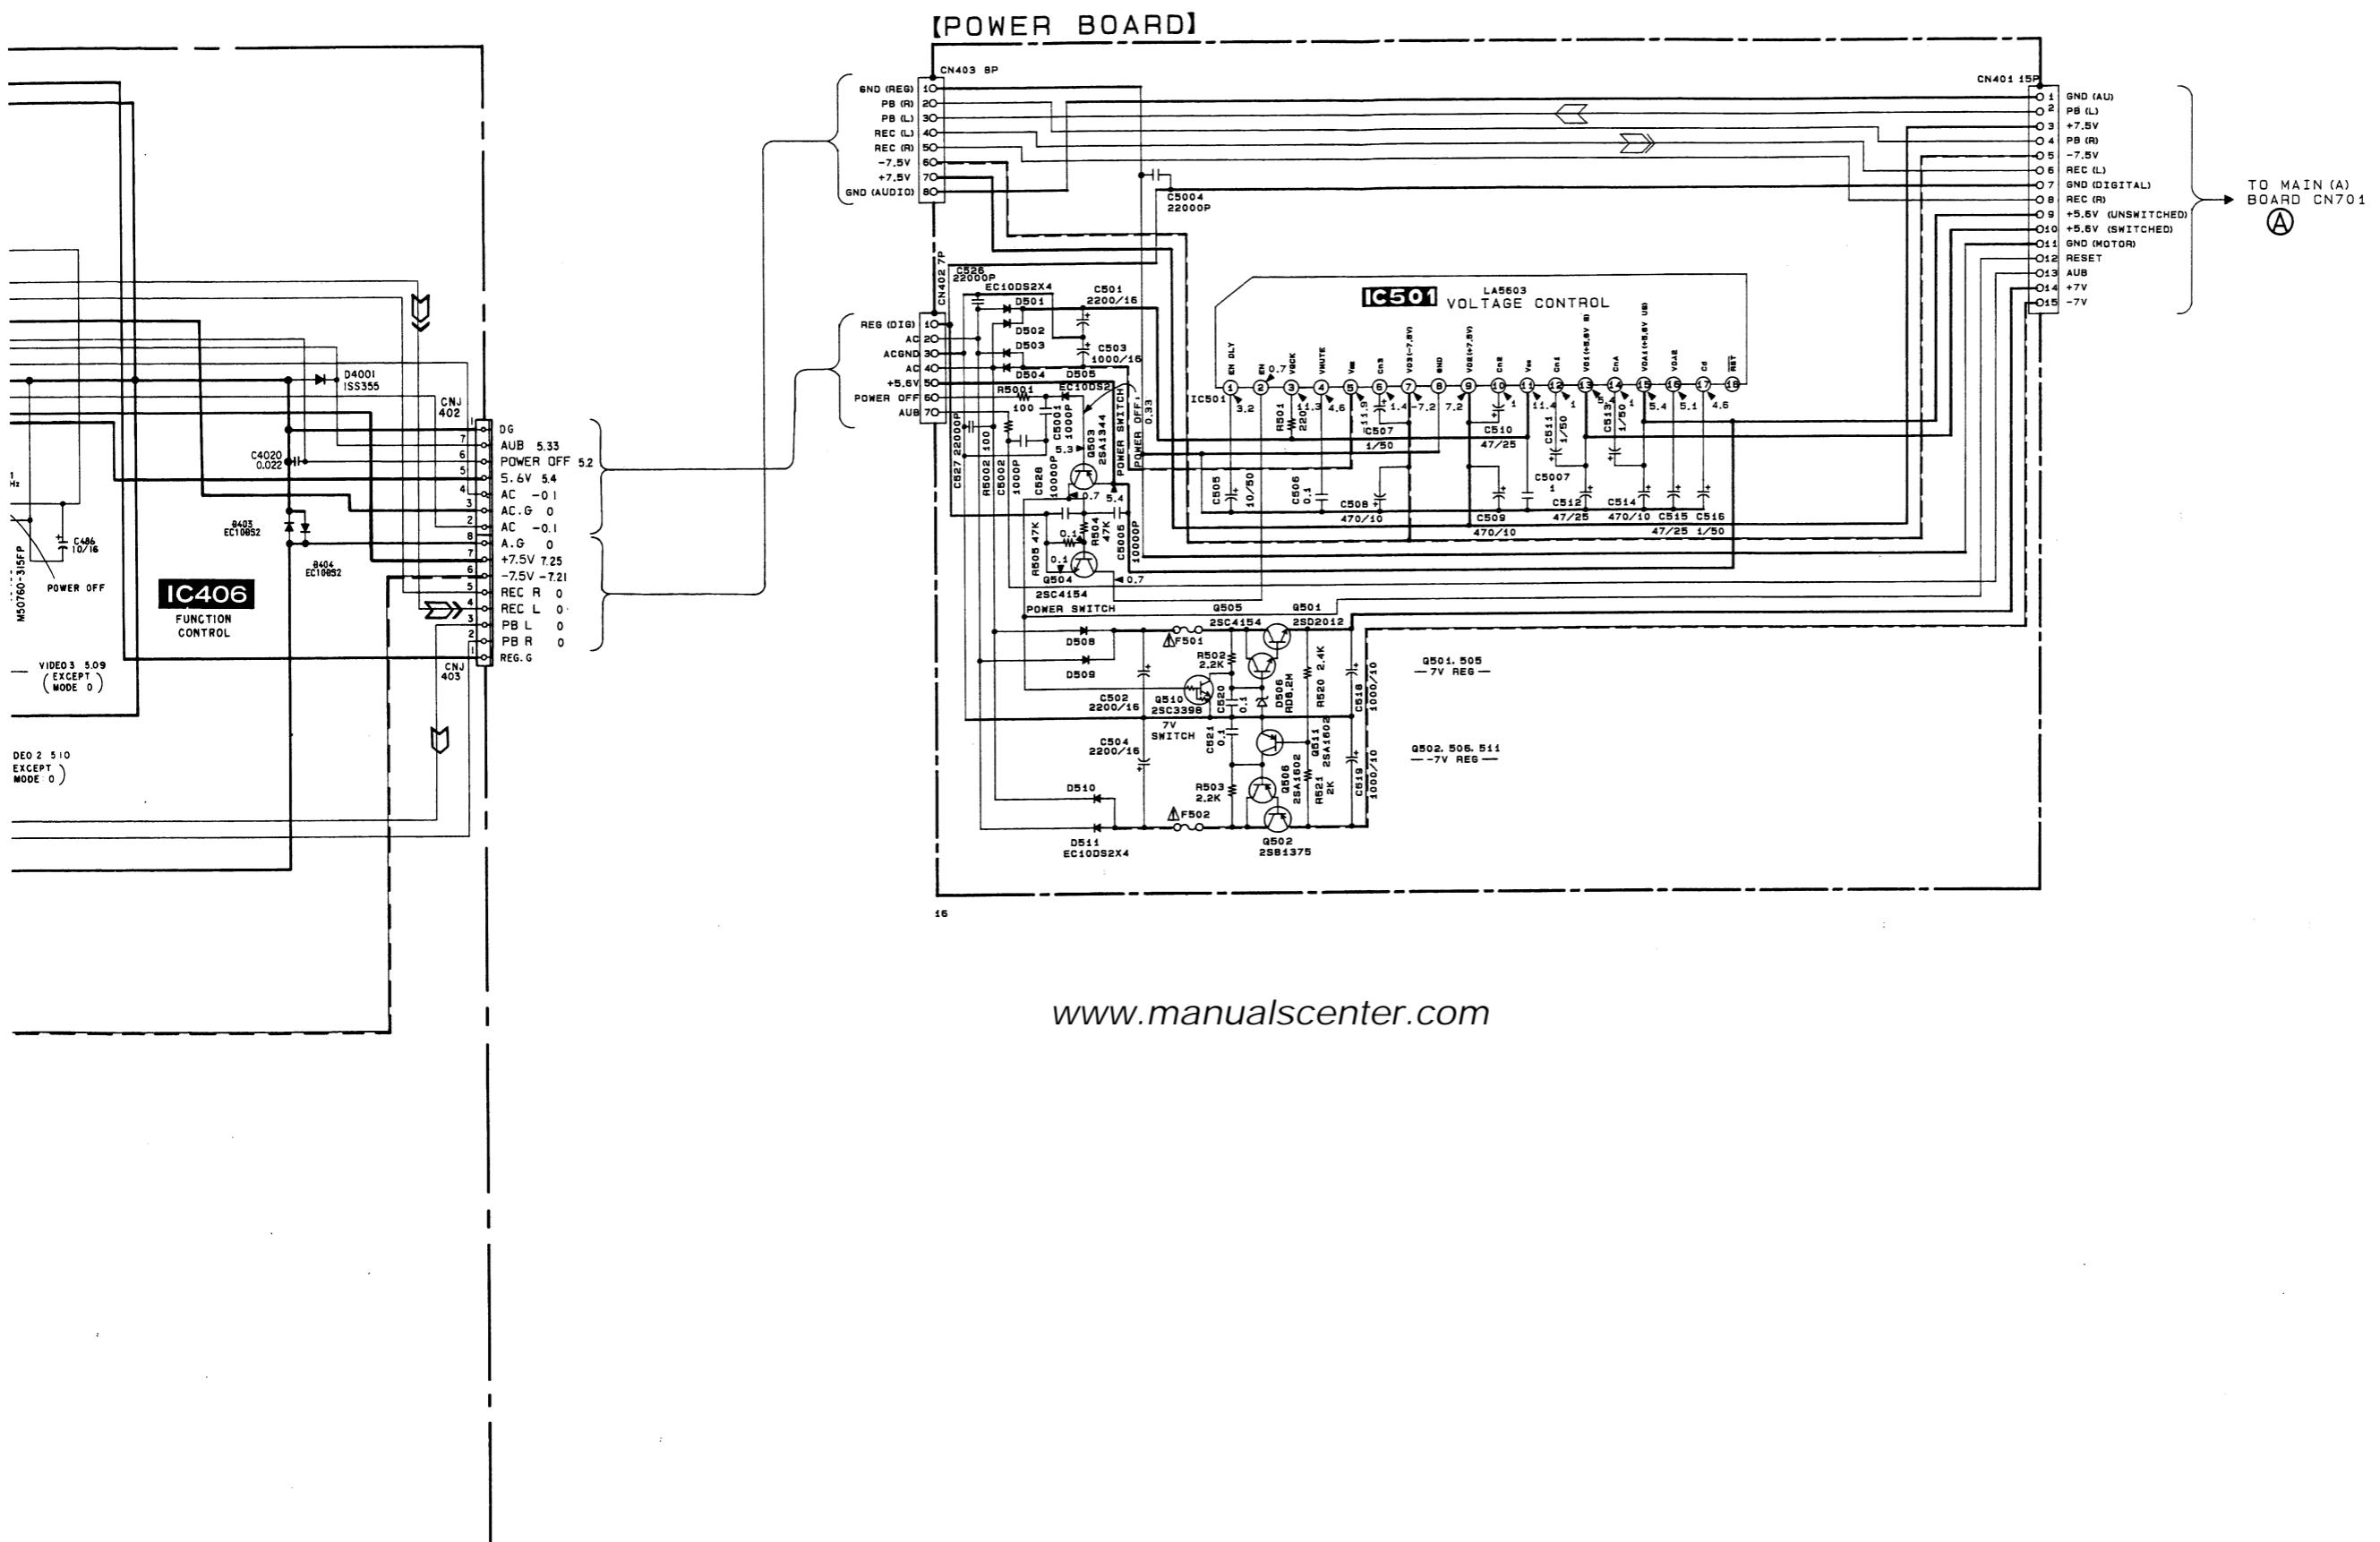


5-8. PRINTED WIRING BOARDS - PIN JACK SECTION -

1	2	3	4	5	6	7	8	9	10	11
---	---	---	---	---	---	---	---	---	----	----

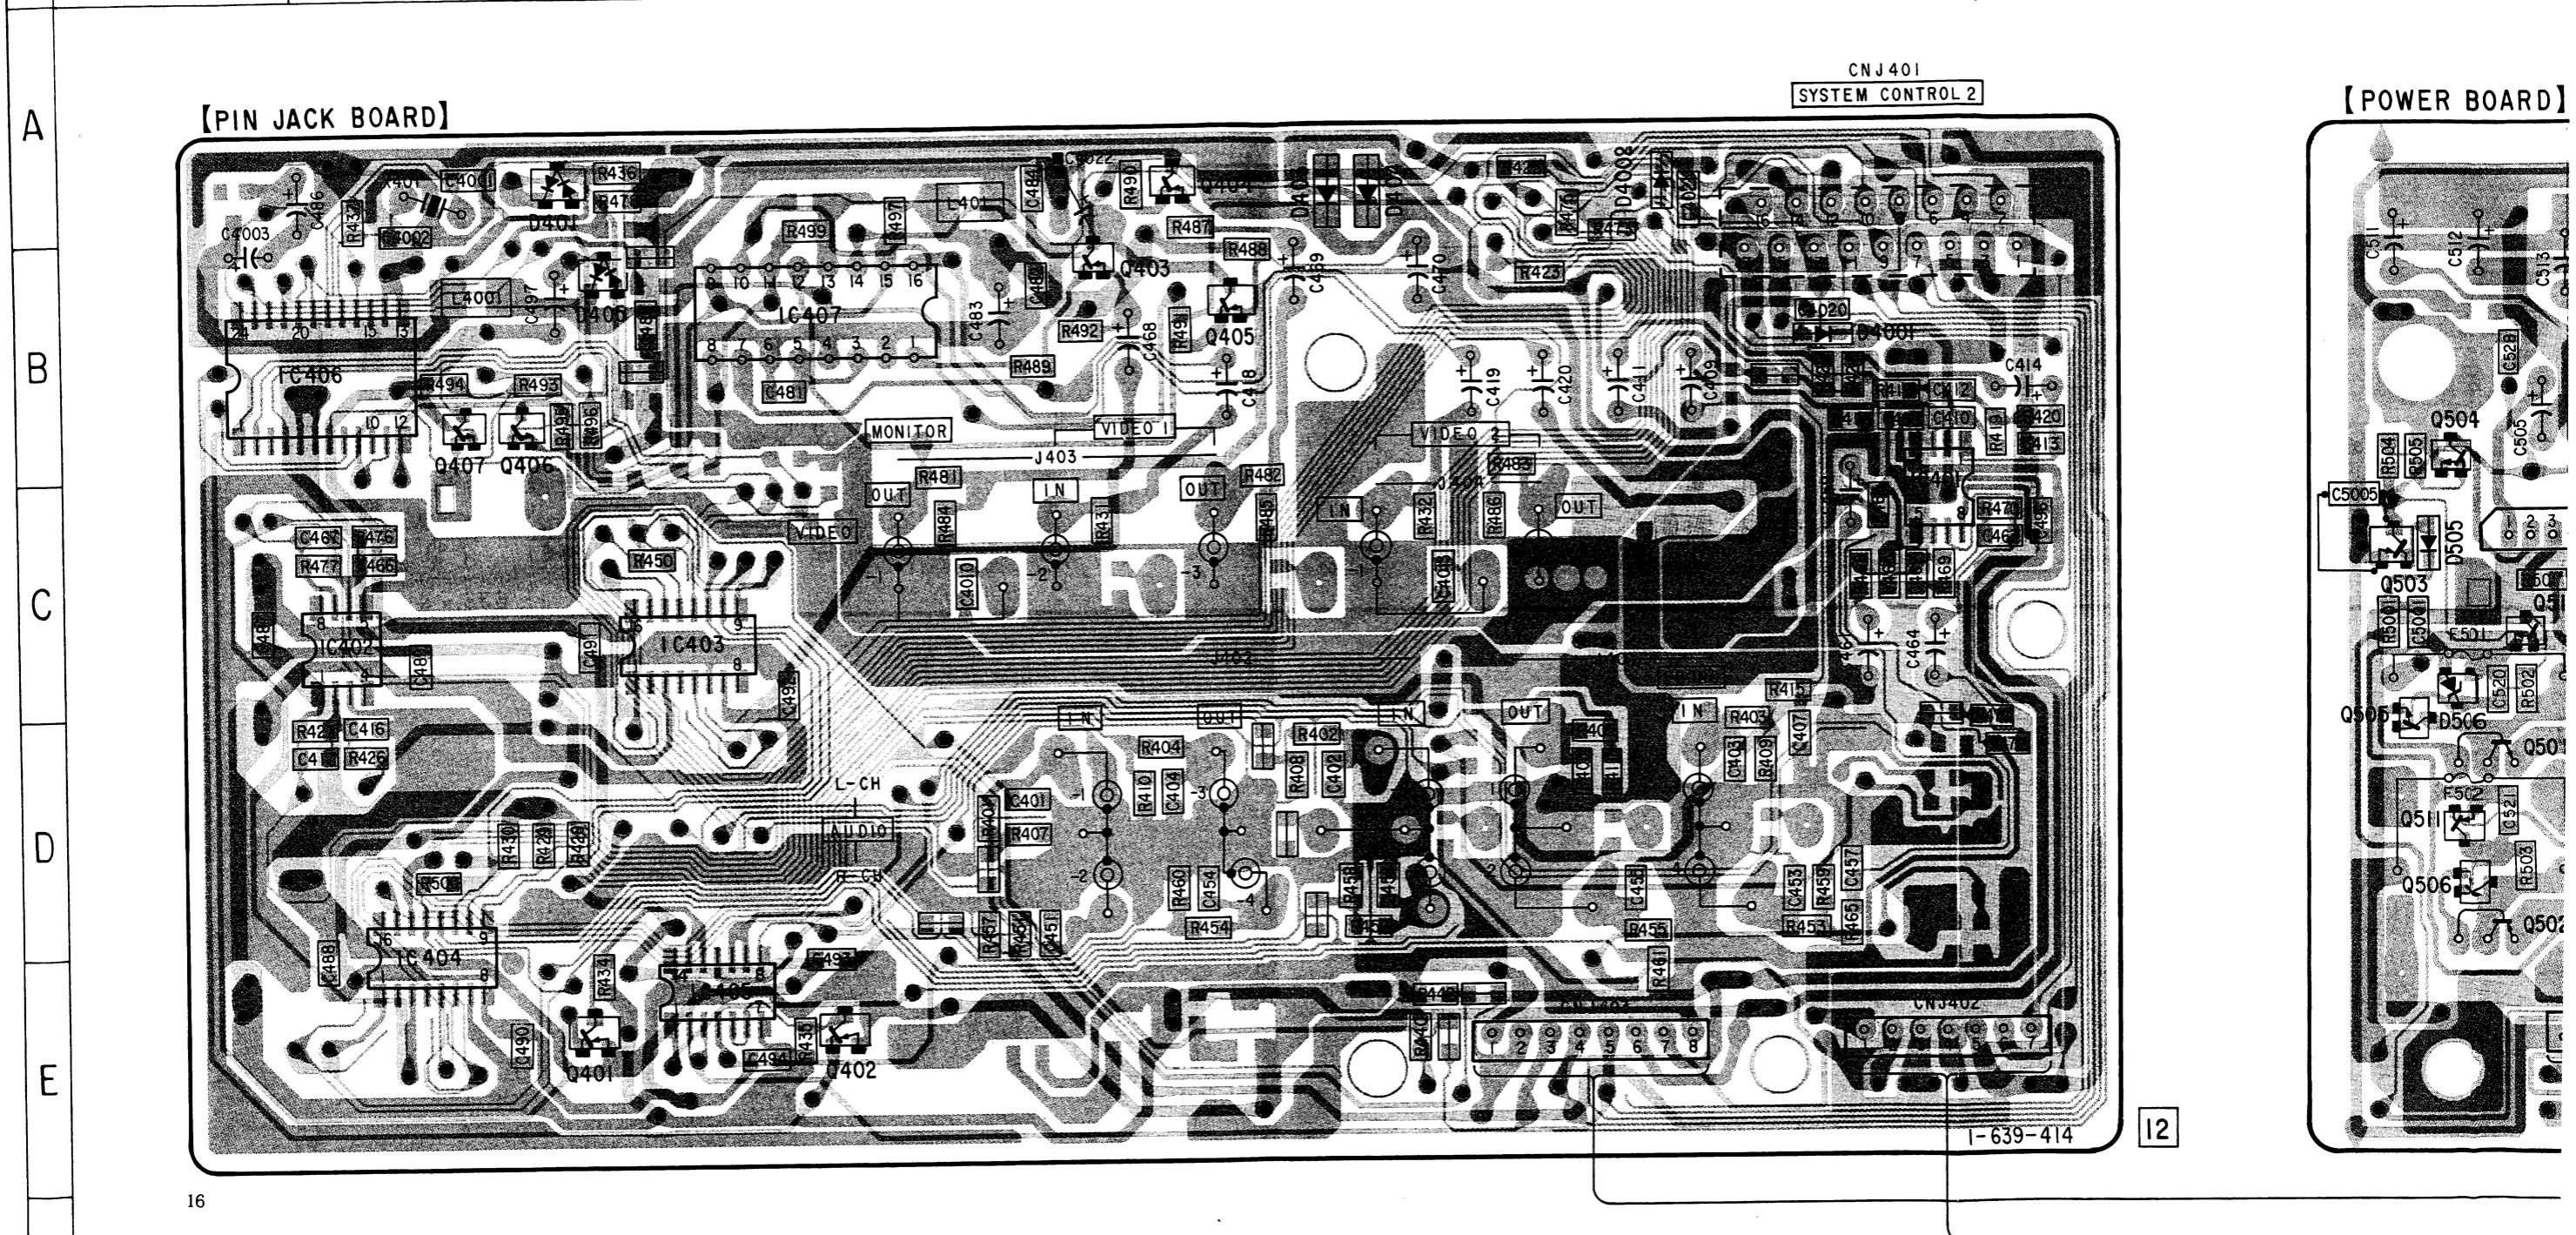


16

6	7	8	9	10	11	12	13	14
---	---	---	---	----	----	----	----	----

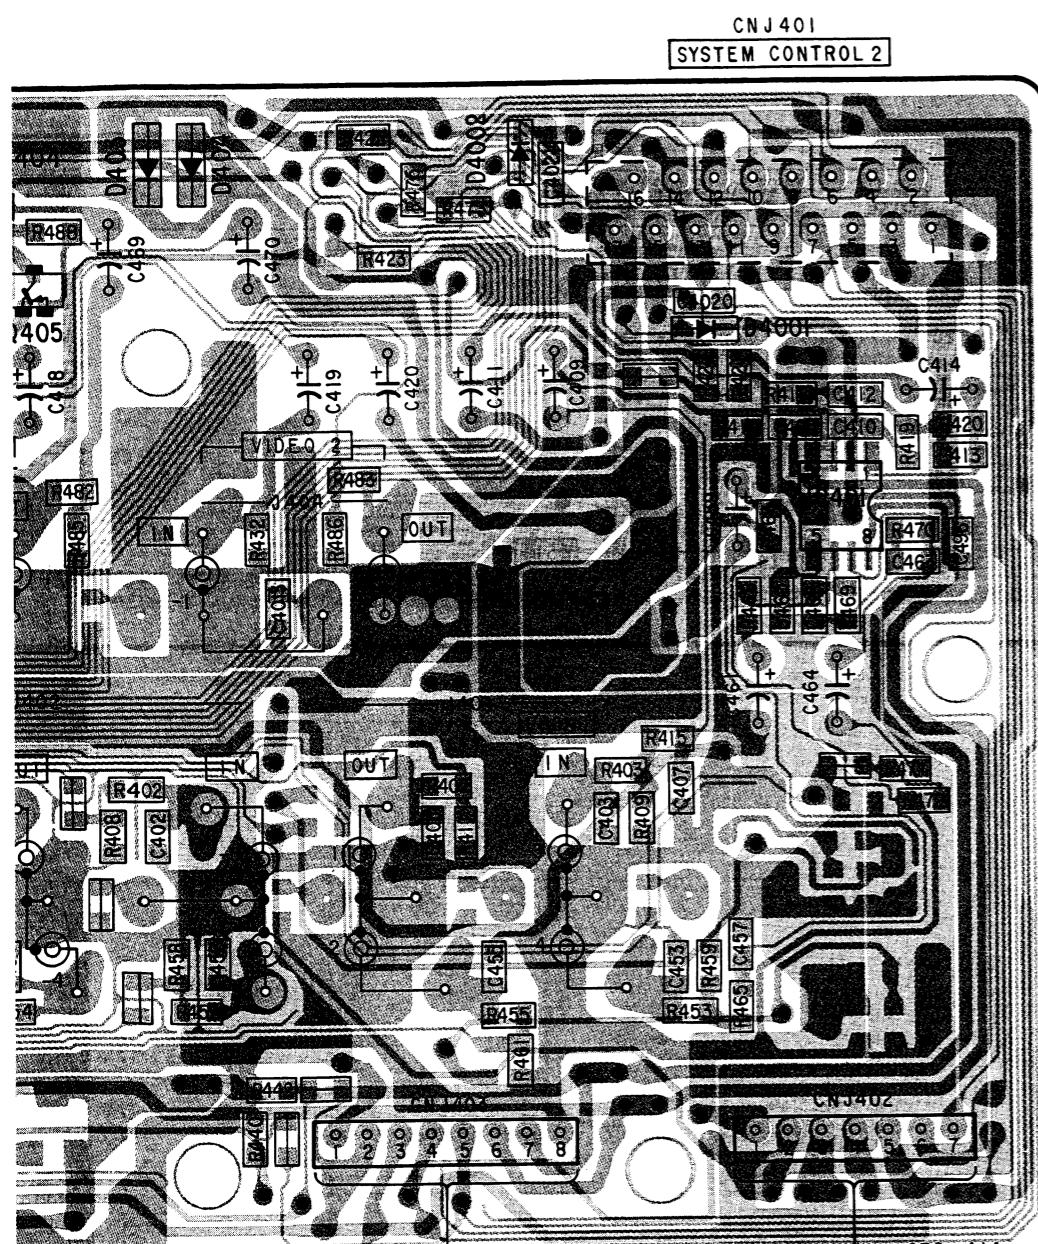

[POWER BOARD]

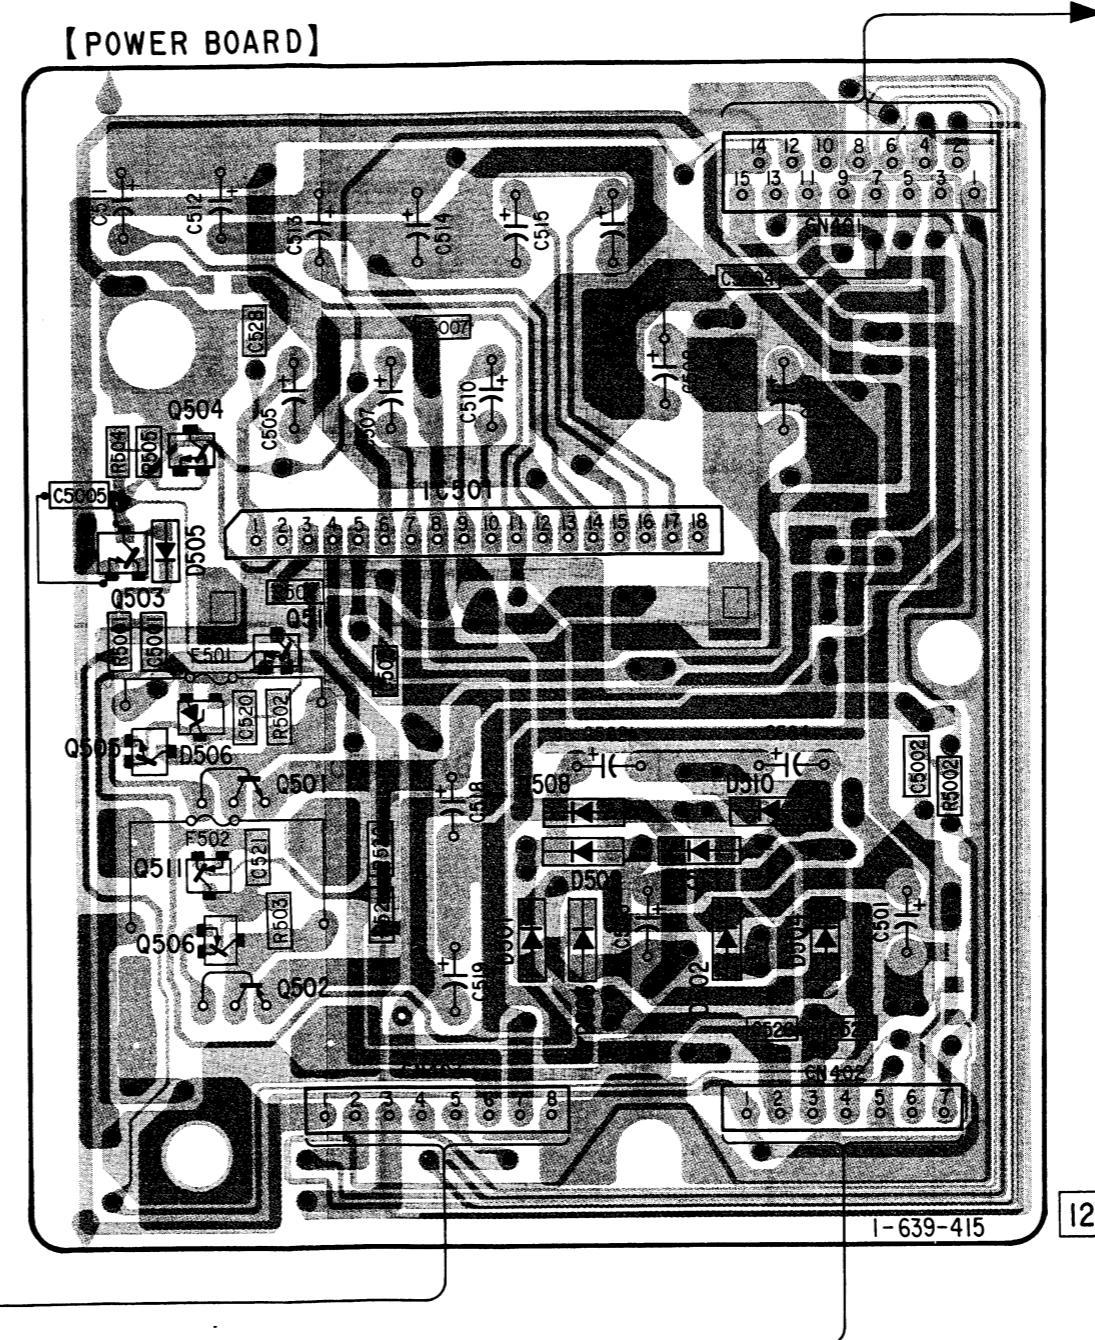

• Semiconductor Location

Ref. No.	Location
D401	A-3
D403	A-6
D404	A-6
D405	B-3
D501	D-12
D502	D-13
D503	D-12
D504	D-13
D505	C-11
D506	C-11
D508	D-12
D509	D-12
D510	D-13
D511	D-12
D4001	B-8
D4002	A-7
IC401	C-8
IC402	C-2
IC403	C-3
IC404	E-2
IC405	E-3
IC406	B-2
IC407	B-4
IC501	C-12
Q401	E-3
Q402	E-4
Q403	B-5
Q404	A-5
Q405	B-5
Q406	B-2
Q407	B-2
Q501	D-11
Q502	D-11
Q503	C-10
Q504	B-11
Q505	D-10
Q506	D-11
Q507	C-11
Q511	D-11

www.manualscenter.com

Note on Mounting Diagram:


- : parts extracted from the component side.
- : parts mounted on the conductor side.
- : Through hole.
- : Pattern on the side which is seen.
- : Pattern of the rear side.

5-9. PRINTED WIRING BOARDS - PANEL SECTION -

1 2 3 4 5 6 7

- Semiconductor Location

Ref. No.	Location
D601	A - 4
D602	B - 1
D603	B - 2
IC601	B - 5

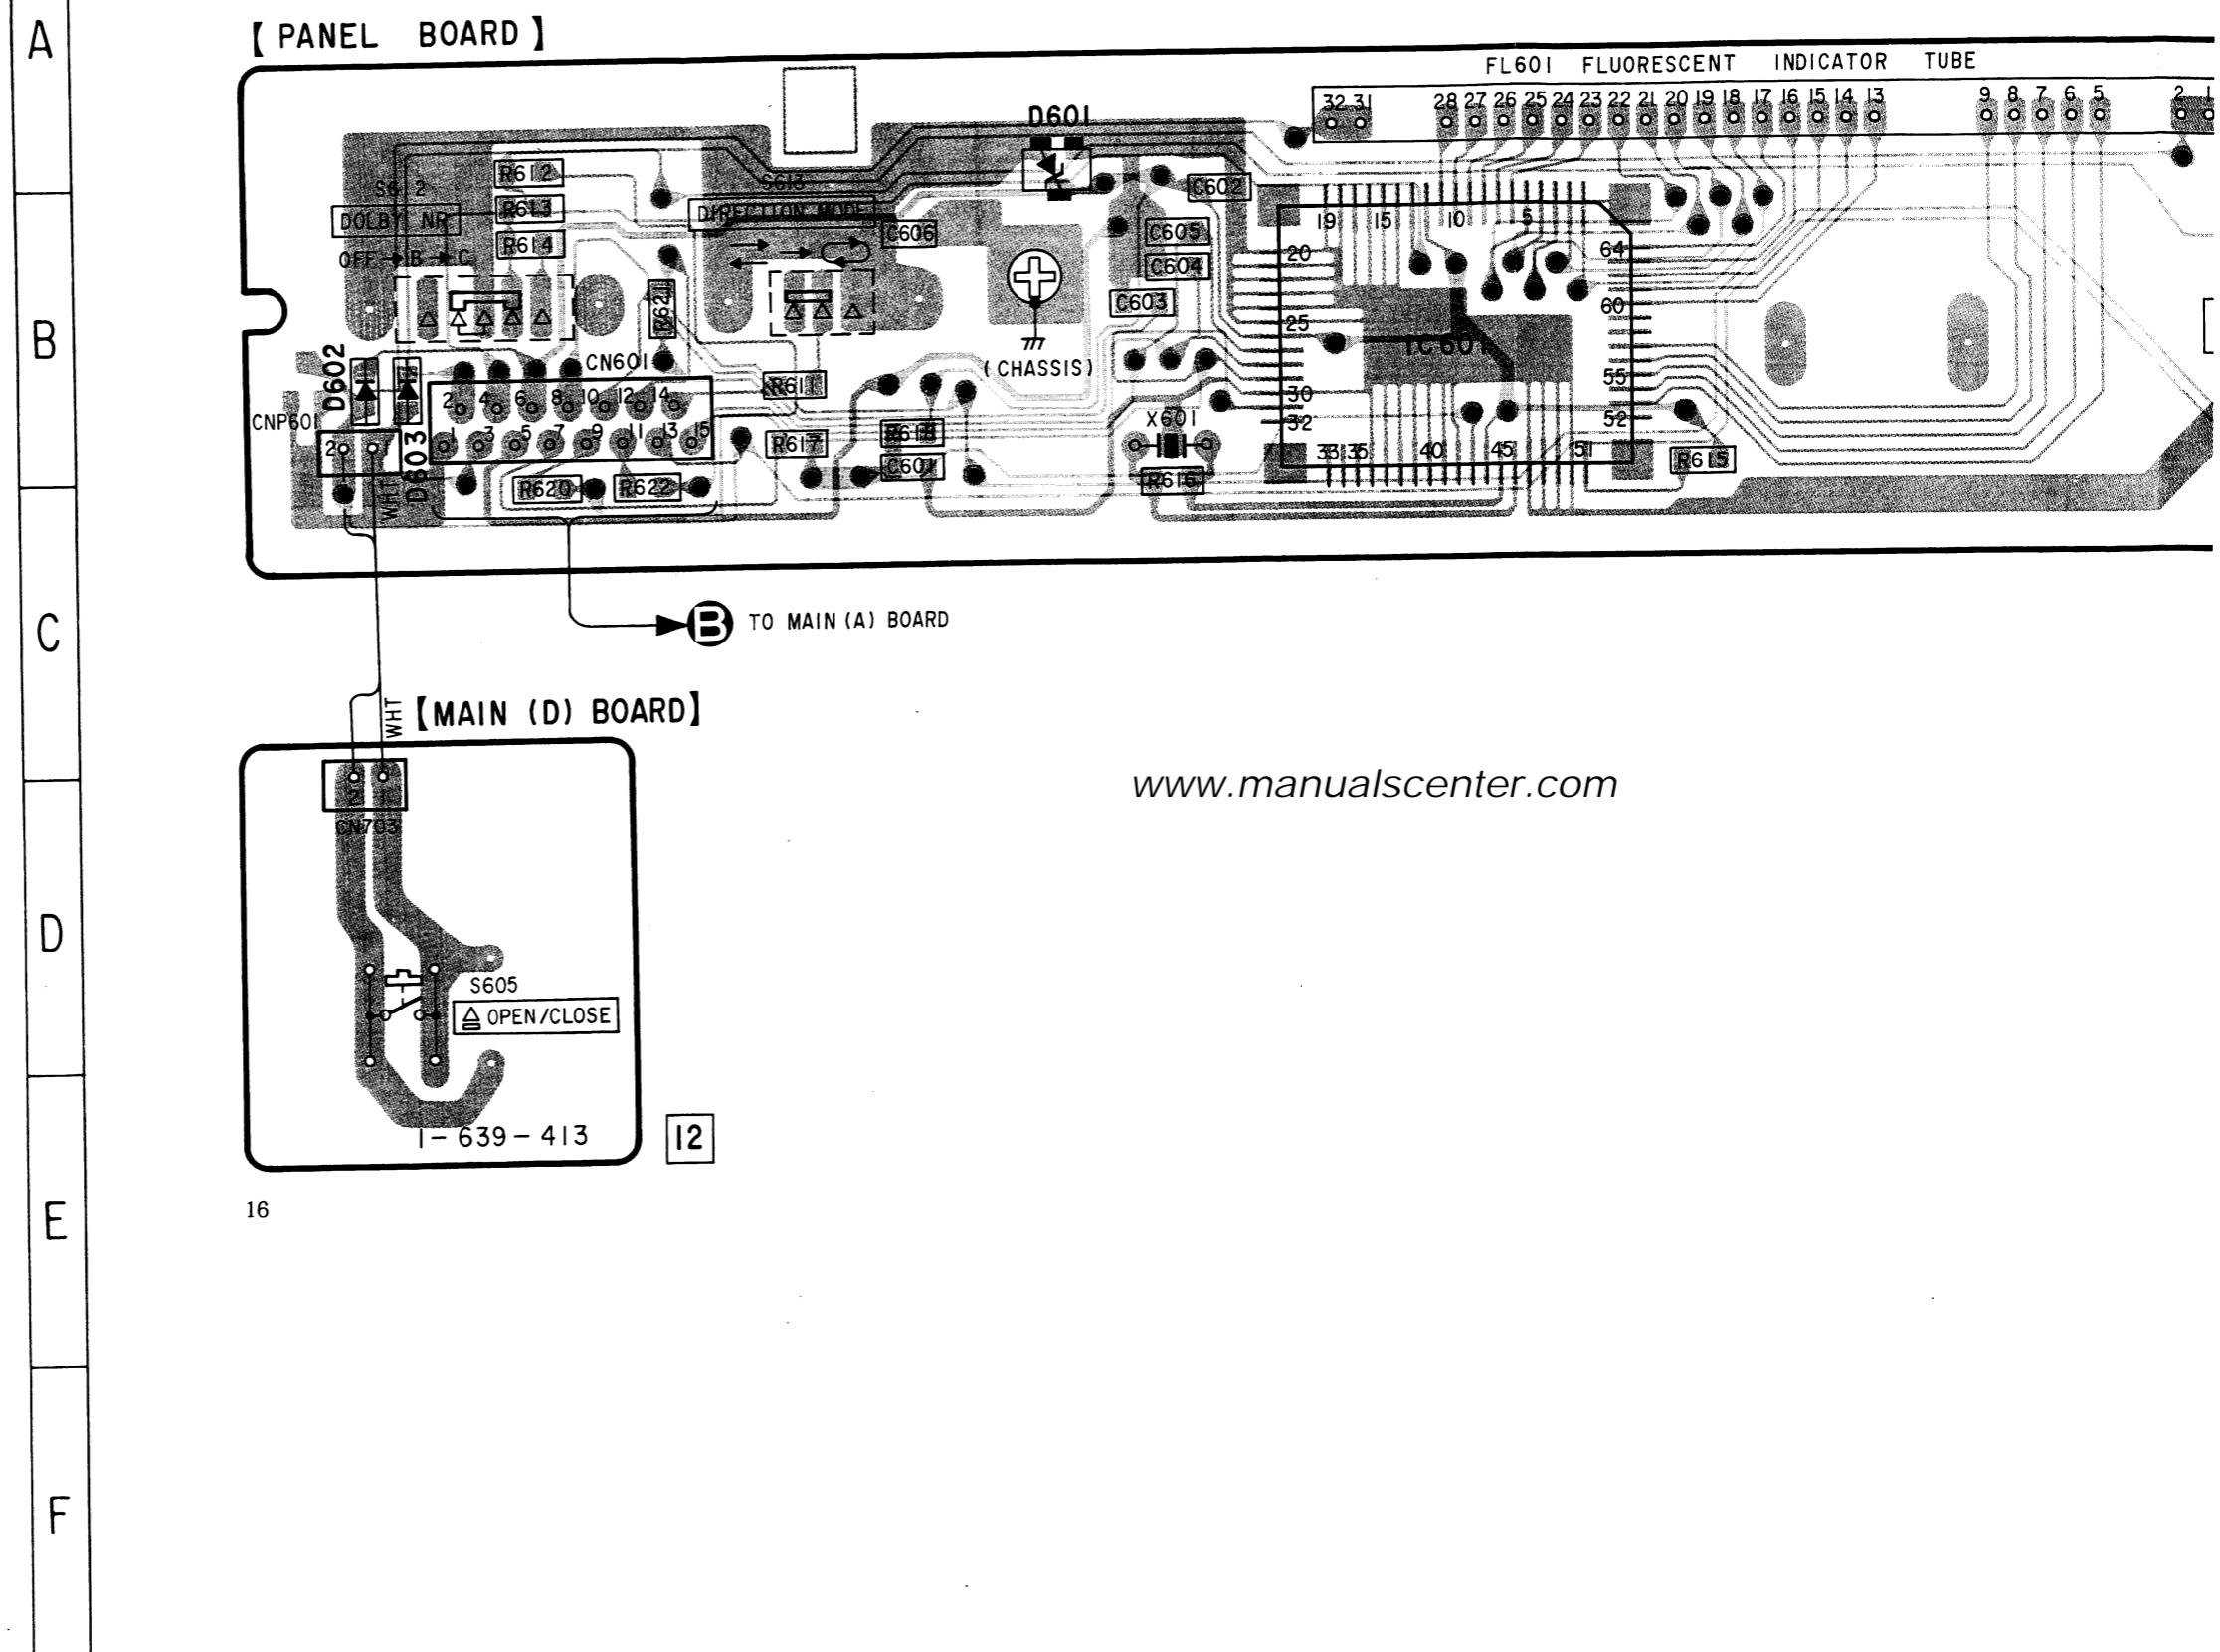


www.manualscenter.com

16

Note on Mounting Diagram:

- — : parts extracted from the component side.
- ● : Through hole.
- ■■■■ : Pattern on the side which is seen.
- ■■■■ : Pattern of the rear side.

3	4	5	6	7	8	9	10	11	12
---	---	---	---	---	---	---	----	----	----

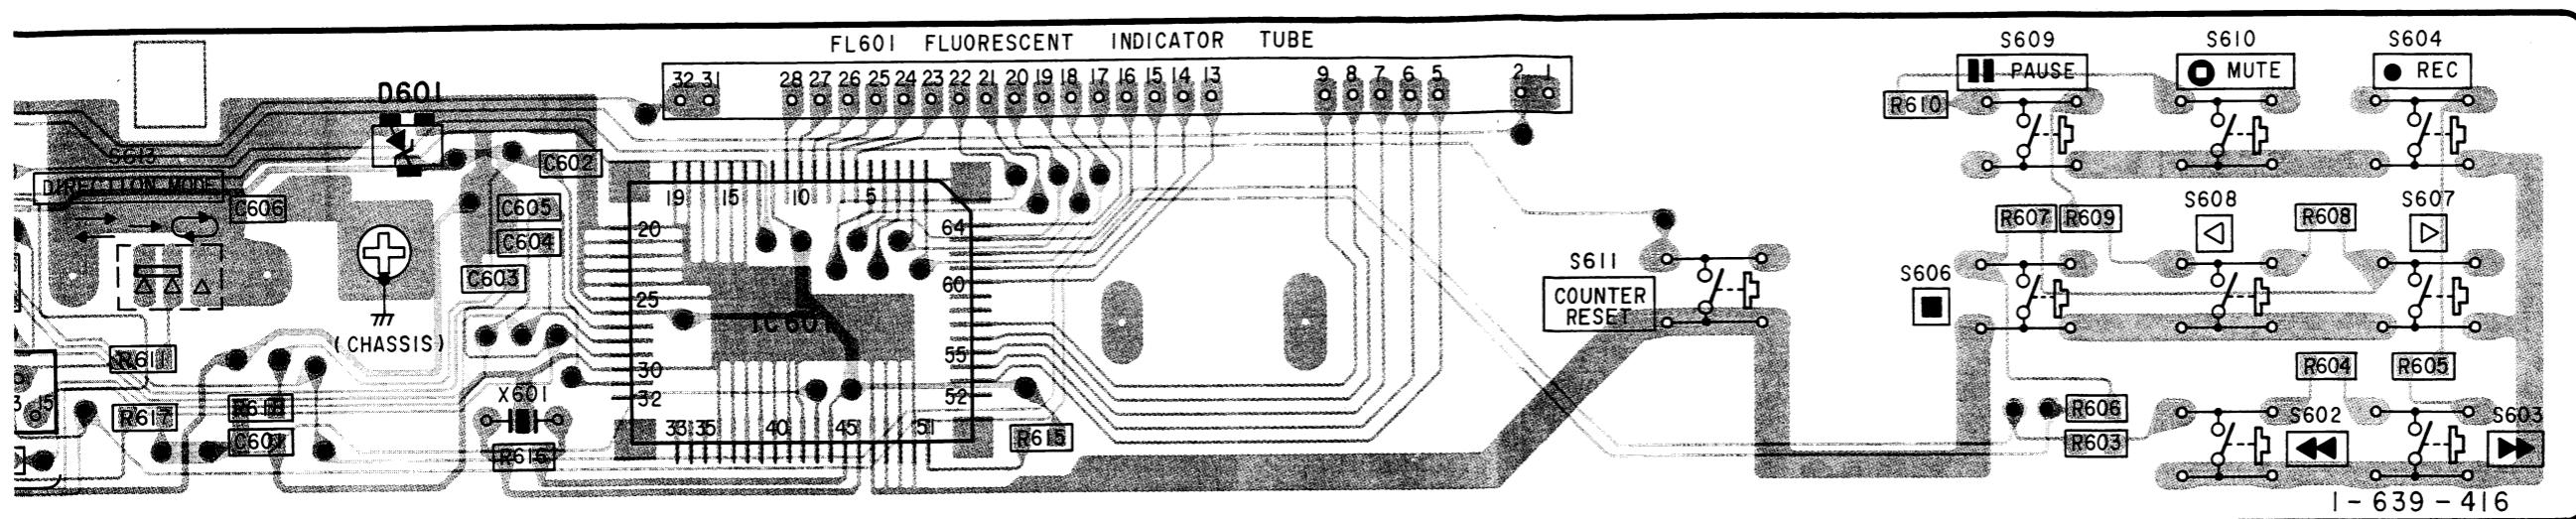

B TO MAIN (A) BOARD

www.manualscenter.com

12

D

12

5-10. SCHEMATIC DIAGRAM - PANEL SECTION - • See page 28 for Note on Schematic Diagram.

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15

A

[PANEL BOARD]

B

C

D


E

F

G

H

J

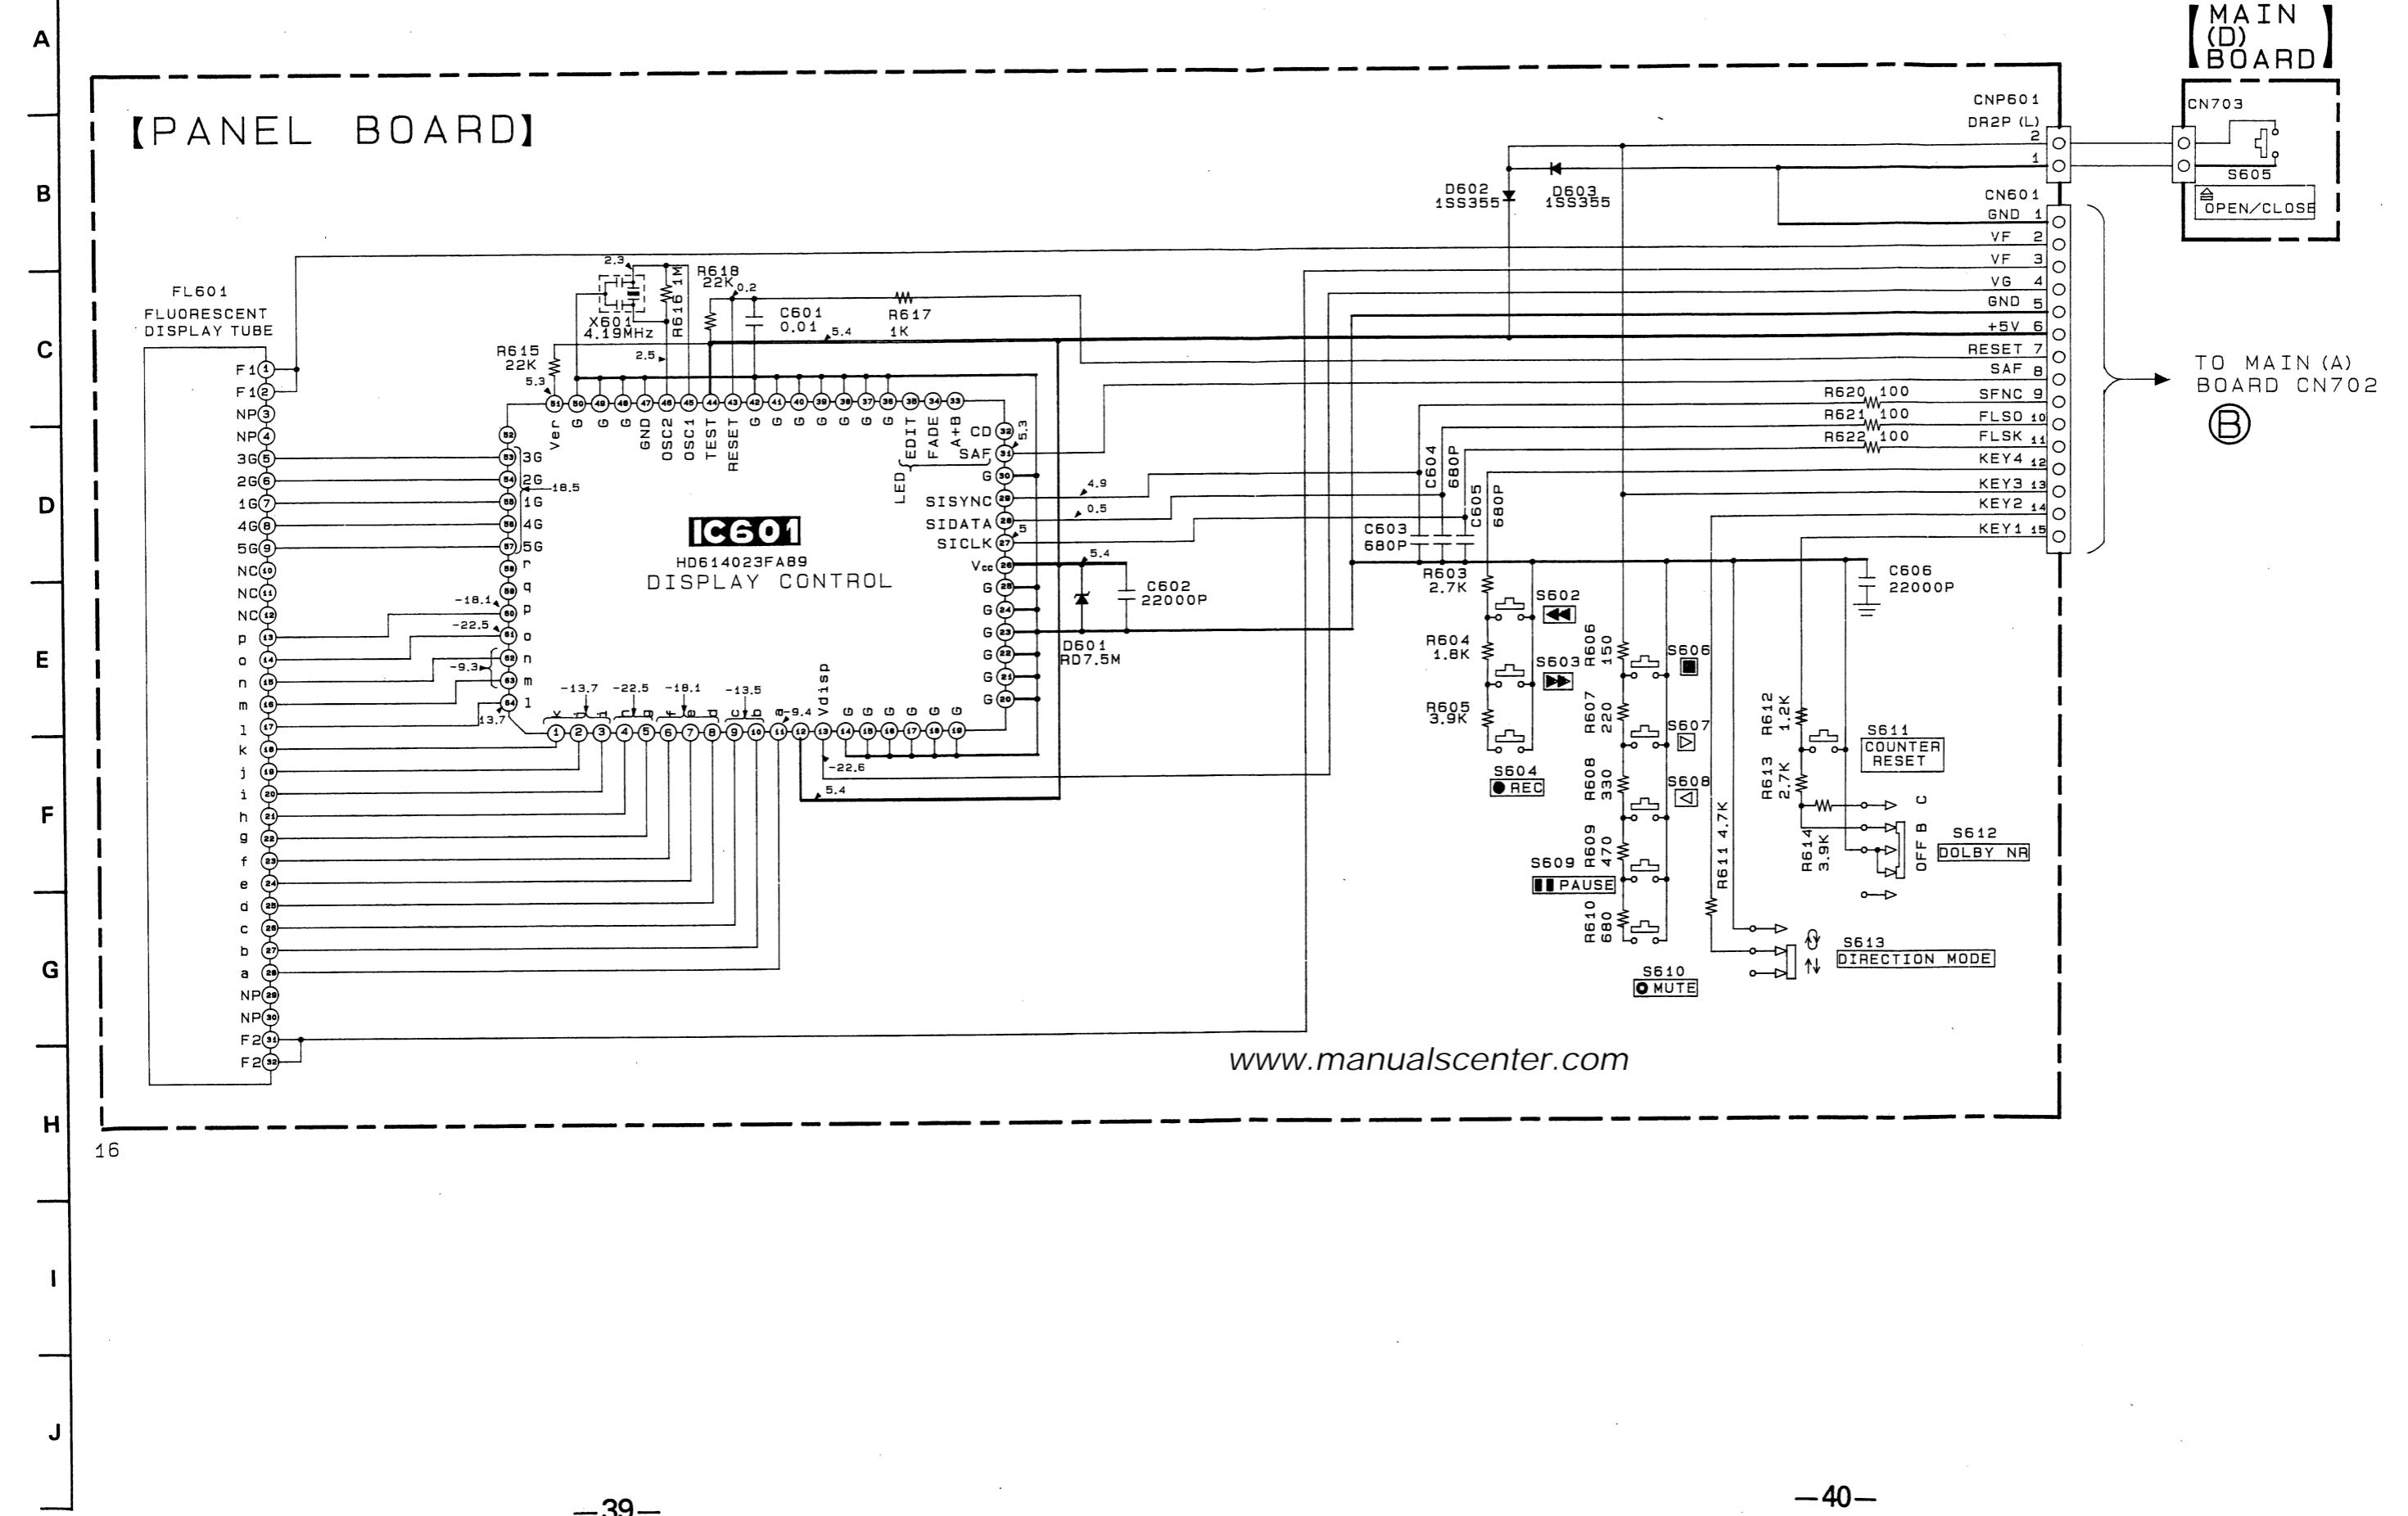



SECTION 6 EXPLODED VIEWS

NOTE :

- - XX, - X mean standardized parts, so they may have some differences from the original one.
- Color Indication of Appearance Parts Example : KNOB, BALANCE (WHITE)...(RED)
 ↑ ↑
 Parts color Cabinet's color
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.
- Hardware (# mark) list is given in the last of this parts list.

6-1. FRONT PANEL SECTION


■ A : MAIN (A) BOARD
 ■ B : MAIN (B) BOARD
 ■ C : MAIN (C) BOARD
 ■ D : MAIN (D) BOARD

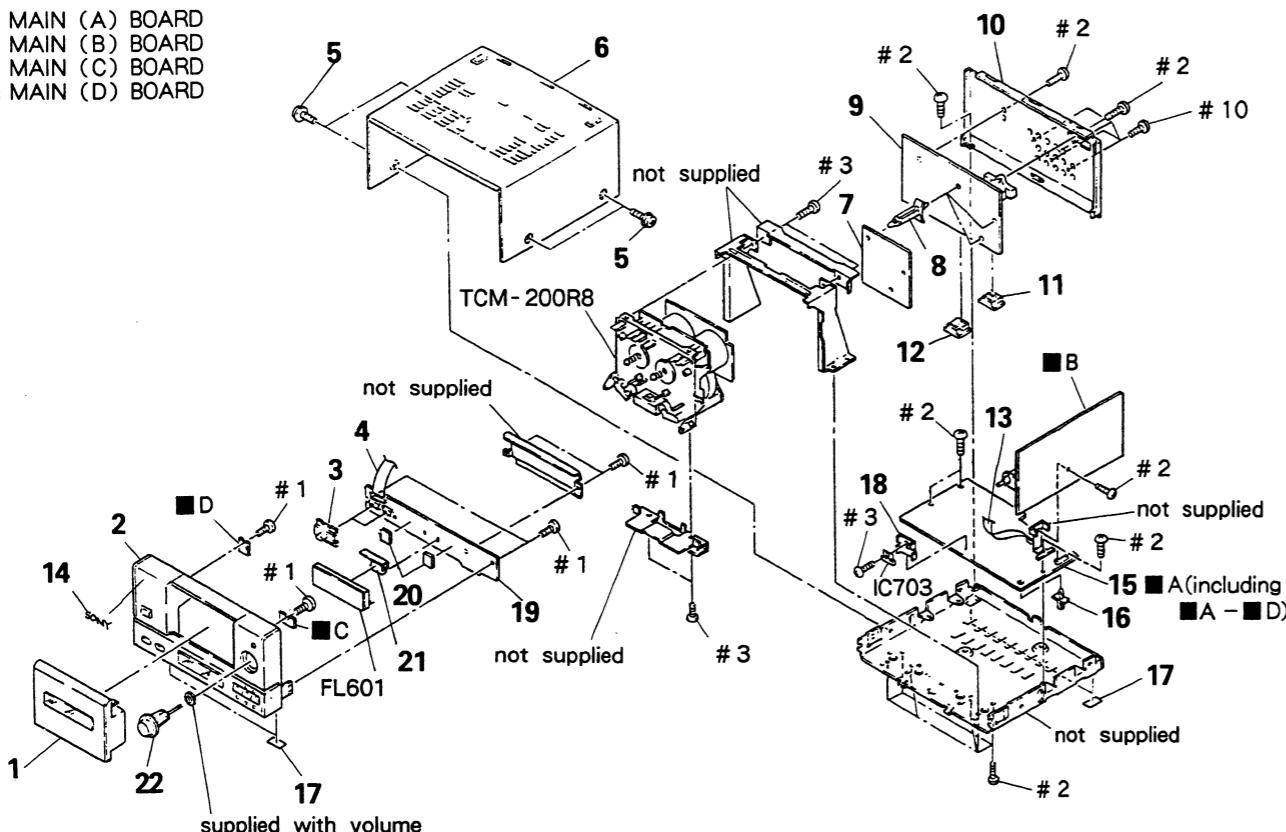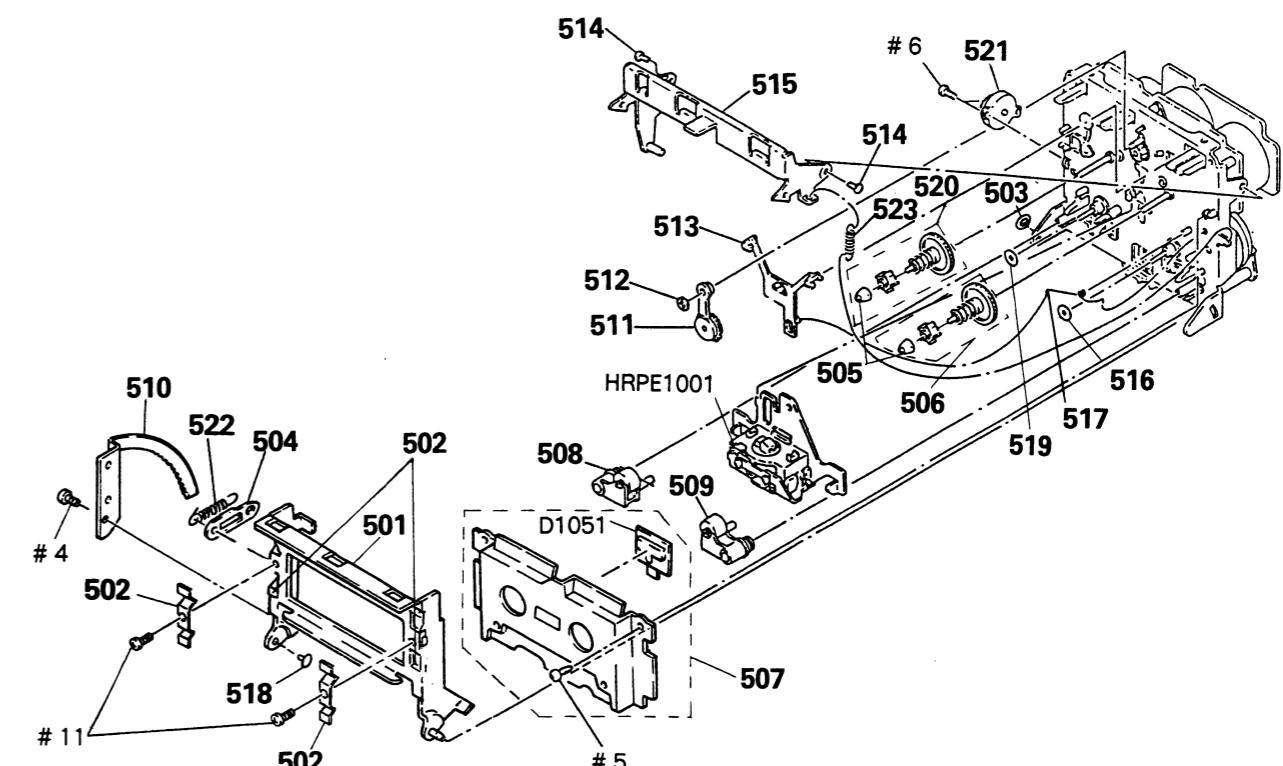
**6-2. MECHANISM SECTION-1
(TCM-200R8)**

www.manualscenter.com

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
1	A-2003-769-A	LID ASSY, CASSETTE		13	1-575-664-11	WIRE, FLAT TYPE (15 CORE)	
2	A-2003-768-A	PANEL ASSY, FRONT		14	4-942-636-01	EMBLEM (NO. 3.5), SONY	
3	3-368-105-01	KNOB (SLIDE)		15	* A-2006-452-A	MAIN BOARD, COMPLETE	
4	1-575-906-11	WIRE, FLAT TYPE (15 CORE)		16	* 3-350-847-31	HOLDER, PCB	
5	3-363-099-01	SCREW (CASE +3X8 TP2)		17	4-930-336-01	FOOT (FELT)	
6	4-932-841-01	CASE		18	* 3-356-925-01	HEAT SINK	
7	* 1-639-415-11	POWER BOARD		19	* A-2006-453-A	PANEL BOARD, COMPLETE	
8	* 3-703-353-02	SUPPORT, PC BOARD		20	* 4-921-941-01	CUSHION (FL)	
9	* A-2006-548-A	PIN JACK BOARD, COMPLETE		21	* 3-368-109-01	HOLDER, FL TUBE	
10	* 3-367-074-01	PANEL, BACK		22	A-2003-767-A	KNOB (REC VOL) ASSY	
11	* 1-573-188-11	CONNECTOR, BRIDGE 7P		FL601	1-519-656-11	INDICATOR TUBE, FLUORESCENT	
12	* 1-573-389-11	CONNECTOR, BRIDGE 8P		IC703	8-759-973-95	IC BA6219B	

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
501	X-3362-956-1	HOLDER ASSY, CASSETTE		514	3-356-601-11	SCREW, STEP	
502	3-354-908-01	SPRING (CASSETTE RETAINER)		515	* X-3356-608-1	LEVER (LIFTER) ASSY	
503	3-558-708-21	WASHER, STOPPER		516	3-356-713-01	WASHER	
504	* 3-356-717-01	LEVER (JOINT)		517	3-356-619-01	SPRING (B), TORSION	
505	3-362-308-01	CAP (REEL)		518	3-356-710-01	SHAFT (LEFT) (CASSETTE HOLDER)	
506	X-3356-627-1	GEAR (T) ASSY		519	3-356-714-01	WASHER	
507	X-3356-613-1	PLATE ASSY, ORNAMENTAL		520	X-3356-628-1	GEAR (S) ASSY	
508	X-3343-455-1	LEVER (PINCH F) ASSY		521	3-712-786-01	DAMPER, OIL	
509	X-3343-456-1	LEVER (PINCH R) ASSY		522	3-356-626-01	SPRING, TENSION	
510	X-3362-957-1	GEAR ASSY, LOADING		523	3-356-625-01	SPRING, TENSION	
511	X-3356-641-1	LEVER (FR2) ASSY		D1051	8-719-980-85	DIODE SLF-325C	
512	3-669-465-11	WASHER (1.5), STOPPER		HRPE1001	A-2003-772-A	BASE ASSY, HEAD	
513	3-356-614-01	SLIDER (BRAKE)					

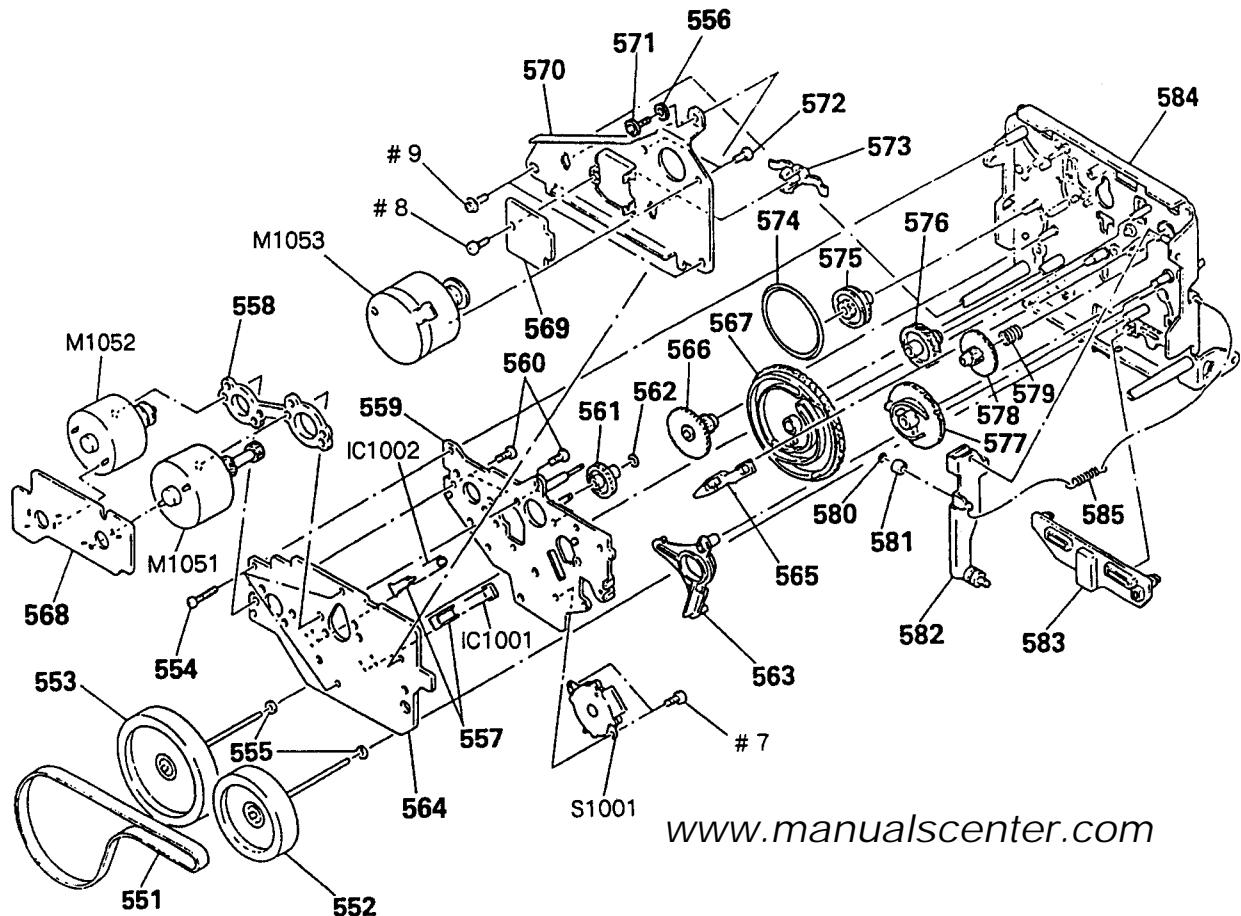**6-3. MECHANISM SECTION-2
(TCM-200R8)**



www.manualscenter.com

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
551	3-356-730-01	BELT (CAPSTAN R2)		571	3-356-707-01	SCREW (+PTPWH 2X25)	
552	X-3356-642-1	FLYWHEEL (R FWD) ASSY		572	4-885-599-00	SCREW, FITTING, REINFORCEMENT	
553	X-3356-643-1	FLYWHEEL (R REV) ASSY		573	3-575-321-00	RETAINER, THRUST, CAPSTAN	
554	3-355-801-01	SCREW (BTP 2X18)		574	3-356-603-01	BELT (MODE)	
555	3-356-705-01	WASHER (CAPSTAN)		575	3-356-607-01	PULLEY (MODE)	
556	* 3-356-718-01	SPACER (THRUST RETAINER R)		576	3-356-703-01	GEAR (COMMUNICATION C)	
557	3-356-631-01	HOLDER (SENSOR)		577	3-356-616-01	GEAR (LOADING CAM)	
558	* 3-356-628-01	SPACER (MOTOR)		578	3-356-609-01	GEAR (LOADING)	
559	* X-3356-602-4	BRACKET (MOTOR R) ASSY		579	3-356-605-01	SPRING, COMPRESSION	
560	3-363-804-01	SCREW (+P 2.6X6.5)		580	3-558-708-11	WASHER, STOPPER	
561	3-356-702-01	GEAR (COMMUNICATION B)		581	3-356-630-01	ROLLER (LOADING)	
562	3-669-465-00	WASHER (1.5), STOPPER		582	* X-3356-606-1	LEVER (LOADING) ASSY	
563	3-356-613-01	LEVER (MODE)		583	3-356-612-01	SLIDER (REVERSE)	
564	* 1-632-740-11	MD BOARD		584	X-3356-634-1	CHASSIS (R2) COMPLETE ASSY, MECH	
565	3-356-617-01	LEVER (SELECTION)		585	3-356-624-01	SPRING, TENSION	
566	3-356-606-01	GEAR (MODE)		IC1001	8-749-920-97	IC PHOTO REFLECTOR GP2S22B	
567	3-356-615-01	GEAR (MODE CAM RR)		IC1002	8-749-920-97	IC PHOTO REFLECTOR GP2S22B	
568	* 1-632-741-11	REEL MOTOR BOARD		M1051	X-3356-638-1	MOTOR (REEL R) ASSY	
569	* 1-634-323-11	TRANSLATION BOARD		M1052	X-3356-604-1	MOTOR (ASSIST) ASSY	
570	* 3-356-629-01	BRACKET (THRUST RETAINER R)		M1053	X-3356-635-1	MOTOR (CAPSTAN R2) ASSY	
				S1001	1-466-525-11	ENCODER, ROTARY	

SECTION 7

ELECTRICAL PARTS LIST

NOTE :

The components identified by mark \triangle or dotted line with mark \triangle are critical for safety.
Replace only with part number specified.

When indicating parts by reference number, please include the board name.

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- - XX, - X mean standardized parts, so they may have some difference from the original one.
- RESISTORS
All resistors are in ohms.
METAL : metal-film resistor
METAL OXIDE: Metal Oxide-film resistor
F: nonflammable
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- SEMICONDUCTORS
In each case, u : μ , for example :
uA... : μ A..., uPA... , μ PA... ,
uPB... , μ PB... , uPC... , μ PC... ,
uPD... , μ PD...
- CAPACITORS :
uF : μ F
- COILS
uH : μ H

Ref. No.	Part No.	Description			Remarks	Ref. No.	Part No.	Description			Remarks
	* A-2006-452-A	MAIN BOARD, COMPLETE				C202	1-136-157-00	FILM	0.022uF	5%	50V
		*****				C203	1-124-282-00	ELECT	22uF	20%	25V
	* 1-573-496-11	HOUSING, CONNECTOR 12P				C205	1-136-158-00	FILM	0.027uF	5%	50V
	* 1-573-497-11	PIN, CONNECTOR (PC BOARD) 12P				C206	1-162-294-31	CERAMIC	0.001uF	10%	50V
	* 3-356-925-01	HEAT SINK				C207	1-124-907-11	ELECT	10uF	20%	50V
	7-682-547-04	SCREW +BVTT 3X6 (S)				C208	1-126-233-11	ELECT	22uF	20%	50V
	(CAPACITOR)					C209	1-130-475-00	MYLAR	0.0022uF	5%	50V
C101	1-162-294-31	CERAMIC	0.001uF	10%	50V	C210	1-130-475-00	MYLAR	0.0022uF	5%	50V
C102	1-136-157-00	FILM	0.022uF	5%	50V	C211	1-136-174-00	FILM	0.56uF	5%	50V
C103	1-124-282-00	ELECT	22uF	20%	25V	C212	1-136-171-00	FILM	0.33uF	5%	50V
C105	1-136-158-00	FILM	0.027uF	5%	50V	C213	1-124-907-11	ELECT	10uF	20%	50V
C106	1-162-294-31	CERAMIC	0.001uF	10%	50V	C214	1-124-902-00	ELECT	0.47uF	20%	50V
C107	1-124-907-11	ELECT	10uF	20%	50V	C215	1-124-927-11	ELECT	4.7uF	20%	100V
C108	1-126-233-11	ELECT	22uF	20%	50V	C216	1-124-927-11	ELECT	4.7uF	20%	100V
C109	1-130-475-00	MYLAR	0.0022uF	5%	50V	C217	1-124-925-11	ELECT	2.2uF	20%	100V
C110	1-130-475-00	MYLAR	0.0022uF	5%	50V	C218	1-162-285-31	CERAMIC	180PF	10%	50V
C111	1-136-174-00	FILM	0.56uF	5%	50V	C219	1-136-935-11	FILM	22PF	5%	630V
C112	1-136-171-00	FILM	0.33uF	5%	50V	C220	1-130-468-00	MYLAR	560PF	5%	50V
C113	1-124-907-11	ELECT	10uF	20%	50V	C221	1-136-433-11	FILM	100PF	5%	630V
C114	1-124-902-00	ELECT	0.47uF	20%	50V	C222	1-136-272-00	FILM	68PF	5%	630V
C115	1-124-927-11	ELECT	4.7uF	20%	100V	C223	1-136-153-00	FILM	0.01uF	5%	50V
C116	1-124-927-11	ELECT	4.7uF	20%	100V	C224	1-136-165-00	FILM	0.1uF	5%	50V
C117	1-124-925-11	ELECT	2.2uF	20%	100V	C225	1-136-157-00	FILM	0.022uF	5%	50V
C118	1-162-285-31	CERAMIC	180PF	10%	50V	C301	1-124-443-00	ELECT	100uF	20%	10V
C119	1-136-935-11	FILM	22PF	5%	630V	C302	1-124-443-00	ELECT	100uF	20%	10V
C120	1-130-468-00	MYLAR	560PF	5%	50V	C303	1-124-907-11	ELECT	10uF	20%	50V
C121	1-136-433-11	FILM	100PF	5%	630V	C304	1-124-907-11	ELECT	10uF	20%	50V
C122	1-136-272-00	FILM	68PF	5%	630V	C305	1-124-478-11	ELECT	100uF	20%	25V
C123	1-136-153-00	FILM	0.01uF	5%	50V	C306	1-124-925-11	ELECT	2.2uF	20%	100V
C124	1-136-165-00	FILM	0.1uF	5%	50V	C307	1-124-902-00	ELECT	0.47uF	20%	50V
C125	1-136-157-00	FILM	0.022uF	5%	50V	C308	1-162-215-31	CERAMIC	47PF	5%	50V
C201	1-162-294-31	CERAMIC	0.001uF	10%	50V	C309	1-161-494-00	CERAMIC	0.022uF	25V	
						C310	1-162-286-31	CERAMIC	220PF	10%	50V
						C311	1-124-925-11	ELECT	2.2uF	20%	100V
						C312	1-124-477-11	ELECT	47uF	20%	25V

Ref. No.	Part No.	Description	Remarks			Ref. No.	Part No.	Description	Remarks
C313	1-124-902-00	ELECT	0.47uF	20%	50V	< DIODE >			
C314	1-124-478-11	ELECT	100uF	20%	25V	D101	8-719-912-20	DIODE	1SS120
C315	1-124-478-11	ELECT	100uF	20%	25V	D201	8-719-912-20	DIODE	1SS120
C316	1-130-856-00	FILM	0.0068uF	5%	100V	D301	8-719-912-20	DIODE	1SS120
C317	1-136-230-00	FILM	0.0022uF	5%	100V	D302	8-719-912-20	DIODE	1SS120
C318	1-136-230-00	FILM	0.0022uF	5%	100V	D303	8-719-912-20	DIODE	1SS120
C319	1-124-907-11	ELECT	10uF	20%	50V	D304	8-719-933-50	DIODE	HZS7C2L
C320	1-161-494-00	CERAMIC	0.022uF	5%	25V	D305	8-719-912-20	DIODE	1SS120
C321	1-136-558-11	FILM	0.0039uF	5%	630V	D306	8-719-912-20	DIODE	1SS120
C322	1-107-046-00	MICA	4.7PF		500V	D307	8-719-912-20	DIODE	1SS120
C701	1-124-443-00	ELECT	100uF	20%	10V	D308	8-719-912-20	DIODE	1SS120
C702	1-164-159-11	CERAMIC	0.1uF		50V	D309	8-719-912-20	DIODE	1SS120
C703	1-164-159-11	CERAMIC	0.1uF		50V	D601	8-719-301-38	DIODE	SEL2210S-C(AUTO REC LEVEL)
C704	1-164-159-11	CERAMIC	0.1uF		50V	D701	8-719-912-20	DIODE	1SS120
C705	1-124-443-00	ELECT	100uF	20%	10V	D702	8-719-912-20	DIODE	1SS120
C706	1-124-925-11	ELECT	2.2uF	20%	100V	D703	8-719-933-50	DIODE	HZS7C2L
C707	1-164-159-11	CERAMIC	0.1uF		50V	D704	8-719-933-50	DIODE	HZS7C2L
C708	1-136-165-00	FILM	0.1uF	5%	50V	D705	8-719-933-50	DIODE	HZS7C2L
C709	1-136-165-00	FILM	0.1uF	5%	50V	D706	8-719-933-50	DIODE	HZS7C2L
C720	1-164-159-11	CERAMIC	0.1uF		50V	D707	8-719-933-50	DIODE	HZS7C2L
C750	1-161-494-00	CERAMIC	0.022uF		25V	D708	8-719-933-50	DIODE	HZS7C2L
C751	1-161-494-00	CERAMIC	0.022uF		25V	D709	8-719-933-50	DIODE	HZS7C2L
C752	1-161-494-00	CERAMIC	0.022uF		25V	D710	8-719-933-50	DIODE	HZS7C2L
C753	1-161-494-00	CERAMIC	0.022uF		25V	D711	8-719-933-50	DIODE	HZS7C2L
C754	1-161-494-00	CERAMIC	0.022uF		25V	D712	8-719-933-50	DIODE	HZS7C2L
C801	1-124-907-11	ELECT	10uF	20%	50V	D713	8-719-912-20	DIODE	1SS120
C802	1-136-594-11	FILM	0.018uF	5%	100V	D714	8-719-912-20	DIODE	1SS120
C803	1-124-907-11	ELECT	10uF	20%	50V	D720	8-719-200-77	DIODE	10E2N
< CONNECTOR >									
CN701	* 1-568-834-11	SOCKET, CONNECTOR 15P				D721	8-719-200-77	DIODE	10E2N
CN702	* 1-568-834-11	SOCKET, CONNECTOR 15P				D722	8-719-200-77	DIODE	10E2N
CNP301	* 1-564-705-11	PIN, CONNECTOR (SMALL TYPE) 3P				D750	8-719-933-47	DIODE	HZS7B2L
CNP302	* 1-564-705-11	PIN, CONNECTOR (SMALL TYPE) 3P				D751	8-719-933-47	DIODE	HZS7B2L
CNP303	* 1-564-708-11	PIN, CONNECTOR (SMALL TYPE) 6P				D752	8-719-912-20	DIODE	1SS120
CNP304	* 1-564-511-11	PLUG, CONNECTOR 8P				D753	8-719-912-20	DIODE	1SS120
CNP305	* 1-564-518-11	PLUG, CONNECTOR 3P				D801	8-719-109-89	DIODE	RD5.6ESB2
CNP702	* 1-564-339-00	PIN, CONNECTOR 5P				D802	8-719-200-77	DIODE	10E2N
CNP703	* 1-564-505-11	PLUG, CONNECTOR 2P				D803	8-719-200-77	DIODE	10E2N
< COMPOSITION CIRCUIT BLOCK >									
CP701	1-233-199-11	COMPOSITION CIRCUIT BLOCK				D804	8-719-200-77	DIODE	10E2N
CP702	1-233-199-11	COMPOSITION CIRCUIT BLOCK				D805	8-719-200-77	DIODE	10E2N
CP703	1-233-944-11	COMPOSITION CIRCUIT BLOCK							

MAIN

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remarks</u>	<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remarks</u>
< IC >							
IC301	8-759-111-44	IC uPC4570C-1		Q310	8-729-900-65	TRANSISTOR DTA144ES	
IC302	8-752-036-34	IC CXA1330S		Q311	8-729-900-61	TRANSISTOR DTA114ES	
IC303	8-752-038-02	IC CXA1198AP		Q312	8-729-900-80	TRANSISTOR DTC114ES	
IC304	8-759-945-58	IC RC4558P		Q313	8-729-900-80	TRANSISTOR DTC114ES	
IC305	8-759-945-58	IC RC4558P		Q314	8-729-900-80	TRANSISTOR DTC114ES	
IC306	8-759-106-56	IC uPC1297CA		Q315	8-729-821-04	TRANSISTOR 2SA1317-STU	
IC701	8-759-633-86	IC M50747-B83SP		Q316	8-729-194-57	TRANSISTOR 2SC945-P	
IC702	8-759-634-79	IC M50944-155SP		Q317	8-729-194-57	TRANSISTOR 2SC945-P	
IC703	8-759-973-95	IC BA6219B		Q318	8-729-900-65	TRANSISTOR DTA144ES	
IC704	8-759-822-09	IC LB1641		Q701	8-729-900-80	TRANSISTOR DTC114ES	
IC705	8-759-240-69	IC TC4069UBP		Q702	8-729-900-80	TRANSISTOR DTC114ES	
IC706	8-759-822-09	IC LB1641		Q703	8-729-900-80	TRANSISTOR DTC114ES	
< COIL >							
L101	1-410-780-11	INDUCTOR 27mH		Q704	8-729-820-24	TRANSISTOR 2SC3330-T	
L201	1-410-780-11	INDUCTOR 27mH		Q705	8-729-820-24	TRANSISTOR 2SC3330-T	
L301	1-408-080-00	INDUCTOR 100uH		Q706	8-729-900-89	TRANSISTOR DTC144ES	
L801	1-410-761-11	INDUCTOR 0.68mH		Q707	8-729-821-04	TRANSISTOR 2SA1317-STU	
L802	1-408-575-11	INDUCTOR 100uH		Q708	8-729-900-61	TRANSISTOR DTA114ES	
L803	1-408-575-11	INDUCTOR 100uH		Q709	8-729-900-61	TRANSISTOR DTA114ES	
< FILTER >							
< RESISTOR >							
LPF101	1-236-087-11	FILTER, LOW PASS		R101	1-249-435-11	CARBON 33K 5% 1/4W	
LPF201	1-236-087-11	FILTER, LOW PASS		R102	1-249-403-11	CARBON 68 5% 1/4W	
< TRANSISTOR >							
Q101	8-729-900-89	TRANSISTOR DTC144ES		R103	1-247-882-11	CARBON 130K 5% 1/4W	
Q102	8-729-900-74	TRANSISTOR DTC143TS		R104	1-249-426-11	CARBON 5.6K 5% 1/4W	
Q103	8-729-821-31	TRANSISTOR 2SD1012-FG		R105	1-249-420-11	CARBON 1.8K 5% 1/4W	
Q201	8-729-900-89	TRANSISTOR DTC144ES		R107	1-247-887-00	CARBON 220K 5% 1/4W	
Q202	8-729-900-74	TRANSISTOR DTC143TS		R108	1-247-840-00	CARBON 2.4K 5% 1/4W	
Q203	8-729-821-31	TRANSISTOR 2SD1012-FG		R110	1-249-423-11	CARBON 3.3K 5% 1/4W	
Q301	8-729-900-65	TRANSISTOR DTA144ES		R111	1-249-428-11	CARBON 8.2K 5% 1/4W	
Q302	8-729-900-89	TRANSISTOR DTC144ES		R112	1-247-864-11	CARBON 24K 5% 1/4W	
Q303	8-729-900-89	TRANSISTOR DTC144ES		R113	1-249-414-11	CARBON 560 5% 1/4W	
Q304	8-729-820-24	TRANSISTOR 2SC3330-T		R114	1-249-417-11	CARBON 1K 5% 1/4W	
Q305	8-729-900-89	TRANSISTOR DTC144ES		R115	1-247-846-11	CARBON 4.3K 5% 1/4W	
Q306	8-729-821-04	TRANSISTOR 2SA1317-STU		R116	1-249-423-11	CARBON 3.3K 5% 1/4W	
Q307	8-729-900-65	TRANSISTOR DTA144ES		R117	1-249-417-11	CARBON 1K 5% 1/4W	
Q308	8-729-900-65	TRANSISTOR DTA144ES					
Q309	8-729-900-89	TRANSISTOR DTC144ES					

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
R118	1-249-429-11	CARBON	10K 5% 1/4W	R304	1-249-435-11	CARBON	33K 5% 1/4W
R119	1-249-425-11	CARBON	4.7K 5% 1/4W	R305	1-249-436-11	CARBON	39K 5% 1/4W
R120	1-249-421-11	CARBON	2.2K 5% 1/4W	R306	1-247-880-11	CARBON	110K 5% 1/4W
R121	1-249-429-11	CARBON	10K 5% 1/4W	R307	1-247-885-00	CARBON	180K 5% 1/4W
R122	1-249-425-11	CARBON	4.7K 5% 1/4W	R308	1-249-436-11	CARBON	39K 5% 1/4W
R124	1-249-429-11	CARBON	10K 5% 1/4W	R309	1-247-881-00	CARBON	120K 5% 1/4W
R125	1-249-437-11	CARBON	47K 5% 1/4W	R310	1-247-874-11	CARBON	62K 5% 1/4W
R126	1-249-431-11	CARBON	15K 5% 1/4W	R311	1-247-872-11	CARBON	51K 5% 1/4W
R127	1-249-409-11	CARBON	220 5% 1/4W	R312	1-247-889-00	CARBON	270K 5% 1/4W
R128	1-249-428-11	CARBON	8.2K 5% 1/4W	R313	1-247-883-00	CARBON	150K 5% 1/4W
R129	1-247-883-00	CARBON	150K 5% 1/4W	R314	1-247-870-11	CARBON	43K 5% 1/4W
R130	1-249-393-11	CARBON	10 5% 1/4W	R315	1-247-893-11	CARBON	390K 5% 1/4W
R131	1-249-432-11	CARBON	18K 5% 1/4W	R316	1-249-438-11	CARBON	56K 5% 1/4W
R132	1-249-439-11	CARBON	10K 5% 1/4W	R317	1-247-872-11	CARBON	51K 5% 1/4W
R201	1-249-435-11	CARBON	33K 5% 1/4W	R318	1-247-876-11	CARBON	75K 5% 1/4W
R202	1-249-403-11	CARBON	68 5% 1/4W	R319	1-249-441-11	CARBON	100K 5% 1/4W
R203	1-247-882-11	CARBON	130K 5% 1/4W	R320	1-249-438-11	CARBON	56K 5% 1/4W
R204	1-249-426-11	CARBON	5.6K 5% 1/4W	R321	1-247-881-00	CARBON	120K 5% 1/4W
R205	1-249-420-11	CARBON	1.8K 5% 1/4W	R322	1-249-433-11	CARBON	22K 5% 1/4W
R207	1-247-887-00	CARBON	220K 5% 1/4W	R323	1-249-409-11	CARBON	220 5% 1/4W
R208	1-247-840-00	CARBON	2.4K 5% 1/4W	R324	1-249-433-11	CARBON	22K 5% 1/4W
R210	1-249-423-11	CARBON	3.3K 5% 1/4W	R325	1-249-433-11	CARBON	22K 5% 1/4W
R211	1-249-428-11	CARBON	8.2K 5% 1/4W	R326	1-249-425-11	CARBON	4.7K 5% 1/4W
R212	1-247-864-11	CARBON	24K 5% 1/4W	R327	1-247-887-00	CARBON	220K 5% 1/4W
R213	1-249-414-11	CARBON	560 5% 1/4W	R328	1-249-429-11	CARBON	10K 5% 1/4W
R215	1-247-846-11	CARBON	4.3K 5% 1/4W	R329	1-249-441-11	CARBON	100K 5% 1/4W
R216	1-249-423-11	CARBON	3.3K 5% 1/4W	R330	1-249-428-11	CARBON	8.2K 5% 1/4W
R217	1-249-417-11	CARBON	1K 5% 1/4W	R331	1-249-423-11	CARBON	3.3K 5% 1/4W
R218	1-249-429-11	CARBON	10K 5% 1/4W	R332	1-249-417-11	CARBON	1K 5% 1/4W
R219	1-249-425-11	CARBON	4.7K 5% 1/4W	R333	1-249-441-11	CARBON	100K 5% 1/4W
R220	1-249-421-11	CARBON	2.2K 5% 1/4W	R334	1-249-441-11	CARBON	100K 5% 1/4W
R221	1-249-429-11	CARBON	10K 5% 1/4W	R335	1-249-419-11	CARBON	1.5K 5% 1/4W
R222	1-249-425-11	CARBON	4.7K 5% 1/4W	R336	1-247-850-11	CARBON	6.2K 5% 1/4W
R224	1-249-429-11	CARBON	10K 5% 1/4W	R337	1-249-421-11	CARBON	2.2K 5% 1/4W
R225	1-249-437-11	CARBON	47K 5% 1/4W	R338	1-249-429-11	CARBON	10K 5% 1/4W
R226	1-249-431-11	CARBON	15K 5% 1/4W	R339	1-249-429-11	CARBON	10K 5% 1/4W
R227	1-249-409-11	CARBON	220 5% 1/4W	R340	1-249-437-11	CARBON	47K 5% 1/4W
R228	1-249-428-11	CARBON	8.2K 5% 1/4W	R341	1-249-437-11	CARBON	47K 5% 1/4W
R229	1-247-883-00	CARBON	150K 5% 1/4W	R342	△1-212-851-00	FUSIBLE	5.6 5% 1/4W F
R230	1-249-393-11	CARBON	10 5% 1/4W	R343	1-215-455-00	METAL	27K 1% 1/6W
R231	1-247-432-11	CARBON	18K 5% 1/4W	R344	1-247-864-11	CARBON	24K 5% 1/4W
R232	1-249-439-11	CARBON	10K 5% 1/4W	R345	1-249-437-11	CARBON	47K 5% 1/4W
R301	1-249-409-11	CARBON	220 5% 1/4W	R601	1-249-410-11	CARBON	270 5% 1/4W
R302	1-249-409-11	CARBON	220 5% 1/4W	R602	1-249-415-11	CARBON	680 5% 1/4W
R303	1-249-433-11	CARBON	22K 5% 1/4W	R701	1-249-429-11	CARBON	10K 5% 1/4W

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remarks</u>	<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remarks</u>
R702	1-249-429-11	CARBON	10K 5% 1/4W	R748	1-249-429-11	CARBON	10K 5% 1/4W
R703	1-249-425-11	CARBON	4.7K 5% 1/4W	R749	1-249-429-11	CARBON	10K 5% 1/4W
R704	1-249-425-11	CARBON	4.7K 5% 1/4W	R771	1-249-405-11	CARBON	100 5% 1/4W
R705	1-249-425-11	CARBON	4.7K 5% 1/4W	R772	1-249-405-11	CARBON	100 5% 1/4W
R706	1-247-903-00	CARBON	1M 5% 1/4W	R773	1-249-405-11	CARBON	100 5% 1/4W
R707	1-249-433-11	CARBON	22K 5% 1/4W	R780	1-249-433-11	CARBON	22K 5% 1/4W
R708	1-249-411-11	CARBON	330 5% 1/4W	R801	1-249-431-11	CARBON	15K 5% 1/4W
R709	1-247-830-11	CARBON	910 5% 1/4W	R802	1-249-431-11	CARBON	15K 5% 1/4W
R710	1-249-418-11	CARBON	1.2K 5% 1/4W				< VARIABLE RESISTOR >
R711	1-249-417-11	CARBON	1K 5% 1/4W				
R712	△1-212-950-00	FUSIBLE	4.7 5% 1/2W F	RV101	1-238-597-11	RES, ADJ, CARBON 1K	
R713	1-249-421-11	CARBON	2.2K 5% 1/4W	RV102	1-238-600-11	RES, ADJ, CARBON 10K	
R714	1-249-419-11	CARBON	1.5K 5% 1/4W	RV103	1-238-601-11	RES, ADJ, CARBON 22K	
R715	1-249-417-11	CARBON	1K 5% 1/4W	RV201	1-238-597-11	RES, ADJ, CARBON 1K	
R716	△1-212-950-00	FUSIBLE	4.7 5% 1/2W F	RV202	1-238-600-11	RES, ADJ, CARBON 10K	
R717	1-249-436-11	CARBON	39K 5% 1/4W	RV203	1-238-601-11	RES, ADJ, CARBON 22K	
R718	1-249-436-11	CARBON	39K 5% 1/4W	RV301	1-241-232-11	RES, VAR, CARBON 20K/20K/20K(REC LEVEL)	
R719	1-247-887-00	CARBON	220K 5% 1/4W				< RELAY >
R720	1-247-887-00	CARBON	220K 5% 1/4W				
R721	1-249-425-11	CARBON	4.7K 5% 1/4W	RY301	1-515-726-11	RELAY	
R722	1-249-425-11	CARBON	4.7K 5% 1/4W				< SWITCH >
R724	1-249-433-11	CARBON	22K 5% 1/4W				
R725	1-247-903-00	CARBON	1M 5% 1/4W	S601	1-554-303-21	SWITCH, TACTILE (AUTO REC LEVEL)	
R726	1-249-429-11	CARBON	10K 5% 1/4W	S605	1-554-303-21	SWITCH, TACTILE (△ OPEN/CLOSE)	
R727	1-249-425-11	CARBON	4.7K 5% 1/4W				
R728	1-249-425-11	CARBON	4.7K 5% 1/4W				< TRANSFORMER >
R729	1-249-425-11	CARBON	4.7K 5% 1/4W				
R730	1-249-433-11	CARBON	22K 5% 1/4W	T101	1-433-335-11	TRANSFORMER, BIAS OSCILLATION	
R731	1-249-433-11	CARBON	22K 5% 1/4W	T201	1-433-335-11	TRANSFORMER, BIAS OSCILLATION	
R732	1-249-424-11	CARBON	3.9K 5% 1/4W	T301	1-433-336-11	TRANSFORMER, BIAS OSCILLATION	
R733	1-249-429-11	CARBON	10K 5% 1/4W	T801	1-450-673-11	TRANSFORMER, DC-DC CONVERTER	
R734	1-249-441-11	CARBON	100K 5% 1/4W				< CRYSTAL >
R735	1-249-439-11	CARBON	68K 5% 1/4W				
R736	1-249-417-11	CARBON	1K 5% 1/4W	X701	1-577-358-21	VIBRATOR, CERAMIC 4MHz	
R737	1-249-417-11	CARBON	1K 5% 1/4W	X702	1-577-358-21	VIBRATOR, CERAMIC 4MHz	
R738	△1-212-950-00	FUSIBLE	4.7 5% 1/2W F				
R739	1-249-429-11	CARBON	10K 5% 1/4W				*****
R740	1-249-429-11	CARBON	10K 5% 1/4W				*****
R741	1-249-415-11	CARBON	680 5% 1/4W				* 1-632-740-11 MD BOARD
R742	1-249-420-11	CARBON	1.8K 5% 1/4W				*****
R743	1-249-410-11	CARBON	270 5% 1/4W				3-356-631-01 HOLDER (SENSOR)
R744	1-249-421-11	CARBON	2.2K 5% 1/4W				
R745	1-249-421-11	CARBON	2.2K 5% 1/4W				< CONNECTOR >
R746	1-249-421-11	CARBON	2.2K 5% 1/4W				
R747	1-249-421-11	CARBON	2.2K 5% 1/4W	CN1001	1-506-615-11	PIN, CONNECTOR 9P	
				CN1002	* 1-564-502-11	PIN, CONNECTOR 10P	

MD PANEL

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>			<u>Remarks</u>	<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>			<u>Remarks</u>	
TB1001 *	1-569-066-11	PIN, CONNECTOR 5P				D603	8-719-988-62	DIODE	1SS355			
		< IC >						< INDICATOR >				
IC1001	8-749-920-97	IC PHOTO REFLECTOR GP2S22B(SUPPLY REEL)				FL601	1-519-656-11	INDICATOR TUBE, FLUORESCENT				
IC1002	8-749-920-97	IC PHOTO REFLECTOR GP2S22B (TAKE UP REEL)						< IC >				
		< RESISTOR >				IC601	8-759-323-62	IC	HD614023FA89			
R1001	1-249-408-11	CARBON	180	5%	1/4W			< RESISTOR >				
R1002	1-249-408-11	CARBON	180	5%	1/4W	R603	1-216-059-00	METAL CHIP	2.7K	5%	1/10W	
		< SWITCH >				R604	1-216-055-00	METAL CHIP	1.8K	5%	1/10W	
S1001	1-466-526-11	ENCODER, ROTARY				R605	1-216-063-00	METAL CHIP	3.9K	5%	1/10W	
S1002	1-570-953-11	SWITCH, PUSH (1 KEY) (DOOR)				R606	1-216-029-00	METAL CHIP	150	5%	1/10W	
S1003	1-571-958-11	SWITCH, PUSH (1 KEY) (CLOSE)				R607	1-216-033-00	METAL CHIP	220	5%	1/10W	
S1004	1-572-126-11	SWITCH, PUSH (1 KEY) (OPEN)				R608	1-216-037-00	METAL CHIP	330	5%	1/10W	
S1005	1-572-125-11	SWITCH, LEAF (FWD TAB)				R609	1-216-041-00	METAL CHIP	470	5%	1/10W	
S1006	1-572-202-11	SWITCH, LEAF (HALF)				R610	1-216-045-00	METAL CHIP	680	5%	1/10W	
S1007	1-572-125-11	SWITCH, LEAF (METAL)				R611	1-216-065-00	METAL CHIP	4.7K	5%	1/10W	
S1008	1-572-125-11	SWITCH, LEAF (70uS)				R612	1-216-051-00	METAL CHIP	1.2K	5%	1/10W	
S1009	1-572-125-11	SWITCH, LEAF (REV TAB)				R613	1-216-059-00	METAL CHIP	2.7K	5%	1/10W	

* A-2006-453-A	PANEL BOARD, COMPLETE			R614	1-216-063-00	METAL CHIP	3.9K	5%	1/10W			
	*****			R615	1-216-081-00	METAL CHIP	22K	5%	1/10W			
* 3-368-109-01	HOLDER, FL TUBE			R616	1-216-121-00	METAL CHIP	1M	5%	1/10W			
* 4-921-941-01	CUSHION (FL)			R617	1-216-049-00	METAL CHIP	1K	5%	1/10W			
		< CAPACITOR >				R618	1-216-081-00	METAL CHIP	22K	5%	1/10W	
C601	1-164-232-11	CERAMIC CHIP	0.01uF		50V	R619	1-216-025-00	METAL CHIP	100	5%	1/10W	
C602	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V	R620	1-216-025-00	METAL CHIP	100	5%	1/10W	
C603	1-163-137-00	CERAMIC CHIP	680P	10%	50V	R621	1-216-025-00	METAL CHIP	100	5%	1/10W	
C604	1-163-137-00	CERAMIC CHIP	680P	10%	50V	R622	1-216-025-00	METAL CHIP	100	5%	1/10W	
C605	1-163-137-00	CERAMIC CHIP	680P	10%	50V			< SWITCH >				
C606	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V	S602	1-554-303-21	SWITCH, TACTILE (◀◀)				
		< CONNECTOR >				S603	1-554-303-21	SWITCH, TACTILE (▶▶)				
CN601	* 1-568-858-11	SOCKET, CONNECTOR 15P				S604	1-554-303-21	SWITCH, TACTILE (● REC)				
CNP601	* 1-564-495-11	PIN, CONNECTOR 2P				S606	1-554-303-21	SWITCH, TACTILE (□)				
		< DIODE >				S607	1-554-303-21	SWITCH, TACTILE (▷)				
D601	8-719-301-38	DIODE	SEL2210-C			S608	1-554-303-21	SWITCH, TACTILE (◀)				
D602	8-719-988-62	DIODE	1SS355			S609	1-554-303-21	SWITCH, TACTILE (■ PAUSE)				
		< CRYSTAL >				S610	1-554-303-21	SWITCH, TACTILE (● MUTE)				
						S611	1-554-303-21	SWITCH, TACTILE (COUNTER RESET)				
						S612	1-570-834-11	SWITCH, SLIDE (DOLBY NR)				
						S613	1-570-842-11	SWITCH, SLIDE (DIRECTION MODE)				
X601	1-577-359-21	VIBRATOR, CERAMIC	4.19MHz									

PIN JACK

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks						
***** * A-2006-548-A PIN JACK BOARD, COMPLETE *****													
C401	1-163-003-11	CERAMIC CHIP	330PF	10%	50V	C487	1-164-232-11	CERAMIC CHIP	0.01uF	50V			
C402	1-163-003-11	CERAMIC CHIP	330PF	10%	50V	C488	1-164-232-11	CERAMIC CHIP	0.01uF	50V			
C403	1-163-003-11	CERAMIC CHIP	330PF	10%	50V	C489	1-164-232-11	CERAMIC CHIP	0.01uF	50V			
C404	1-163-003-11	CERAMIC CHIP	330PF	10%	50V	C490	1-164-232-11	CERAMIC CHIP	0.01uF	50V			
C405	1-163-003-11	CERAMIC CHIP	330PF	10%	50V	C491	1-164-232-11	CERAMIC CHIP	0.01uF	50V			
< CAPACITOR >													
C407	1-163-117-00	CERAMIC CHIP	100PF	5%	50V	C492	1-164-232-11	CERAMIC CHIP	0.01uF	50V			
C409	1-124-465-00	ELECT	0.47uF	20%	50V	C493	1-164-232-11	CERAMIC CHIP	0.01uF	50V			
C410	1-163-125-00	CERAMIC CHIP	220PF	5%	50V	C494	1-164-232-11	CERAMIC CHIP	0.01uF	50V			
C411	1-126-163-11	ELECT	4.7uF	20%	50V	C495	1-164-232-11	CERAMIC CHIP	0.01uF	50V			
C412	1-163-018-00	CERAMIC CHIP	0.0056uF	5%	50V	C496	1-164-232-11	CERAMIC CHIP	0.01uF	50V			
C413	1-163-011-11	CERAMIC CHIP	0.0015uF	10%	50V	C497	1-126-301-11	ELECT	1uF	20%	50V		
C414	1-124-257-00	ELECT	2.2uF	20%	50V	C4001	1-163-119-00	CERAMIC CHIP	120PF	5%	50V		
C416	1-163-117-00	CERAMIC CHIP	100PF	5%	50V	C4002	1-163-119-00	CERAMIC CHIP	120PF	5%	50V		
C417	1-163-117-00	CERAMIC CHIP	100PF	5%	50V	C4003	1-124-589-11	ELECT	47uF	20%	16V		
C418	1-126-157-11	ELECT	10uF	20%	16V	C4010	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V		
< CONNECTOR >													
C419	1-126-157-11	ELECT	10uF	20%	16V	C4013	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V		
C451	1-163-003-11	CERAMIC CHIP	330PF	10%	50V	C4020	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V		
C452	1-163-003-11	CERAMIC CHIP	330PF	10%	50V	C4021	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V		
C453	1-163-003-11	CERAMIC CHIP	330PF	10%	50V	C4022	1-124-589-11	ELECT	47uF	20%	16V		
C454	1-163-003-11	CERAMIC CHIP	330PF	10%	50V								
< DIODE >													
C455	1-163-003-11	CERAMIC CHIP	330PF	10%	50V	D401	8-719-990-36	DIODE	DCA010				
C457	1-163-117-00	CERAMIC CHIP	100PF	5%	50V	D403	8-719-210-33	DIODE	EC10DS2				
C459	1-124-465-00	ELECT	0.47uF	20%	50V	D404	8-719-210-33	DIODE	EC10DS2				
C460	1-163-125-00	CERAMIC CHIP	220PF	5%	50V	D405	8-719-990-36	DIODE	DCA010				
C461	1-126-163-11	ELECT	4.7uF	20%	50V	D4001	8-719-988-62	DIODE	1SS355				
C462	1-163-018-00	CERAMIC CHIP	0.0056uF	5%	50V	D4002	8-719-988-62	DIODE	1SS355				
C463	1-163-011-11	CERAMIC CHIP	0.0015uF	10%	50V								
C464	1-124-257-00	ELECT	2.2uF	20%	50V								
C466	1-163-117-00	CERAMIC CHIP	100PF	5%	50V								
C467	1-163-117-00	CERAMIC CHIP	100PF	5%	50V								
< IC >													
C468	1-126-012-11	ELECT	470uF	20%	16V	IC401	8-759-636-55	IC	M5218AFP				
C469	1-126-012-11	ELECT	470uF	20%	16V	IC402	8-759-636-55	IC	M5218AFP				
C470	1-126-012-11	ELECT	470uF	20%	16V	IC403	8-759-009-05	IC	MC14051BF				
C481	1-164-232-11	CERAMIC CHIP	0.01uF		50V	IC404	8-759-009-05	IC	MC14051BF				
C482	1-164-232-11	CERAMIC CHIP	0.01uF		50V	IC405	8-759-516-47	IC	CD4066BCM				
C483	1-126-177-11	ELECT	100uF	20%	10V	IC406	8-759-636-35	IC	M50760-315FP				
C484	1-164-232-11	CERAMIC CHIP	0.01uF		50V	IC407	8-759-991-77	IC	BA7625				
C485	1-164-232-11	CERAMIC CHIP	0.01uF		50V								
C486	1-126-157-11	ELECT	10uF	20%	16V								

PIN JACK

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>			<u>Remarks</u>	<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>			<u>Remarks</u>
< JACK >											
J401	1-565-304-11	JACK, PIN 4P	(AUDIO)			R415	1-216-049-00	METAL CHIP	1K	5%	1/10W
J402	* 1-569-812-11	JACK, PIN 6P	(AUDIO)			R417	1-216-089-00	METAL CHIP	47K	5%	1/10W
J403	1-565-933-11	JACK, PIN 3P	(VIDEO)			R418	1-216-049-00	METAL CHIP	1K	5%	1/10W
J404	1-573-144-11	JACK, PIN 2P	(VIDEO)			R419	1-216-115-00	METAL CHIP	560K	5%	1/10W
< JUMPER >											
JW2	1-216-295-00	METAL CHIP	0	5%	1/10W	R420	1-216-089-00	METAL CHIP	47K	5%	1/10W
JW3	1-216-295-00	METAL CHIP	0	5%	1/10W	R421	1-216-001-00	METAL CHIP	10	5%	1/10W
JW8	1-216-295-00	METAL CHIP	0	5%	1/10W	R422	1-216-075-00	METAL CHIP	12K	5%	1/10W
JW10	1-216-295-00	METAL CHIP	0	5%	1/10W	R423	1-216-041-00	METAL CHIP	470	5%	1/10W
JW12	1-216-295-00	METAL CHIP	0	5%	1/10W	R425	1-216-025-00	METAL CHIP	100	5%	1/10W
JW413	1-216-295-00	METAL CHIP	0	5%	1/10W	R426	1-216-089-00	METAL CHIP	47K	5%	1/10W
JW414	1-216-295-00	METAL CHIP	0	5%	1/10W	R427	1-216-089-00	METAL CHIP	47K	5%	1/10W
JW439	1-216-295-00	METAL CHIP	0	5%	1/10W	R428	1-216-089-00	METAL CHIP	47K	5%	1/10W
JW441	1-216-295-00	METAL CHIP	0	5%	1/10W	R429	1-216-089-00	METAL CHIP	47K	5%	1/10W
JM463	1-216-295-00	METAL CHIP	0	5%	1/10W	R430	1-216-089-00	METAL CHIP	47K	5%	1/10W
JW464	1-216-295-00	METAL CHIP	0	5%	1/10W	R431	1-216-022-00	METAL CHIP	75	5%	1/10W
< COIL >											
L401	1-408-789-21	INDUCTOR, CHIP	100uH			R432	1-216-022-00	METAL CHIP	75	5%	1/10W
L4001	1-408-777-00	INDUCTOR, CHIP	10uF			R434	1-216-073-00	METAL CHIP	10K	5%	1/10W
< TRANSISTOR >											
Q401	8-729-805-65	TRANSISTOR	2SA1344			R435	1-216-073-00	METAL CHIP	10K	5%	1/10W
Q402	8-729-805-65	TRANSISTOR	2SA1344			R436	1-216-089-00	METAL CHIP	47K	5%	1/10W
Q403	8-729-602-36	TRANSISTOR	2SA1602-F			R437	1-216-121-00	METAL CHIP	1M	5%	1/10W
Q404	8-729-602-36	TRANSISTOR	2SA1602-F			R440	1-216-089-00	METAL CHIP	47K	5%	1/10W
Q405	8-729-602-36	TRANSISTOR	2SA1602-F			R442	1-216-089-00	METAL CHIP	47K	5%	1/10W
Q406	8-729-602-36	TRANSISTOR	2SA1602-F			R450	1-216-065-00	METAL CHIP	4.7K	5%	1/10W
Q407	8-729-602-21	TRANSISTOR	2SC4154-F			R451	1-216-049-00	METAL CHIP	1K	5%	1/10W
< RESISTOR >											
R401	1-216-049-00	METAL CHIP	1K	5%	1/10W	R452	1-216-049-00	METAL CHIP	1K	5%	1/10W
R402	1-216-049-00	METAL CHIP	1K	5%	1/10W	R453	1-216-049-00	METAL CHIP	1K	5%	1/10W
R403	1-216-049-00	METAL CHIP	1K	5%	1/10W	R454	1-216-041-00	METAL CHIP	470	5%	1/10W
R404	1-216-041-00	METAL CHIP	470	5%	1/10W	R455	1-216-041-00	METAL CHIP	470	5%	1/10W
R405	1-216-041-00	METAL CHIP	470	5%	1/10W	R457	1-216-115-00	METAL CHIP	560K	5%	1/10W
R407	1-216-115-00	METAL CHIP	560K	5%	1/10W	R458	1-216-115-00	METAL CHIP	560K	5%	1/10W
R408	1-216-115-00	METAL CHIP	560K	5%	1/10W	R459	1-216-115-00	METAL CHIP	560K	5%	1/10W
R409	1-216-115-00	METAL CHIP	560K	5%	1/10W	R460	1-216-115-00	METAL CHIP	560K	5%	1/10W
R410	1-216-115-00	METAL CHIP	560K	5%	1/10W	R461	1-216-115-00	METAL CHIP	560K	5%	1/10W
R411	1-216-115-00	METAL CHIP	560K	5%	1/10W	R465	1-216-049-00	METAL CHIP	1K	5%	1/10W
						R467	1-216-089-00	METAL CHIP	47K	5%	1/10W
						R468	1-216-049-00	METAL CHIP	1K	5%	1/10W
						R469	1-216-115-00	METAL CHIP	560K	5%	1/10W
						R470	1-216-089-00	METAL CHIP	47K	5%	1/10W
						R471	1-216-001-00	METAL CHIP	10	5%	1/10W
						R472	1-216-075-00	METAL CHIP	12K	5%	1/10W
						R473	1-216-041-00	METAL CHIP	470	5%	1/10W
						R475	1-216-025-00	METAL CHIP	100	5%	1/10W
						R476	1-216-089-00	METAL CHIP	47K	5%	1/10W
						R477	1-216-089-00	METAL CHIP	47K	5%	1/10W
						R478	1-216-089-00	METAL CHIP	47K	5%	1/10W

PIN JACK **POWER**

Ref. No.	Part. No.	Description			Remarks	Ref. No.	Part. No.	Description			Remarks						
R481	1-216-022-00	METAL CHIP	75	5%	1/10W	C516	1-124-903-11	ELECT	1uF	20%	50V						
R482	1-216-022-00	METAL CHIP	75	5%	1/10W	C518	1-124-473-11	ELECT	1000uF	20%	10V						
R483	1-216-022-00	METAL CHIP	75	5%	1/10W	C519	1-124-473-11	ELECT	1000uF	20%	10V						
R484	1-216-049-00	METAL CHIP	1K	5%	1/10W	C520	1-163-038-00	CERAMIC CHIP	0.1uF		25V						
R485	1-216-049-00	METAL CHIP	1K	5%	1/10W	C521	1-163-038-00	CERAMIC CHIP	0.1uF		25V						
R486	1-216-049-00	METAL CHIP	1K	5%	1/10W	C526	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V						
R487	1-216-029-00	METAL CHIP	150	5%	1/10W	C527	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V						
R488	1-216-029-00	METAL CHIP	150	5%	1/10W	C528	1-164-232-11	CERAMIC CHIP	0.01uF	10%	50V						
R489	1-216-031-00	METAL CHIP	180	5%	1/10W	C5001	1-163-009-11	CERAMIC CHIP	1000P	10%	50V						
R490	1-216-031-00	METAL CHIP	180	5%	1/10W	C5002	1-163-009-11	CERAMIC CHIP	1000P	10%	50V						
R491	1-216-031-00	METAL CHIP	180	5%	1/10W	C5004	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V						
R492	1-216-029-00	METAL CHIP	150	5%	1/10W	C5005	1-164-232-11	CERAMIC CHIP	0.01uF	10%	50V						
R493	1-216-073-00	METAL CHIP	10K	5%	1/10W	C5007	1-164-346-11	CERAMIC CHIP	1uF		16V						
R494	1-216-073-00	METAL CHIP	10K	5%	1/10W	< CONNECTOR >											
R495	1-216-081-00	METAL CHIP	22K	5%	1/10W	< DIODE >											
R496	1-216-081-00	METAL CHIP	22K	5%	1/10W	D501	8-719-210-33	DIODE	EC10DS2								
R497	1-216-073-00	METAL CHIP	10K	5%	1/10W	D502	8-719-210-33	DIODE	EC10DS2								
R499	1-216-073-00	METAL CHIP	10K	5%	1/10W	D503	8-719-210-33	DIODE	EC10DS2								
R500	1-216-065-00	METAL CHIP	4.7K	5%	1/10W	D504	8-719-210-33	DIODE	EC10DS2								
X401	1-577-077-11	OSCILLATOR, CERAMIC 400KHz	< CRYSTAL >						D505	8-719-988-62	DIODE	1SS355					

* 1-639-415-11 POWER BOARD																	

7-685-646-79 SCREW +BVTP 3X8 TYPE N-S																	
< CAPACITOR >						< FUSE >											
C501	1-124-556-11	ELECT	2200uF	20%	16V	F501	▲1-532-843-21	FUSE	2.5A								
C502	1-124-556-11	ELECT	2200uF	20%	16V	F502	▲1-532-843-21	FUSE	2.5A								
C503	1-124-360-00	ELECT	1000uF	20%	16V	< IC >											
C504	1-124-556-11	ELECT	2200uF	20%	16V	IC501	8-759-823-46	IC	LA5603								
C505	1-124-059-11	ELECT	10uF	20%	50V	< TRANSISTOR >											
C506	1-163-038-00	CERAMIC CHIP	0.1uF		25V	Q501	8-729-209-15	TRANSISTOR	ZSD2012								
C507	1-124-903-11	ELECT	1uF	20%	50V	Q502	8-729-111-67	TRANSISTOR	ZSB1094-L								
C508	1-124-472-11	ELECT	470uF	20%	10V	Q503	8-729-805-65	TRANSISTOR	ZSA1344								
C509	1-124-472-11	ELECT	470uF	20%	10V	Q504	8-729-602-21	TRANSISTOR	ZSC4154-F								
C510	1-124-477-11	ELECT	47uF	20%	25V	Q505	8-729-602-21	TRANSISTOR	ZSC4154-F								
C511	1-124-903-11	ELECT	1uF	20%	50V												
C512	1-124-477-11	ELECT	47uF	20%	25V												
C513	1-124-903-11	ELECT	1uF	20%	50V												
C514	1-124-472-11	ELECT	470uF	20%	10V												
C515	1-124-477-11	ELECT	47uF	20%	25V												

Note: The components identified by mark or dotted line with mark are critical for safety.
Replace only with part number specified.

POWER REEL MOTOR TRANSLATION

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>			<u>Remarks</u>		<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>			<u>Remarks</u>				
Q506	8-729-602-36	TRANSISTOR	2SA1602-EF						MISCELLANEOUS							
Q510	8-729-805-49	TRANSISTOR	2SC3398						*****							
Q511	8-729-602-36	TRANSISTOR	2SA1602-EF													
		< RESISTOR >														
R501	1-216-033-00	METAL CHIP	220	5%	1/10W			4	1-575-906-11	WIRE, FLAT TYPE (15 CORE)						
R502	1-216-057-00	METAL CHIP	2.2K	5%	1/10W			11	* 1-573-188-11	CONNECTOR, BRIDGE 7P						
R503	1-216-057-00	METAL CHIP	2.2K	5%	1/10W			12	* 1-573-389-11	CONNECTOR, BRIDGE 8P						
R504	1-216-089-00	METAL CHIP	47K	5%	1/10W			13	1-575-664-11	WIRE, FLAT TYPE (15 CORE)						
R505	1-216-089-00	METAL CHIP	47K	5%	1/10W			D1051	8-719-980-85	DIODE SLF-325C						
HRPE1001									HRPE1001	A-2003-772-A	BASE ASSY, HEAD					
IC1001									IC1001	8-749-920-97	IC PHOTO REFLECTOR GP2S22B					
IC1002									IC1002	8-749-920-97	IC PHOTO REFLECTOR GP2S22B					
M1051									M1051	X-3356-638-1	MOTOR (REEL R) ASSY					
M1052									M1052	X-3356-604-1	MOTOR (ASSIST) ASSY					
M1053									M1053	X-3356-635-1	MOTOR (CAPSTAN R2) ASSY					
S1001									S1001	1-466-525-11	ENCODER, ROTARY					

* 1-632-741-11 REEL MOTOR BOARD								HARDWARE LIST								
*****								*****								
		< CAPACITOR >						# 1	7-621-773-93	SCREW (PANEL 2.6 TP2)						
C1051	1-124-907-11	ELECT	10uF		20%	50V		# 2	7-685-646-79	SCREW +BVTP 3X8 TYPE2 N-S						
C1052	1-124-907-11	ELECT	10uF		20%	50V		# 3	7-682-547-04	SCREW +BVTT 3X6 (S)						
C1053	1-164-159-11	CERAMIC	0.1uF			50V		# 4	7-621-283-00	SCREW +BVTT 2X5 (S)						
								# 5	7-685-133-19	SCREW +BTP 2.6X6 TYPE2 N-S						
		< CONNECTOR >						# 6	7-621-255-20	SCREW +BVTT 2X4 (S)						
CN1051	* 1-564-499-11	PIN, CONNECTOR 6P						# 7	7-621-255-35	SCREW +BVTT 2X5 (S)						
CN1052	* 1-564-718-11	PIN, CONNECTOR (SMALL TYPE) 2P						# 8	7-621-770-67	SCREW +BVTT 2.6X6 (S)						
CN1053	* 1-564-718-11	PIN, CONNECTOR (SMALL TYPE) 2P						# 9	7-685-131-19	SCREW +BTP 2.6X4 TYPE2 N-S						
								# 10	7-621-849-00	SCREW (BV/RING)						
		< RESISTOR >						# 11	7-621-255-15	SCREW +PTT 2X3 (S)						
R1051	1-249-414-11	CARBON	560	5%	1/4W											

* 1-634-323-11 TRANSLATION BOARD																

		< CONNECTOR >														
CN1091	* 1-564-709-11	PIN, CONNECTOR (SMALL TYPE) 7P														
CN1092	* 1-564-509-11	PLUG, CONNECTOR 6P														

www.manualscenter.com

9-956-358-11

Printed by: Schaltungsdienst Lange, Berlin (Germany)

**Sony Corporation
Audio Group**

—54—

**English
91F1667 - 1**

©1991.6

Published by Customer Relations and Service Group

TC-H5600

**SONY.
SERVICE MANUAL**

*AEP Model
UK Model
E Model*

SUPPLEMENT-1

File this Supplement with the Service Manual.

Subject : Circuit change

www.manualscenter.com

9-956-358-81

Sony Corporation
Consumer A&V Products Company
Home A&V Products Div.

English
S-410976-1

©1994. 9
Published by Home A&V Products Div.
Quality Engineering Dept.

MAIN

SECTION 6

ELECTRICAL PARTS LIST

NOTE:

The components identified by mark Δ or dotted line with mark Δ are critical for safety.
Replace only with part number specified.

When indicating parts by reference number, please include the board name.

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- -XX, -X mean standardized parts, so they may have some difference from the original one.

• RESISTORS

All resistors are in ohms

METAL: Metal-film resistor

METAL OXIDE: Metal Oxide-film resistor

F : nonflammable

• SEMICONDUCTORS

In each case, u: μ , for example:uA...: μ A..., uPA...: μ PA..., uPB...: μ PB...,uPC...: μ PC..., uPD...: μ PD...

• CAPACITORS

uF : μ F

• COILS

uH : μ H

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark	
*	A-2006-452-A	MAIN BOARD, COMPLETE	*****	C213	1-124-907-11	ELECT	10uF 20% 50V	
*	1-573-496-11	HOUSING, CONNECTOR 12P		C214	1-124-902-00	ELECT	0.47uF 20% 50V	
*	1-573-497-11	PIN, CONNECTOR (PC BOARD) 12P BOARD		C215	1-124-927-11	ELECT	4.7uF 20% 100V	
*	3-356-925-01	HEAT SINK		C216	1-124-927-11	ELECT	4.7uF 20% 100V	
	7-682-548-04	SCREW +BVTT 3X8 (S)		C217	1-124-925-11	ELECT	2.2uF 20% 100V	
	< CAPACITOR >				C218	1-162-285-31	CERAMIC	180PF 10% 50V
C101	1-162-294-31	CERAMIC	0.001uF 10% 50V	C219	1-136-935-11	FILM	22PF 5% 630V	
C102	1-136-157-00	FILM	0.022uF 5% 50V	C220	1-130-468-00	MYLAR	560PF 5% 50V	
C103	1-124-282-00	ELECT	22uF 20% 25V	C221	1-136-433-11	FILM	100PF 5% 630V	
C105	1-136-158-00	FILM	0.027uF 5% 50V	C222	1-136-272-00	FILM	68PF 5% 630V	
C106	1-162-294-31	CERAMIC	0.001uF 10% 50V	C223	1-136-153-00	FILM	0.01uF 5% 50V	
C107	1-124-907-11	ELECT	10uF 20% 50V	C224	1-136-165-00	FILM	0.1uF 5% 50V	
C108	1-124-916-11	ELECT	22uF 20% 63V	C225	1-136-157-00	FILM	0.022uF 5% 50V	
C109	1-130-475-00	MYLAR	0.0022uF 5% 50V	C301	1-124-443-00	ELECT	100uF 20% 10V	
C110	1-130-475-00	MYLAR	0.0022uF 5% 50V	C302	1-124-443-00	ELECT	100uF 20% 10V	
C111	1-136-174-00	FILM	0.56uF 5% 50V	C303	1-124-907-11	ELECT	10uF 20% 50V	
C112	1-136-171-00	FILM	0.33uF 5% 50V	C304	1-124-907-11	ELECT	10uF 20% 50V	
C113	1-124-907-11	ELECT	10uF 20% 50V	C305	1-124-478-11	ELECT	100uF 20% 25V	
C114	1-124-902-00	ELECT	0.47uF 20% 50V	C306	1-124-925-11	ELECT	2.2uF 20% 100V	
C115	1-124-927-11	ELECT	4.7uF 20% 100V	C307	1-124-902-00	ELECT	0.47uF 20% 50V	
C116	1-124-927-11	ELECT	4.7uF 20% 100V	C308	1-162-215-31	CERAMIC	47PF 5% 50V	
C117	1-124-925-11	ELECT	2.2uF 20% 100V	C309	1-161-494-00	CERAMIC	0.022uF 25V	
C118	1-162-285-31	CERAMIC	180PF 10% 50V	C310	1-162-286-31	CERAMIC	220PF 10% 50V	
C119	1-136-935-11	FILM	22PF 5% 630V	C311	1-124-925-11	ELECT	2.2uF 20% 100V	
C120	1-130-468-00	MYLAR	560PF 5% 50V	C312	1-124-477-11	ELECT	47uF 20% 25V	
C121	1-136-433-11	FILM	100PF 5% 630V	C313	1-124-902-00	ELECT	0.47uF 20% 50V	
C122	1-136-272-00	FILM	68PF 5% 630V	C314	1-124-478-11	ELECT	100uF 20% 25V	
C123	1-136-153-00	FILM	0.01uF 5% 50V	C315	1-124-478-11	ELECT	100uF 20% 25V	
C124	1-136-165-00	FILM	0.1uF 5% 50V	C316	1-130-856-00	FILM	0.0068uF 5% 100V	
C125	1-136-157-00	FILM	0.022uF 5% 50V	C317	1-136-230-00	FILM	0.0022uF 5% 100V	
C201	1-162-294-31	CERAMIC	0.001uF 10% 50V	C318	1-136-230-00	FILM	0.0022uF 5% 100V	
C202	1-136-157-00	FILM	0.022uF 5% 50V	C319	1-124-907-11	ELECT	10uF 20% 50V	
C203	1-124-282-00	ELECT	22uF 20% 25V	C320	1-161-494-00	CERAMIC	0.022uF 25V	
C205	1-136-158-00	FILM	0.027uF 5% 50V	C321	1-136-558-11	FILM	0.0039uF 5% 630V	
C206	1-162-294-31	CERAMIC	0.001uF 10% 50V	C322	1-107-585-11	CERAMIC	5PF 0.25PF 500V	
C207	1-124-907-11	ELECT	10uF 20% 50V	C701	1-124-443-00	ELECT	100uF 20% 10V	
C208	1-124-916-11	ELECT	22uF 20% 63V	C702	1-164-159-11	CERAMIC	0.1uF 50V	
C209	1-130-475-00	MYLAR	0.0022uF 5% 50V	C703	1-164-159-11	CERAMIC	0.1uF 50V	
C210	1-130-475-00	MYLAR	0.0022uF 5% 50V	C704	1-164-159-11	CERAMIC	0.1uF 50V	
C211	1-136-174-00	FILM	0.56uF 5% 50V	C705	1-124-443-00	ELECT	100uF 20% 10V	
C212	1-136-171-00	FILM	0.33uF 5% 50V	C706	1-124-925-11	ELECT	2.2uF 20% 100V	
				C707	1-164-159-11	CERAMIC	0.1uF 50V	
				C708	1-136-165-00	FILM	0.1uF 5% 50V	

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remark</u>	<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remark</u>				
C709	1-136-165-00	FILM	0.1uF 5%	50V	D709	8-719-933-50	DIODE	HZS7C2L			
C720	1-164-159-11	CERAMIC	0.1uF	50V	D710	8-719-933-50	DIODE	HZS7C2L			
C750	1-161-494-00	CERAMIC	0.022uF	25V	D711	8-719-933-50	DIODE	HZS7C2L			
C751	1-161-494-00	CERAMIC	0.022uF	25V	D712	8-719-933-50	DIODE	HZS7C2L			
C752	1-161-494-00	CERAMIC	0.022uF	25V	D713	8-719-987-63	DIODE	1N4148M			
C753	1-161-494-00	CERAMIC	0.022uF	25V	D714	8-719-987-63	DIODE	1N4148M			
C754	1-161-494-00	CERAMIC	0.022uF	25V	D720	8-719-200-77	DIODE	10E2N			
C801	1-124-907-11	ELECT	10uF 20%	50V	D721	8-719-200-77	DIODE	10E2N			
C802	1-136-594-11	FILM	0.018uF 5%	100V	D722	8-719-200-77	DIODE	10E2N			
C803	1-124-907-11	ELECT	10uF 20%	50V	D750	8-719-933-47	DIODE	HZS7B2L			
< CONNECTOR >											
* CN701	1-568-834-11	SOCKET, CONNECTOR 15P		D751	8-719-933-47	DIODE	HZS7B2L				
* CN702	1-568-834-11	SOCKET, CONNECTOR 15P		D752	8-719-987-63	DIODE	1N4148M				
* CNP301	1-564-705-11	PIN, CONNECTOR (SMALL TYPE) 3P		D753	8-719-987-63	DIODE	1N4148M				
* CNP302	1-564-705-11	PIN, CONNECTOR (SMALL TYPE) 3P		D754	8-719-987-63	DIODE	1N4148M				
* CNP303	1-564-708-11	PIN, CONNECTOR (SMALL TYPE) 6P		D801	8-719-109-89	DIODE	RD5.6ESB2				
CNP304	1-564-511-11	PLUG, CONNECTOR 8P		D802	8-719-200-77	DIODE	10E2N				
* CNP305	1-564-518-11	PLUG, CONNECTOR 3P		D803	8-719-200-77	DIODE	10E2N				
* CNP702	1-564-339-00	PIN, CONNECTOR 5P		D804	8-719-200-77	DIODE	10E2N				
* CNP703	1-564-505-11	PLUG, CONNECTOR 2P		D805	8-719-200-77	DIODE	10E2N				
* CNP707	1-564-342-11	PIN, CONNECTOR 8P		< IC >							
* CNP708	1-564-336-61	PIN, CONNECTOR 2P		IC301	8-759-111-44	IC	uPC4570C-1				
< COMPOSITION CIRCUIT BLOCK >				IC302	8-752-059-56	IC	CXA1330S				
CP701	1-233-199-11	COMPOSITION CIRCUIT BLOCK		IC303	8-752-060-64	IC	CXA1198AP				
CP702	1-233-199-11	COMPOSITION CIRCUIT BLOCK		IC304	8-759-145-58	IC	uPC4558C				
CP703	1-232-944-11	COMPOSITION CIRCUIT BLOCK		IC305	8-759-145-58	IC	uPC4558C				
< DIODE >											
D101	8-719-987-63	DIODE	1N4148M	IC306	8-759-106-56	IC	uPC1297CA				
D201	8-719-987-63	DIODE	1N4148M	IC701	8-759-633-86	IC	M50747-B83SP				
D301	8-719-987-63	DIODE	1N4148M	IC702	8-759-634-79	IC	M50944-155SP				
D302	8-719-987-63	DIODE	1N4148M	IC703	8-759-973-95	IC	BA6219B				
D303	8-719-987-63	DIODE	1N4148M	IC704	8-759-822-09	IC	LB1641				
D304	8-719-933-50	DIODE	HZS7C2L	< COIL >							
D305	8-719-987-63	DIODE	1N4148M	L101	1-410-780-11	INDUCTOR	27mH				
D306	8-719-987-63	DIODE	1N4148M	L201	1-410-780-11	INDUCTOR	27mH				
D307	8-719-987-63	DIODE	1N4148M	L301	1-408-080-00	INDUCTOR	100uH				
D308	8-719-987-63	DIODE	1N4148M	L801	1-410-761-11	INDUCTOR	0.68mH				
D309	8-719-987-63	DIODE	1N4148M	L802	1-410-521-11	INDUCTOR	100uH				
D601	8-719-301-38	DIODE	SEL2210S-C (AUTO REC LEVEL)	L803	1-410-521-11	INDUCTOR	100uH				
D701	8-719-987-63	DIODE	1N4148M	< FILTER >							
D702	8-719-987-63	DIODE	1N4148M	LPF101	1-236-087-11	FILTER, LOW PASS					
D703	8-719-933-50	DIODE	HZS7C2L	LPF201	1-236-087-11	FILTER, LOW PASS					
D704	8-719-933-50	DIODE	HZS7C2L	< TRANSISTOR >							
D705	8-719-933-50	DIODE	HZS7C2L	Q101	8-729-900-89	TRANSISTOR	DTC144ES				
D706	8-719-933-50	DIODE	HZS7C2L	Q102	8-729-900-74	TRANSISTOR	DTC143TS				
D707	8-719-933-50	DIODE	HZS7C2L	Q103	8-729-821-31	TRANSISTOR	2SD1012-FG				
D708	8-719-933-50	DIODE	HZS7C2L								

MAIN


<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remark</u>	<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remark</u>
Q201	8-729-900-89	TRANSISTOR	DTC144ES	R115	1-249-421-11	CARBON	2.2K 5% 1/4W F
Q202	8-729-900-74	TRANSISTOR	DTC143TS	R116	1-249-428-11	CARBON	8.2K 5% 1/4W F
Q203	8-729-821-31	TRANSISTOR	2SD1012-FG	R117	1-249-417-11	CARBON	1K 5% 1/4W F
Q301	8-729-900-65	TRANSISTOR	DTA144ES	R118	1-249-429-11	CARBON	10K 5% 1/4W
Q302	8-729-900-89	TRANSISTOR	DTC144ES	R119	1-249-425-11	CARBON	4.7K 5% 1/4W F
Q303	8-729-900-89	TRANSISTOR	DTC144ES	R120	1-249-421-11	CARBON	2.2K 5% 1/4W F
Q304	8-729-820-24	TRANSISTOR	2SC3330-T	R121	1-249-429-11	CARBON	10K 5% 1/4W
Q305	8-729-900-89	TRANSISTOR	DTC144ES	R122	1-249-425-11	CARBON	4.7K 5% 1/4W F
Q306	8-729-821-04	TRANSISTOR	2SA1317-STU	R124	1-249-429-11	CARBON	10K 5% 1/4W
Q307	8-729-900-65	TRANSISTOR	DTA144ES	R125	1-249-437-11	CARBON	47K 5% 1/4W
Q308	8-729-900-65	TRANSISTOR	DTA144ES	R126	1-249-431-11	CARBON	15K 5% 1/4W
Q309	8-729-900-89	TRANSISTOR	DTC144ES	R127	1-249-409-11	CARBON	220 5% 1/4W F
Q310	8-729-900-65	TRANSISTOR	DTA144ES	R128	1-249-428-11	CARBON	8.2K 5% 1/4W F
Q311	8-729-900-61	TRANSISTOR	DTA114ES	R129	1-247-883-00	CARBON	150K 5% 1/4W
Q312	8-729-900-80	TRANSISTOR	DTC114ES	R130	1-249-393-11	CARBON	10 5% 1/4W F
Q313	8-729-900-80	TRANSISTOR	DTC114ES	R131	1-249-432-11	CARBON	18K 5% 1/4W
Q314	8-729-900-80	TRANSISTOR	DTC114ES	R132	1-249-429-11	CARBON	10K 5% 1/4W
Q315	8-729-821-04	TRANSISTOR	2SA1317-STU	R201	1-249-435-11	CARBON	33K 5% 1/4W
Q316	8-729-194-57	TRANSISTOR	2SC945-P	R202	1-249-403-11	CARBON	68 5% 1/4W F
Q317	8-729-194-57	TRANSISTOR	2SC945-P	R203	1-247-882-11	CARBON	130K 5% 1/4W
Q318	8-729-900-65	TRANSISTOR	DTA144ES	R204	1-249-426-11	CARBON	5.6K 5% 1/4W
Q701	8-729-900-80	TRANSISTOR	DTC114ES	R205	1-249-420-11	CARBON	1.8K 5% 1/4W F
Q702	8-729-900-80	TRANSISTOR	DTC114ES	R207	1-247-887-00	CARBON	220K 5% 1/4W
Q703	8-729-900-80	TRANSISTOR	DTC114ES	R208	1-247-840-00	CARBON	2.4K 5% 1/4W
Q704	8-729-820-24	TRANSISTOR	2SC3330-T	R210	1-249-423-11	CARBON	3.3K 5% 1/4W F
Q705	8-729-820-24	TRANSISTOR	2SC3330-T	R211	1-249-428-11	CARBON	8.2K 5% 1/4W F
Q706	8-729-900-89	TRANSISTOR	DTC144ES	R212	1-247-864-11	CARBON	24K 5% 1/4W
Q707	8-729-821-04	TRANSISTOR	2SA1317-STU	R213	1-249-414-11	CARBON	560 5% 1/4W F
Q708	8-729-900-61	TRANSISTOR	DTA114ES	R215	1-249-421-11	CARBON	2.2K 5% 1/4W F
Q709	8-729-900-61	TRANSISTOR	DTA114ES	R216	1-249-428-11	CARBON	8.2K 5% 1/4W F
Q712	8-729-900-65	TRANSISTOR	DTA144ES	R217	1-249-417-11	CARBON	1K 5% 1/4W F
Q713	8-729-900-65	TRANSISTOR	DTA144ES	R218	1-249-429-11	CARBON	10K 5% 1/4W
Q715	8-729-900-80	TRANSISTOR	DTC114ES	R219	1-249-425-11	CARBON	4.7K 5% 1/4W F
Q720	8-729-900-80	TRANSISTOR	DTC114ES	R220	1-249-421-11	CARBON	2.2K 5% 1/4W F
Q721	8-729-801-84	TRANSISTOR	2SB1013-4	R221	1-249-429-11	CARBON	10K 5% 1/4W
Q801	8-729-140-96	TRANSISTOR	2SD774-34	R222	1-249-425-11	CARBON	4.7K 5% 1/4W F
Q802	8-729-140-96	TRANSISTOR	2SD774-34	R224	1-249-429-11	CARBON	10K 5% 1/4W
< RESISTOR >				R225	1-249-437-11	CARBON	47K 5% 1/4W
R101	1-249-435-11	CARBON	33K 5% 1/4W	R226	1-249-431-11	CARBON	15K 5% 1/4W
R102	1-249-403-11	CARBON	68 5% 1/4W F	R227	1-249-409-11	CARBON	220 5% 1/4W F
R103	1-247-882-11	CARBON	130K 5% 1/4W	R228	1-249-428-11	CARBON	8.2K 5% 1/4W F
R104	1-249-426-11	CARBON	5.6K 5% 1/4W	R229	1-247-883-00	CARBON	150K 5% 1/4W
R105	1-249-420-11	CARBON	1.8K 5% 1/4W F	R230	1-249-393-11	CARBON	10 5% 1/4W F
R107	1-247-887-00	CARBON	220K 5% 1/4W	R231	1-249-432-11	CARBON	18K 5% 1/4W
R108	1-247-840-00	CARBON	2.4K 5% 1/4W	R232	1-249-429-11	CARBON	10K 5% 1/4W
R110	1-249-423-11	CARBON	3.3K 5% 1/4W F	R301	1-249-409-11	CARBON	220 5% 1/4W F
R111	1-249-428-11	CARBON	8.2K 5% 1/4W F	R302	1-249-409-11	CARBON	220 5% 1/4W F
R112	1-247-864-11	CARBON	24K 5% 1/4W	R303	1-249-433-11	CARBON	22K 5% 1/4W
R113	1-249-414-11	CARBON	560 5% 1/4W F	R304	1-249-435-11	CARBON	33K 5% 1/4W
				R305	1-249-436-11	CARBON	39K 5% 1/4W

Continued on page 15.


• IC BLOCK DIAGRAM

IC703,706 BA6219B


IC704 LB1641

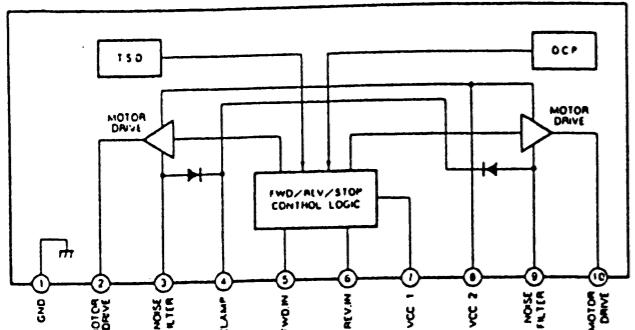

IC302 CXA1330S

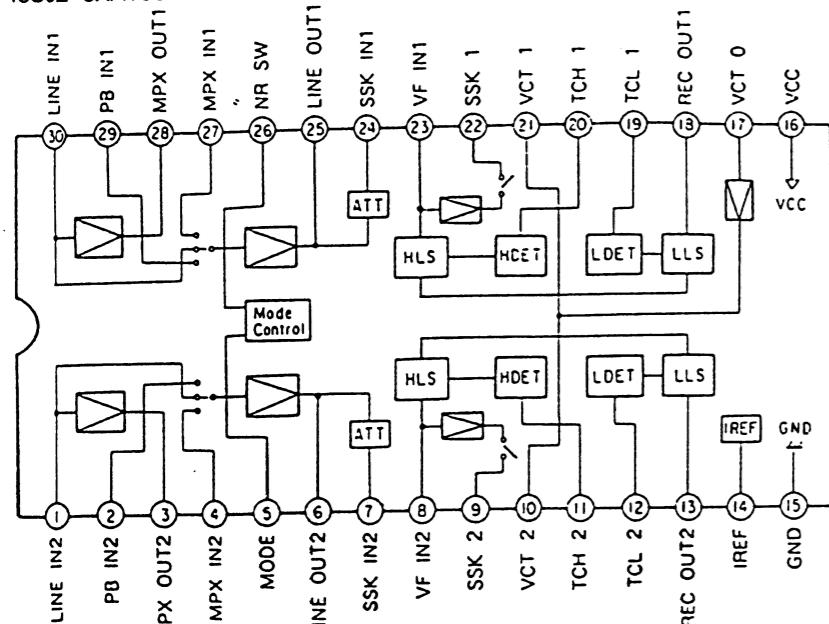

IC303 CXA1198AP

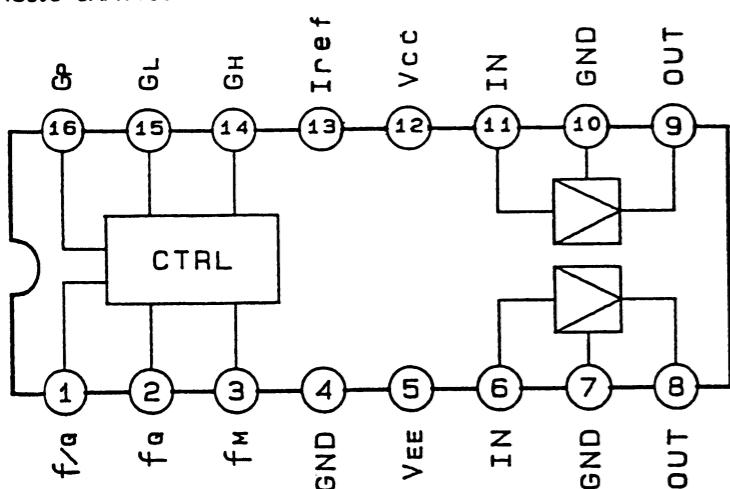

• Semiconductor Location


Ref. No.	Location	Ref. No.	Location
D101	C-12	Q301	G-5
D201	C-13	Q302	I-5
D301	I-5	Q303	I-5
D302	I-5	Q304	J-5
D303	E-11	Q305	I-5
D304	E-11	Q306	D-11
D305	E-1	Q307	E-11
D306	B-4	Q308	F-11
D307	C-4	Q309	E-11
D308	C-4	Q310	E-11
D309	C-11	Q311	E-1
D601	A-20	Q312	B-4
D701	C-17	Q313	B-4
D702	C-17	Q314	B-5
D703	E-12	Q315	C-5
D704	E-12	Q316	F-2
D705	F-12	Q317	E-2
D706	F-12	Q318	F-11
D707	E-14	Q701	F-13
D708	E-14	Q702	F-13
D709	E-13	Q703	E-13
D710	J-2	Q704	D-17
D711	J-2	Q705	C-17
D712	I-2	Q706	C-15
D713	C-15	Q707	C-17
D714	C-17	Q708	B-19
D720	C-10	Q709	H-3
D721	C-11	Q712	B-5
D722	C-12	Q713	B-5
D750	B-13	Q715	I-1
D751	D-14	Q720	I-8
D752	B-19	Q721	J-8
D753	A-19	Q801	B-13
D754	I-8	Q802	B-11
IC301	C-2		
IC302	E-9		
IC303	I-4		
IC304	H-2		
IC305	D-13		
IC306	D-4		
IC701	E-16		
IC702	B-15		
IC703	E-13		
IC704	D-13		
IC705	D-15		
IC706	I-1		
IC1001	H-18		
IC1002	H-19		
Q101	D-10		
Q102	D-11		
Q103	H-5		
Q201	F-10		
Q202	D-11		
Q203	I-4		

Note on Mounting Diagram:

- : parts extracted from the component side.
- : parts mounted on the conductor side.


www.manualscenter.com

PRINTED WIRING BOARDS — MAIN SECTION —

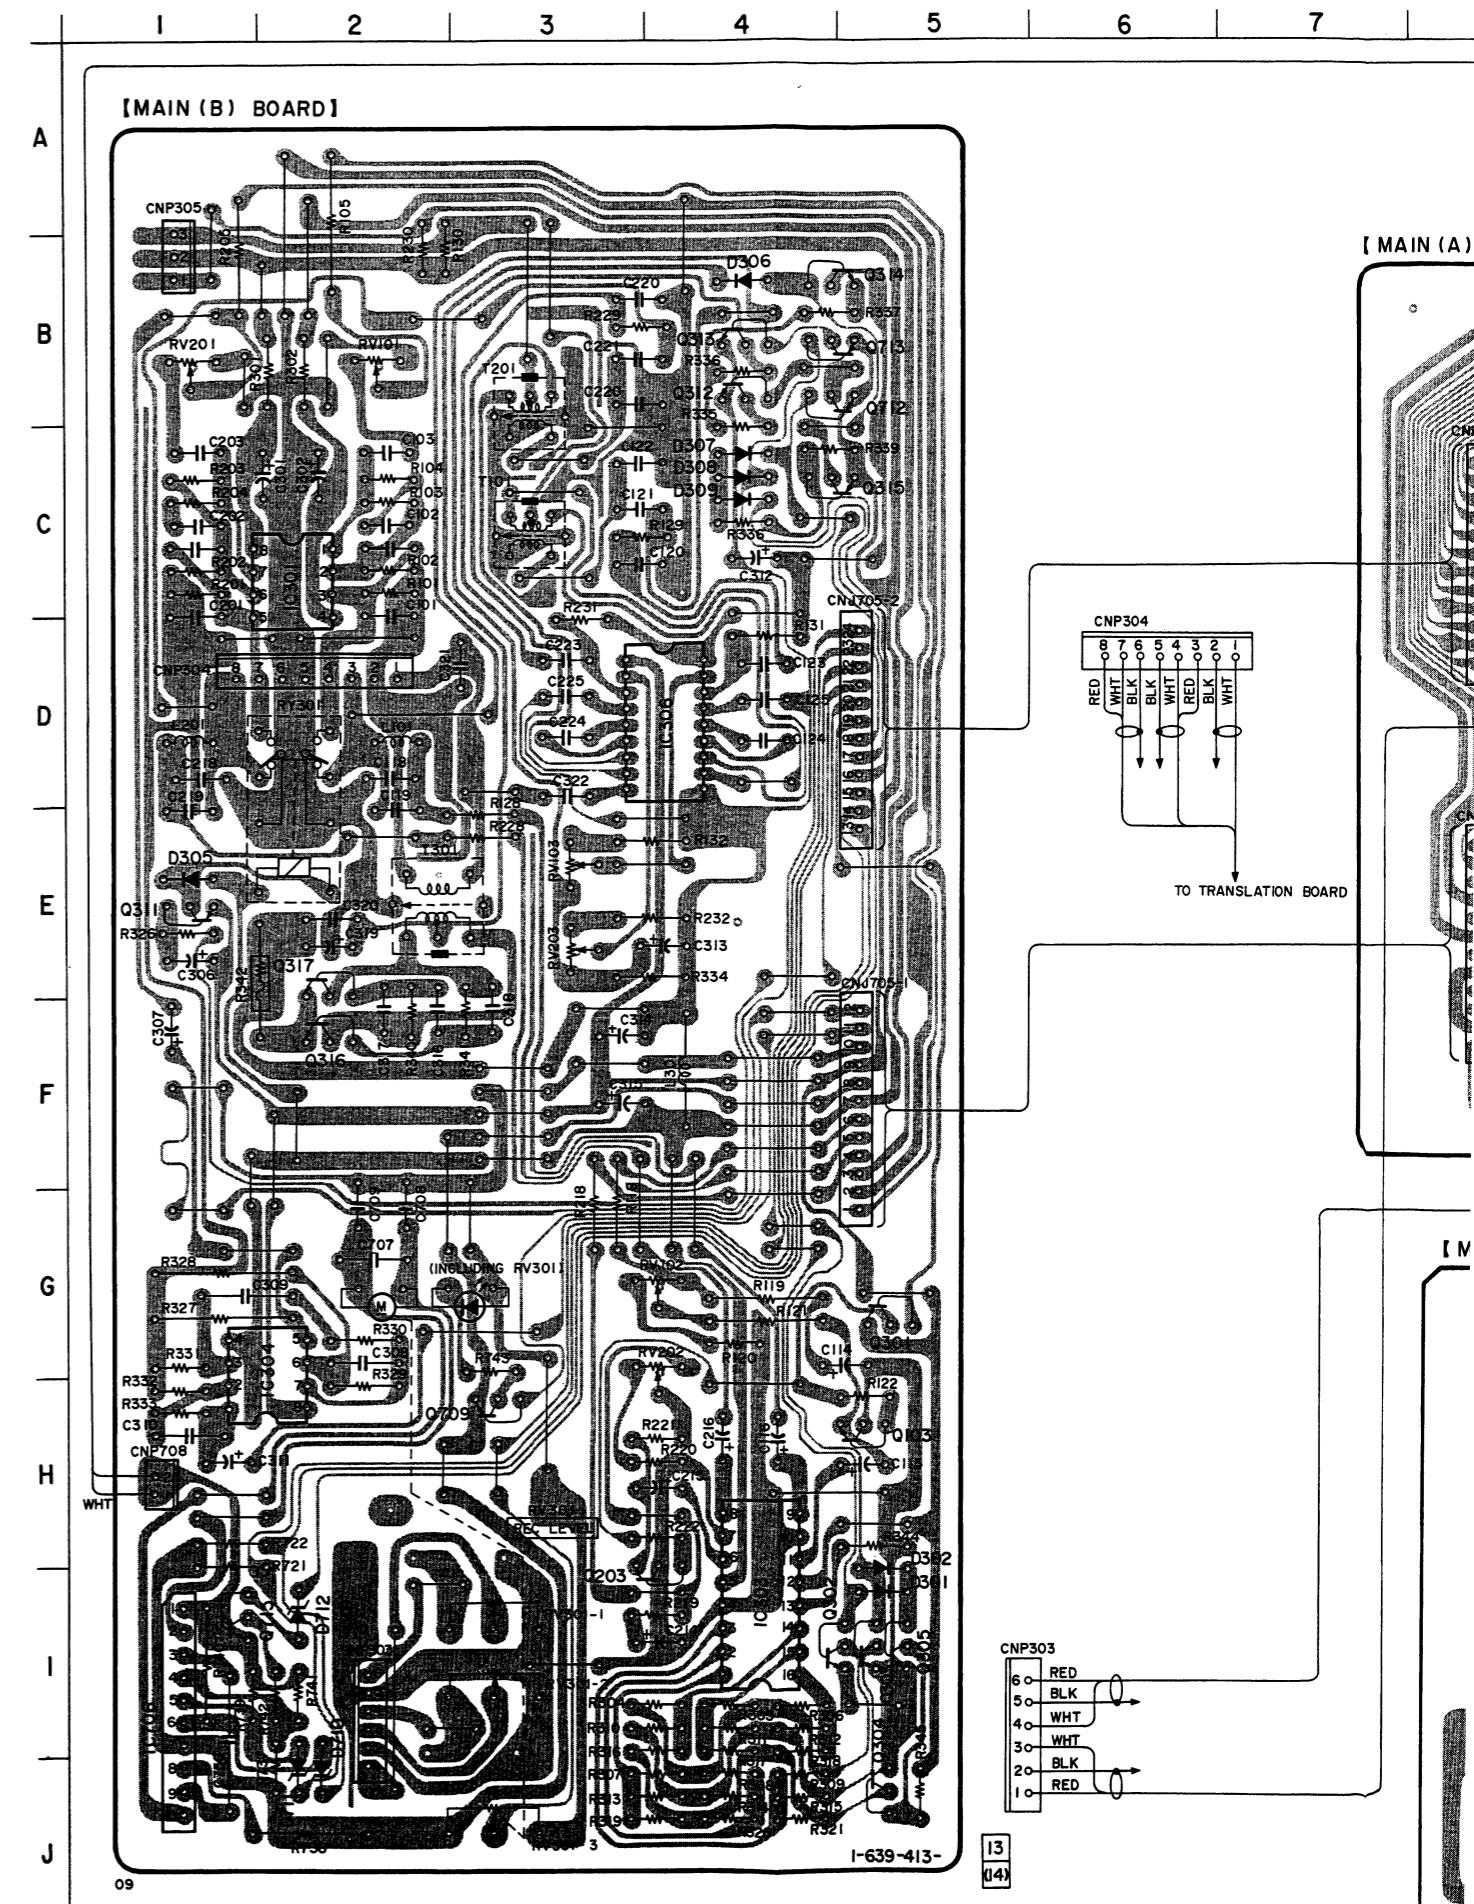


• IC BLOCK DIAGRAM


IC703,706 BA6219B
IC704 LB1641

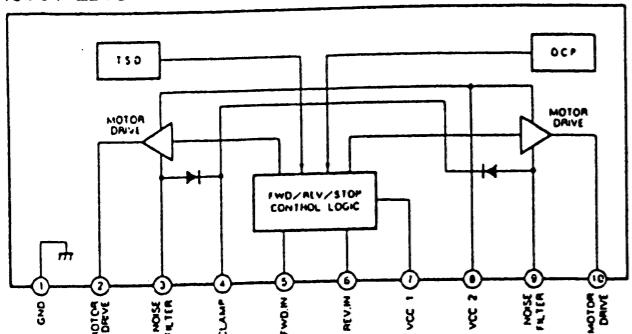

IC302 CXA1330S

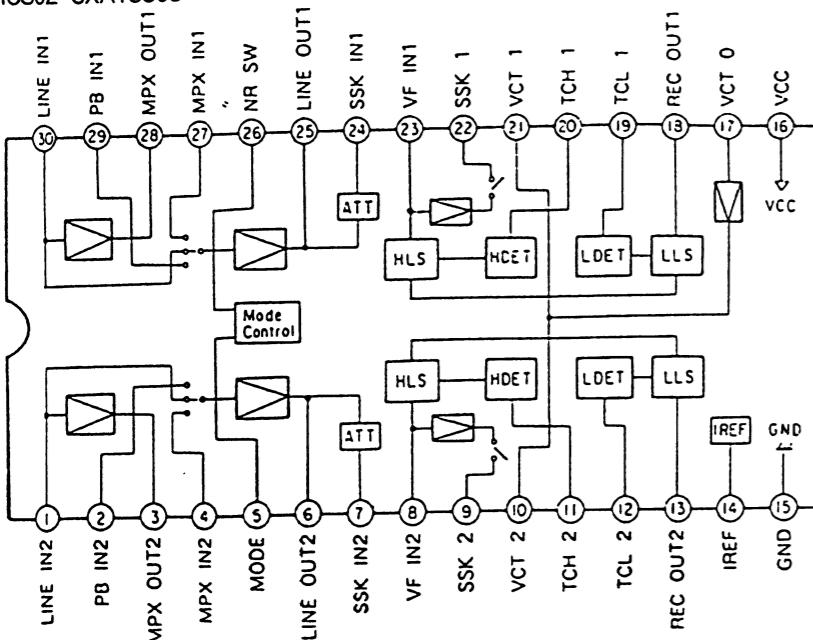

IC303 CXA1198AP

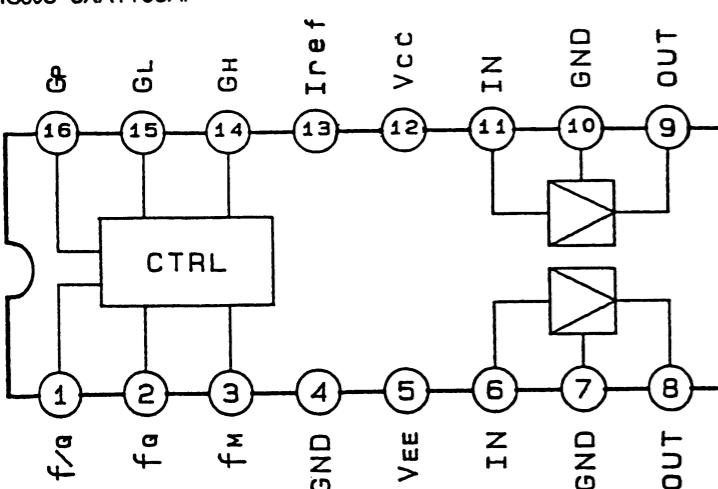

• Semiconductor Location


Ref. No.	Location	Ref. No.	Location
D101	C-12	Q301	G-5
D201	C-13	Q302	I-5
D301	I-5	Q303	I-5
D302	I-5	Q304	J-5
D303	E-11	Q305	I-5
D304	E-11	Q306	D-11
D305	E-1	Q307	E-11
D306	B-4	Q308	F-11
D307	C-4	Q309	E-11
D308	C-4	Q310	E-11
D309	C-4	Q311	E-1
D601	A-20	Q312	B-4
D701	C-17	Q313	B-4
D702	C-17	Q314	B-5
D703	E-12	Q315	C-5
D704	E-12	Q316	F-2
D705	F-12	Q317	E-2
D706	E-14	Q701	F-11
D707	E-14	Q702	F-13
D708	E-13	Q703	E-13
D709	J-2	Q704	D-17
D710	J-2	Q705	C-17
D711	I-2	Q706	C-15
D712	C-15	Q707	C-17
D713	C-17	Q708	B-19
D714	C-10	Q709	H-3
D720	C-11	Q712	B-5
D721	C-12	Q713	B-5
D722	B-13	Q715	I-1
D750	D-14	Q720	I-8
D751	B-19	Q721	J-8
D752	A-19	Q801	B-13
D753	I-8	Q802	B-11
D801	D-16	IC301	C-2
D802	C-15	IC302	E-9
D803	C-15	IC303	I-4
D804	C-14	IC304	H-2
D805	C-14	IC305	D-13
		IC306	D-4
		IC701	E-16
		IC702	B-15
		IC703	E-13
		IC704	D-13
		IC705	D-15
		IC706	I-1
		IC1001	H-18
		IC1002	H-19
Q101	D-10		
Q102	D-11		
Q103	H-5		
Q201	F-10		
Q202	D-11		
Q203	I-4		

Note on Mounting Diagram:


- : parts extracted from the component side.
- ■ : parts mounted on the conductor side.


www.manualscenter.com

PRINTED WIRING BOARDS — MAIN SECTION —

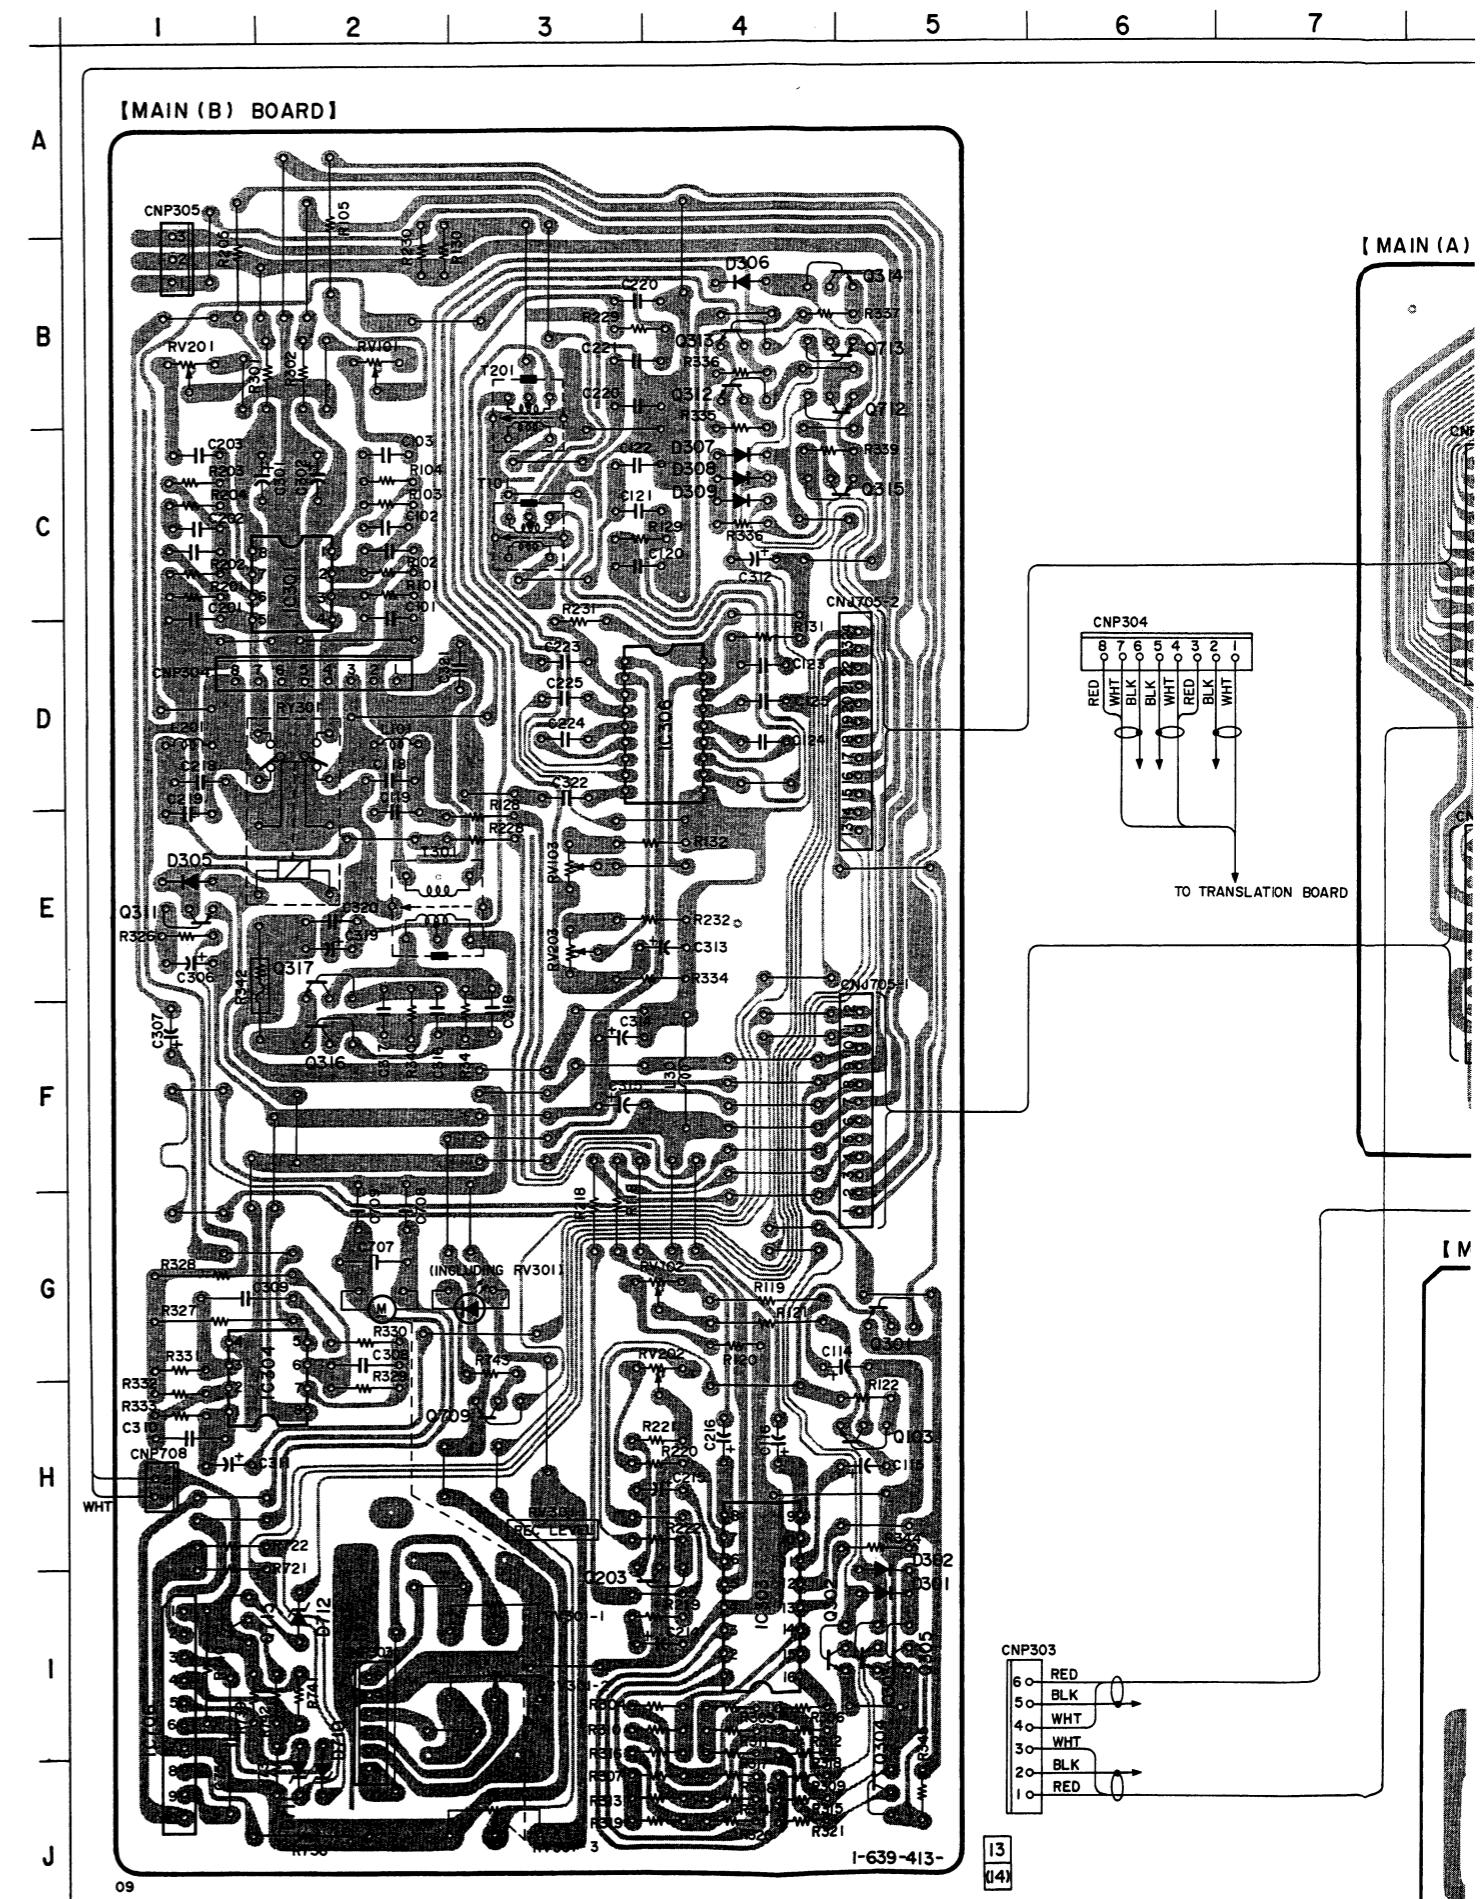


SHCEMATIC DIAGRAM — MAIN SECTION —

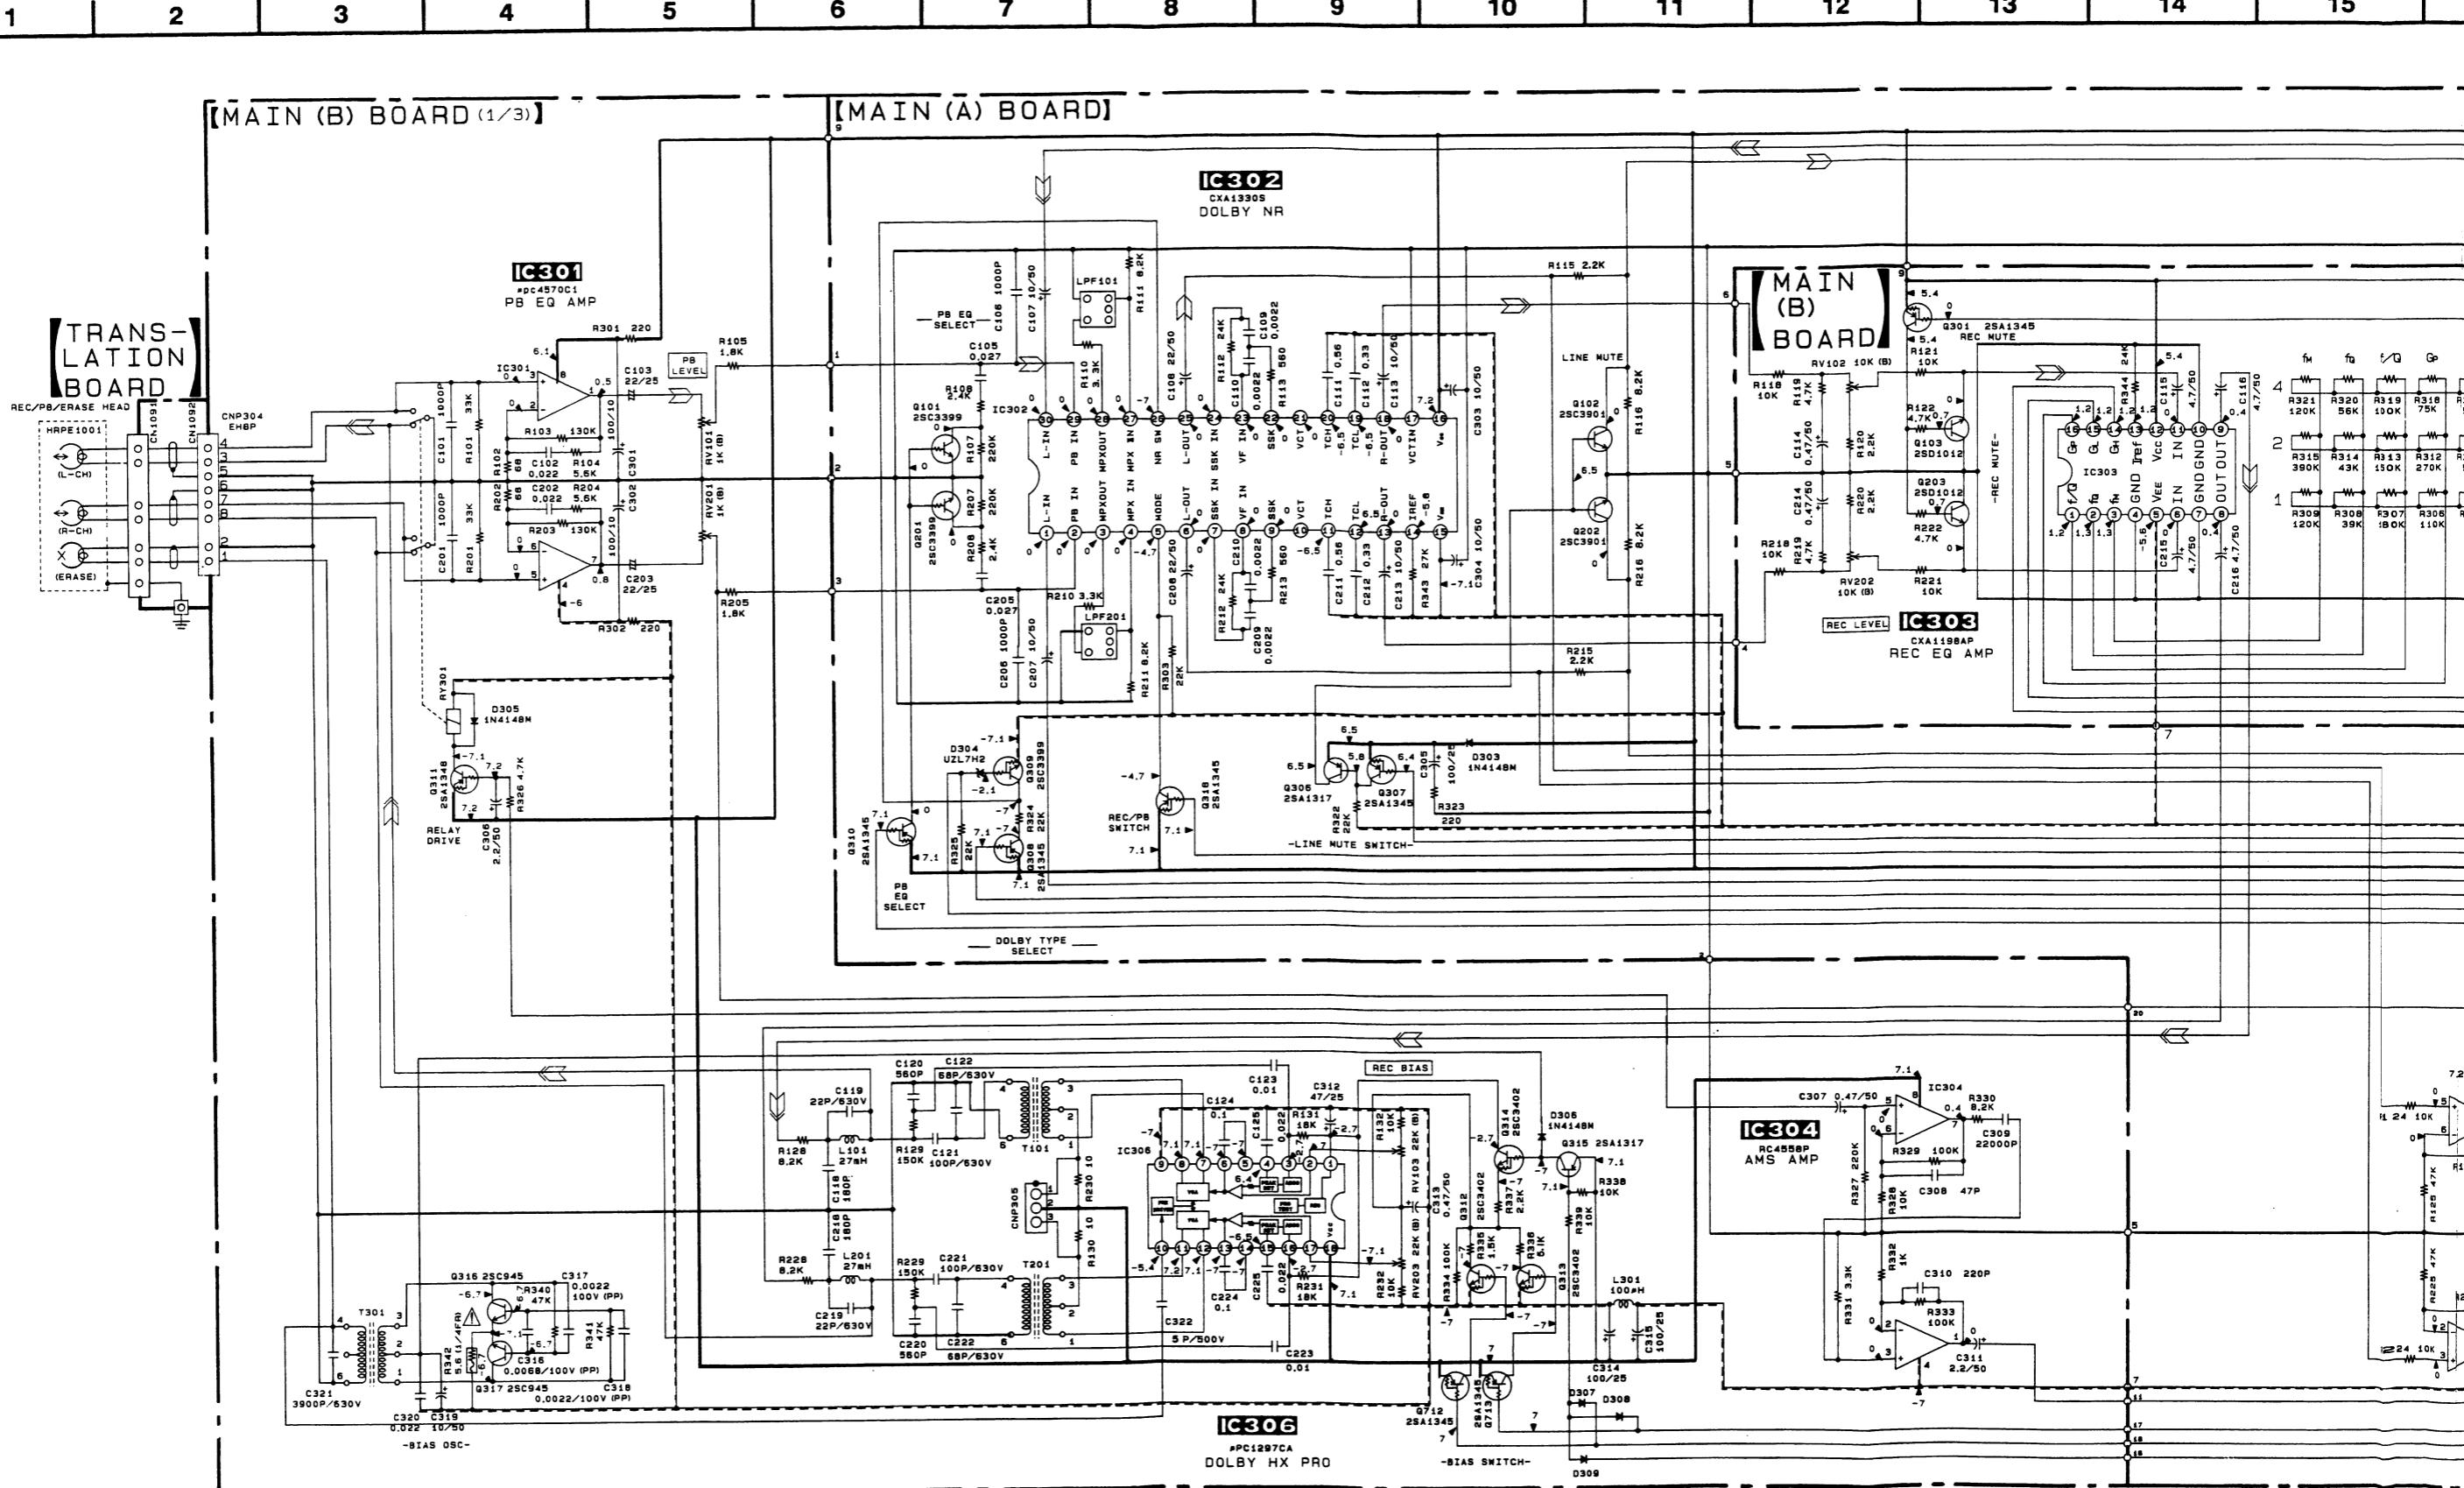

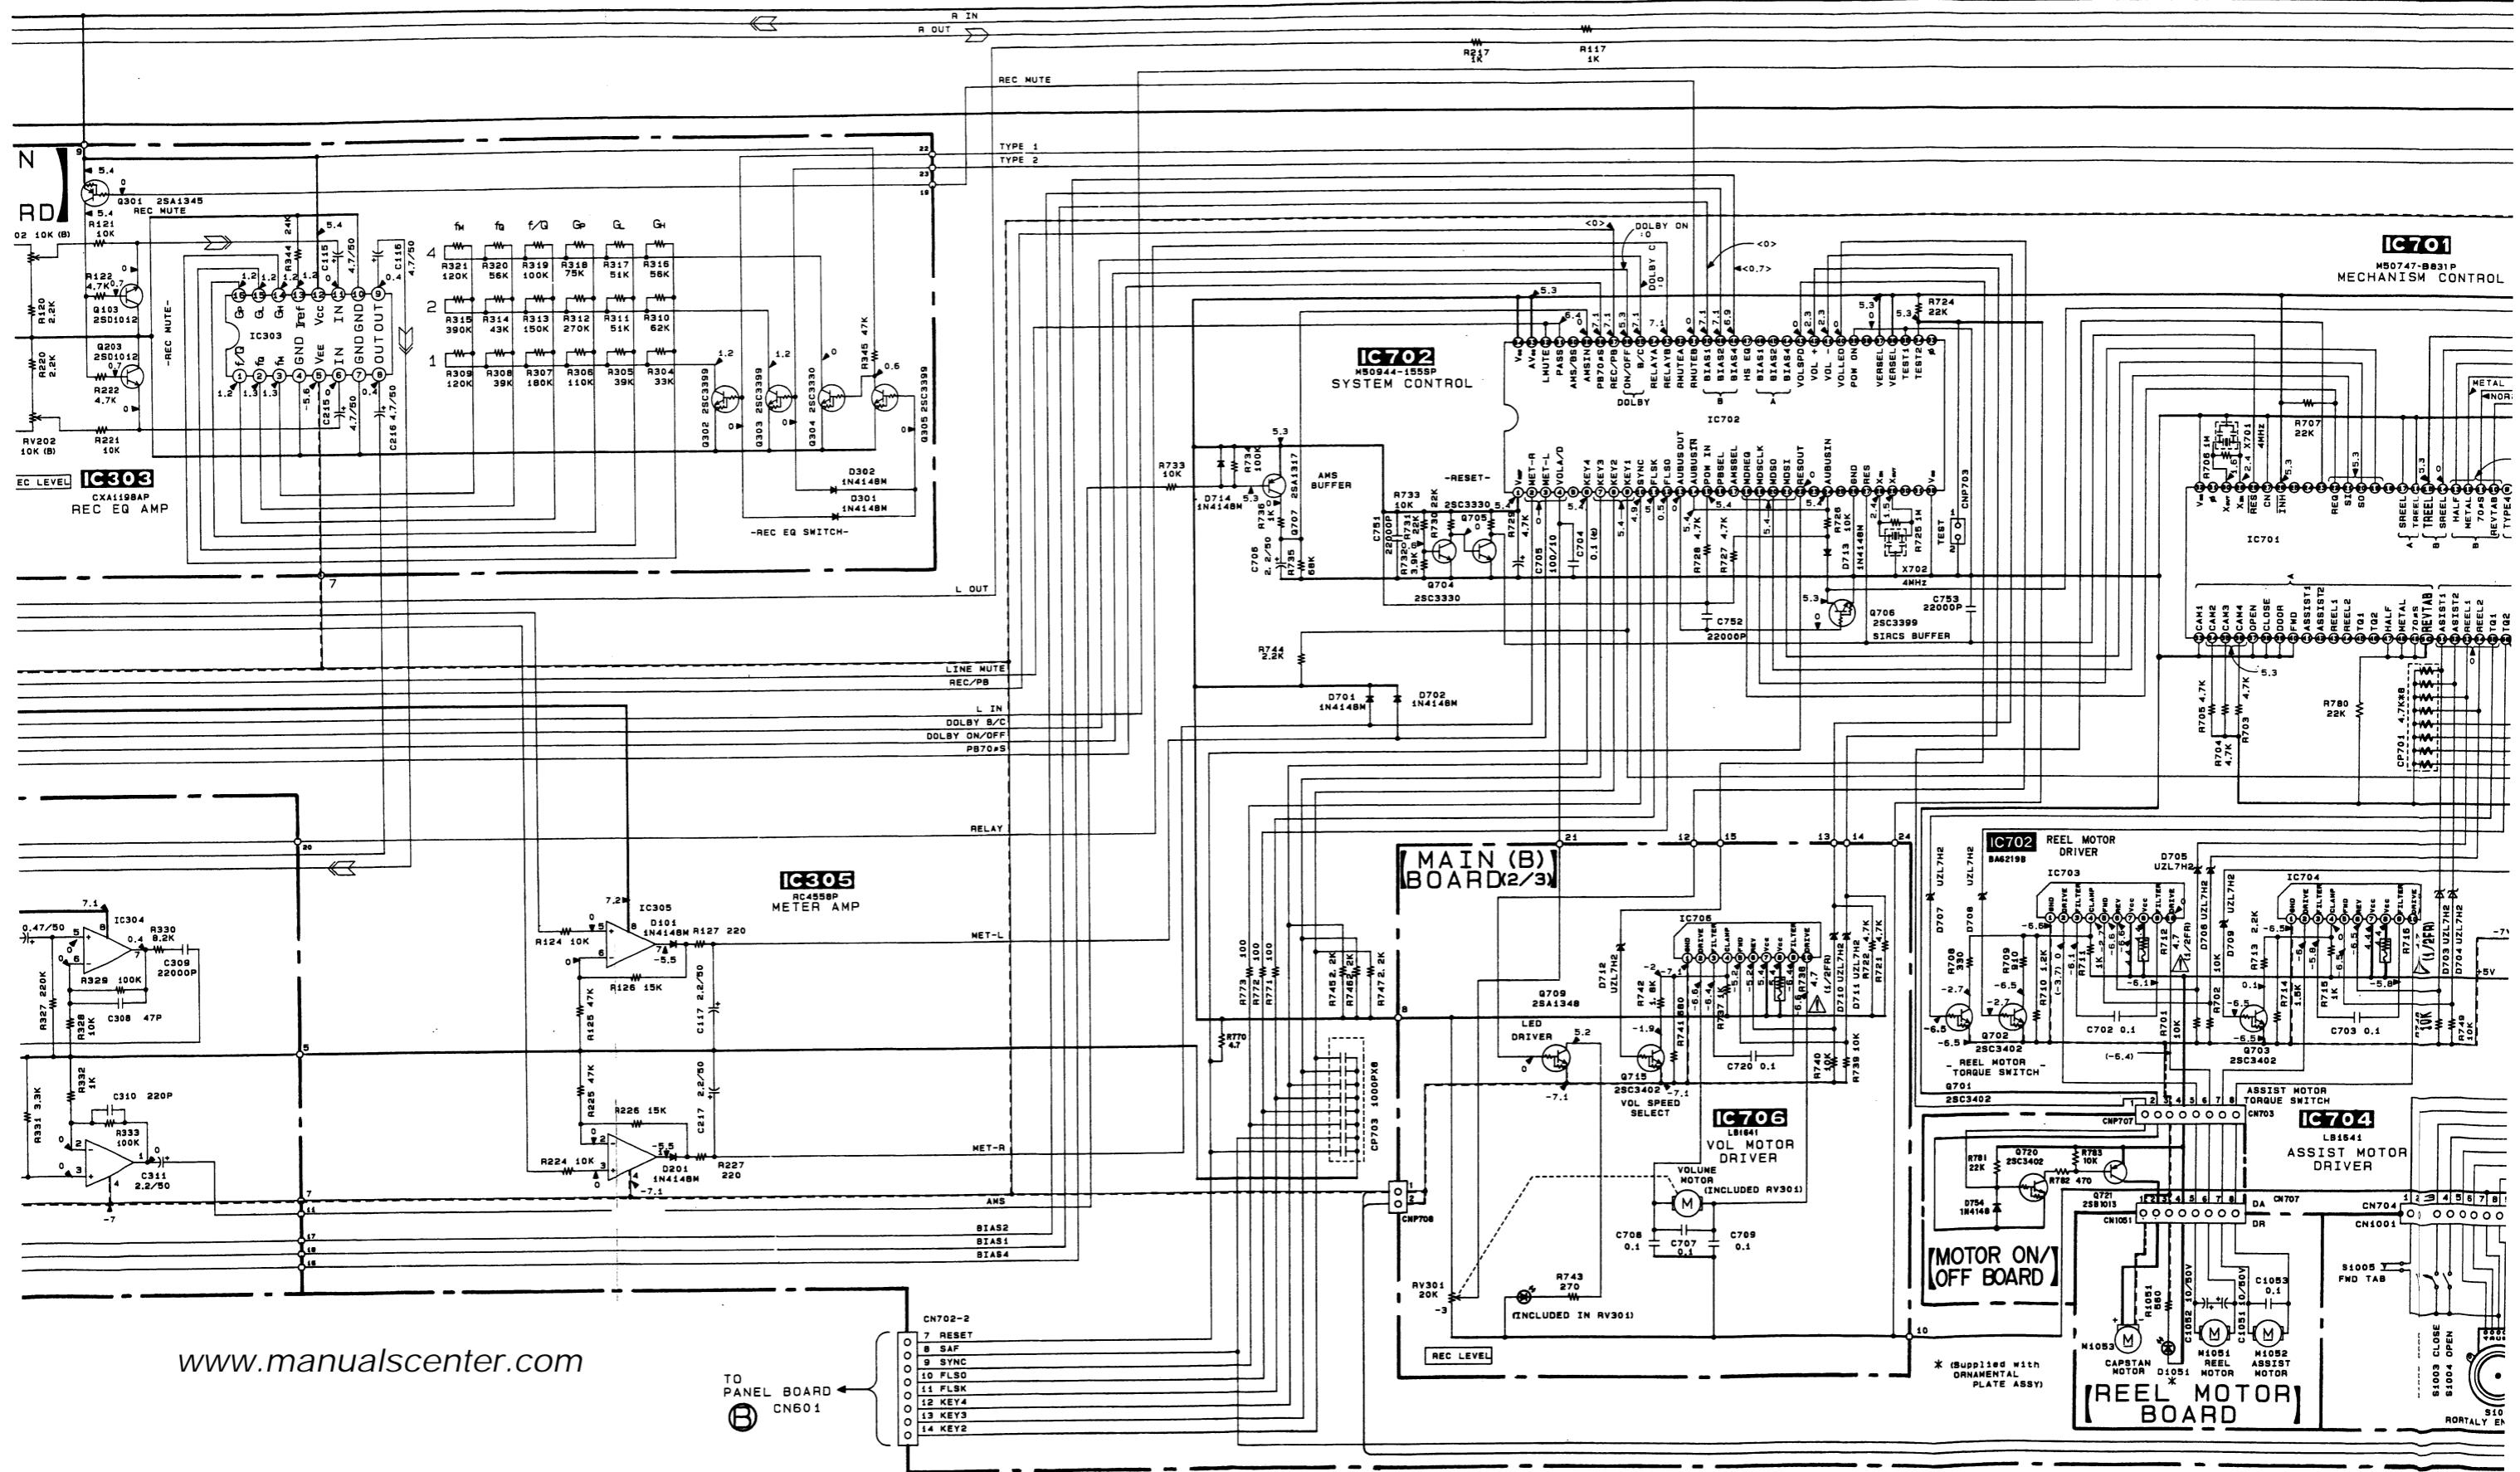

20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35

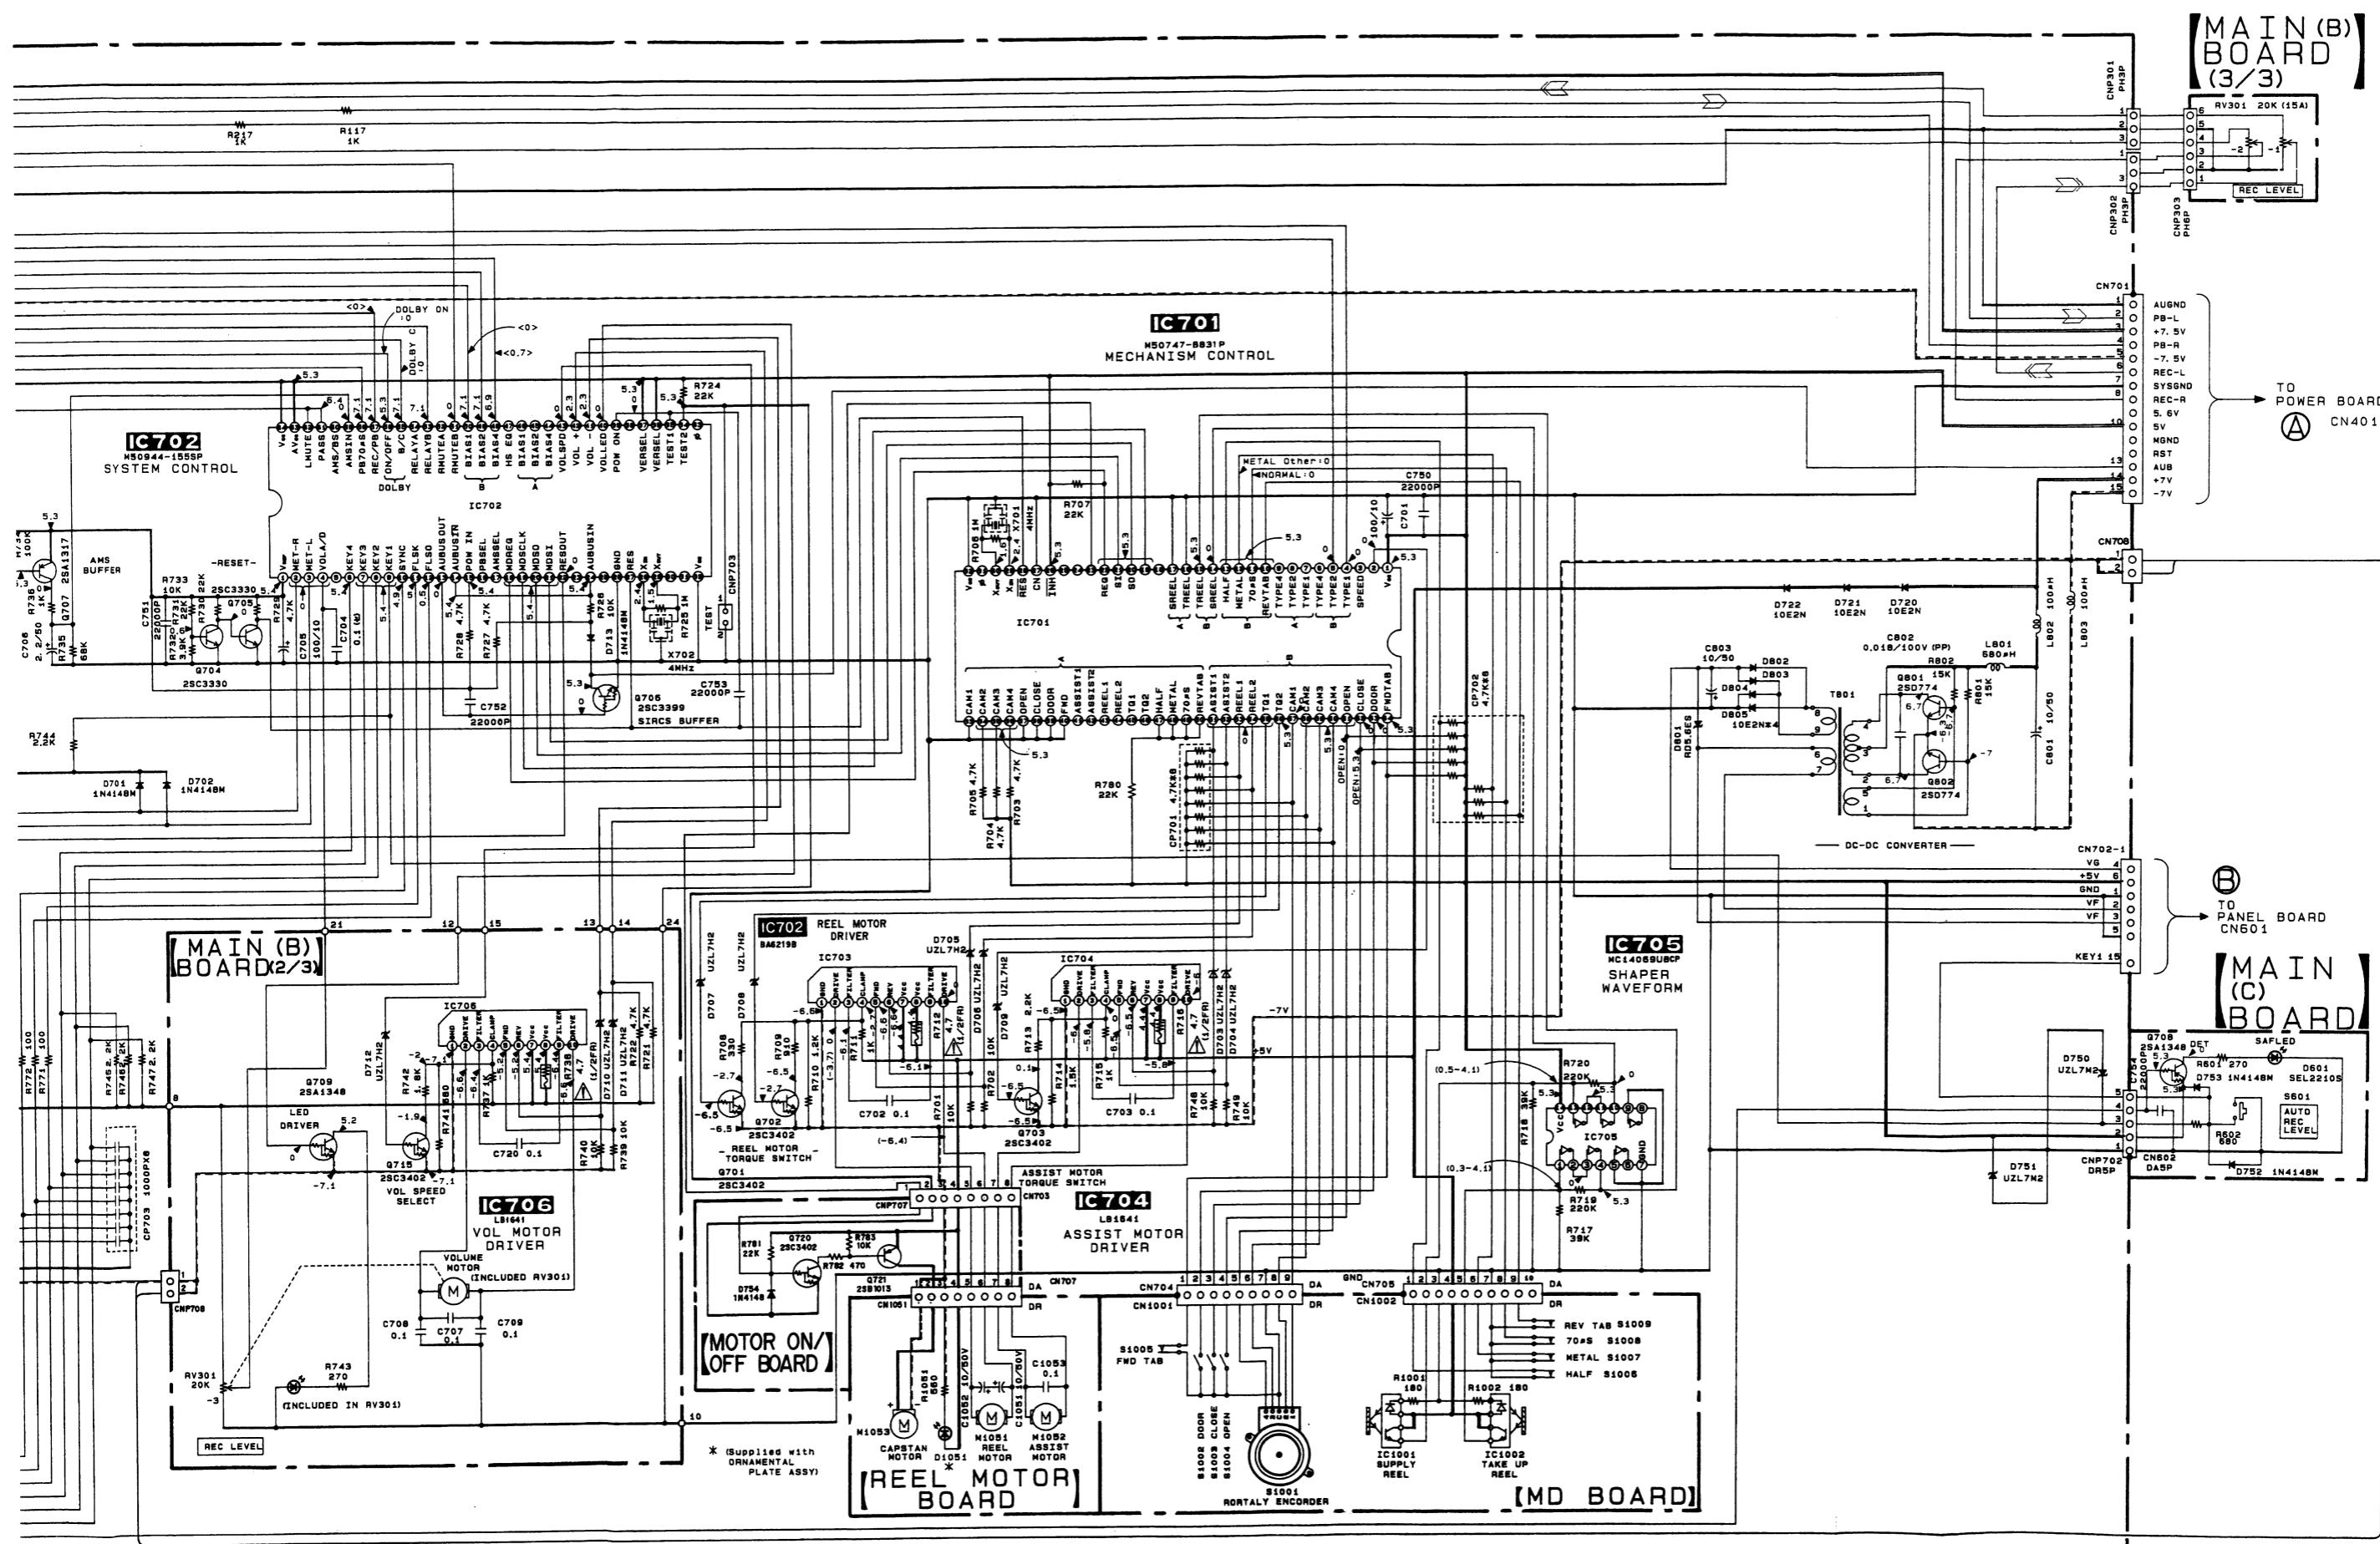

MAIN

MAIN

REEL MOTOR

Continued from page 4.

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
R306	1-247-880-11	CARBON		110K	5%	1/4W		R709	1-247-830-11	CARBON		910	5%	1/4W	
R307	1-247-885-00	CARBON		180K	5%	1/4W		R710	1-249-418-11	CARBON		1.2K	5%	1/4W F	< VARIABLE RESISTOR >
R308	1-249-436-11	CARBON		39K	5%	1/4W		R711	1-249-417-11	CARBON		1K	5%	1/4W F	
R309	1-247-881-00	CARBON		120K	5%	1/4W		△R712	1-212-950-00	FUSIBLE		4.7	5%	1/2W F	
R310	1-247-874-11	CARBON		62K	5%	1/4W		R713	1-249-421-11	CARBON		2.2K	5%	1/4W F	
R311	1-247-872-11	CARBON		51K	5%	1/4W		R714	1-249-419-11	CARBON		1.5K	5%	1/4W F	
R312	1-247-889-00	CARBON		270K	5%	1/4W		R715	1-249-417-11	CARBON		1K	5%	1/4W F	
R313	1-247-883-00	CARBON		150K	5%	1/4W		△R716	1-212-950-00	FUSIBLE		4.7	5%	1/2W F	
R314	1-247-870-11	CARBON		43K	5%	1/4W		R717	1-249-436-11	CARBON		39K	5%	1/4W	
R315	1-247-893-11	CARBON		390K	5%	1/4W		R718	1-249-436-11	CARBON		39K	5%	1/4W	
R316	1-249-438-11	CARBON		56K	5%	1/4W		R719	1-247-887-00	CARBON		220K	5%	1/4W	< RELAY >
R317	1-247-872-11	CARBON		51K	5%	1/4W		R720	1-247-887-00	CARBON		220K	5%	1/4W	
R318	1-247-876-11	CARBON		75K	5%	1/4W		R721	1-249-425-11	CARBON		4.7K	5%	1/4W F	RY301 1-515-726-11 RELAY
R319	1-249-441-11	CARBON		100K	5%	1/4W		R722	1-249-425-11	CARBON		4.7K	5%	1/4W F	< SWITCH >
R320	1-249-438-11	CARBON		56K	5%	1/4W		R724	1-249-433-11	CARBON		22K	5%	1/4W	
R321	1-247-881-00	CARBON		120K	5%	1/4W		R725	1-247-903-00	CARBON		1M	5%	1/4W	S601 1-554-303-21 SWITCH, TACTILE (AUTO REC LEVEL)
R322	1-249-433-11	CARBON		22K	5%	1/4W		R726	1-249-429-11	CARBON		10K	5%	1/4W	S605 1-554-303-21 SWITCH, TACTILE (△ OPEN/CLOSE)
R323	1-249-409-11	CARBON		220	5%	1/4W F		R727	1-249-425-11	CARBON		4.7K	5%	1/4W F	< TRANSFORMER >
R324	1-249-433-11	CARBON		22K	5%	1/4W		R728	1-249-425-11	CARBON		4.7K	5%	1/4W F	
R325	1-249-433-11	CARBON		22K	5%	1/4W		R729	1-249-425-11	CARBON		4.7K	5%	1/4W F	T101 1-433-335-11 TRANSFORMER, BIAS OSCILLATION
R326	1-249-425-11	CARBON		4.7K	5%	1/4W F		R730	1-249-433-11	CARBON		22K	5%	1/4W	T201 1-433-335-11 TRANSFORMER, BIAS OSCILLATION
R327	1-247-887-00	CARBON		220K	5%	1/4W		R731	1-249-433-11	CARBON		22K	5%	1/4W	T301 1-433-336-11 TRANSFORMER, BIAS OSCILLATION
R328	1-249-429-11	CARBON		10K	5%	1/4W		R732	1-249-424-11	CARBON		3.9K	5%	1/4W F	T801 1-450-673-11 TRANSFORMER, DC-DC CONVERTER
R329	1-249-441-11	CARBON		100K	5%	1/4W		R733	1-249-429-11	CARBON		10K	5%	1/4W	< VIBRATOR >
R330	1-249-428-11	CARBON		8.2K	5%	1/4W F		R734	1-249-441-11	CARBON		100K	5%	1/4W	X701 1-577-358-21 VIBRATOR, CERAMIC (4MHz)
R331	1-249-423-11	CARBON		3.3K	5%	1/4W F		R735	1-249-439-11	CARBON		68K	5%	1/4W	X702 1-577-358-21 VIBRATOR, CERAMIC (4MHz)
R332	1-249-417-11	CARBON		1K	5%	1/4W F		R736	1-249-417-11	CARBON		1K	5%	1/4W F	
R333	1-249-441-11	CARBON		100K	5%	1/4W		R737	1-249-417-11	CARBON		1K	5%	1/4W F	
R334	1-249-441-11	CARBON		100K	5%	1/4W		△R738	1-212-950-00	FUSIBLE		4.7	5%	1/2W F	*****
R335	1-249-419-11	CARBON		1.5K	5%	1/4W F		R739	1-249-429-11	CARBON		10K	5%	1/4W	* 1-632-741-11 REEL MOTOR BOARD
R336	1-247-848-11	CARBON		5.1K	5%	1/4W		R740	1-249-429-11	CARBON		10K	5%	1/4W	*****
R337	1-249-421-11	CARBON		2.2K	5%	1/4W F		R741	1-249-415-11	CARBON		680	5%	1/4W F	< CAPACITOR >
R338	1-249-429-11	CARBON		10K	5%	1/4W		R742	1-249-420-11	CARBON		1.8K	5%	1/4W F	
R339	1-249-429-11	CARBON		10K	5%	1/4W		R743	1-249-410-11	CARBON		270	5%	1/4W F	
R340	1-249-437-11	CARBON		47K	5%	1/4W		R744	1-249-421-11	CARBON		2.2K	5%	1/4W F	C1051 1-124-907-11 ELECT
R341	1-249-437-11	CARBON		47K	5%	1/4W		R745	1-249-421-11	CARBON		2.2K	5%	1/4W F	C1052 1-124-907-11 ELECT
△R342	1-212-851-00	FUSIBLE		5.6	5%	1/4W F		R746	1-249-421-11	CARBON		2.2K	5%	1/4W F	C1053 1-164-159-11 CERAMIC
R343	1-215-455-00	METAL		27K	1%	1/6W		R747	1-249-421-11	CARBON		2.2K	5%	1/4W F	< CONNECTOR >
R344	1-247-864-11	CARBON		24K	5%	1/4W		R748	1-249-429-11	CARBON		10K	5%	1/4W	
R345	1-249-437-11	CARBON		47K	5%	1/4W		R749	1-249-429-11	CARBON		10K	5%	1/4W	CN1051 1-564-501-11 PIN, CONNECTOR 8P
R601	1-249-410-11	CARBON		270	5%	1/4W F		R770	1-249-389-11	CARBON		4.7	5%	1/4W F	* CN1052 1-564-718-11 PIN, CONNECTOR (SMALL TYPE) 2P
R602	1-249-415-11	CARBON		680	5%	1/4W F		R771	1-247-807-31	CARBON		100	5%	1/4W	* CN1053 1-564-718-11 PIN, CONNECTOR (SMALL TYPE) 2P
R701	1-249-429-11	CARBON		10K	5%	1/4W		R772	1-247-807-31	CARBON		100	5%	1/4W	< RESISTOR >
R702	1-249-429-11	CARBON		10K	5%	1/4W		R773	1-247-807-31	CARBON		100	5%	1/4W	
R703	1-249-425-11	CARBON		4.7K	5%	1/4W F		R780	1-249-433-11	CARBON		22K	5%	1/4W	
R704	1-249-425-11	CARBON		4.7K	5%	1/4W F		R781	1-249-433-11	CARBON		22K	5%	1/4W	*****
R705	1-249-425-11	CARBON		4.7K	5%	1/4W F		R782	1-249-413-11	CARBON		470	5%	1/4W F	
R706	1-247-903-00	CARBON		1M	5%	1/4W		R783	1-249-429-11	CARBON		10K	5%	1/4W	
R707	1-249-433-11	CARBON		22K	5%	1/4W		R801	1-249-431-11	CARBON		15K	5%	1/4W	
R708	1-249-411-11	CARBON		330	5%	1/4W		R802	1-249-431-11	CARBON		15K	5%	1/4W	

www.manualscenter.com

The components identified by mark
△ or dotted line with mark △ are
critical for safety.
Replace only with part number
specified.

MAIN

MAIN

REEL MOTOR

Continued from page 4.

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
R306	1-247-880-11 CARBON	110K 5% 1/4W		R709	1-247-830-11 CARBON	910 5% 1/4W									
R307	1-247-885-00 CARBON	180K 5% 1/4W		R710	1-249-418-11 CARBON	1.2K 5% 1/4W F	< VARIABLE RESISTOR >								
R308	1-249-436-11 CARBON	39K 5% 1/4W		R711	1-249-417-11 CARBON	1K 5% 1/4W F									
R309	1-247-881-00 CARBON	120K 5% 1/4W		△R712	1-212-950-00 FUSIBLE	4.7 5% 1/2W F		RV101	1-238-597-11 RES, ADJ, CARBON 1K						
R310	1-247-874-11 CARBON	62K 5% 1/4W		R713	1-249-421-11 CARBON	2.2K 5% 1/4W F		RV102	1-238-600-11 RES, ADJ, CARBON 10K						
R311	1-247-872-11 CARBON	51K 5% 1/4W		R714	1-249-419-11 CARBON	1.5K 5% 1/4W F		RV103	1-238-601-11 RES, ADJ, CARBON 22K						
R312	1-247-889-00 CARBON	270K 5% 1/4W		R715	1-249-417-11 CARBON	1K 5% 1/4W F		RV201	1-238-597-11 RES, ADJ, CARBON 1K						
R313	1-247-883-00 CARBON	150K 5% 1/4W		△R716	1-212-950-00 FUSIBLE	4.7 5% 1/2W F		RV202	1-238-600-11 RES, ADJ, CARBON 10K						
R314	1-247-870-11 CARBON	43K 5% 1/4W		R717	1-249-436-11 CARBON	39K 5% 1/4W		RV203	1-238-601-11 RES, ADJ, CARBON 22K						
R315	1-247-893-11 CARBON	390K 5% 1/4W		R718	1-249-436-11 CARBON	39K 5% 1/4W	< RELAY >								
R316	1-249-438-11 CARBON	56K 5% 1/4W		R719	1-247-887-00 CARBON	220K 5% 1/4W									
R317	1-247-872-11 CARBON	51K 5% 1/4W		R720	1-247-887-00 CARBON	220K 5% 1/4W									
R318	1-247-876-11 CARBON	75K 5% 1/4W		R721	1-249-425-11 CARBON	4.7K 5% 1/4W F		RY301	1-515-726-11 RELAY						
R319	1-249-441-11 CARBON	100K 5% 1/4W		R722	1-249-425-11 CARBON	4.7K 5% 1/4W F	< SWITCH >								
R320	1-249-438-11 CARBON	56K 5% 1/4W		R724	1-249-433-11 CARBON	22K 5% 1/4W									
R321	1-247-881-00 CARBON	120K 5% 1/4W		R725	1-247-903-00 CARBON	1M 5% 1/4W	S601	1-554-303-21 SWITCH, TACTILE (AUTO REC LEVEL)							
R322	1-249-433-11 CARBON	22K 5% 1/4W		R726	1-249-429-11 CARBON	10K 5% 1/4W	S605	1-554-303-21 SWITCH, TACTILE (△ OPEN/CLOSE)							
R323	1-249-409-11 CARBON	220 5% 1/4W F		R727	1-249-425-11 CARBON	4.7K 5% 1/4W F									
R324	1-249-433-11 CARBON	22K 5% 1/4W		R728	1-249-425-11 CARBON	4.7K 5% 1/4W F	< TRANSFORMER >								
R325	1-249-433-11 CARBON	22K 5% 1/4W		R729	1-249-425-11 CARBON	4.7K 5% 1/4W F	T101	1-433-335-11 TRANSFORMER, BIAS OSCILLATION							
R326	1-249-425-11 CARBON	4.7K 5% 1/4W F		R730	1-249-433-11 CARBON	22K 5% 1/4W	T201	1-433-335-11 TRANSFORMER, BIAS OSCILLATION							
R327	1-247-887-00 CARBON	220K 5% 1/4W		R731	1-249-433-11 CARBON	22K 5% 1/4W	T301	1-433-336-11 TRANSFORMER, BIAS OSCILLATION							
R328	1-249-429-11 CARBON	10K 5% 1/4W		R732	1-249-424-11 CARBON	3.9K 5% 1/4W F	T801	1-450-673-11 TRANSFORMER, DC-DC CONVERTER							
R329	1-249-441-11 CARBON	100K 5% 1/4W		R733	1-249-429-11 CARBON	10K 5% 1/4W	< VIBRATOR >								
R330	1-249-428-11 CARBON	8.2K 5% 1/4W F		R734	1-249-441-11 CARBON	100K 5% 1/4W	X701	1-577-358-21 VIBRATOR, CERAMIC (4MHz)							
R331	1-249-423-11 CARBON	3.3K 5% 1/4W F		R735	1-249-439-11 CARBON	68K 5% 1/4W	X702	1-577-358-21 VIBRATOR, CERAMIC (4MHz)							
R332	1-249-417-11 CARBON	1K 5% 1/4W F		R736	1-249-417-11 CARBON	1K 5% 1/4W F									
R333	1-249-441-11 CARBON	100K 5% 1/4W		R737	1-249-417-11 CARBON	1K 5% 1/4W F									
R334	1-249-441-11 CARBON	100K 5% 1/4W		△R738	1-212-950-00 FUSIBLE	4.7 5% 1/2W F	*****								
R335	1-249-419-11 CARBON	1.5K 5% 1/4W F		R739	1-249-429-11 CARBON	10K 5% 1/4W	*	1-632-741-11 REEL MOTOR BOARD							
R336	1-247-848-11 CARBON	5.1K 5% 1/4W		R740	1-249-429-11 CARBON	10K 5% 1/4W	*****								
R337	1-249-421-11 CARBON	2.2K 5% 1/4W F		R741	1-249-415-11 CARBON	680 5% 1/4W F									
R338	1-249-429-11 CARBON	10K 5% 1/4W		R742	1-249-420-11 CARBON	1.8K 5% 1/4W F	< CAPACITOR >								
R339	1-249-429-11 CARBON	10K 5% 1/4W		R743	1-249-410-11 CARBON	270 5% 1/4W F									
R340	1-249-437-11 CARBON	47K 5% 1/4W		R744	1-249-421-11 CARBON	2.2K 5% 1/4W F	C1051	1-124-907-11 ELECT	10uF	20%	50V				
R341	1-249-437-11 CARBON	47K 5% 1/4W		R745	1-249-421-11 CARBON	2.2K 5% 1/4W F	C1052	1-124-907-11 ELECT	10uF	20%	50V				
△R342	1-212-851-00 FUSIBLE	5.6 5% 1/4W F		R746	1-249-421-11 CARBON	2.2K 5% 1/4W F	C1053	1-164-159-11 CERAMIC	0.1uF		50V				
R343	1-215-455-00 METAL	27K 1% 1/6W		R747	1-249-421-11 CARBON	2.2K 5% 1/4W F	< CONNECTOR >								
R344	1-247-864-11 CARBON	24K 5% 1/4W		R748	1-249-429-11 CARBON	10K 5% 1/4W									
R345	1-249-437-11 CARBON	47K 5% 1/4W		R749	1-249-429-11 CARBON	10K 5% 1/4W	CN1051	1-564-501-11 PIN, CONNECTOR 8P							
R601	1-249-410-11 CARBON	270 5% 1/4W F		R770	1-249-389-11 CARBON	4.7 5% 1/4W F	*	CN1052 1-564-718-11 PIN, CONNECTOR (SMALL TYPE) 2P							
R602	1-249-415-11 CARBON	680 5% 1/4W F		R771	1-247-807-31 CARBON	100 5% 1/4W	*	CN1053 1-564-718-11 PIN, CONNECTOR (SMALL TYPE) 2P							
R701	1-249-429-11 CARBON	10K 5% 1/4W		R772	1-247-807-31 CARBON	100 5% 1/4W	< RESISTOR >								
R702	1-249-429-11 CARBON	10K 5% 1/4W		R773	1-247-807-31 CARBON	100 5% 1/4W									
R703	1-249-425-11 CARBON	4.7K 5% 1/4W F		R780	1-249-433-11 CARBON	22K 5% 1/4W	R1051	1-247-825-31 CARBON	560 5%	1/4W					
R704	1-249-425-11 CARBON	4.7K 5% 1/4W F		R781	1-249-433-11 CARBON	22K 5% 1/4W	*****								
R705	1-249-425-11 CARBON	4.7K 5% 1/4W F		R782	1-249-413-11 CARBON	470 5% 1/4W F									
R706	1-247-903-00 CARBON	1M 5% 1/4W		R783	1-249-429-11 CARBON	10K 5% 1/4W									
R707	1-249-433-11 CARBON	22K 5% 1/4W		R801	1-249-431-11 CARBON	15K 5% 1/4W	</td								

SS-H6600

SERVICE MANUAL

SPECIFICATIONS

Speaker system 3-way, 4-box type

Satellite unit

Speaker units Mid-range: 8cm(3 in.) cone type
Tweeter: 2cm($\frac{1}{3}$ /in.) soft dome type

Power handling capacity

Maximum input power 50W

Sensitivity 89 dB/W/m

Effective frequency range
200-20,000 Hz

Rated impedance 8 ohms

Dimensions Approx. 185x115x220mm(w/h/d)
($7\frac{3}{8}$ x $4\frac{5}{8}$ x $8\frac{3}{4}$ in.)

Weight Approx. 1.7 kg (3 lb 12 oz)

Bass unit

Speaker unit Woofer: 15cm(6 in.) cone type

Power handling capacity

Maximum input power 70W

Sensitivity 89 dB/W/m

Effective frequency range
40-200 Hz

Rated impedance 6 ohms



Dimensions Approx. 185x250x220mm(w/h/d)
($7\frac{3}{8}$ x $9\frac{7}{8}$ x $8\frac{3}{4}$ in.)

Weight Approx. 4.1 kg (9 lb 1 oz)

Design and specifications subject to change
without notice.

1. FRONT PANEL (W) ASSY REMOVAL


Note : Be careful not to scratch the cabinet.

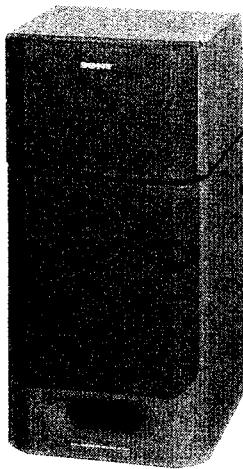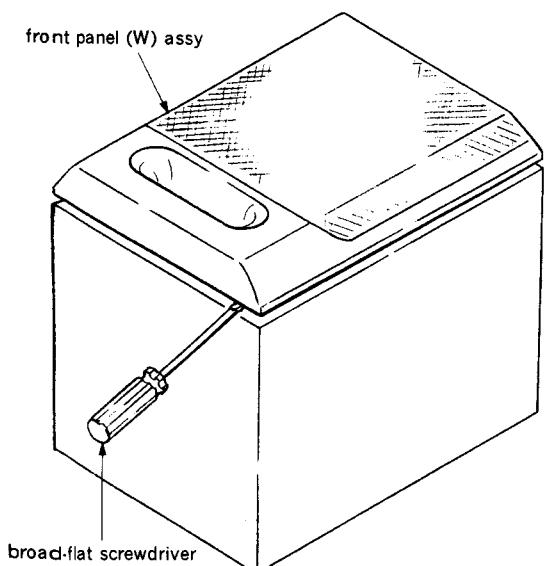

AEP Model
UK Model
E Model

This set is the speaker system in
MHC-5600, MHC-6600, FH-E939CD, and FH-E949CD.

2. WIRING DIAGRAM

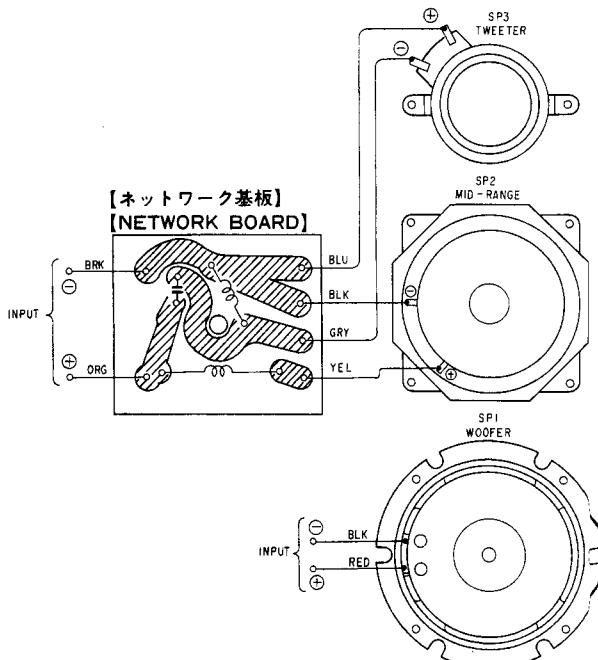

SPEAKER SYSTEM
SONY[®]




3. EXPLODED VIEW AND PARTS LIST

NOTE:

- The mechanical parts with no reference number in the exploded views are not supplied.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

- XX, -X mean standardized parts, so they may have some differences from the original one.
- Color Indication of Appearance Parts
Example:
KNOB, BALANCE (WHITE)...(RED)
Parts Color Cabinet's Color

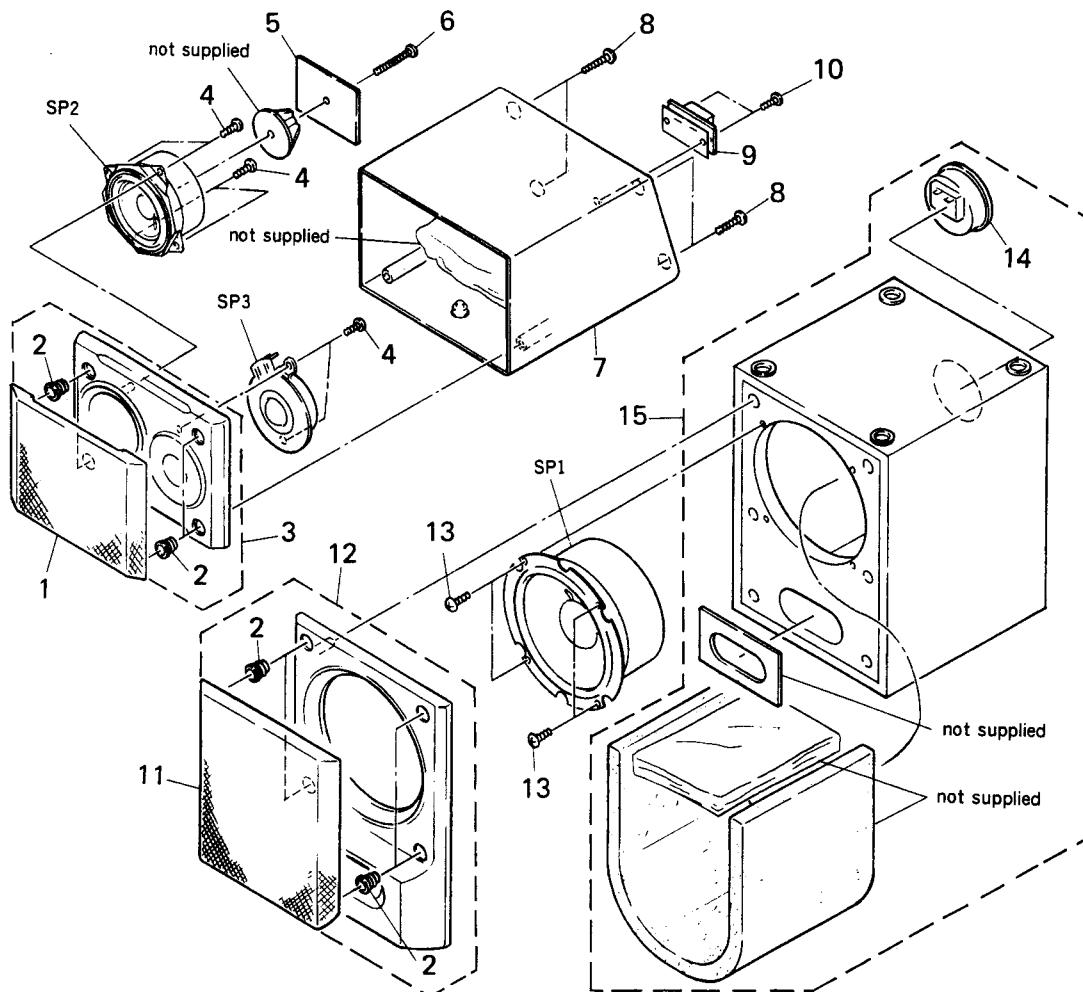

Ref. No.	Part No.	Description	Remarks
1	X-4941-269-1	FRAME (S) ASSY, GRILLE	
2	*4-912-253-01	CATCHER	
3	X-4941-370-1	PANEL (S) ASSY, FRONT	
4	7-685-660-79	SCREW +BVTP 4×10 TYPE2 IT-3	
5	*1-589-323-11	MOUNTED PC BOARD (NETWORK)	
6	7-685-878-01	SCREW +BVTT 3×25 (S)	
7	X-4941-270-1	CABINET (S) ASSY, SPEAKER	
8	7-685-663-79	SCREW +BVTP 4×16 TYPE2 IT-3	
9	1-537-337-31	TERMINAL BOARD (2P SP)	
10	7-685-647-79	SCREW +BVTP 3×10 TYPE2 N-S	

Ref. No.	Part No.	Description	Remarks
11	X-4941-271-1	FRAME (W) ASSY, GRILLE	
12	X-4941-439-2	PANEL (W) ASSY, FRONT	
13	4-874-614-11	SCREW (4) (3.5×14), TAPPING	
14	1-537-145-11	TERMINAL BOARD (SPEAKER)	
15	X-4941-398-1	CABINET (W) ASSY, SPEAKER (AEP, UK, E)	
15	X-4941-399-1	CABINET (W) ASSY, SPEAKER (Germany)	
SP1	1-544-434-21	SPEAKER (15CM)	
SP2	1-544-433-11	SPEAKER (8CM)	
SP3	1-544-432-11	SPEAKER (2.5CM)	

ACCESSORY&PACKING MATERIAL

- 1-590-855-11 CORD, SPEAKER (AEP, Germany)
3-753-188-11 MANUAL, INSTRUCTION (AEP, Germany)
3-694-922-01 SHEET, PROTECTION

Sony Corporation
Audio Group

9-956-320-11